

33 KEYBOARD (UK)

PARTS

FIGURE	CONTENTS	PAGE
1	Keyboard Basket and Contact Block	2
2	186752 Modification Kit to Provide Locking for Keyboard (Early Design)	3
3	186752 Modification Kit to Provide Locking for Keyboard (Later Design)	3
4	Keyboard Covers	4
5	Keytops	5
6	Keylevers	6
7	Codebar Mechanism	7
8	Codebar Mechanism for Unit Equipped with Even Parity	8
9	Codebar Mechanism for Numeric Keyboard	9
10	185801 Modification Kit to Provide Locking for Keyboard	10
	Numerical Index	11

Note: When ordering parts from this section, prefix each number with the letters TP.

For applicable Modification Kits, refer to Section 570-013-010.

For additional 33 Keytop descriptions, refer to Section 574-020-800.

Bell System Codes
UK800
UK804
UK811
UK814

The part identification information contained in the following change notices have been incorporated in this issue.	
TCN	#1508, #1531, #1578

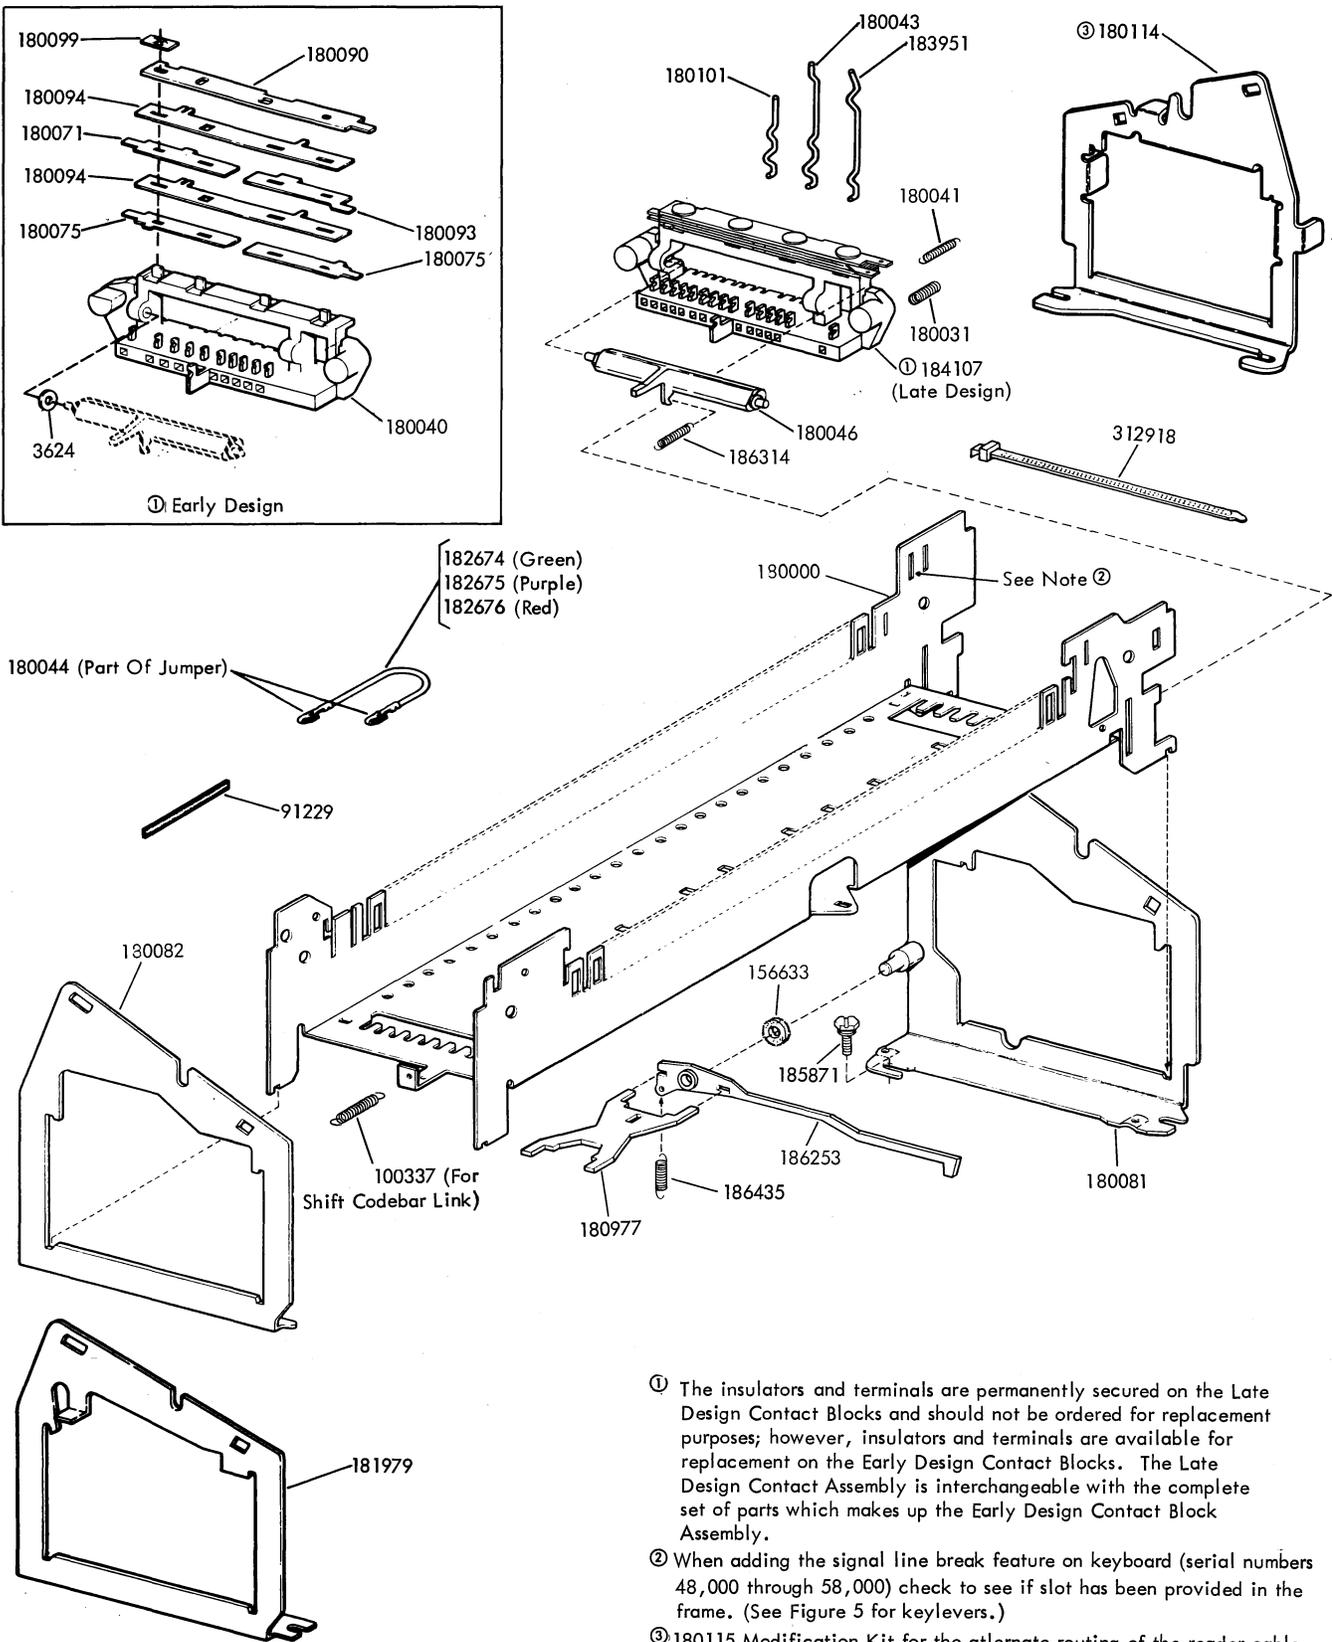


FIGURE 1. KEYBOARD BASKET AND CONTACT BLOCK

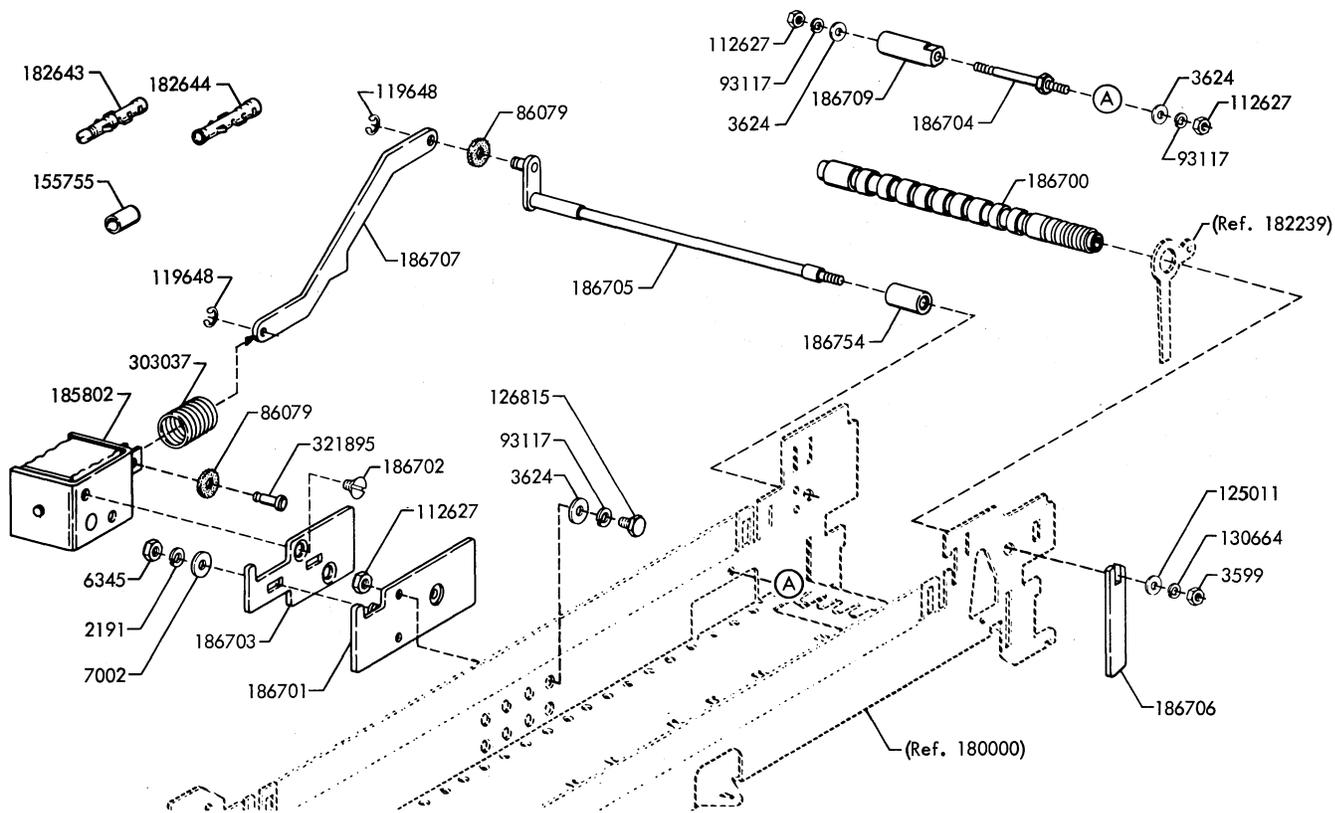


FIGURE 2. 186752 MODIFICATION KIT TO PROVIDE LOCKING FOR KEYBOARD (EARLY DESIGN)

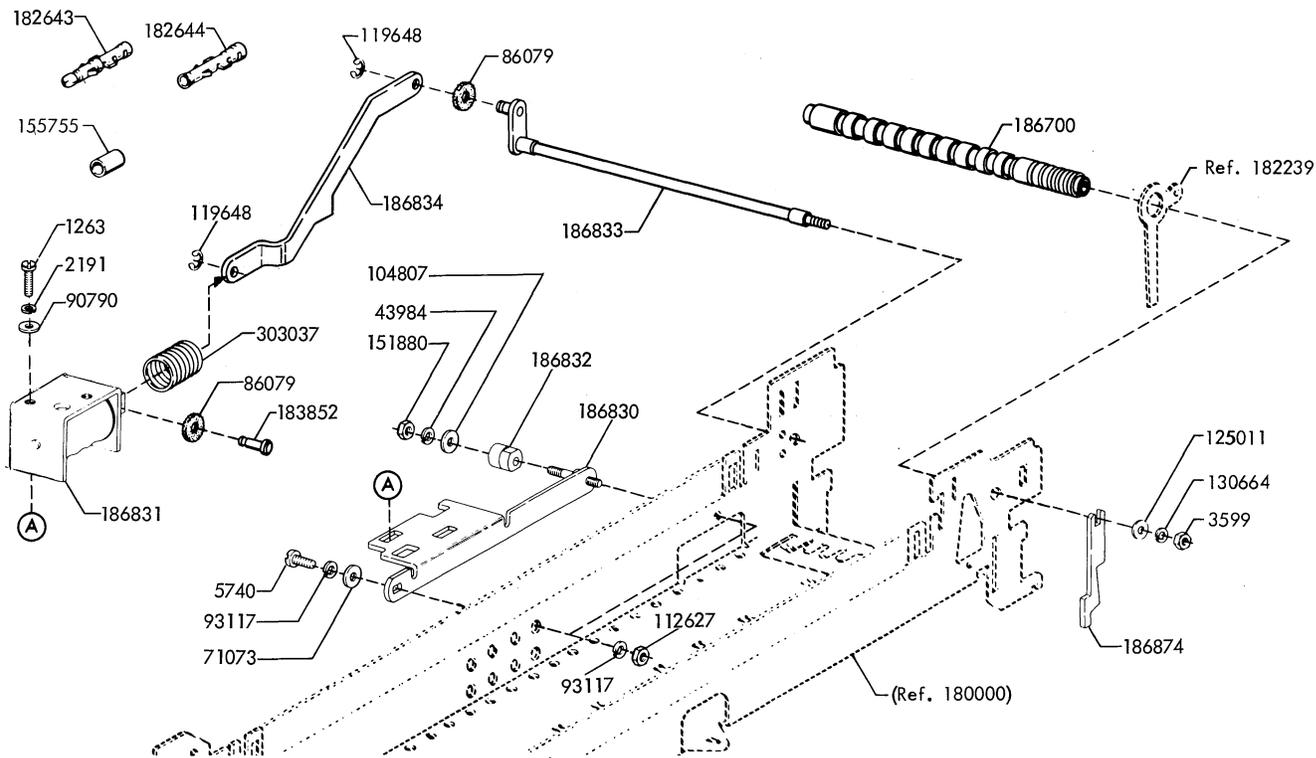


FIGURE 3. 186752 MODIFICATION KIT TO PROVIDE LOCKING FOR KEYBOARD (LATER DESIGN)




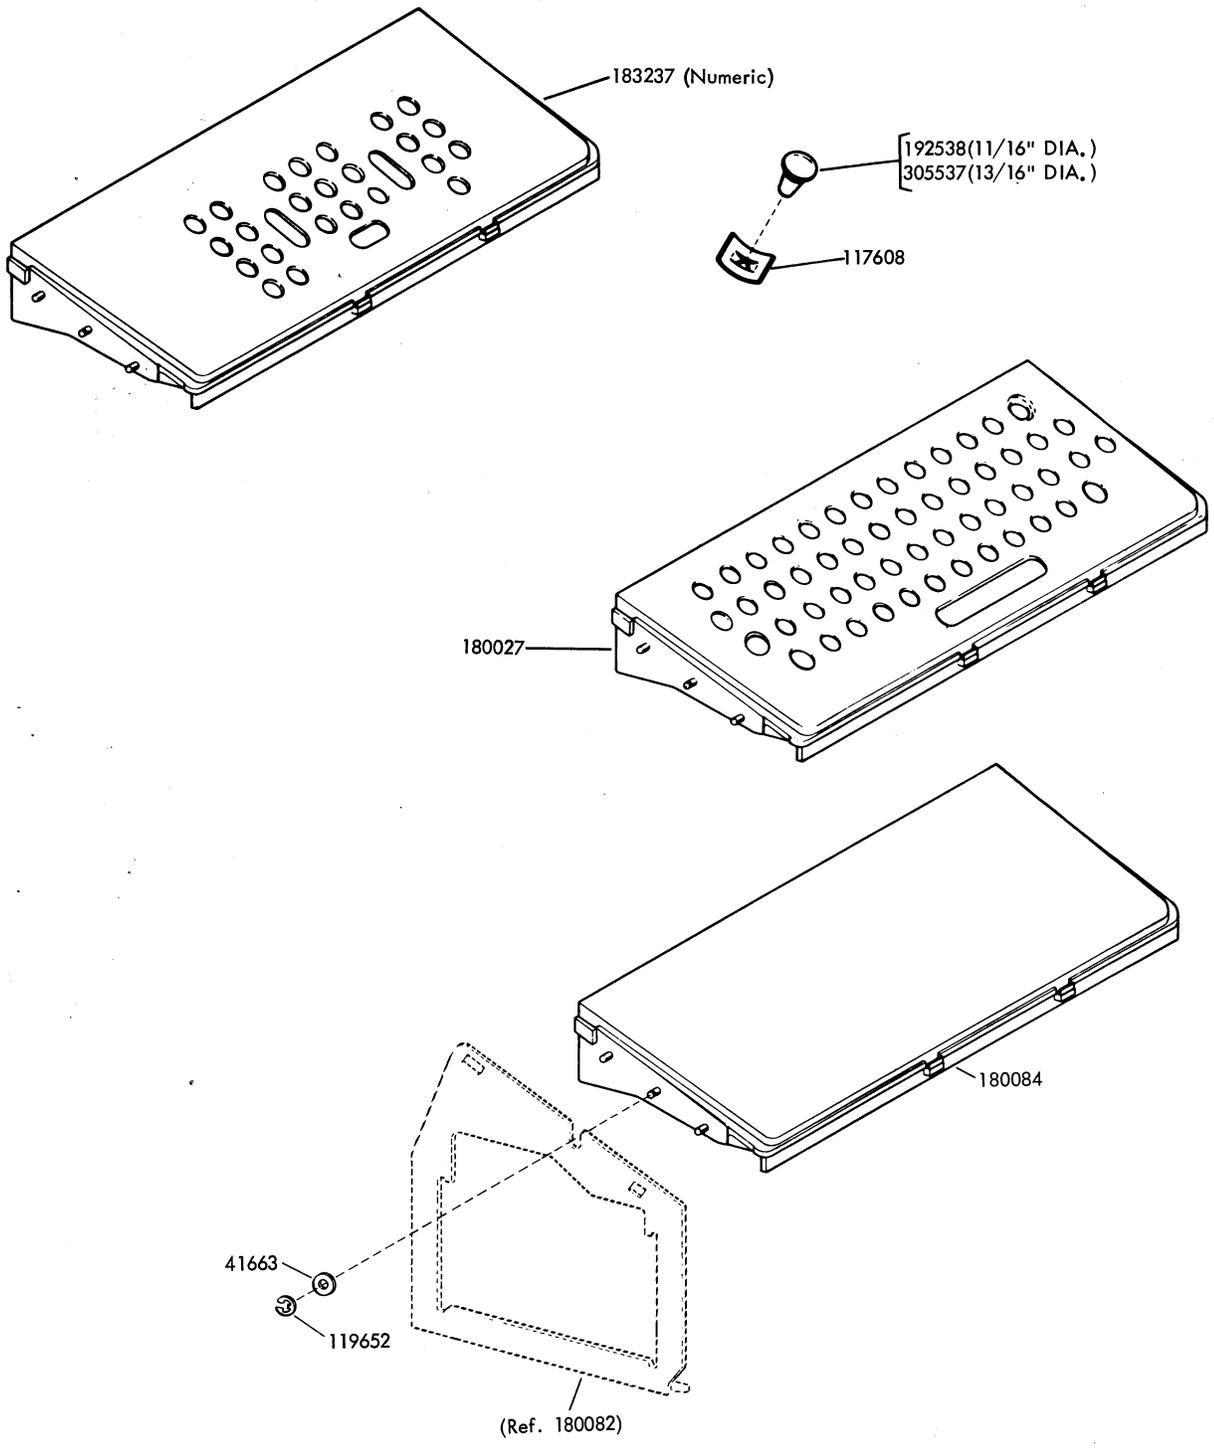


FIGURE 4. KEYBOARD COVERS

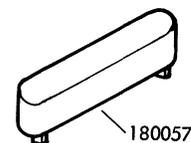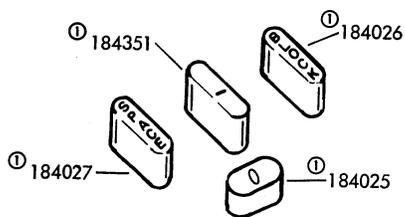

Keytop Description			Keytop Description			Keytop Description		
UNSHIFT	SHIFT	Part Number	UNSHIFT	SHIFT	Part Number	UNSHIFT	SHIFT	Part Number
A		180181	P	@	180180	8		①184341
A	SOM	*183891						
A		①184343	Q	X ON	*183888	9)	①180168
B		180194	Q	X-ON	184869	9		①184342
B		①184344	Q	RLF	185160	0		180169
C		180192	R	TAPE	180174	∅		180374
C		①184345	R		180260	-	=	180170
C	ETX	185165	R	FS	185161	,	<	180197
D	EOT	180183	S		180282	.	>	180198
D		180278	S	X OFF	180182	;	+	180199
D		①184346	S	X OFF	*183892	/	?	180200
E	WRU	180173	T		180175	:	*	180205
E		180259	T		180261	(No Symbol)		180299
E	WRU	*183889	T	PR	185162	-	*	180336
F	RU	180184	U		180177		,	180335
F		180273	U			/	.	180418
G	BELL	180185	V		180193		■	180419
G		180274	V		180193	/		184895
G	BELL	*183890	W		180172	RUB OUT		180201
H		180186	X		180191	RETURN		180202
H	BS	185163	Y		180176	LINE FEED		180203
I	TAB	180178	Z		180190	HERE IS		180206
I		180262	Z		180190	BREAK		180207
J		180187	1	!	180160	REPT		180208
K	VT	180188	1		①184334	ALT MODE		180257
K		180280	1		180264	ESC		180382
K	□	180383	2	"	①180161	EOT		180440
K	I	185090	2		①184335	DIV		180441
L	FORM	180189	3	#	180162	STORE		180442
L		180281	3		①184336	TYPE ORD		180443
L	∖	180385	4	\$	①180163	SECT		180444
L	FORM	185164	4		①184337	SHIFT		180061
M		180196	5	%	180164	CTRL		181253
M	□	180384	5		①184338	CTRL		②181971
M	I	185093	5		①184339	CTRL		①184815
N	↑	180195	6	&	180165	FS		①184816
N	BLK	185092	6		①184339	GS		①184817
N	∧	185150	7	'	①180166	RS		①184818
O	←	180179	7		①184340	US		①184818
O	└	185089	7		①184340	CLR KYBD		184734
			8	(180167	CTRL		185159
						TAB		180373

NOTE: All Keytops are gray with white characters except as noted.

*Gray Keytops with yellow characters.
 ① Used on Numeric Keyboard.
 ② Used with parity control.

FIGURE 5. KEYTOPS

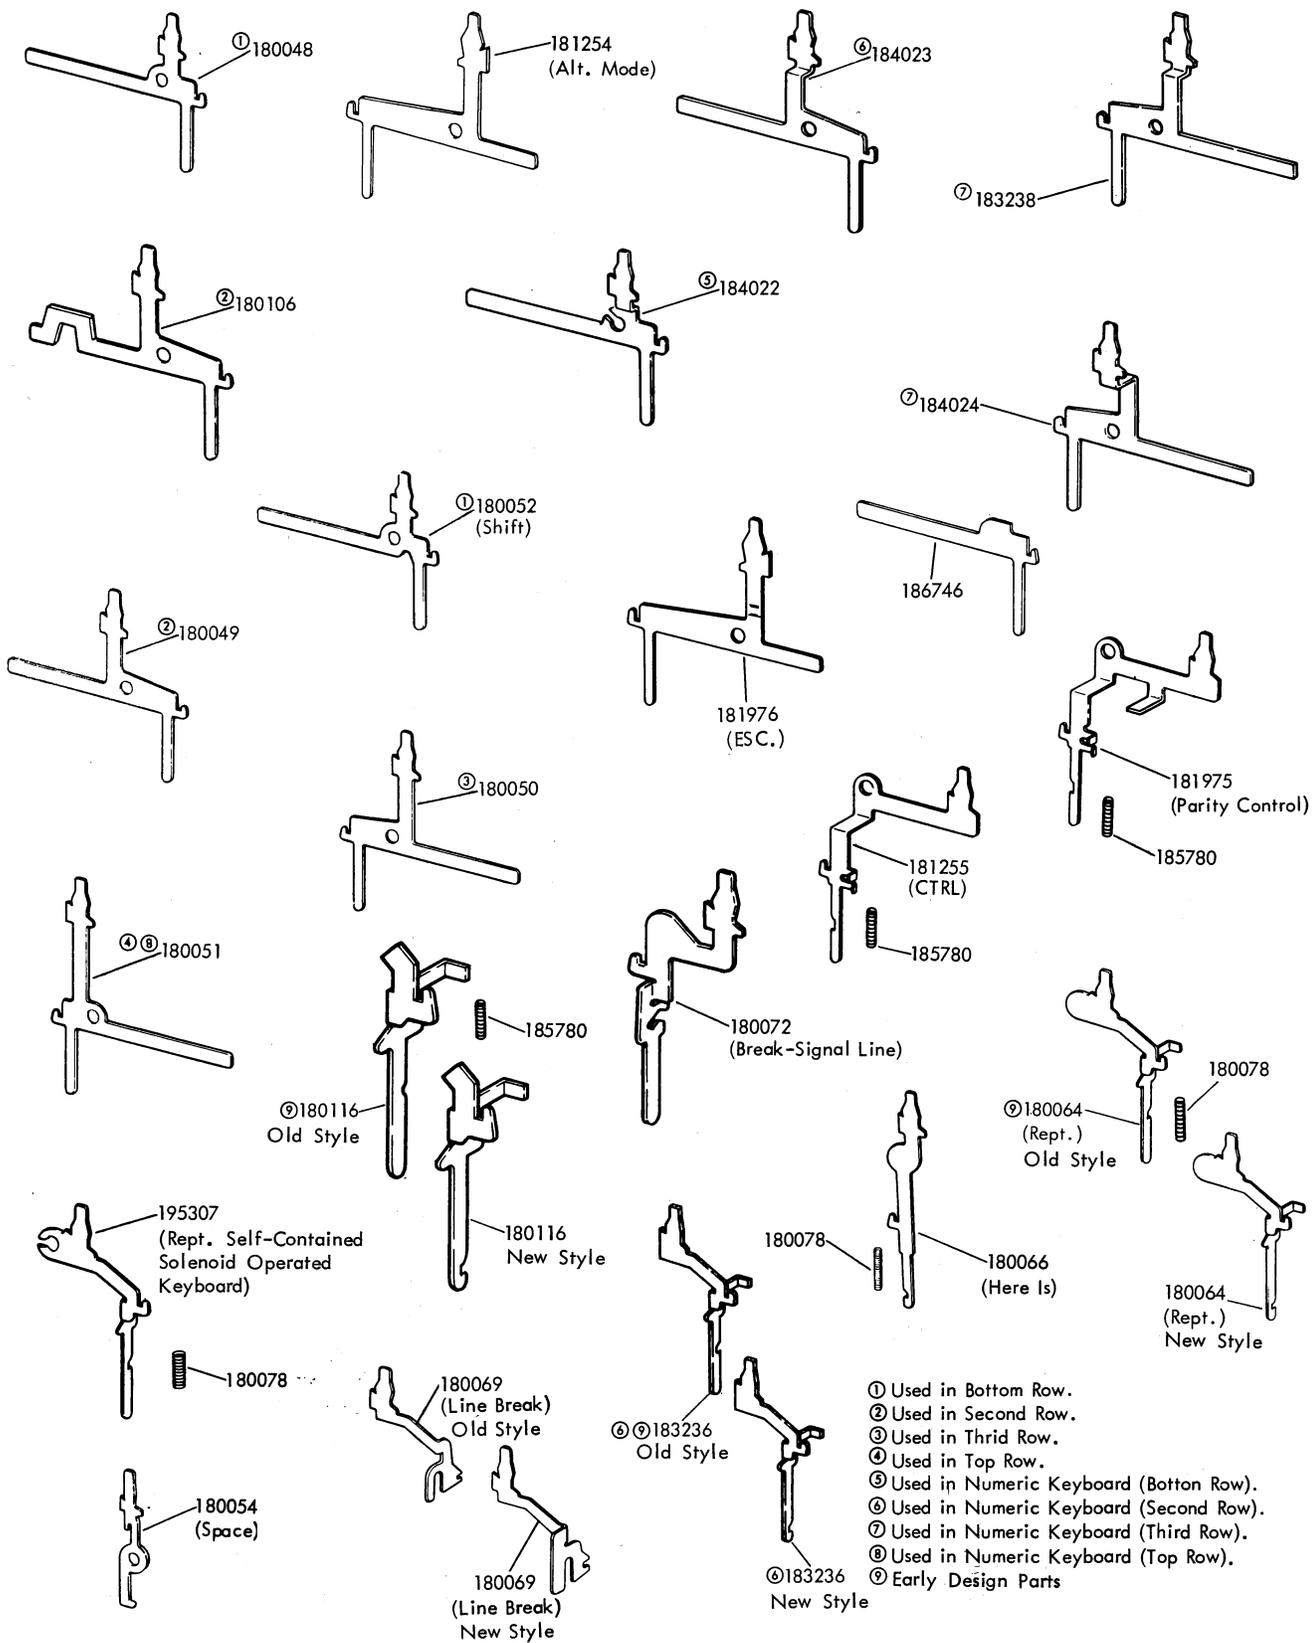


FIGURE 6. KEYLEVERS

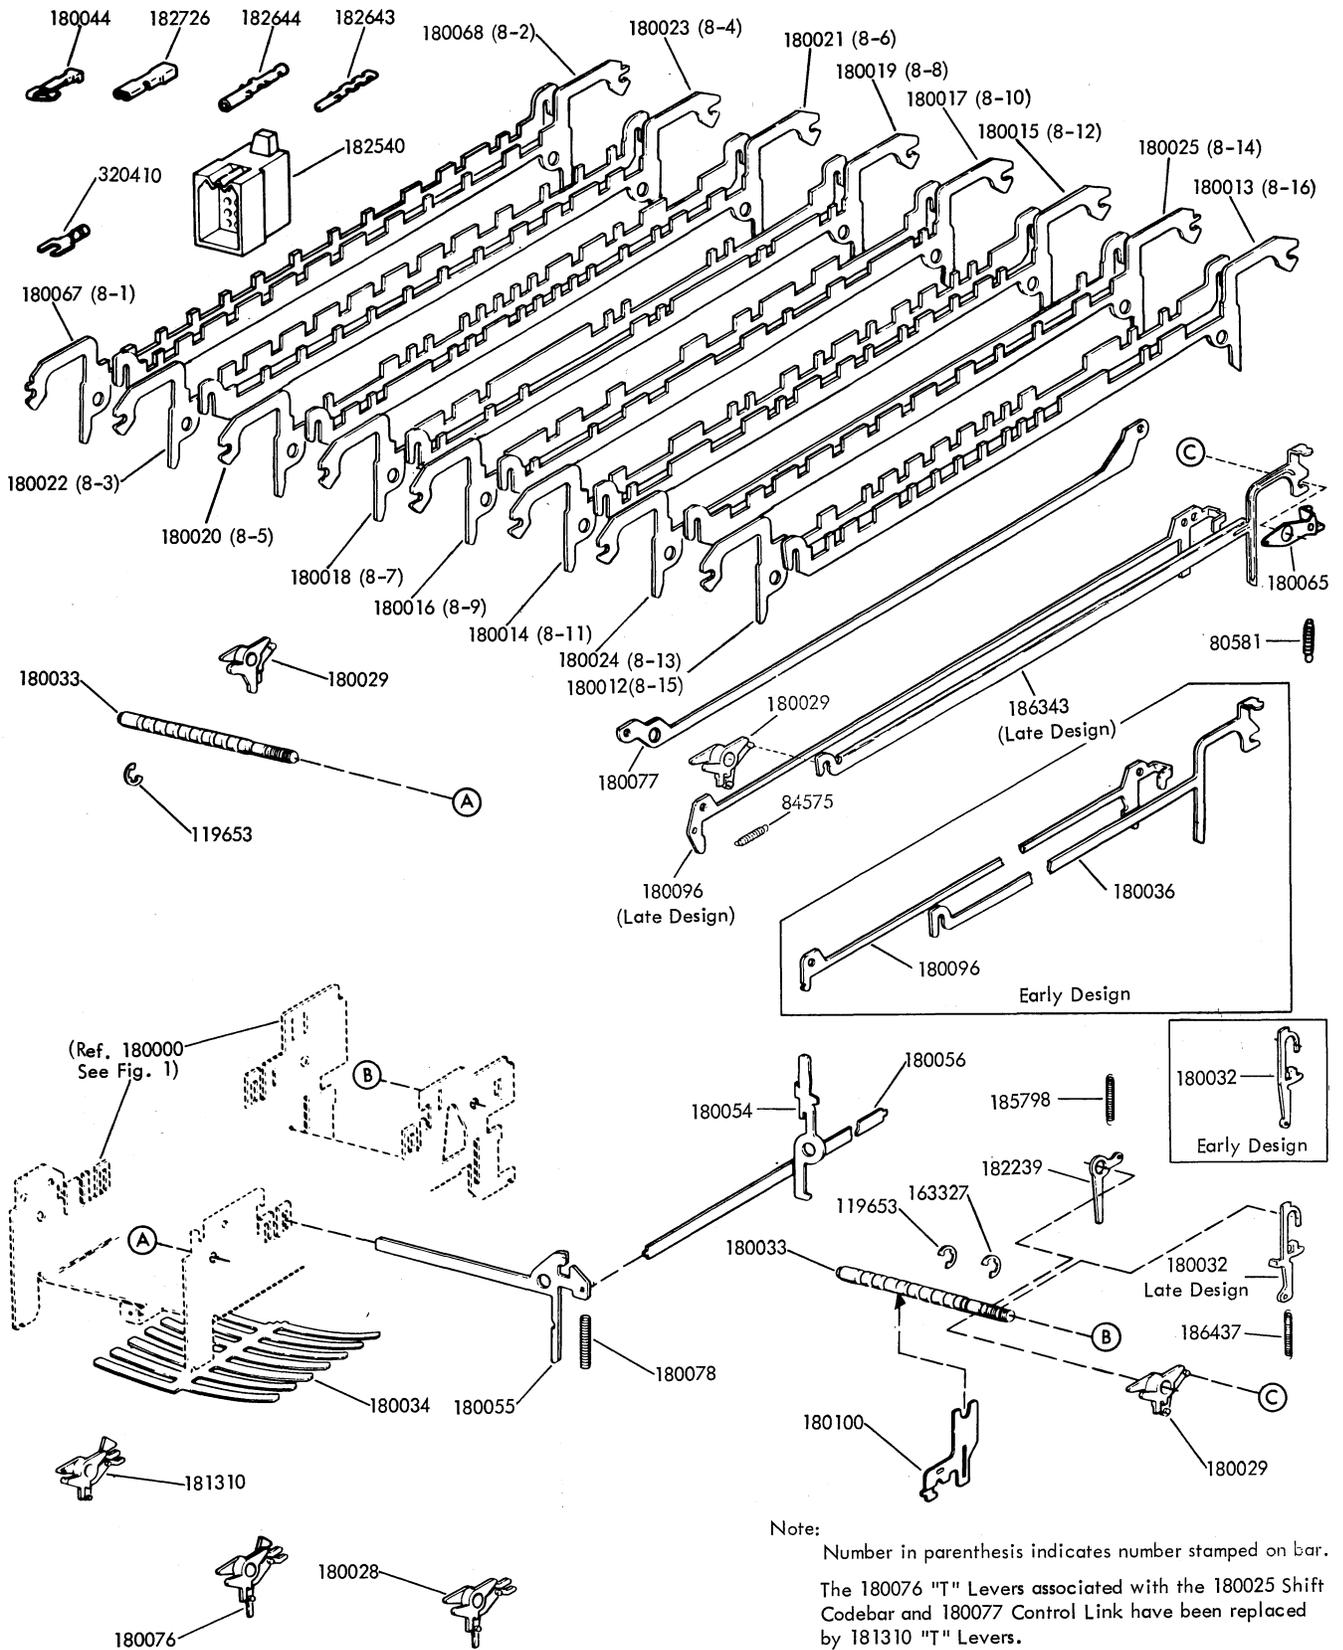


FIGURE 7. CODEBAR MECHANISM

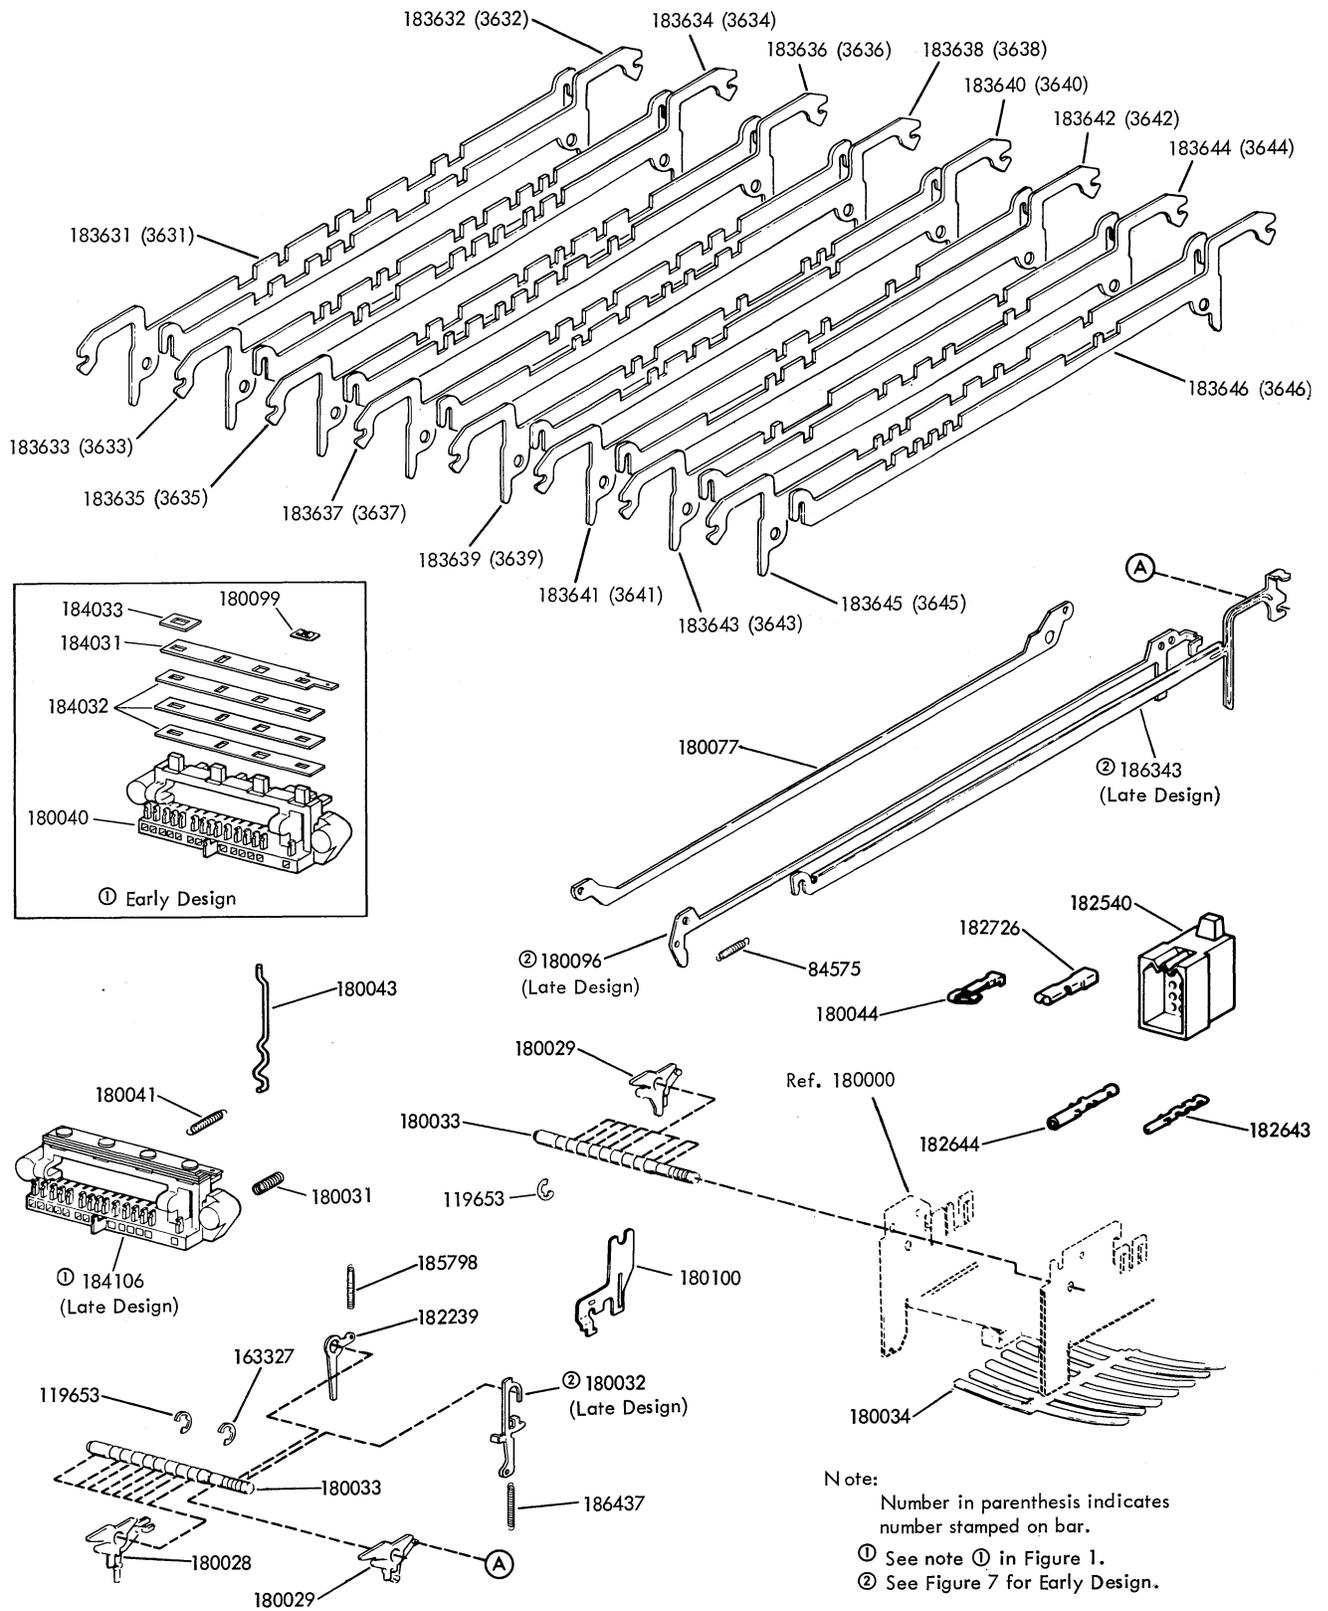


FIGURE 9. CODEBAR MECHANISM FOR NUMERIC KEYBOARD

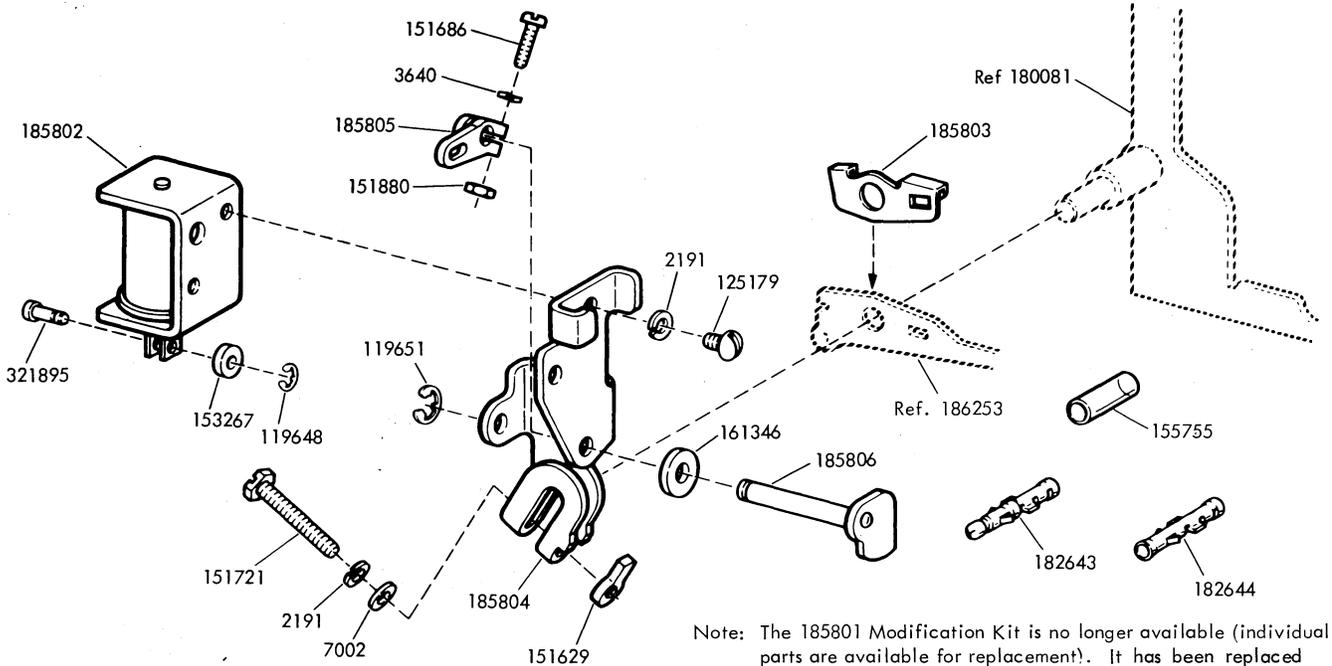


FIGURE 10. 185801 MODIFICATION KIT TO PROVIDE LOCKING FOR KEYBOARD

NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
1263	Screw, 6-32 x 1/4 Fil 3	180022	Codebar, No. 6 Rear 7	180101	Wire, Contact 2
2191	Lockwasher 3,10	180023	Codebar, No. 5 Front 7	180106	Keylever 6
3599	Nut, 4-40 Hex 3	180024	Codebar, No. 5 Rear 7,8	180114	Bracket, Left Keyboard 2
3624	Washer, Flat 2,3	180025	Codebar, No. 5 Front 7,8	180115	Modification Kit 2
3640	Lockwasher 10	180027	Cover, Keyboard 4	180116	Keylever 6
5740	Screw, 2-56 x 1/4 Fil 3	180028	Lever 7,8,9	180160	thru
6345	Nut, 6-32 Hex 3	180029	Lever 7,8,9	180170	Keytops 5
7002	Washer, Flat 3,10	180031	Spring, Compression 2,8,9	180172	thru
41663	Washer, Flat 4	180032	Lever, Non-Repeat 7,8,9	180203	Keytops 5
43984	Lockwasher 3	180033	Shaft 7,8,9	180205	thru
71073	Washer, Flat 3	180034	Spring, Flat 7,8,9	180208	Keytops 5
80581	Spring 7	180036	Bar, Universal Code 7	180257	Keytops 5
84575	Spring 7,8,9	180040	Block, Contact 2,8,9	180259	thru
86079	Washer, Felt 3	180041	Spring 2,8,9	180262	Keytops 5
90790	Washer, Flat 3	180043	Wire, Contact 2,8,9	180264	Keytop 5
91229	Strap, 2" Braided 2	180044	Terminal, Tab Type 2,7,8,9	180273	Keytop 5
93117	Lockwasher, 3	180046	Bail, Contact Reset 2,8	180274	Keytop 5
100337	Spring 2	180048	Keylever 6	180278	Keytop 5
104807	Washer, Flat 3	180049	Keylever 6	180280	Keytop 5
112627	Nut, 2-56 Hex 3	180050	Keylever 6	180281	Keytop 5
117608	Nut, Speed 4	180051	Keylever 6	180282	Keytop 5
119648	Ring, Retaining 3,10	180052	Keylever, Shift 6	180299	Keytop 5
119651	Ring, Retaining 10	180054	Keylever, Space Bar 6,7	180335	Keytop 5
119652	Ring, Retaining 4	180055	Keylever, Space 7,8	180336	Keytop 5
119653	Ring, Retaining 7,8,9	180056	Link, Space 7,8	180373	Keytop 5
125011	Washer, Flat 3	180057	Bar, Space 5	180374	Keytop 5
125179	Screw, 6-32 x 3/16 Rd 10	180061	Keytop 5	180382	thru
126815	Screw, 2-56 x 15/64 Hex 3	180064	Keylever, Repeat 6	180385	Keytops 5
130664	Lockwasher 3	180065	Lever, Line Break 7	180418	Keytop 5
151629	Nut, 6-40 Lub 10	180066	Keylever 6	180419	Keytop 5
151686	Screw, 4-40 x 3/8 Fil 10	180067	Bar, No. 7 Rear Code 7	180440	thru
151721	Screw, 6-40 x 3/4 Hex 10	180068	Bar, No. 7 Front Code 7	180444	Keytop 5
151880	Nut, 4-40 Hex 3,10	180069	Keylever, Line Break 6	180977	Plate w/Stud 2
153267	Washer, Felt 10	180071	Terminal 2,8	181253	Keytop 5
155755	Sleeve, 11/64 ID x 5/8"	180072	Keylever, Line Break 6	181254	Keylever 6
	Lg Insulating 3,10	180075	Terminal, Line Break 2,8	181255	Keylever 6
156633	Washer, Felt 2	180076	Lever, No. 5 Pulse 7,8	181310	Lever 7,8
161346	Washer, Felt 10	180077	Link 7,8,9	181960	Spacer, .114" Thk 8
163327	Ring, Retaining 7,8,9	180078	Spring, Compression 6,7,8	181961	Terminal 8
180000	Frame, Keyboard 2,3,7,8,9	180081	Bracket, Right Keyboard 2,10	181962	Terminal 8
180012	Codebar, No. 1 Rear 7,8	180082	Bracket, Left Keyboard 2,4	181963	Terminal, Parity 8
180013	Codebar, No. 1 Front 7,8	180084	Cover, Keyboard 4	181964	Insulator 8
180014	Codebar, No. 2 Rear 7	180090	Terminal, Common 2	181965	Block, Contact 8
180015	Codebar, No. 1 Front 7	180093	Terminal 2,8	181966	Terminal 8
180016	Codebar, No. 3 Rear 7	180094	Insulator 2	181967	Terminal 8
180017	Codebar, No. 3 Front 7	180096	Link 7,8,9		
180018	Codebar, No. 4 Rear 7,8	180099	Fastener 2,8,9		
180019	Codebar, No. 4 Front 7,8	180100	Guide 7,8,9		
180020	Codebar, No. 5 Rear 7,8				
180021	Codebar, No. 5 Front 7,8				

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
181968	Insulator 8	184024	Keylever 6	185805	Lever 10
181970	Line w/Extension 8	184025	Keytop 5	185806	Shaft 10
181971	Keytop 5	184026	Keytop 5	185871	Screw w/Lockwasher, 8-32 x 3/8 Hex 2
181975	Keylever 6	184027	Keytop 5	186049	Lever 8
181976	Keylever 6	184031	Terminal 9	186051	Link 8
181979	Bracket, Left Keyboard 2	184032	Insulator, .031" Thk 9	186253	Lever w/Hub 2,10
182239	Lever, Latch 3,7,8,9	184033	Spacer, .035" Thk 9	186314	Spring 2,8
182540	Connector, 15 Pt Plug Type 7,8,9	184106	Block Assembly, Right Contact 9	186339	Spring 8
182643	Terminal, Plug Type 3,7, 8,9,10	184107	Block Assembly, Right Contact 2	186343	Codebar 7,8,9
182644	Terminal, Receptacle Type 3,7,8,9,10	184109	Block Assembly, Right Contact 8	186417	Wire, Contact 8
182674	Jumper, 2-1/4" Green 2	184135	Block Assembly, Left Contact 8	186419	Lever 8
182675	Jumper, 2-1/4" Purple 2	184334	thru	186435	Spring 2
182676	Jumper, 2-1/4" Red 2	184346	Keytops 5	186437	Spring 7,8,9
182726	Terminal, Receptacle Type 7,8,9	184351	Keytop 5	186700	Shaft 3
183236	Keylever, Repeat 6	184734	Keytop 5	186701	Plate 3
183237	Cover, Keyboard 4	184815	thru	186702	Screw, 6-32 Spl 3
183238	Keylever 6	184818	Keytops 5	186703	Plate, Top Mounting 3
183600	Codebar 8	184869	Keytop 5	186704	Stud 3
183601	Codebar 8	184895	Keytop 5	186705	Shaft 3
183604	Codebar 8	185089	Keytop 5	186706	Cam, Trip 3
183605	Codebar 8	185090	Keytop 5	186707	Lever 3
183608	thru	185092	Keytop 5	186709	Bushing, Eccentric 3
183613	Codebar 8	185093	Keytop 5	186746	Lever 6
183631	thru	185150	Keytop 5	186752	Modification Kit 1,3,10
183646	Codebar 9	185159	Keytop 5	186754	Bushing 3
183852	Pin 3	185160	thru	186830	Bracket 3
183888	Keytop 5	185165	Keytops 5	186831	Solenoid Assembly 3
183889	Keytop 5	185780	Spring, Compression 6	186832	Bushing, Eccentric 3
183890	Keytop 5	185798	Spring 7,8,9	186833	Shaft 3
183891	Keytop 5	185801	Modification Kit 1,10	186834	Lever 3
183892	Keytop 5	185802	Solenoid 3,10	186874	Cam, Trip 3
183951	Wire, Contact 2,8	185803	Clip 10	187008	Wire, Contact 8
184022	Keylever 6	185804	Bracket 10	192538	Plug, Button 4
184023	Keylever 6			195307	Keylever, Repeat 6
				303037	Spring, Compression 3
				305537	Plug, Button 4
				312918	Strap 2
				320410	Terminal, Spade Type 7
				321895	Post 3,10