

37 TYPING REPERFORATOR (YPR)

PARTS

FIGURE	CONTENTS	PAGE	FIGURE	CONTENTS	PAGE
1	Frame Mechanism	2	16	342076 Ribbon Feed Mechanism	17
2	Frame Mechanism (Continued)	3	17	Typing Mechanism	18
3	Selector and Function Clutches	4	18	324324 Punch Block Assembly	19
4	Rear Plate	5	19	324203 Slide Storage Assembly	19
5	Front Plate	6	20	Backspace Mechanism	20
6	Punch Bail Mechanism	7	21	Parts to add Power Drive to Backspace Mechanism	21
7	Rotary Positioning Mechanism	8	22	Print Suppression and Last Character Solenoid Assembly	22
8	Rotary Positioning Mechanism (Continued)	9	23	324225 Auxiliary Contact Assembly	23
9	324300 Delete Tape Feed-Out Assembly	10	24	Code Reading Contacts	24
10	Axial Positioning Mechanism	11	25	329060 Inhibit Contact Assembly	24
11	Axial Positioning Mechanism (Continued)	12	26	324230 Function Contact Assembly	25
12	Bellcrank and Bar Locking Mechanism	13	27	321055 Modification Kit to add Manual Interfering Rubout Feed-Out	25
13	Selector Mechanism	14	28	341185 Selector Clutch Assembly	26
14	Selector Mechanism (Continued)	15		Numerical Index	27
15	Transfer Mechanism	16			

The part identification information contained in the following change notices have been incorporated in this issue.	
TCN,s	#1666, #1727, #1785, #1799

TELETYPE CODE	BELL CODE	RIBBON
181129	61215	Black

**NOTE:** When ordering parts from this section prefix each number with the letters TP.

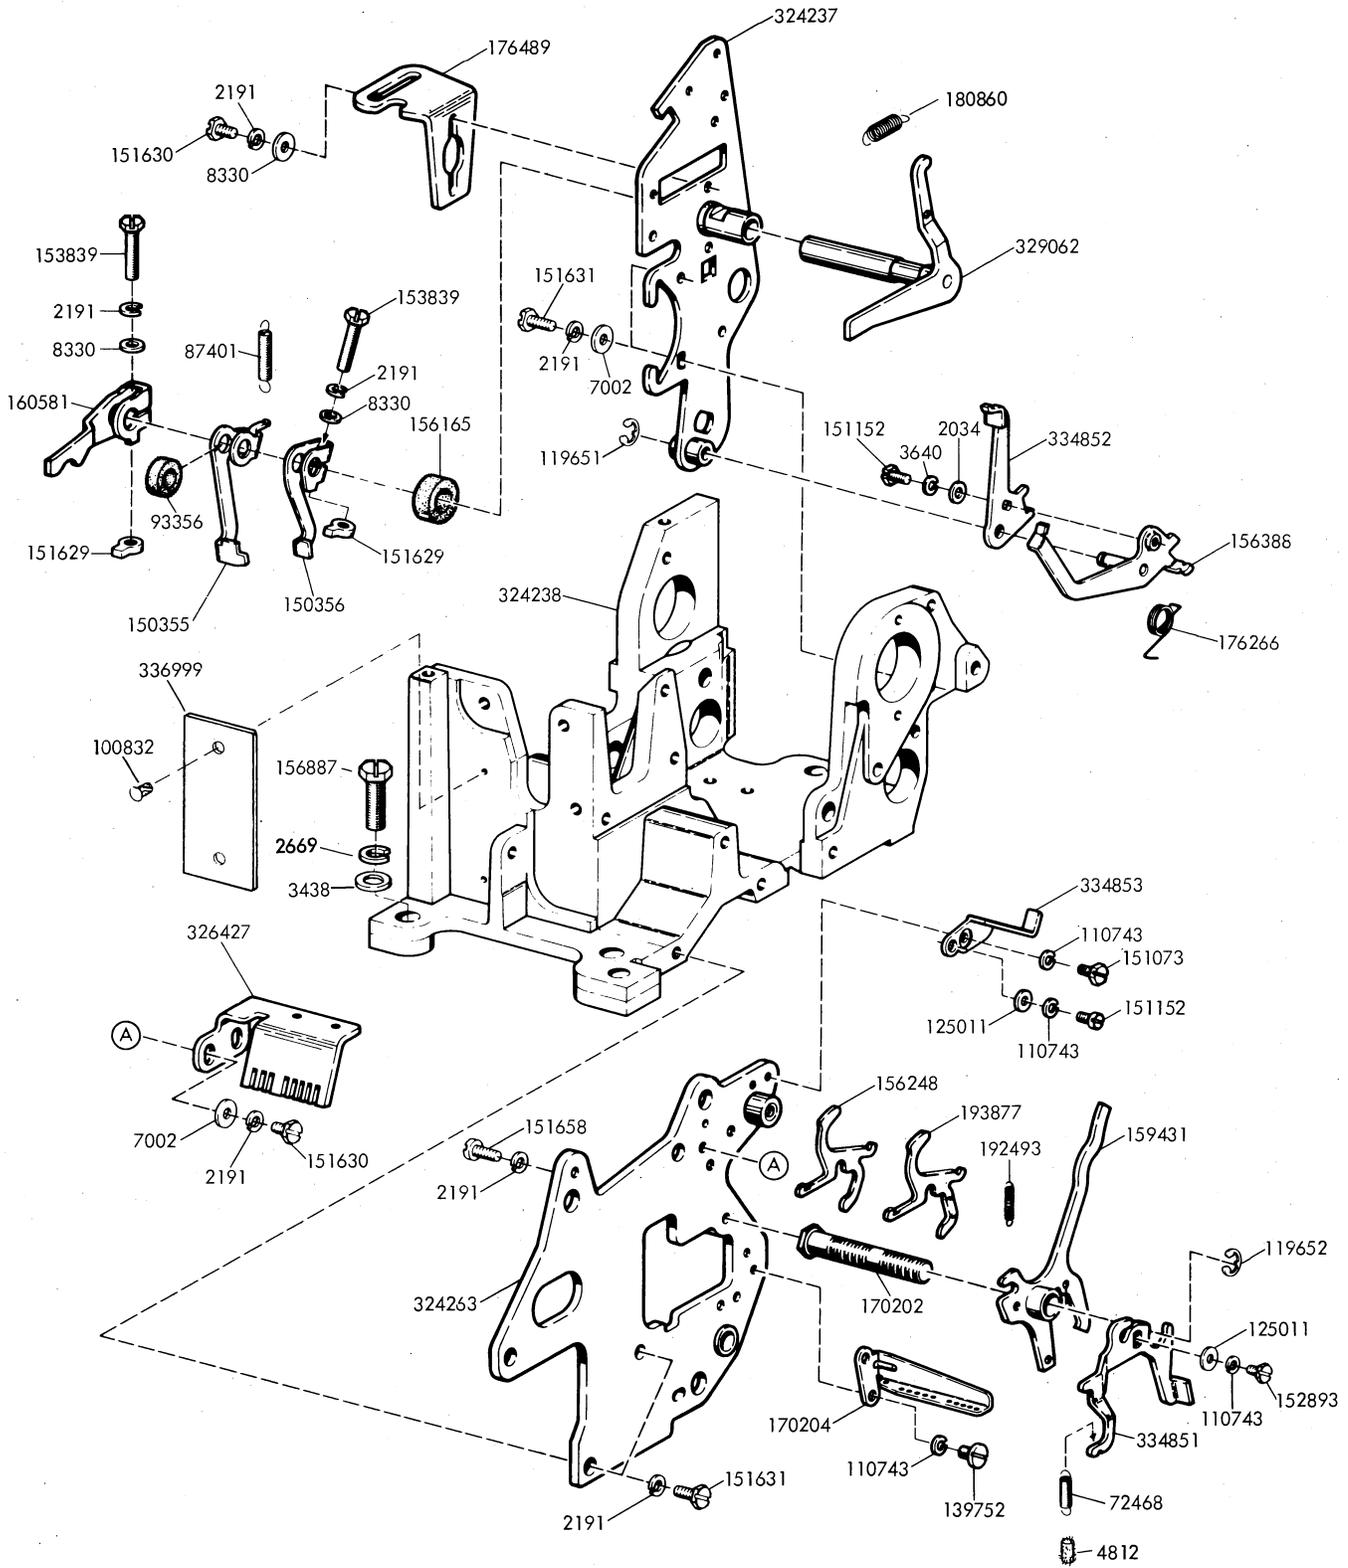


FIGURE 1. FRAME MECHANISM


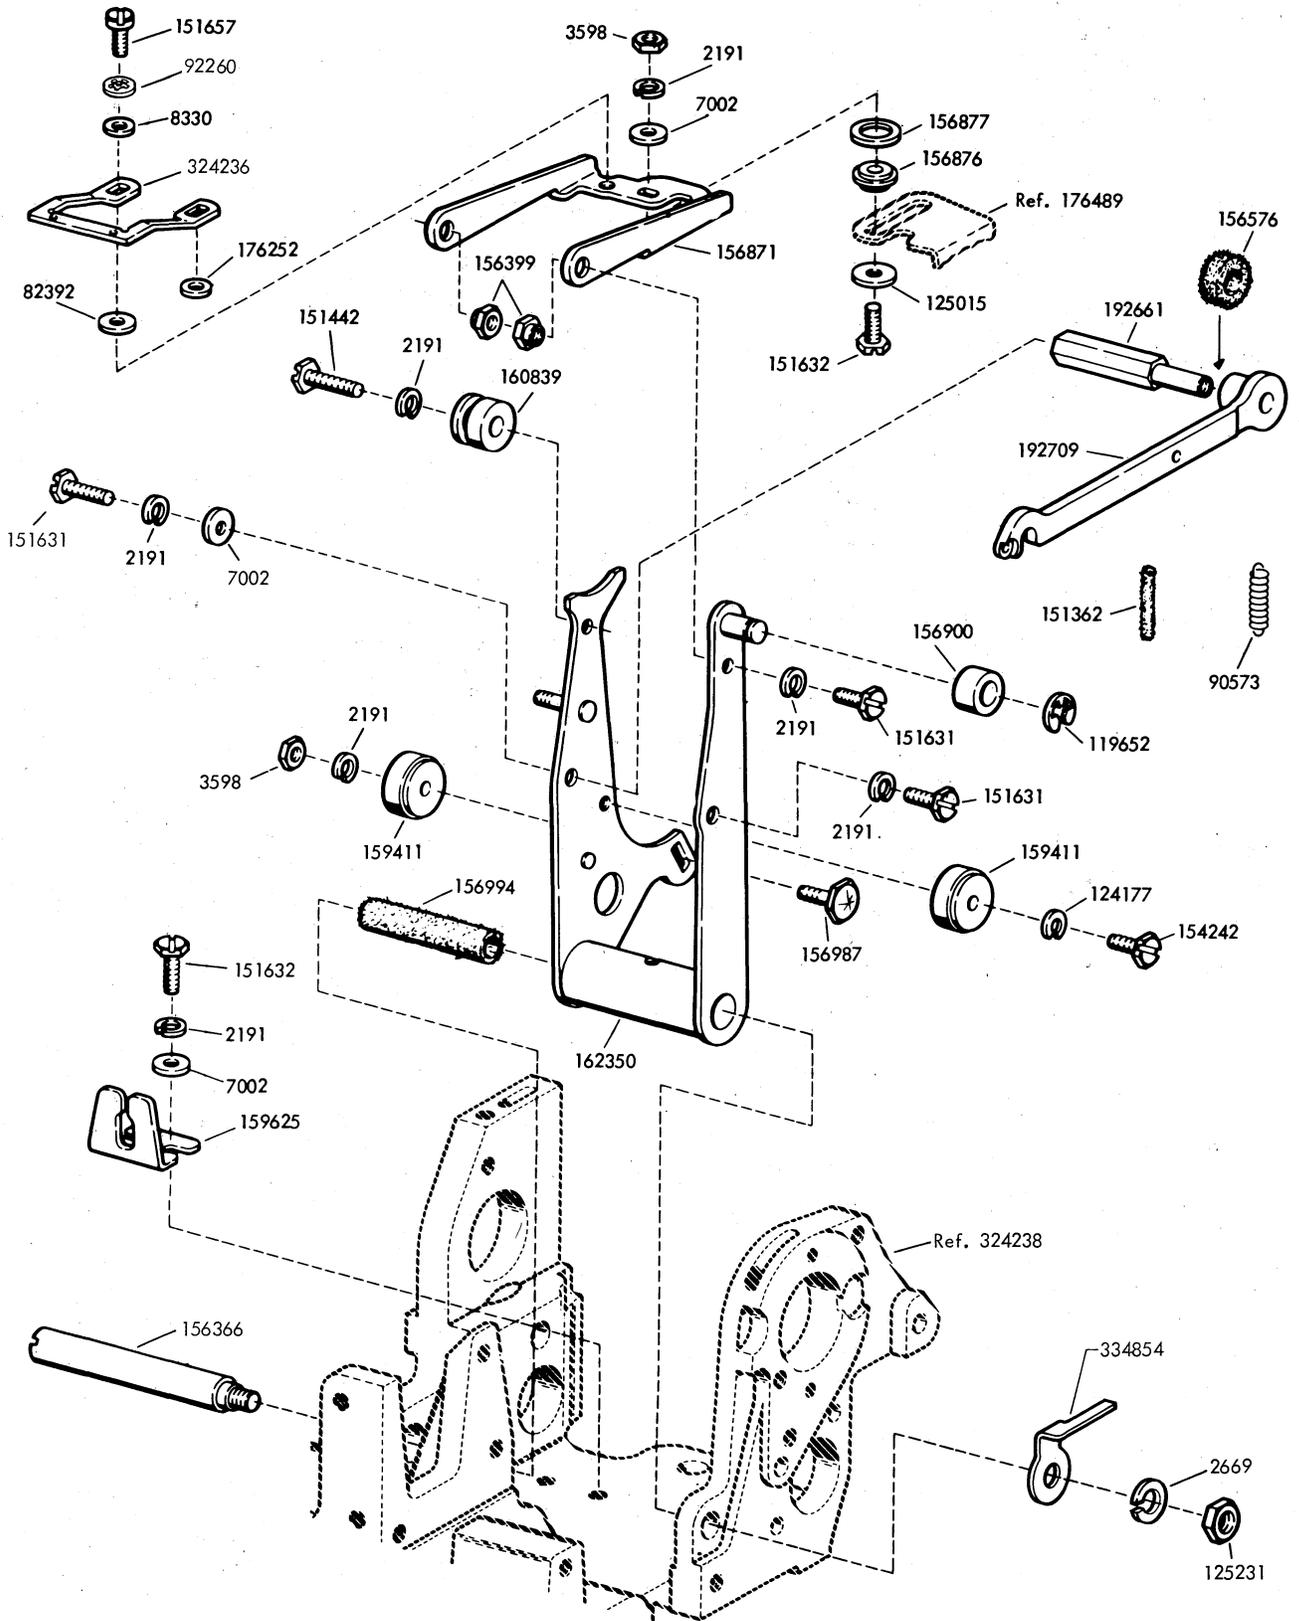


FIGURE 2. FRAME MECHANISM (Continued)

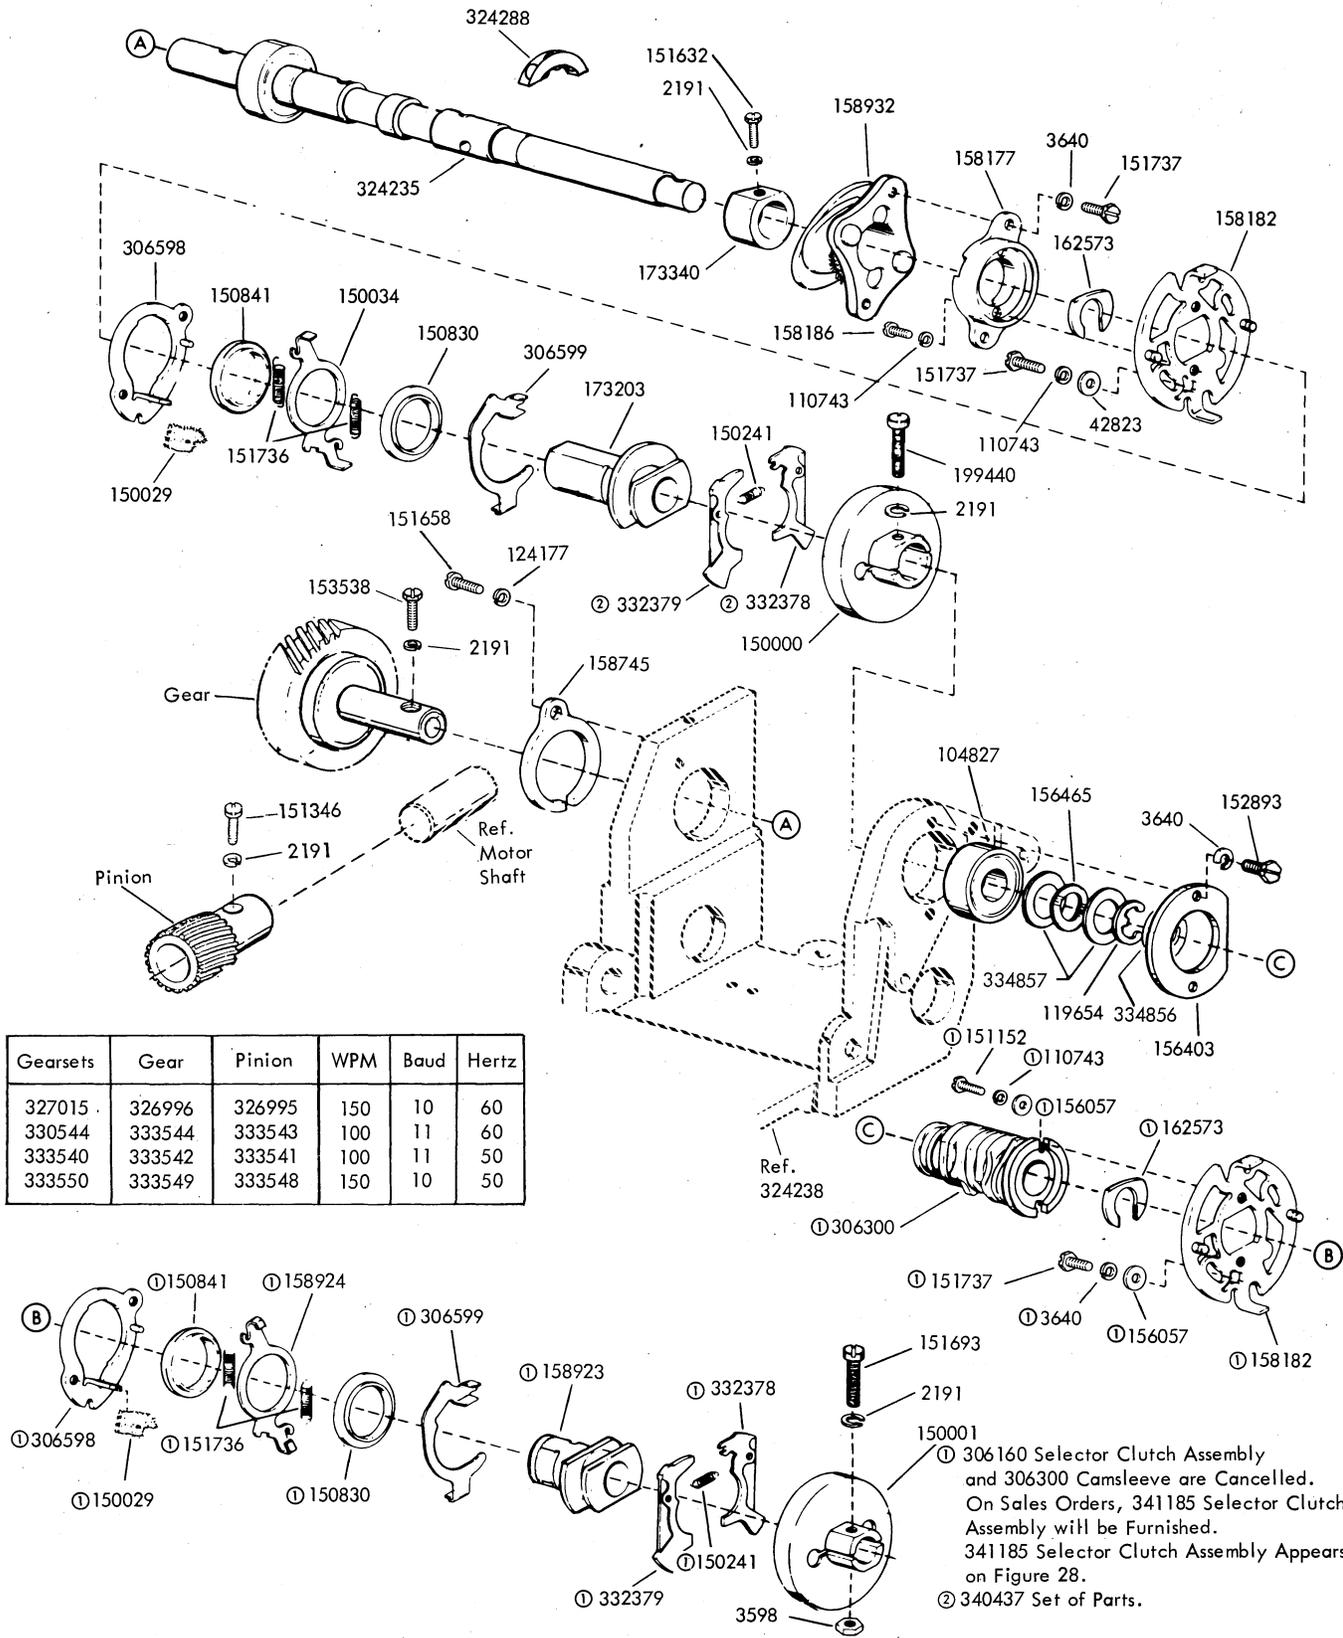

Gearsets	Gear	Pinion	WPM	Baud	Hertz
327015	326996	326995	150	10	60
330544	333544	333543	100	11	60
333540	333542	333541	100	11	50
333550	333549	333548	150	10	50

FIGURE 3. SELECTOR AND FUNCTION CLUTCHES

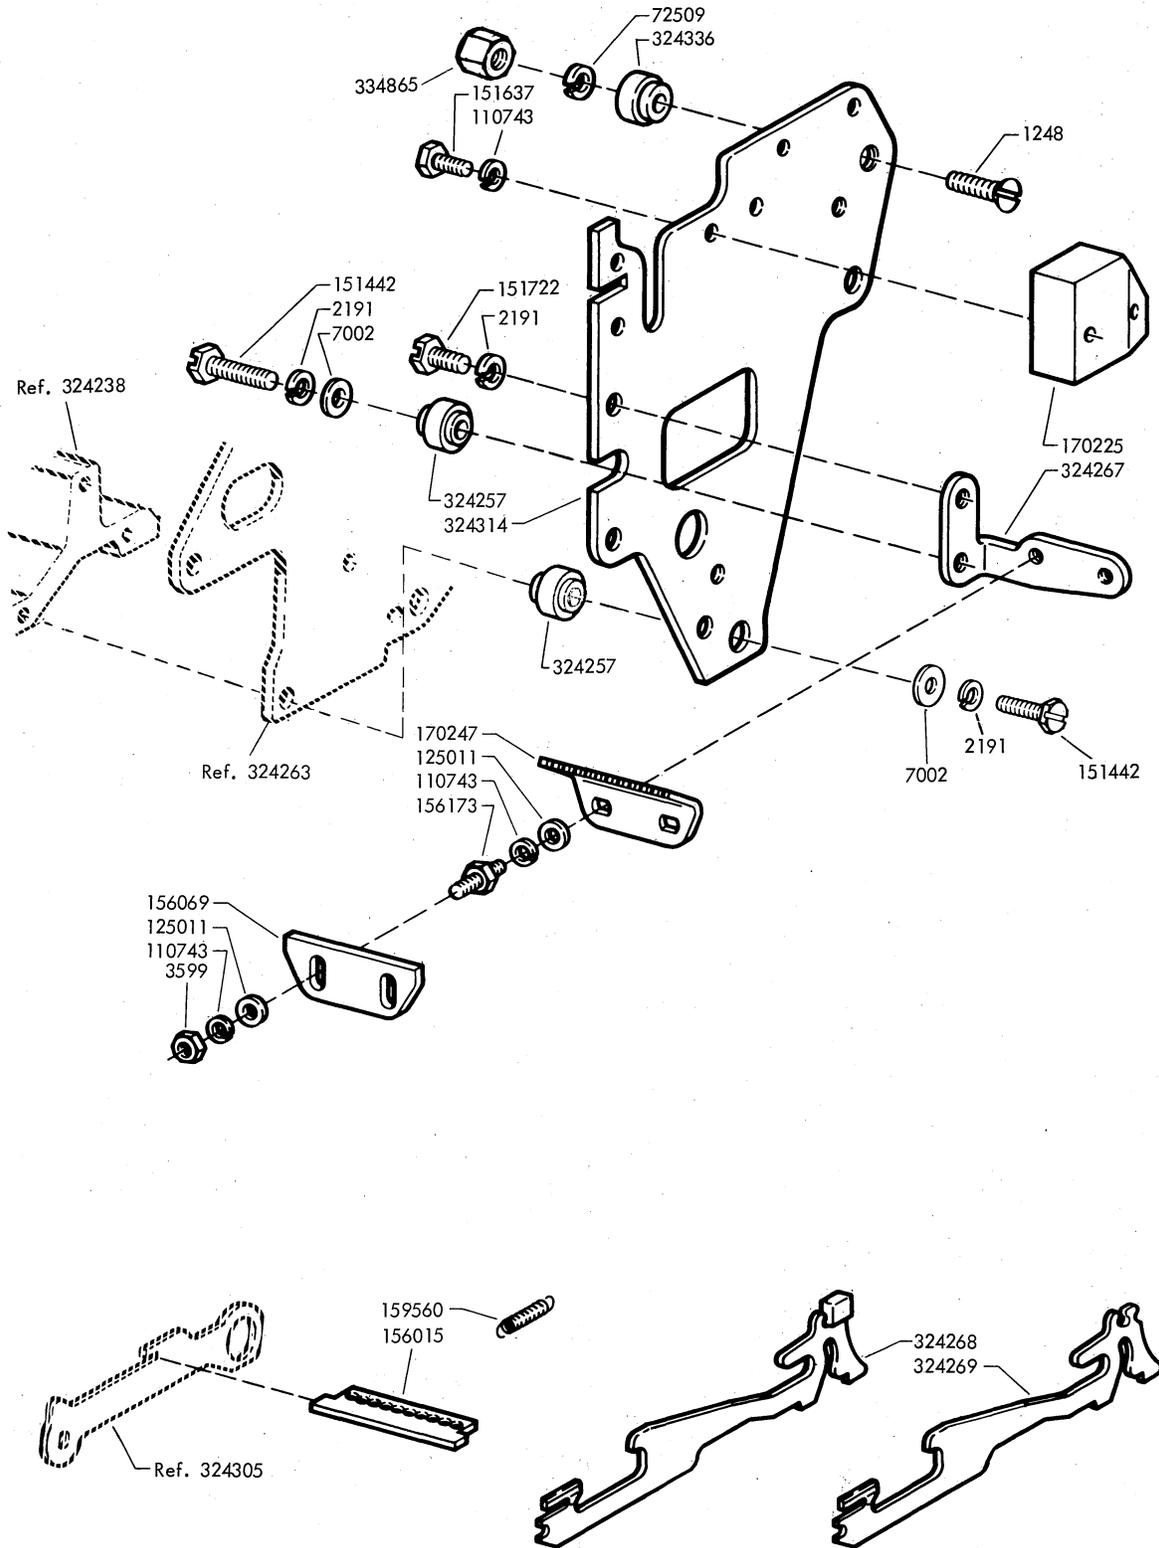


FIGURE 4. REAR PLATE



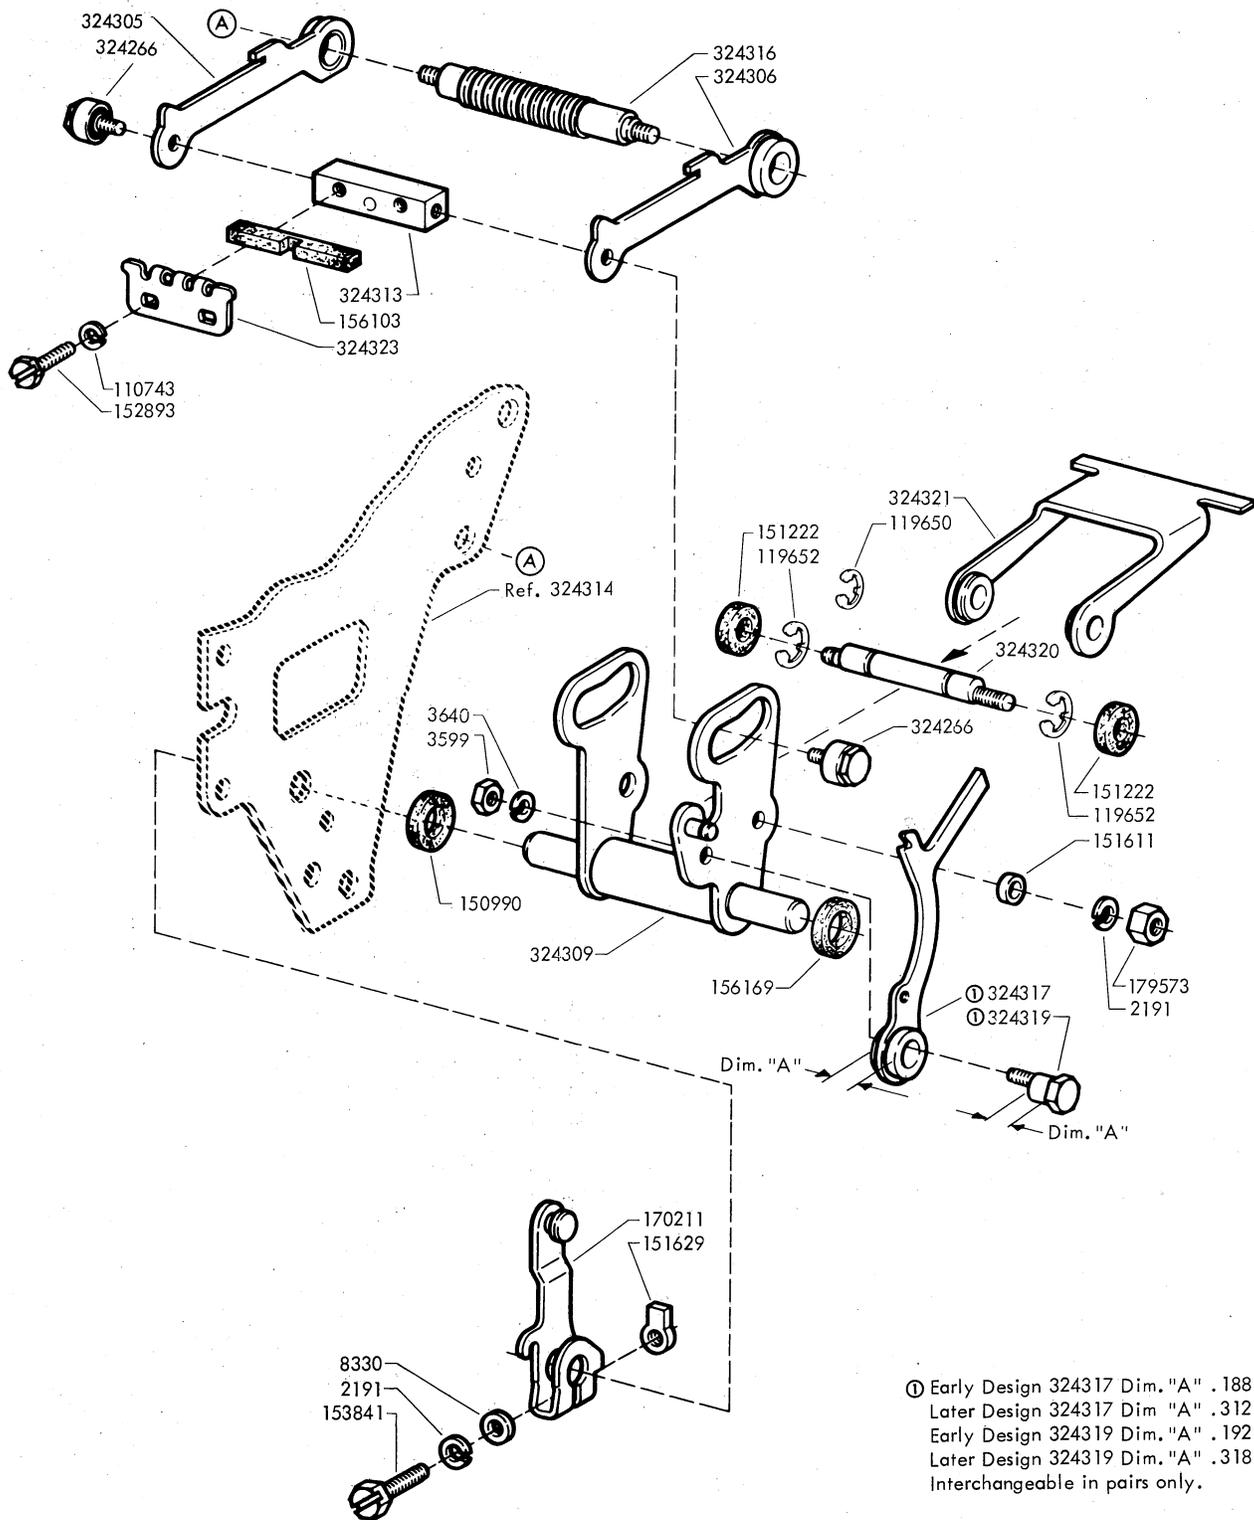


FIGURE 6. PUNCH BAIL MECHANISM

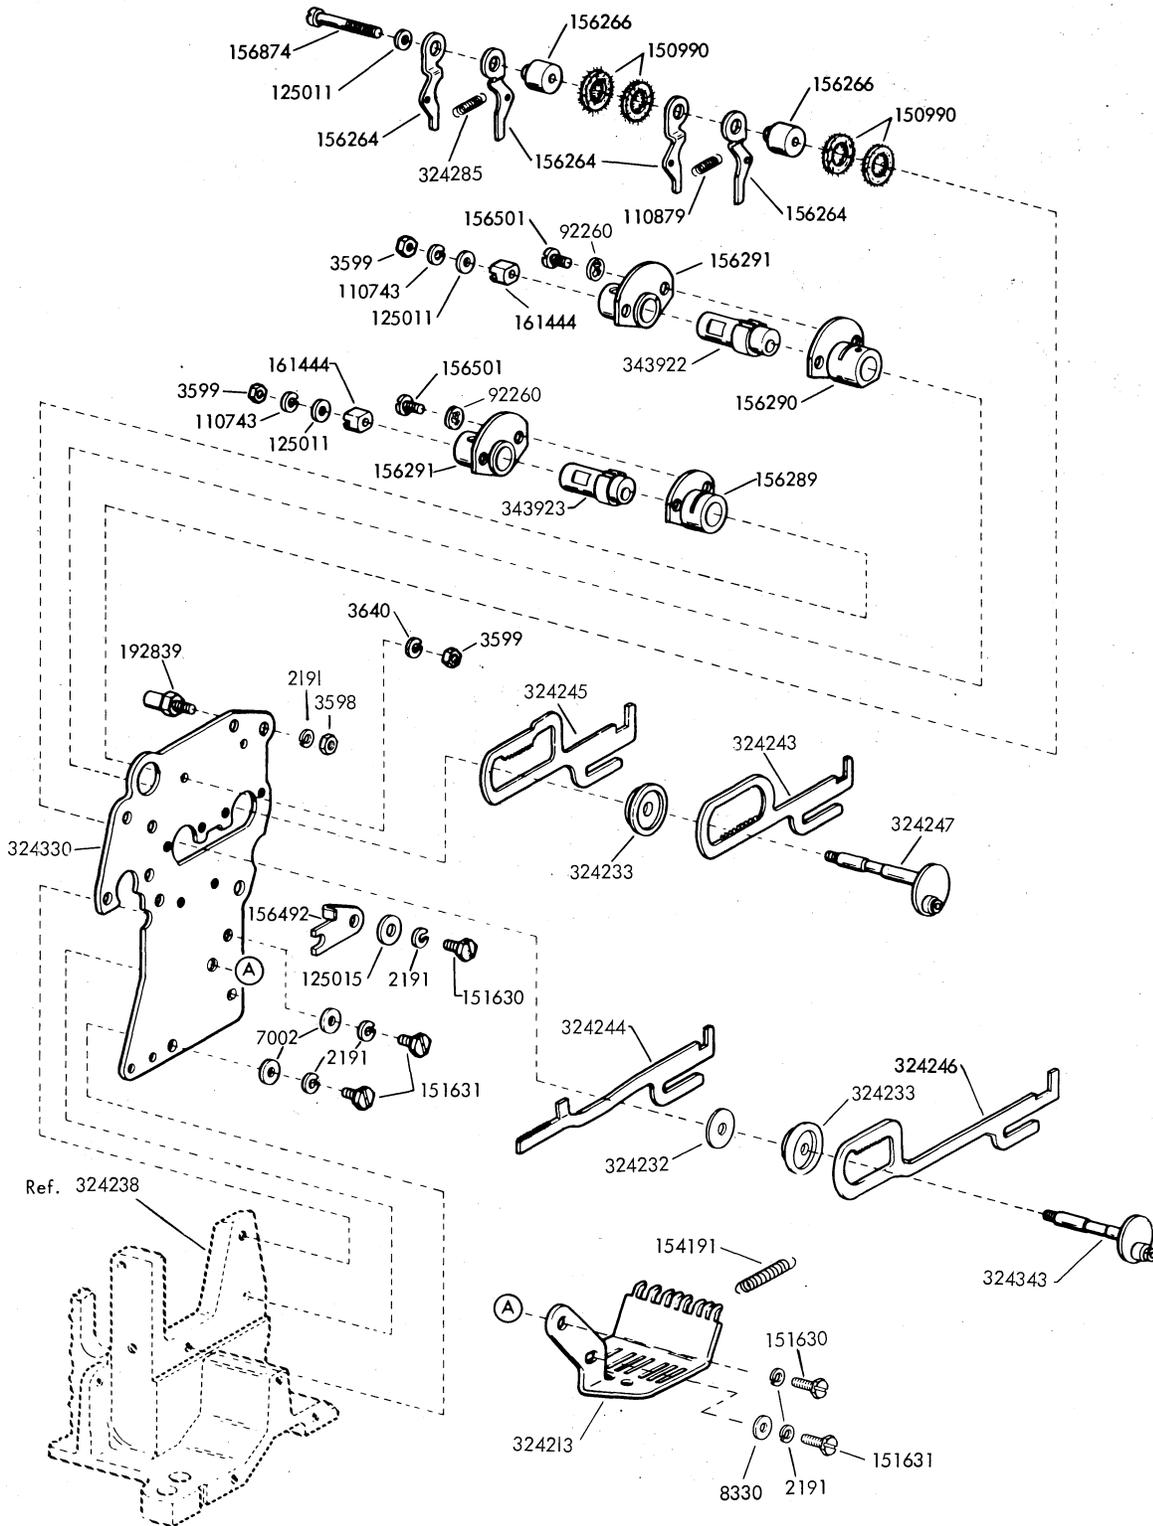


FIGURE 7. ROTARY POSITIONING MECHANISM

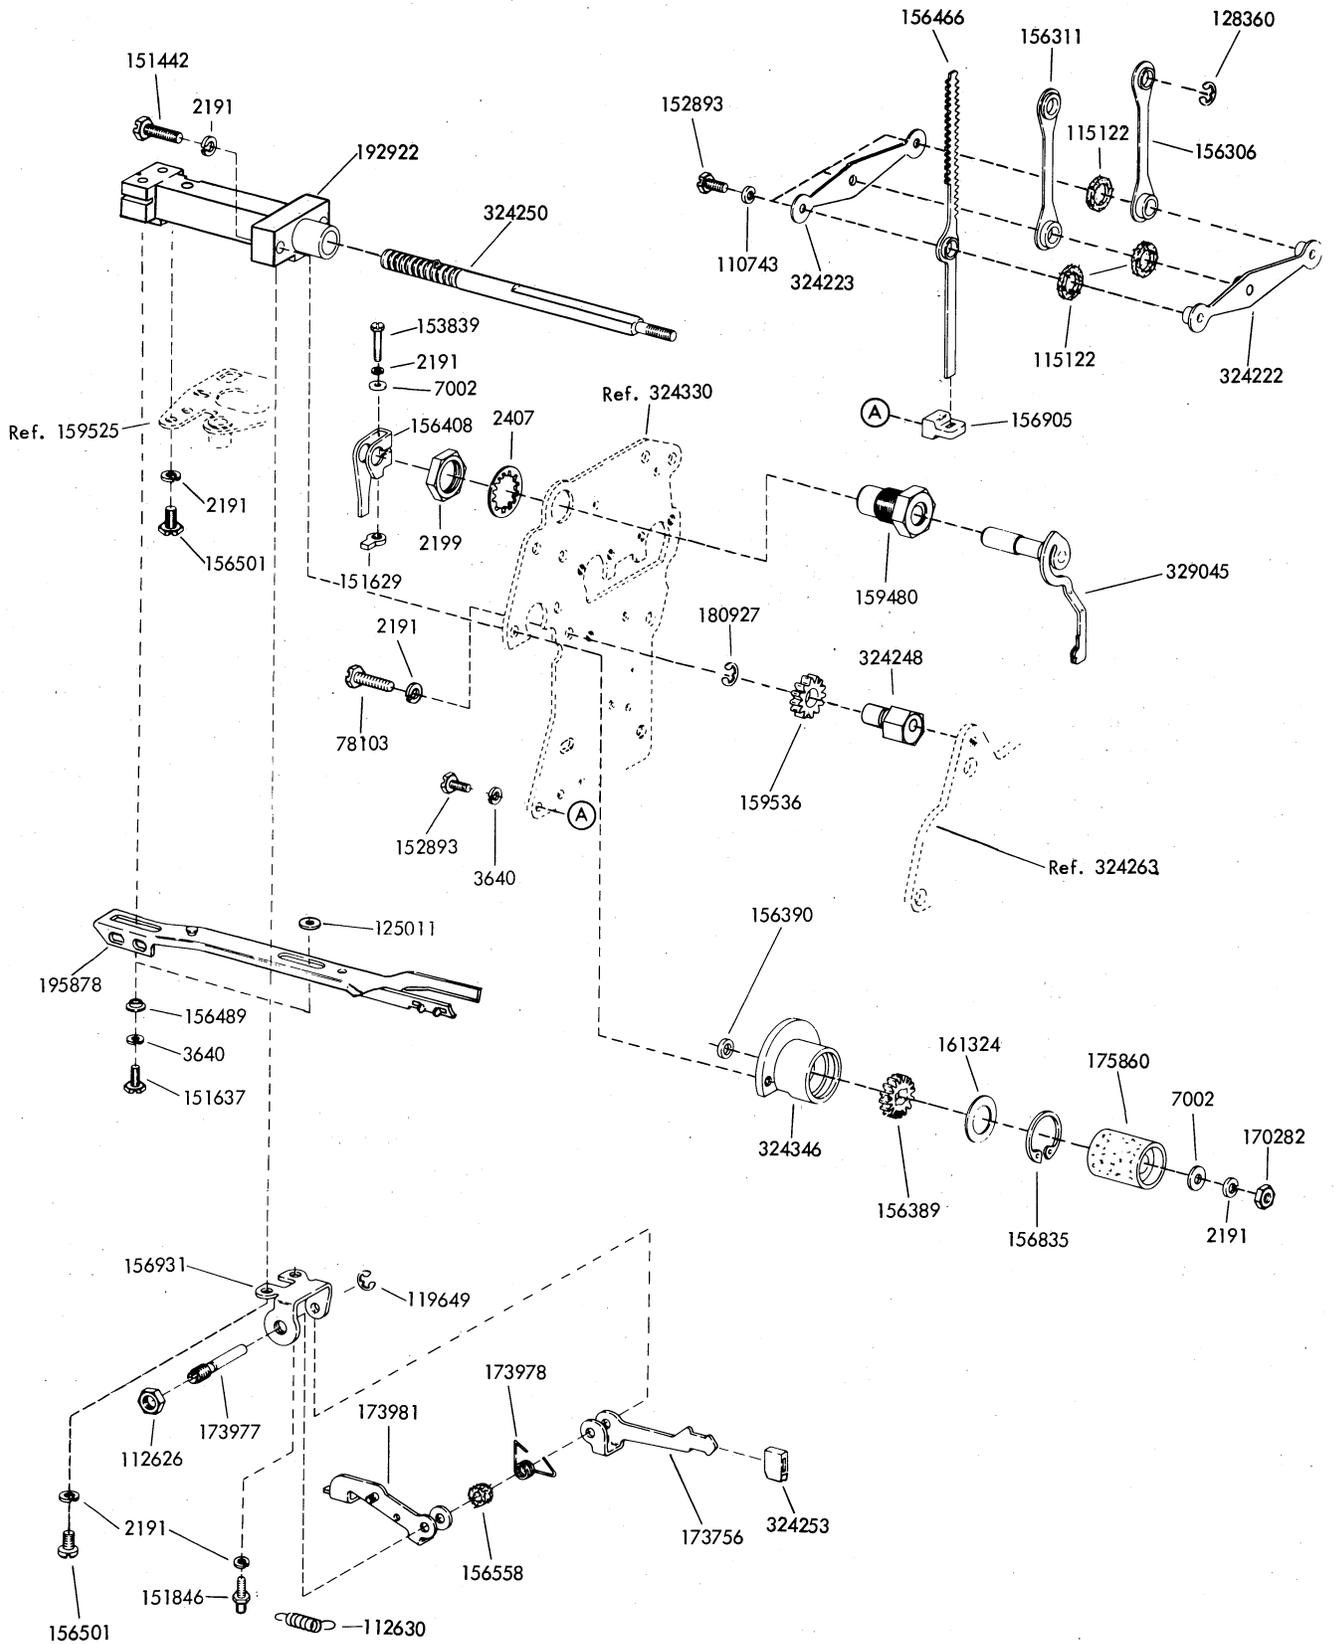


FIGURE 8. ROTARY POSITIONING MECHANISM (Continued)

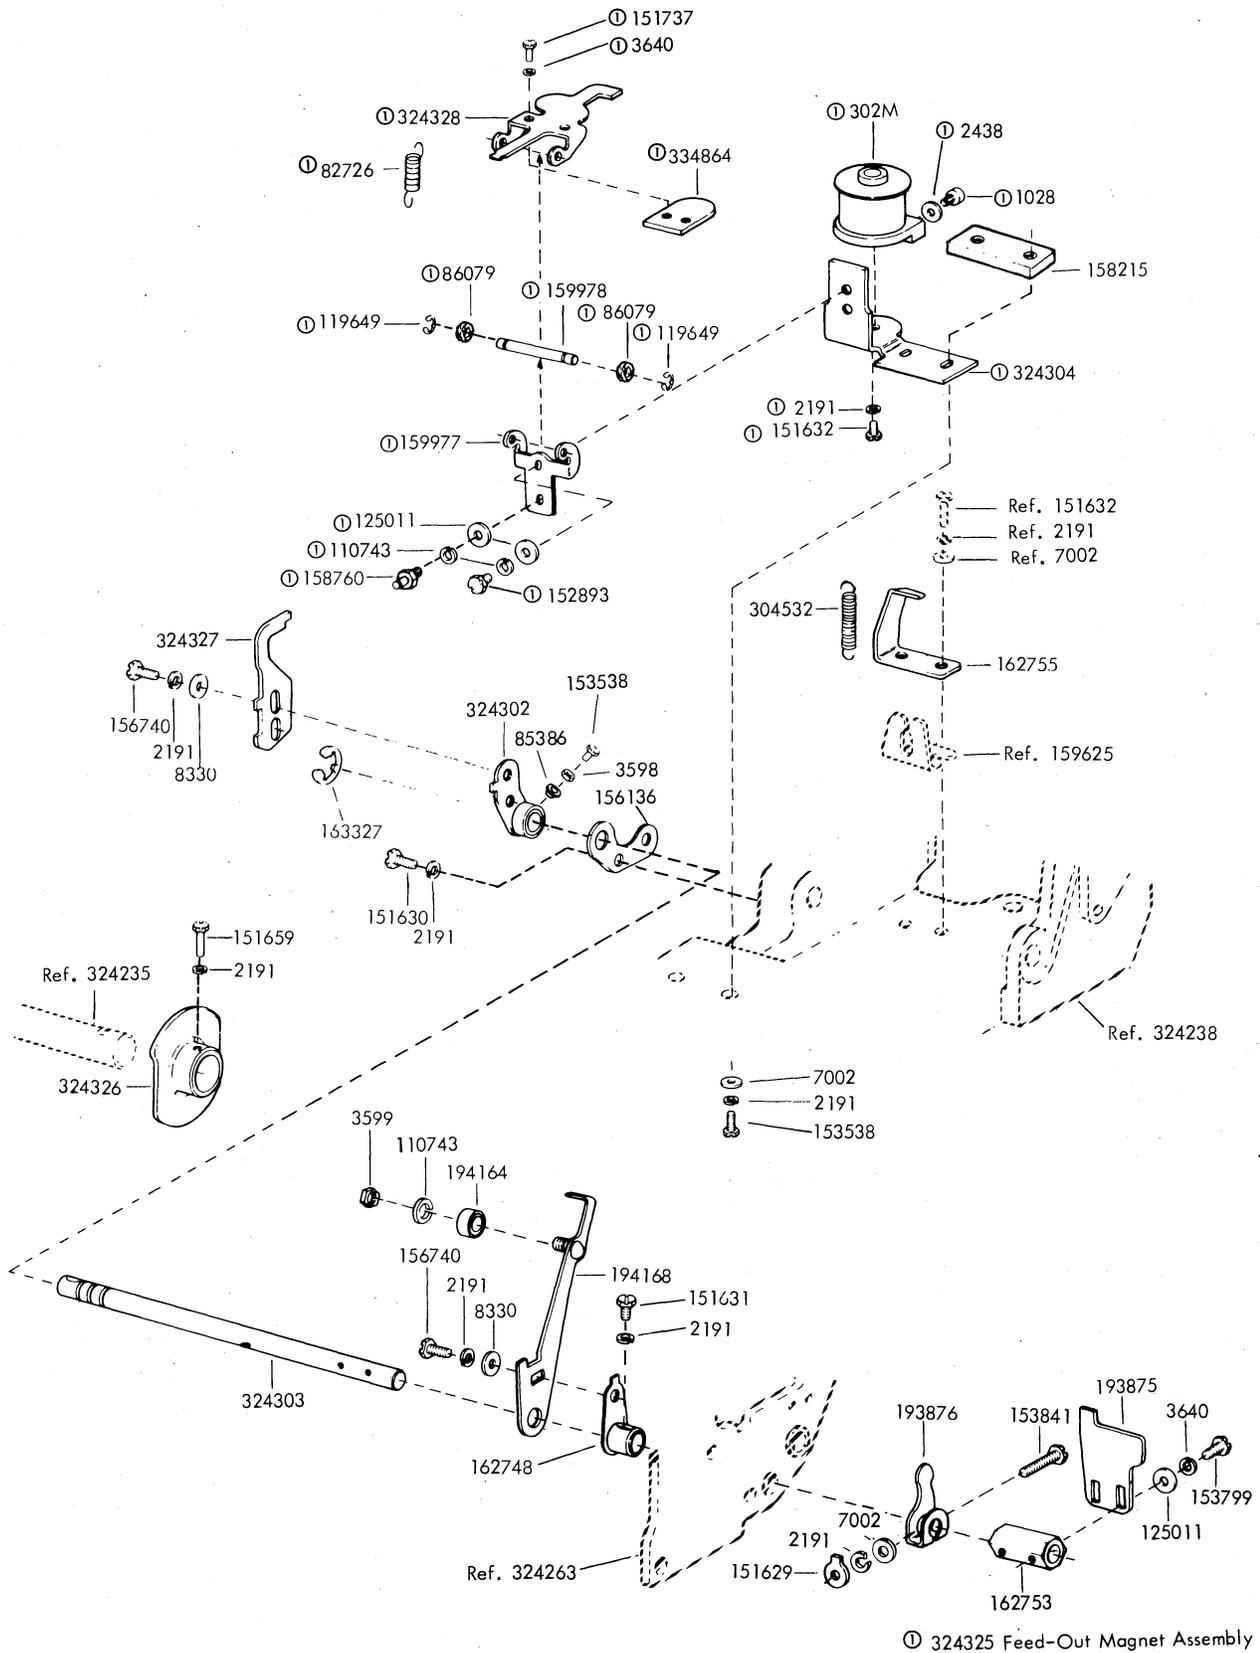


FIGURE 9. 324300 DELETE TAPE FEED-OUT ASSEMBLY

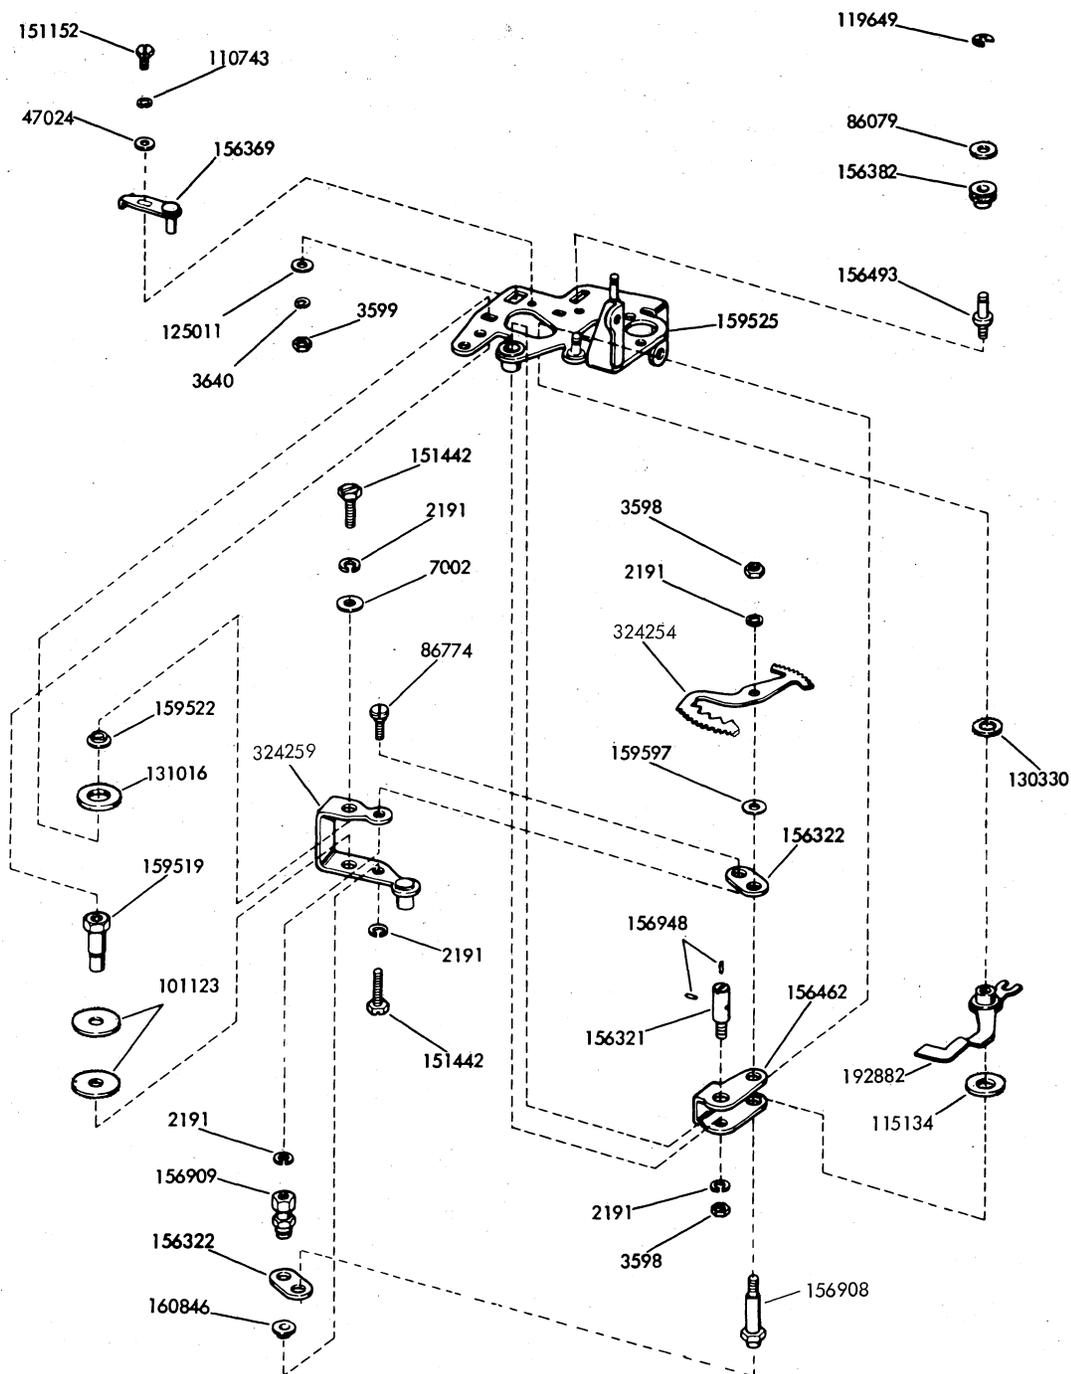


FIGURE 10. AXIAL POSITIONING MECHANISM

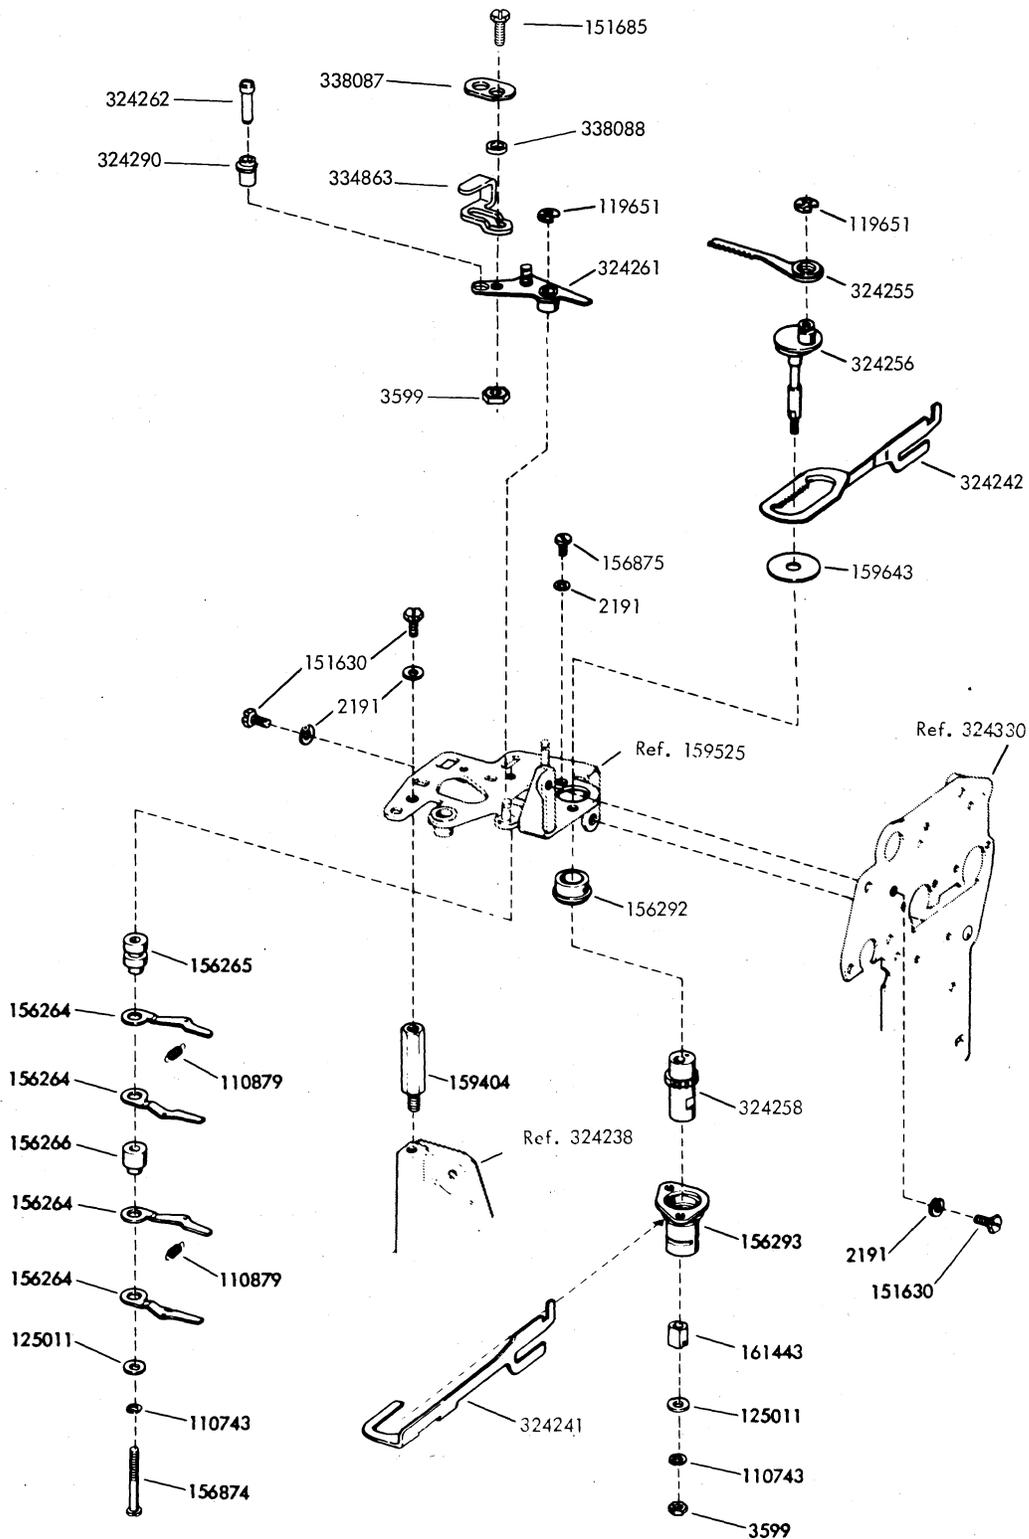


FIGURE 11. AXIAL POSITIONING MECHANISM (Continued)

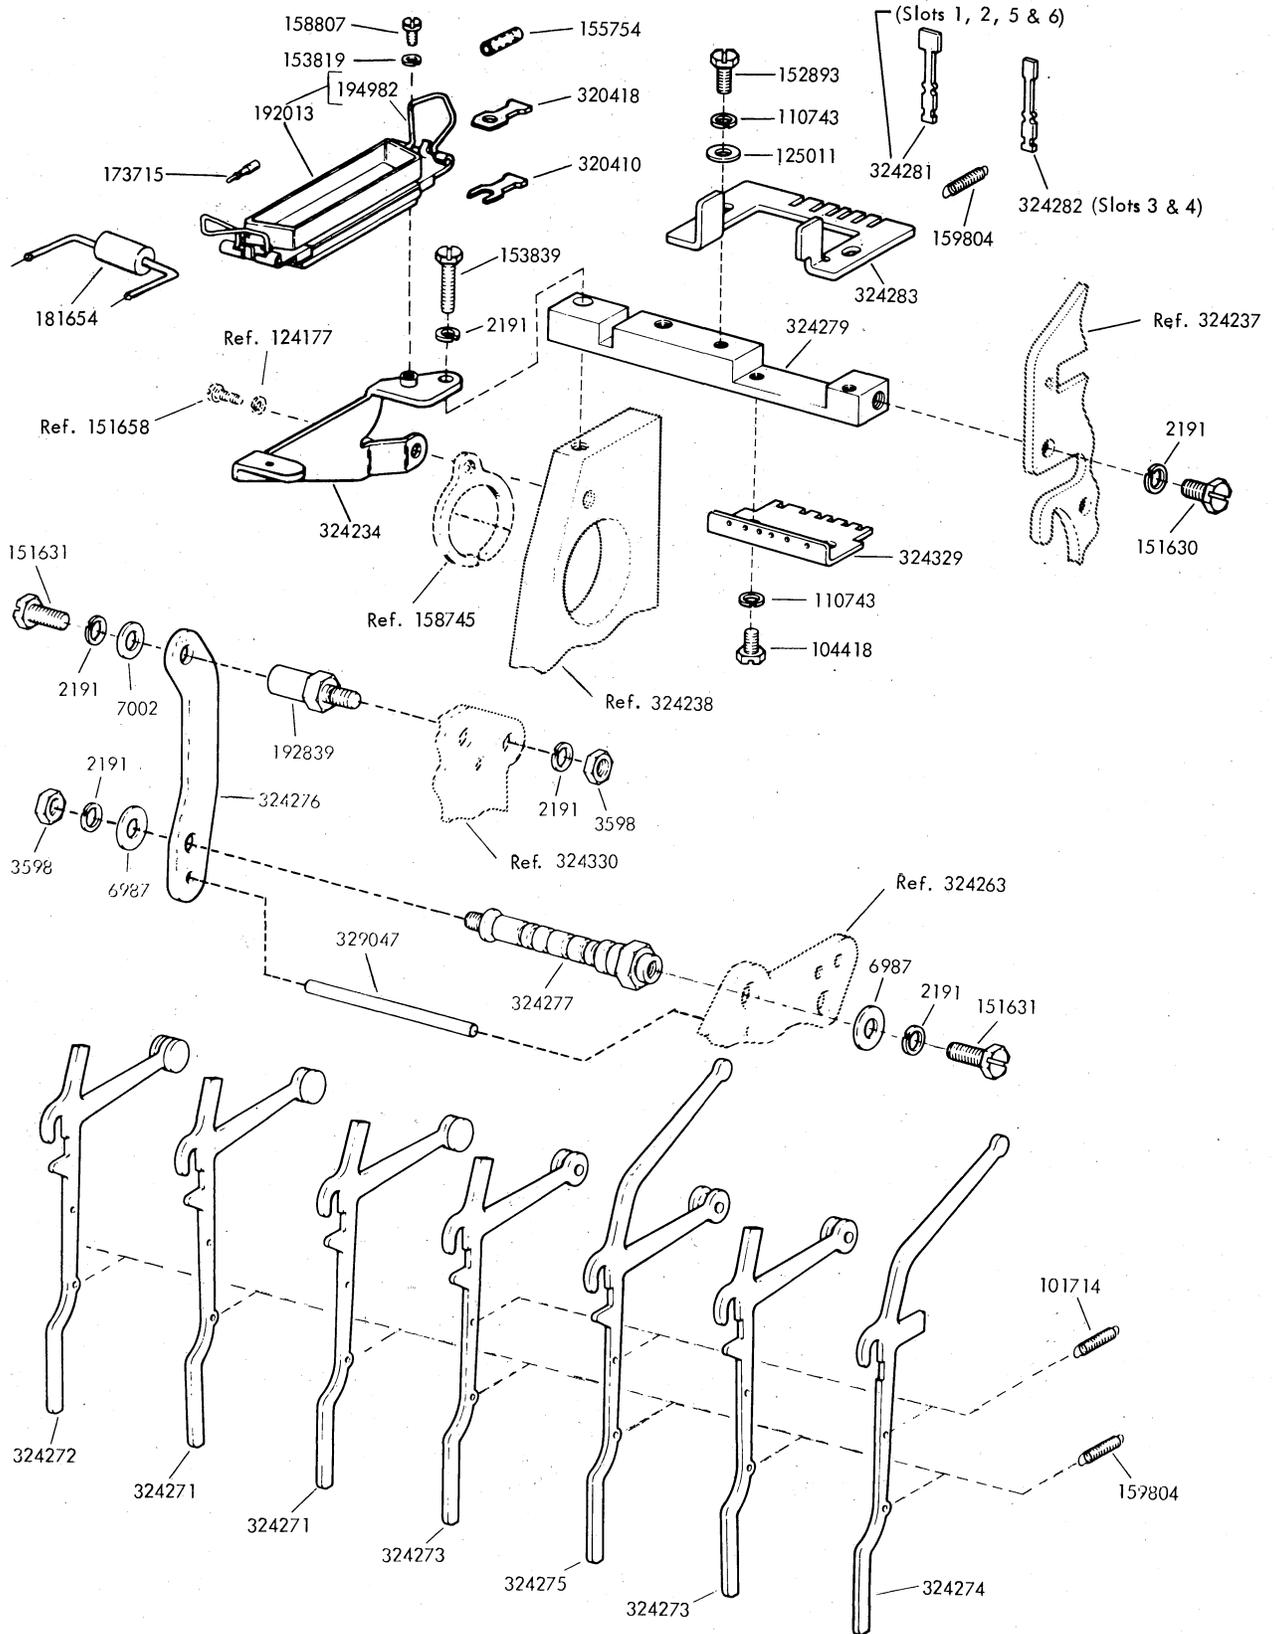


FIGURE 12. BELLCRANKS AND BAR LOCKING MECHANISMS



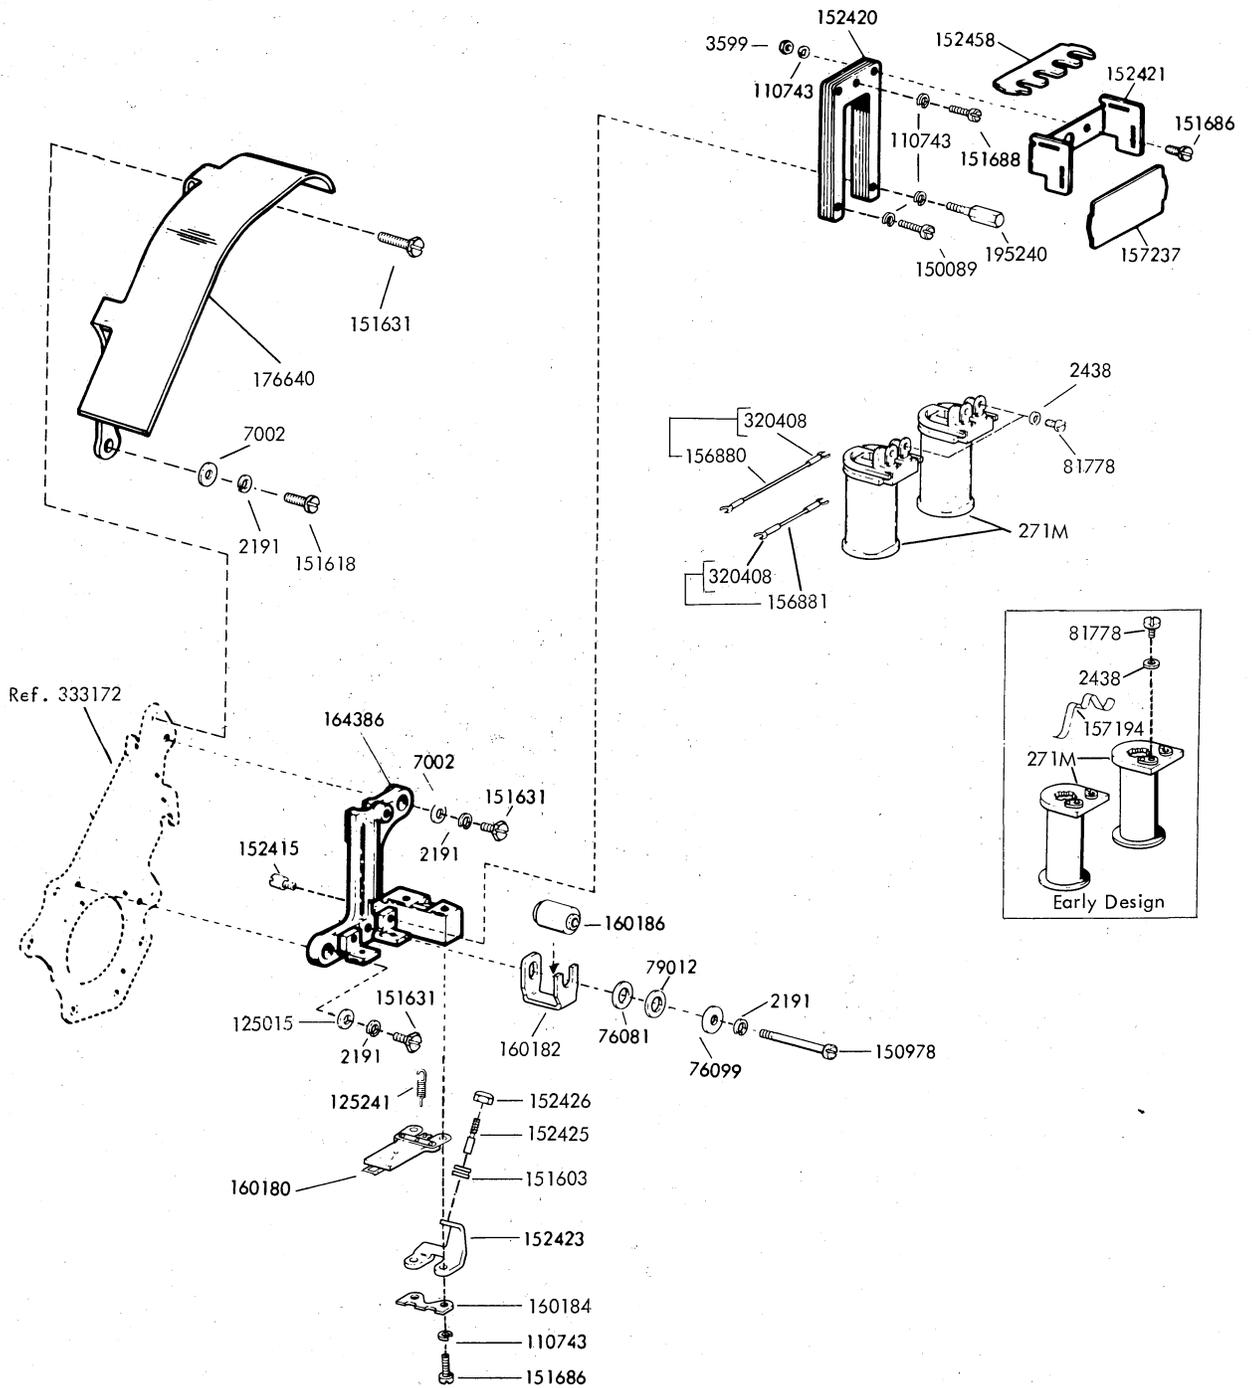


FIGURE 14. SELECTOR MECHANISM (Continued)

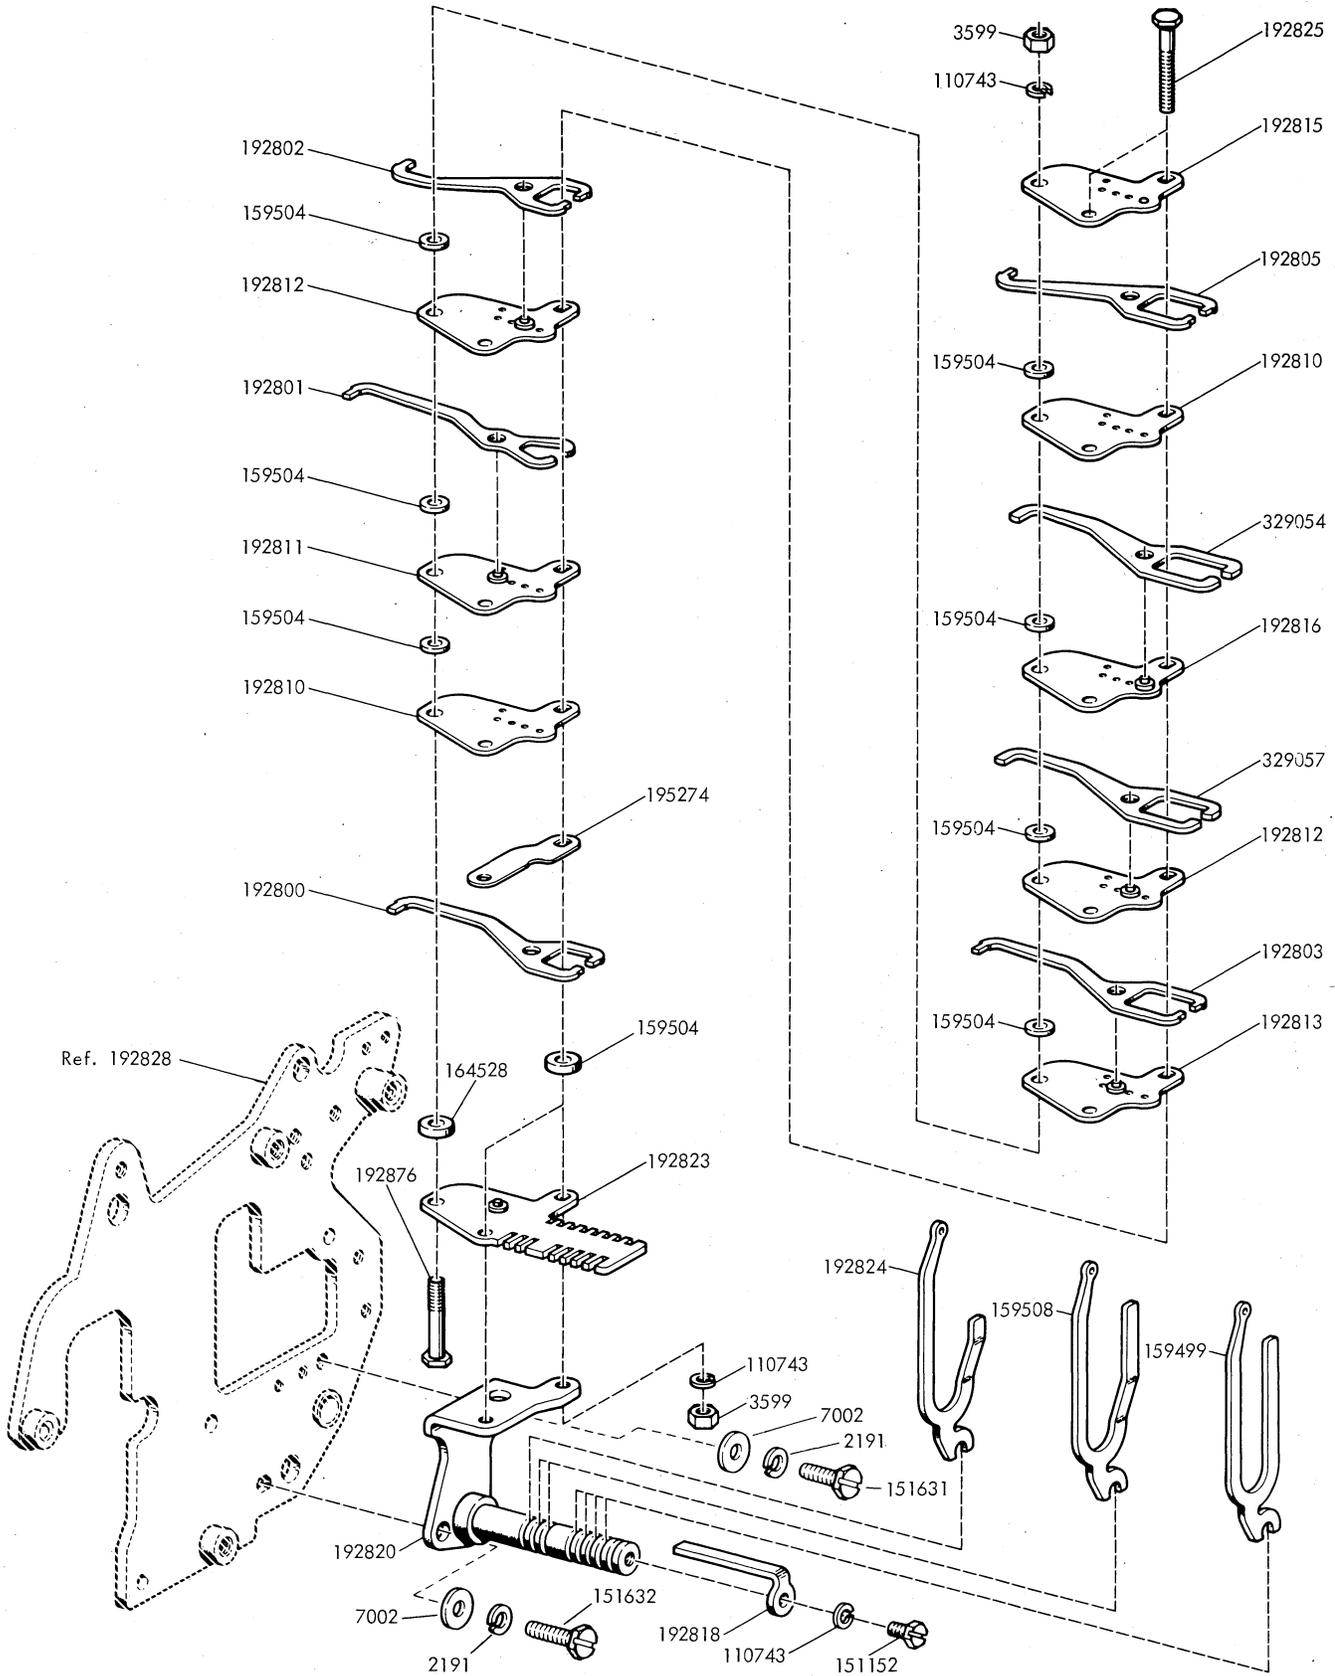


FIGURE 15. TRANSFER MECHANISM

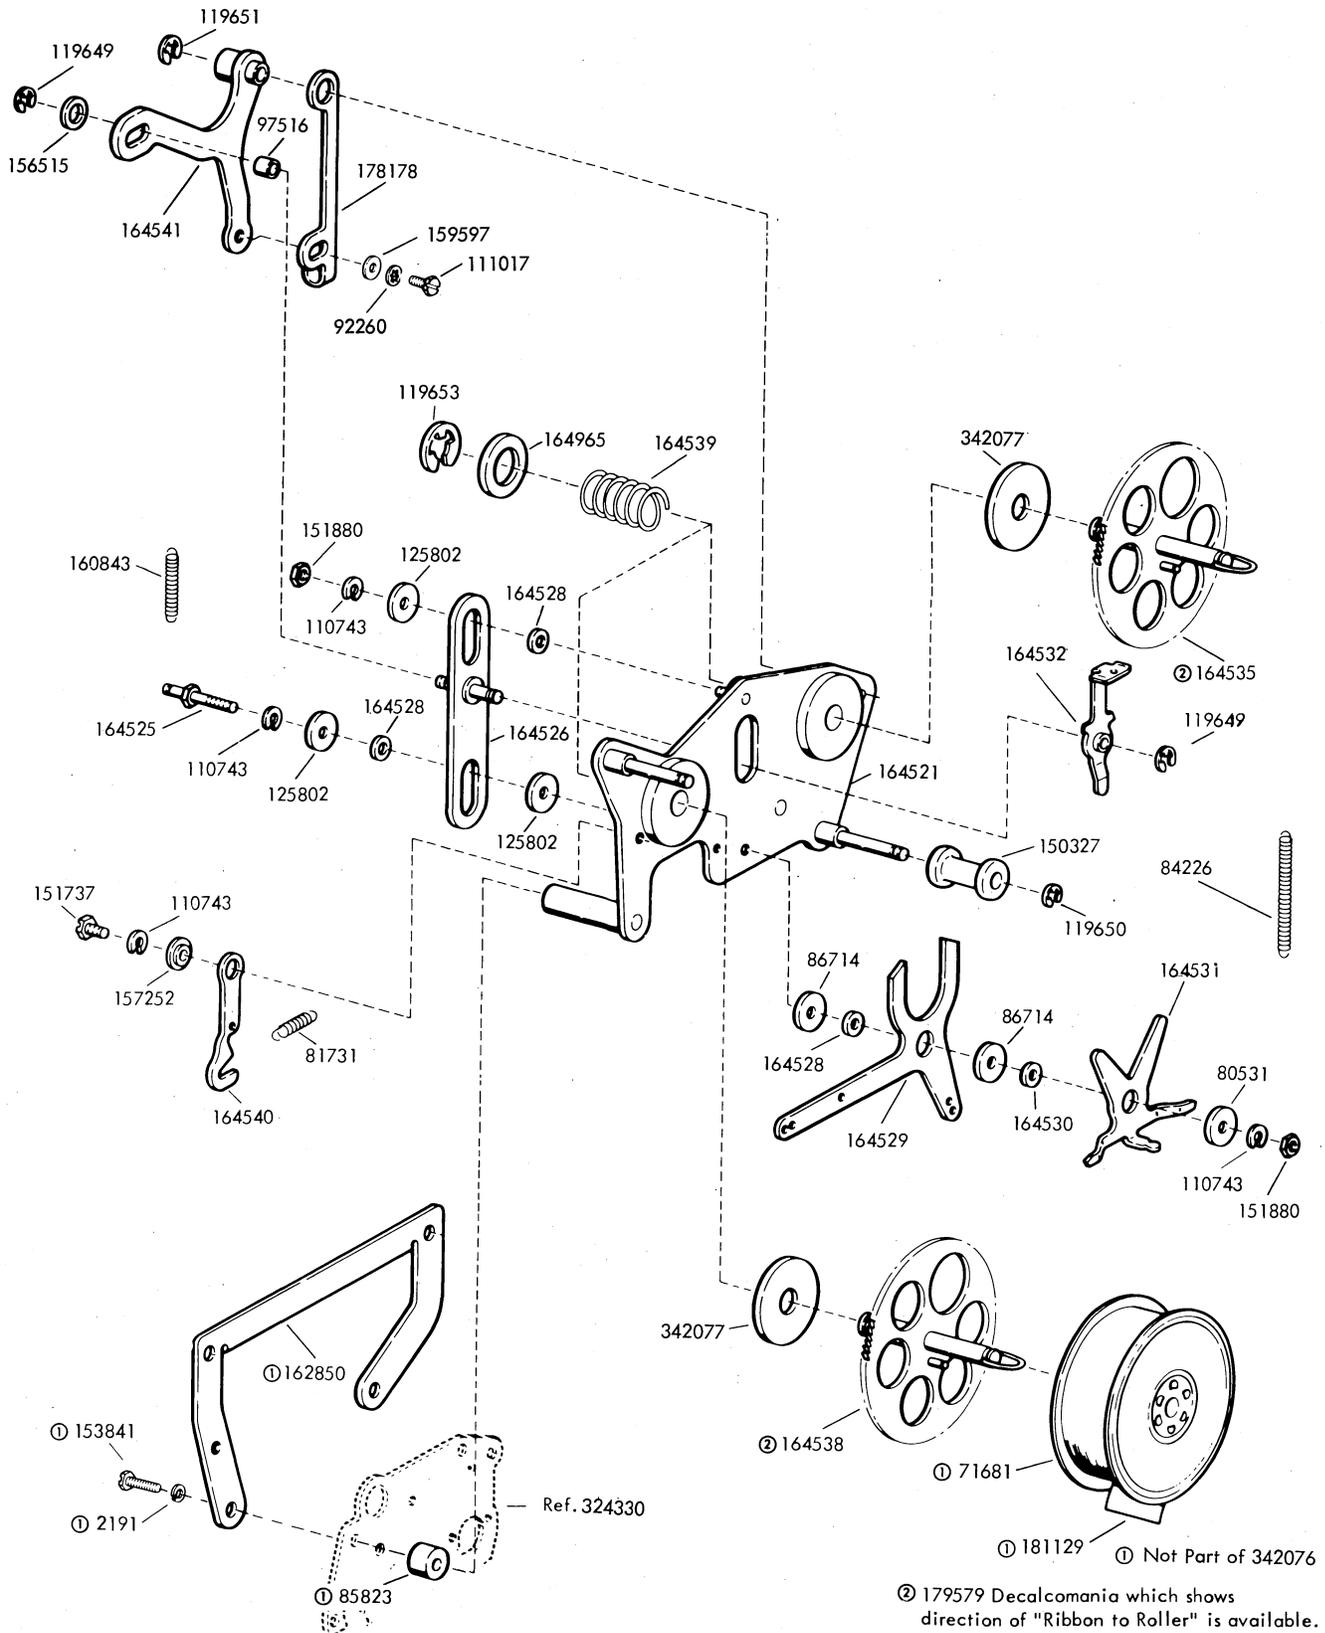


FIGURE 16. 342076 RIBBON FEED MECHANISM

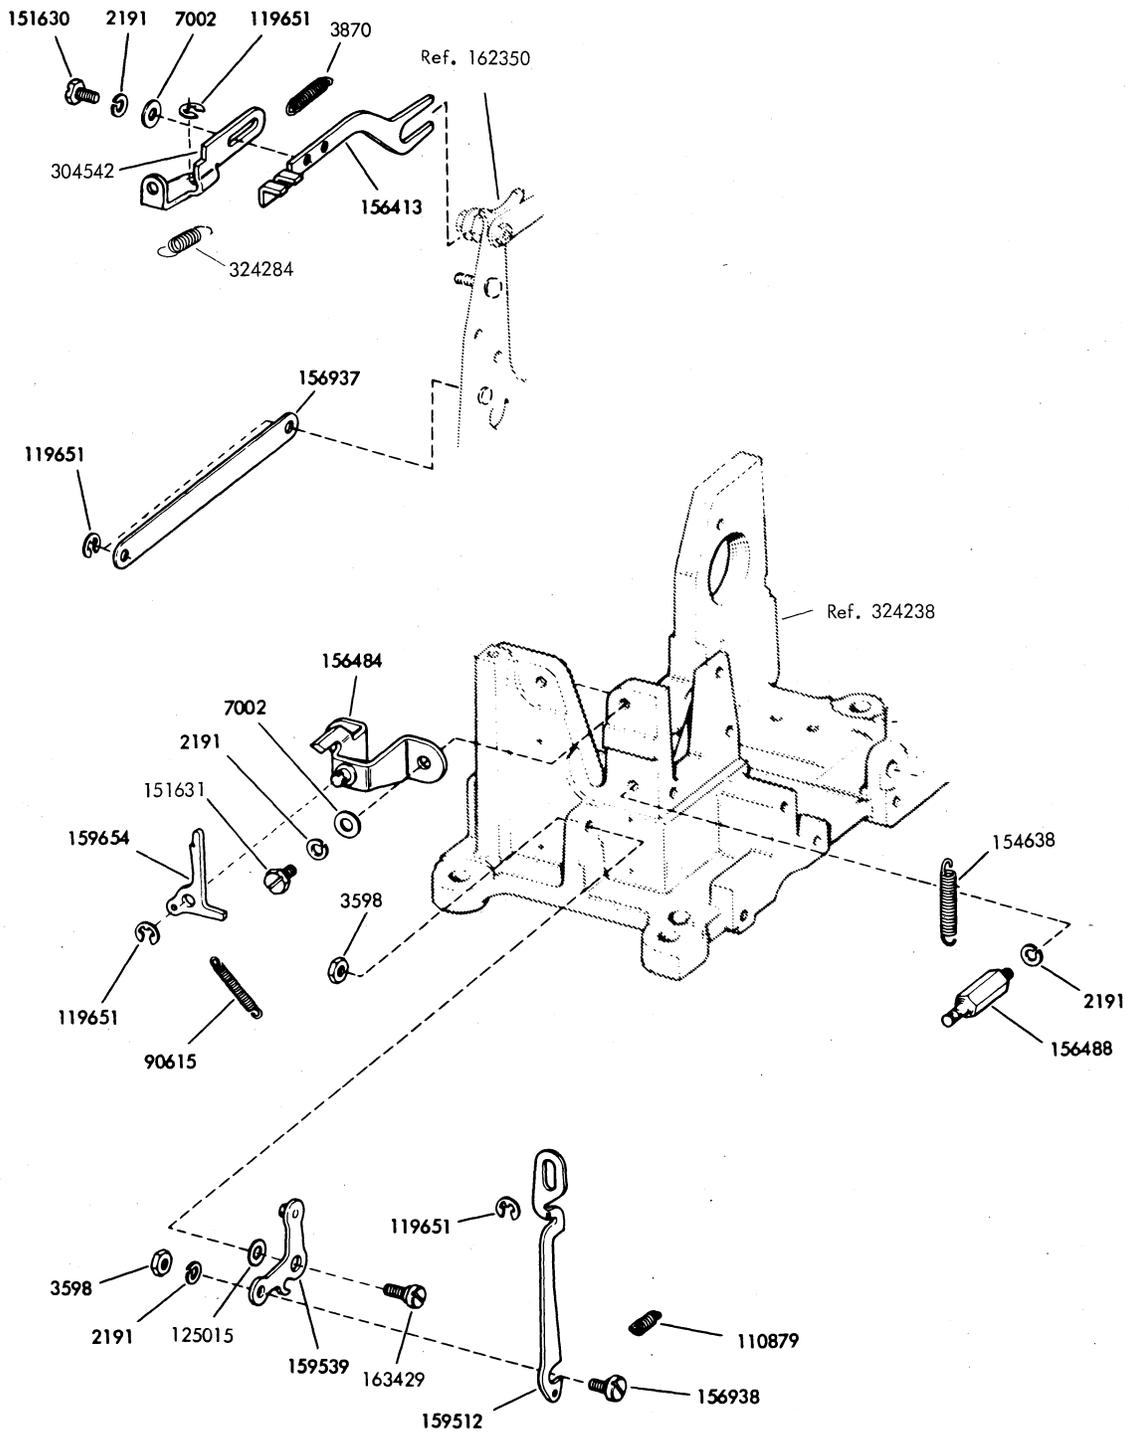


FIGURE 17. TYPING MECHANISM

Due to special assembly processes, it is recommended that the Teletype Product Service Organization be contacted to determine if part replacement or repair is possible on this portion of the Punch Block Assembly.

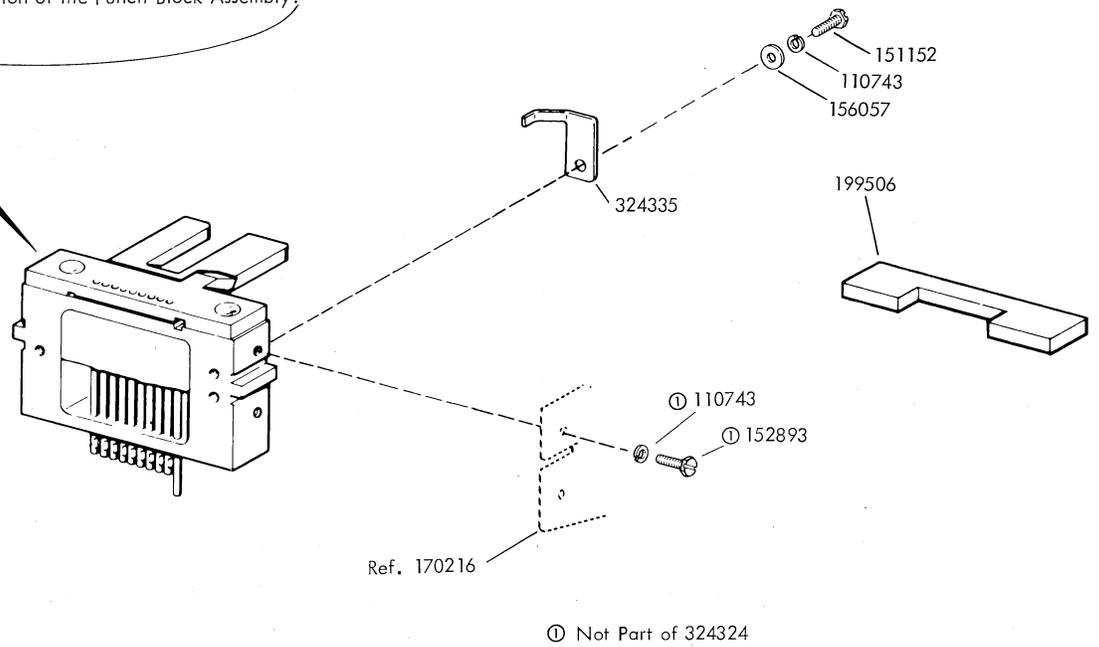


FIGURE 18. 324324 PUNCH BLOCK ASSEMBLY

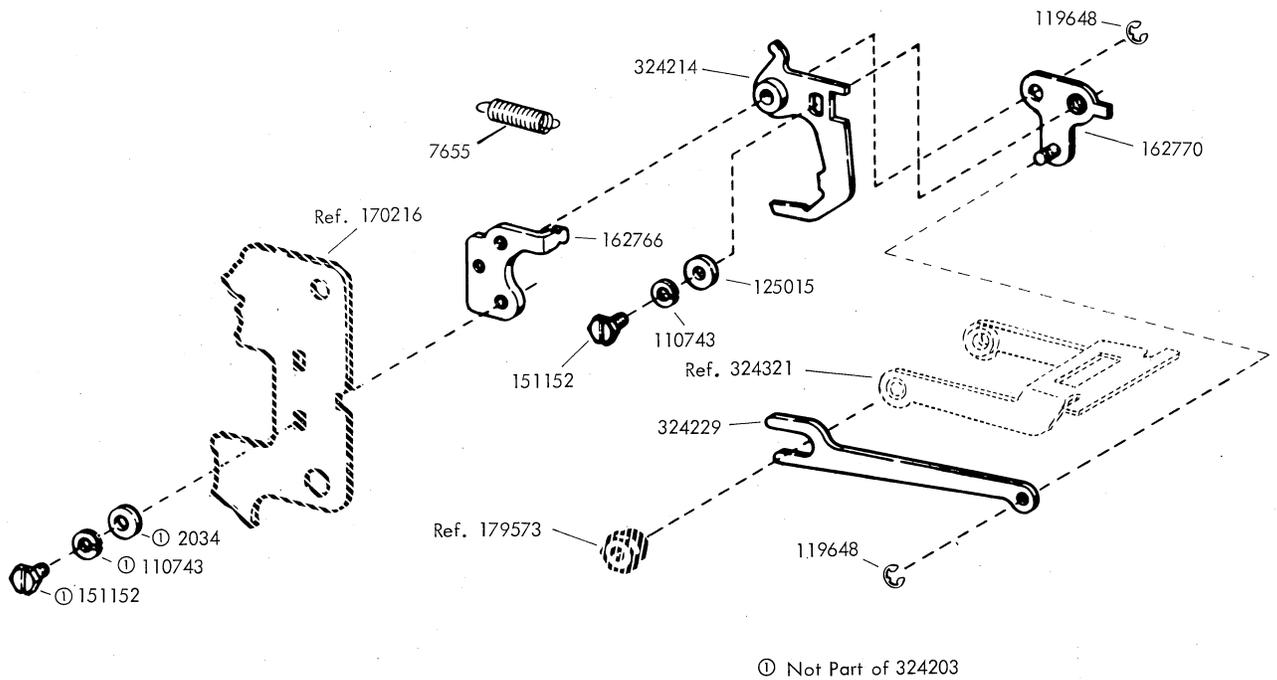


FIGURE 19. 324203 SLIDE STORAGE ASSEMBLY

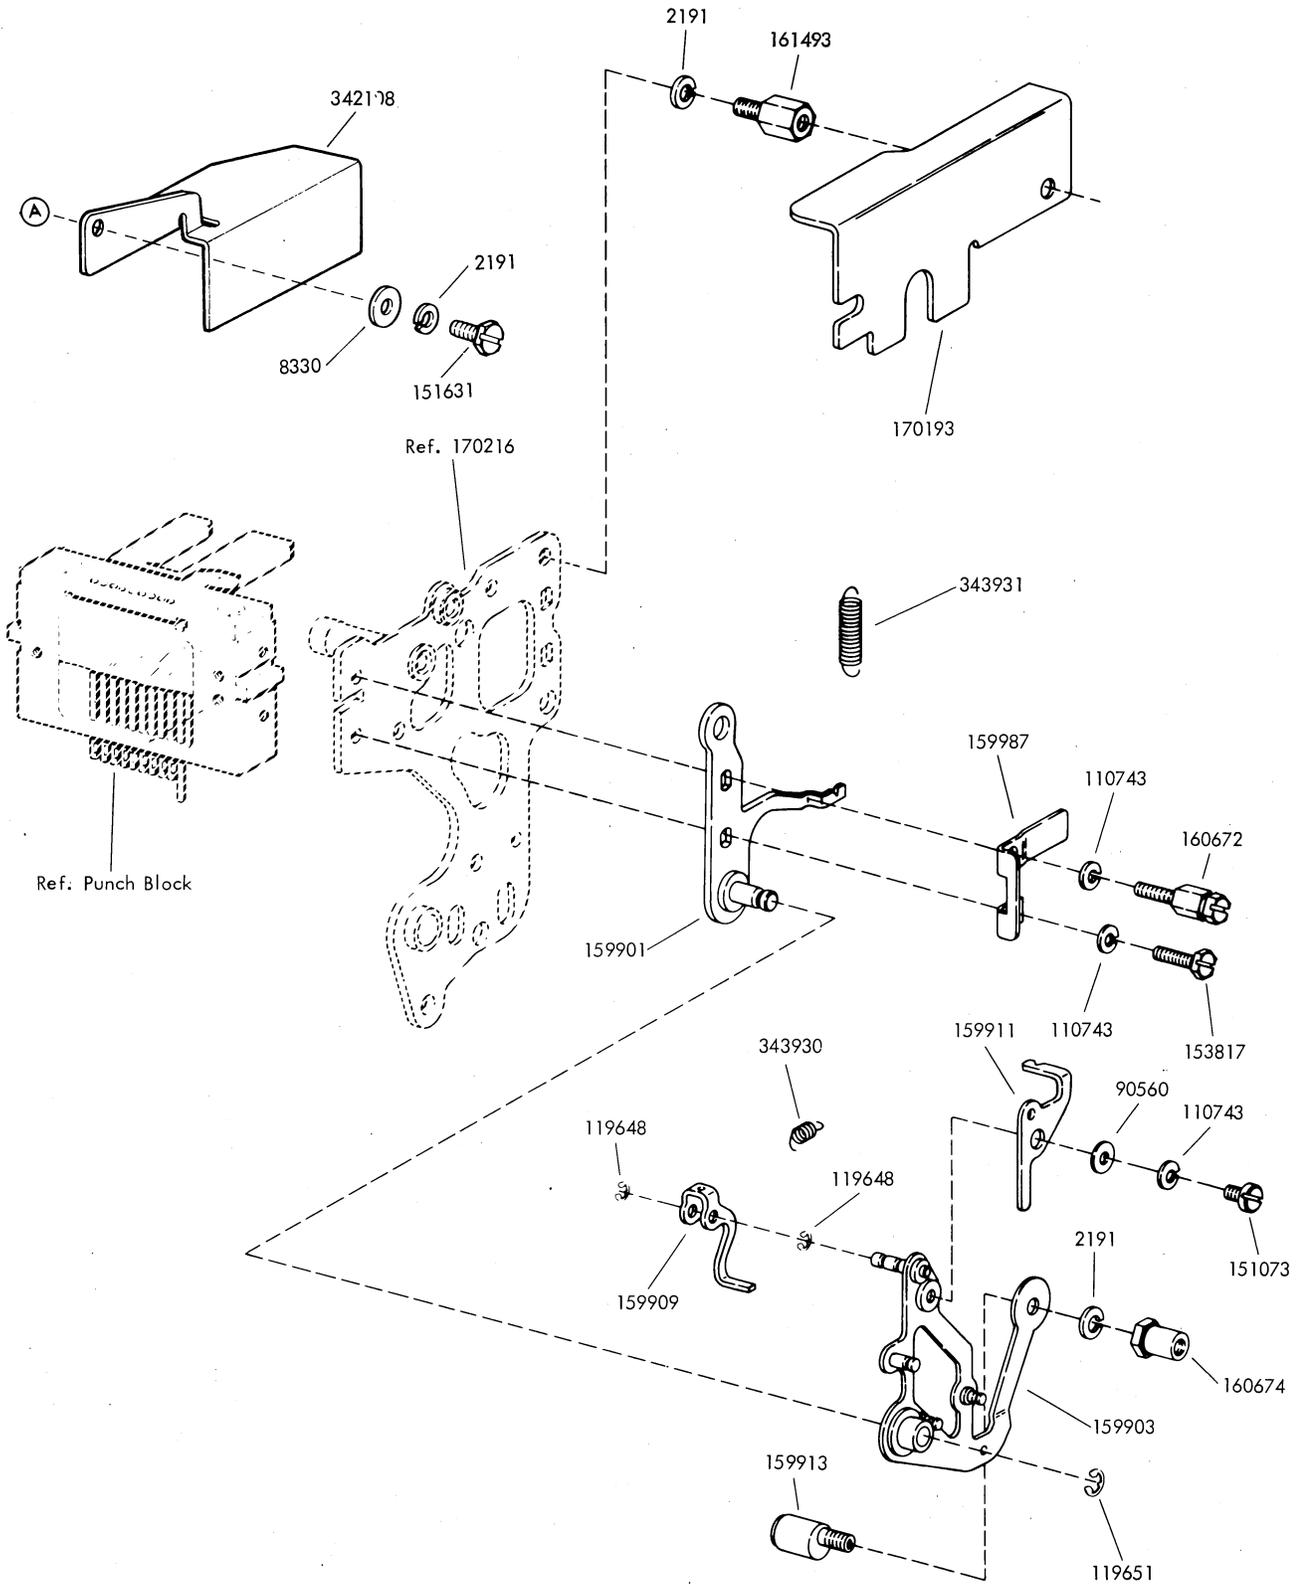


FIGURE 20. BACKSPACE MECHANISM



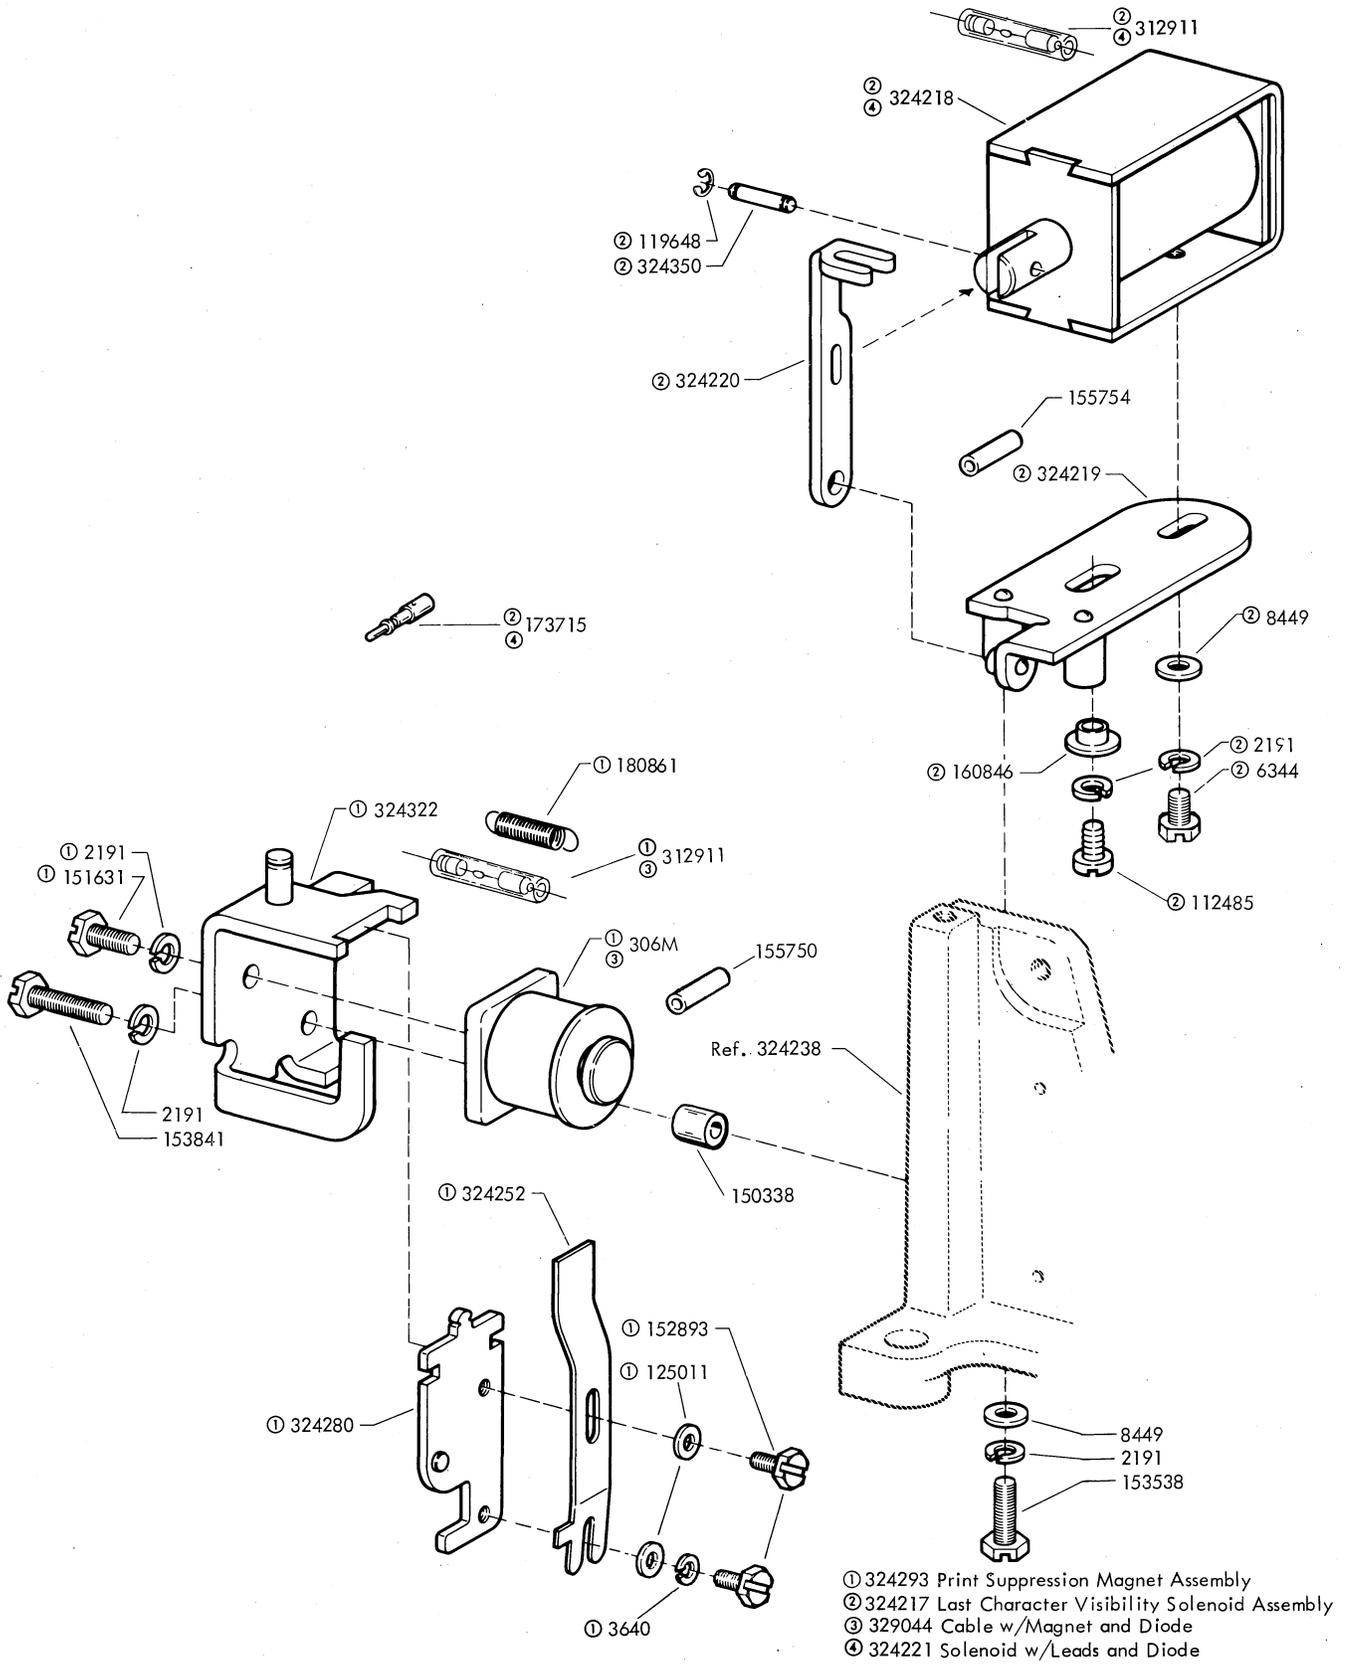


FIGURE 22. PRINT SUPPRESSION AND LAST CHARACTER SOLENOID ASSEMBLY

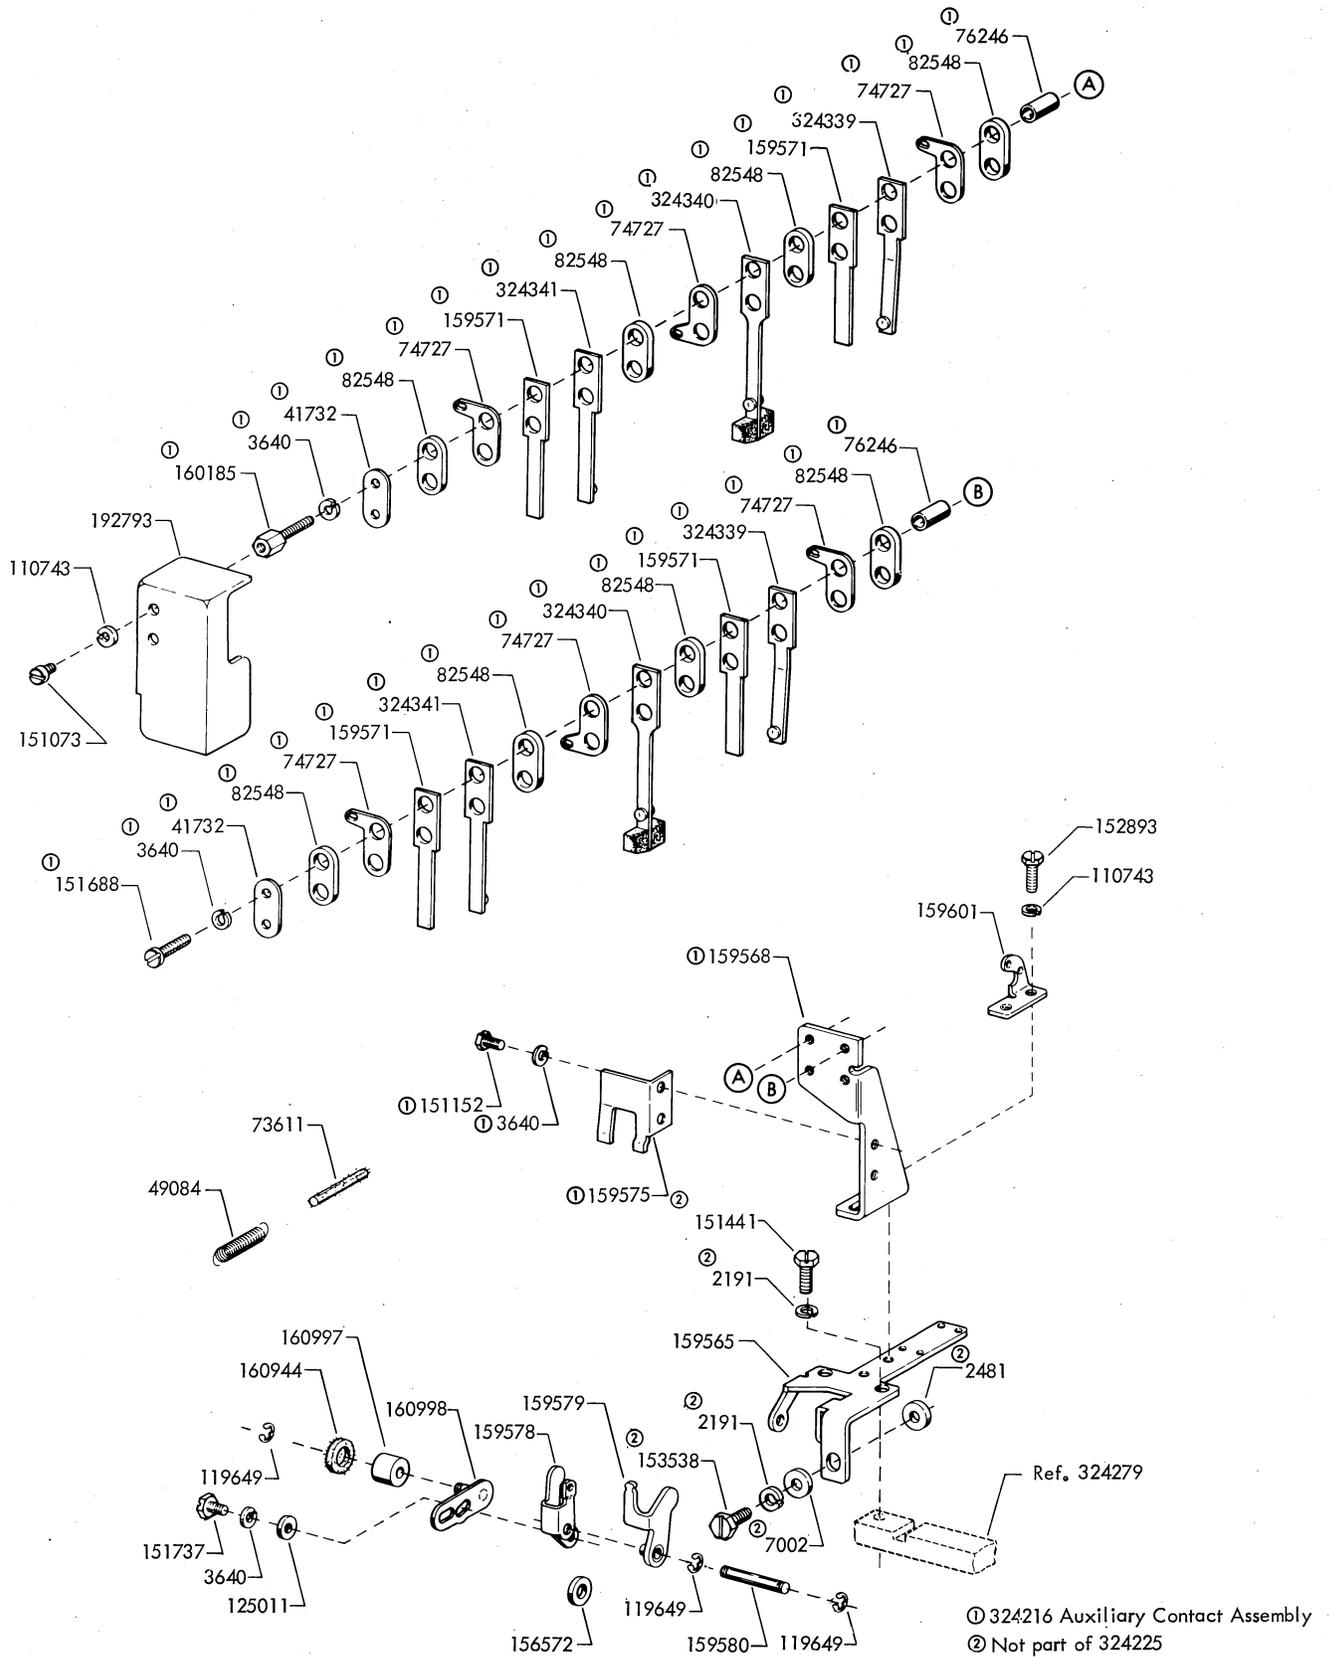


FIGURE 23. 324225 AUXILIARY CONTACT ASSEMBLY

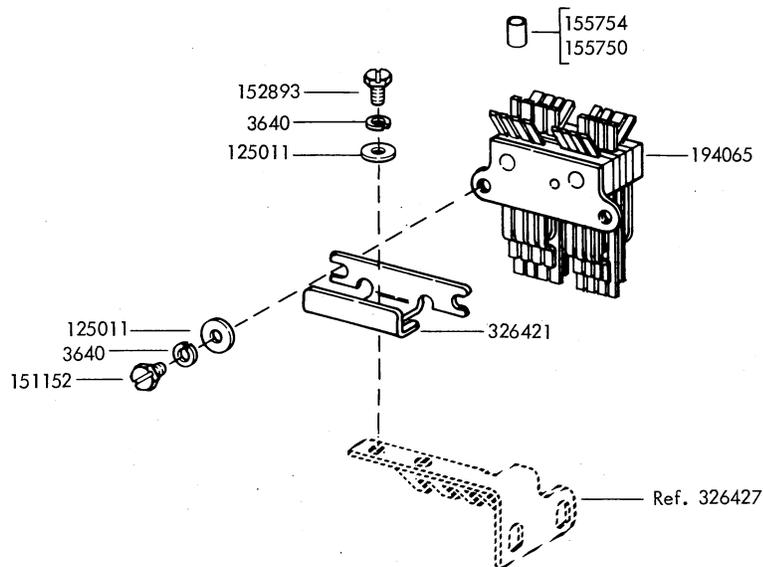


FIGURE 24. CODE READING CONTACTS

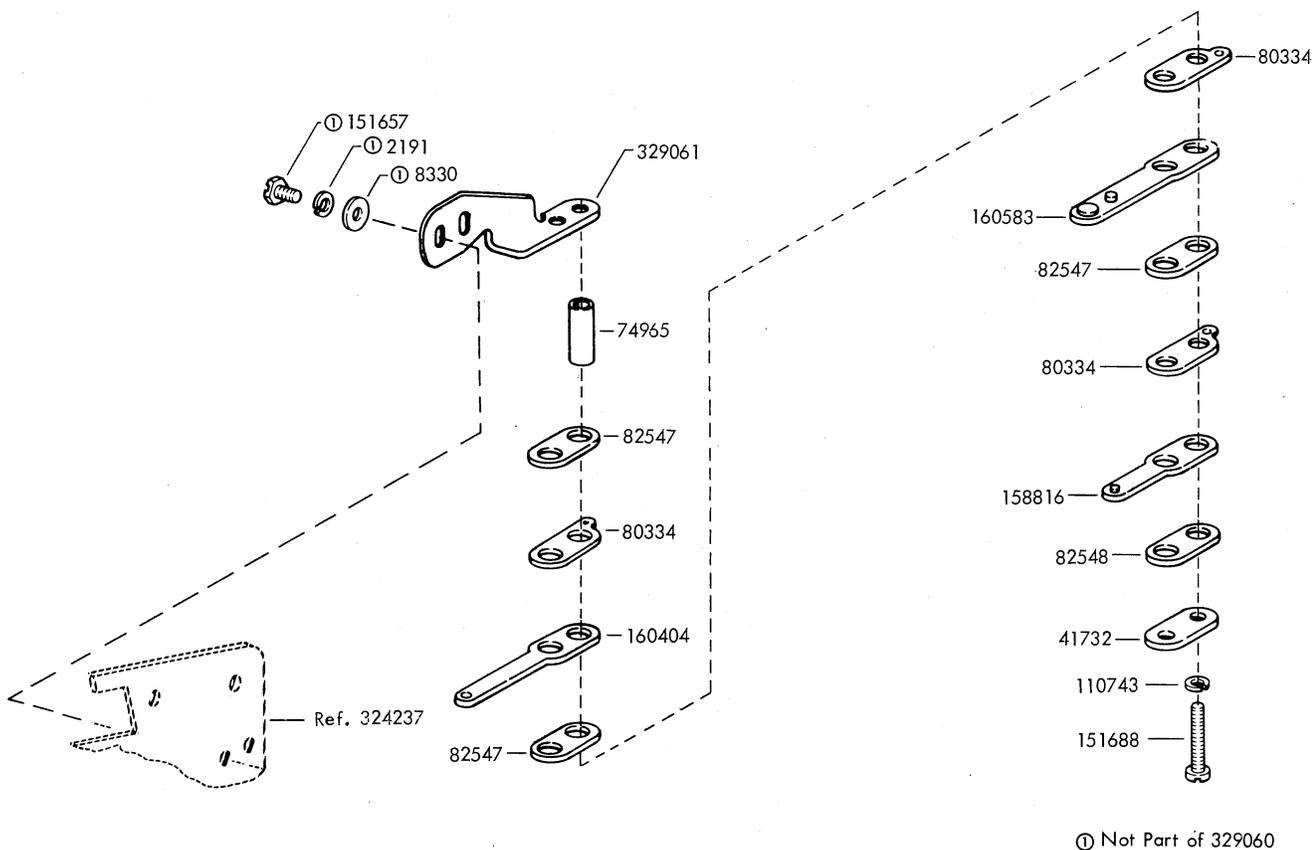


FIGURE 25. 329060 INHIBIT CONTACT ASSEMBLY

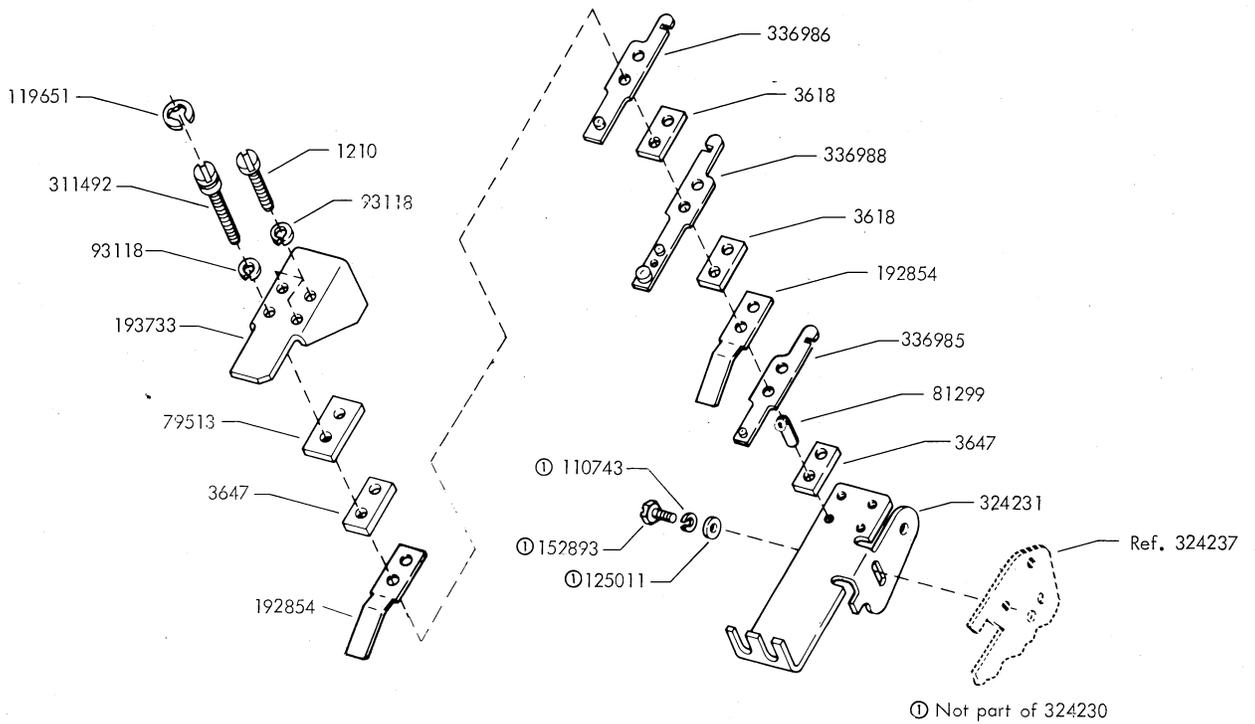


FIGURE 26. 324230 FUNCTION CONTACT ASSEMBLY

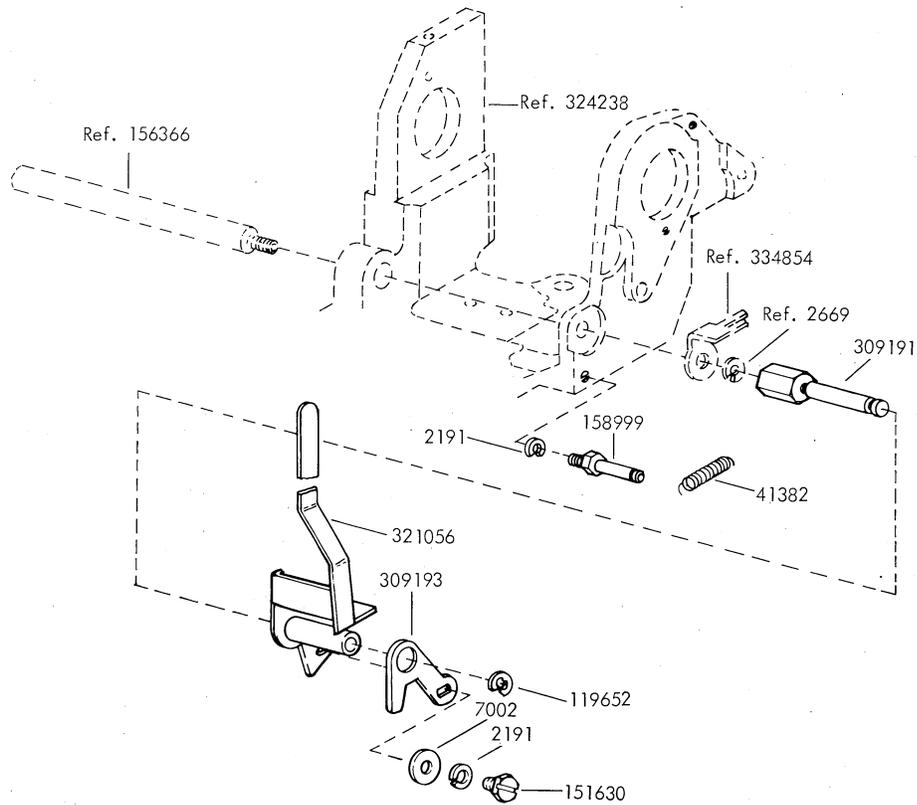


FIGURE 27. 321055 MODIFICATION KIT TO ADD MANUAL INTERFERING RUBOUT FEED-OUT

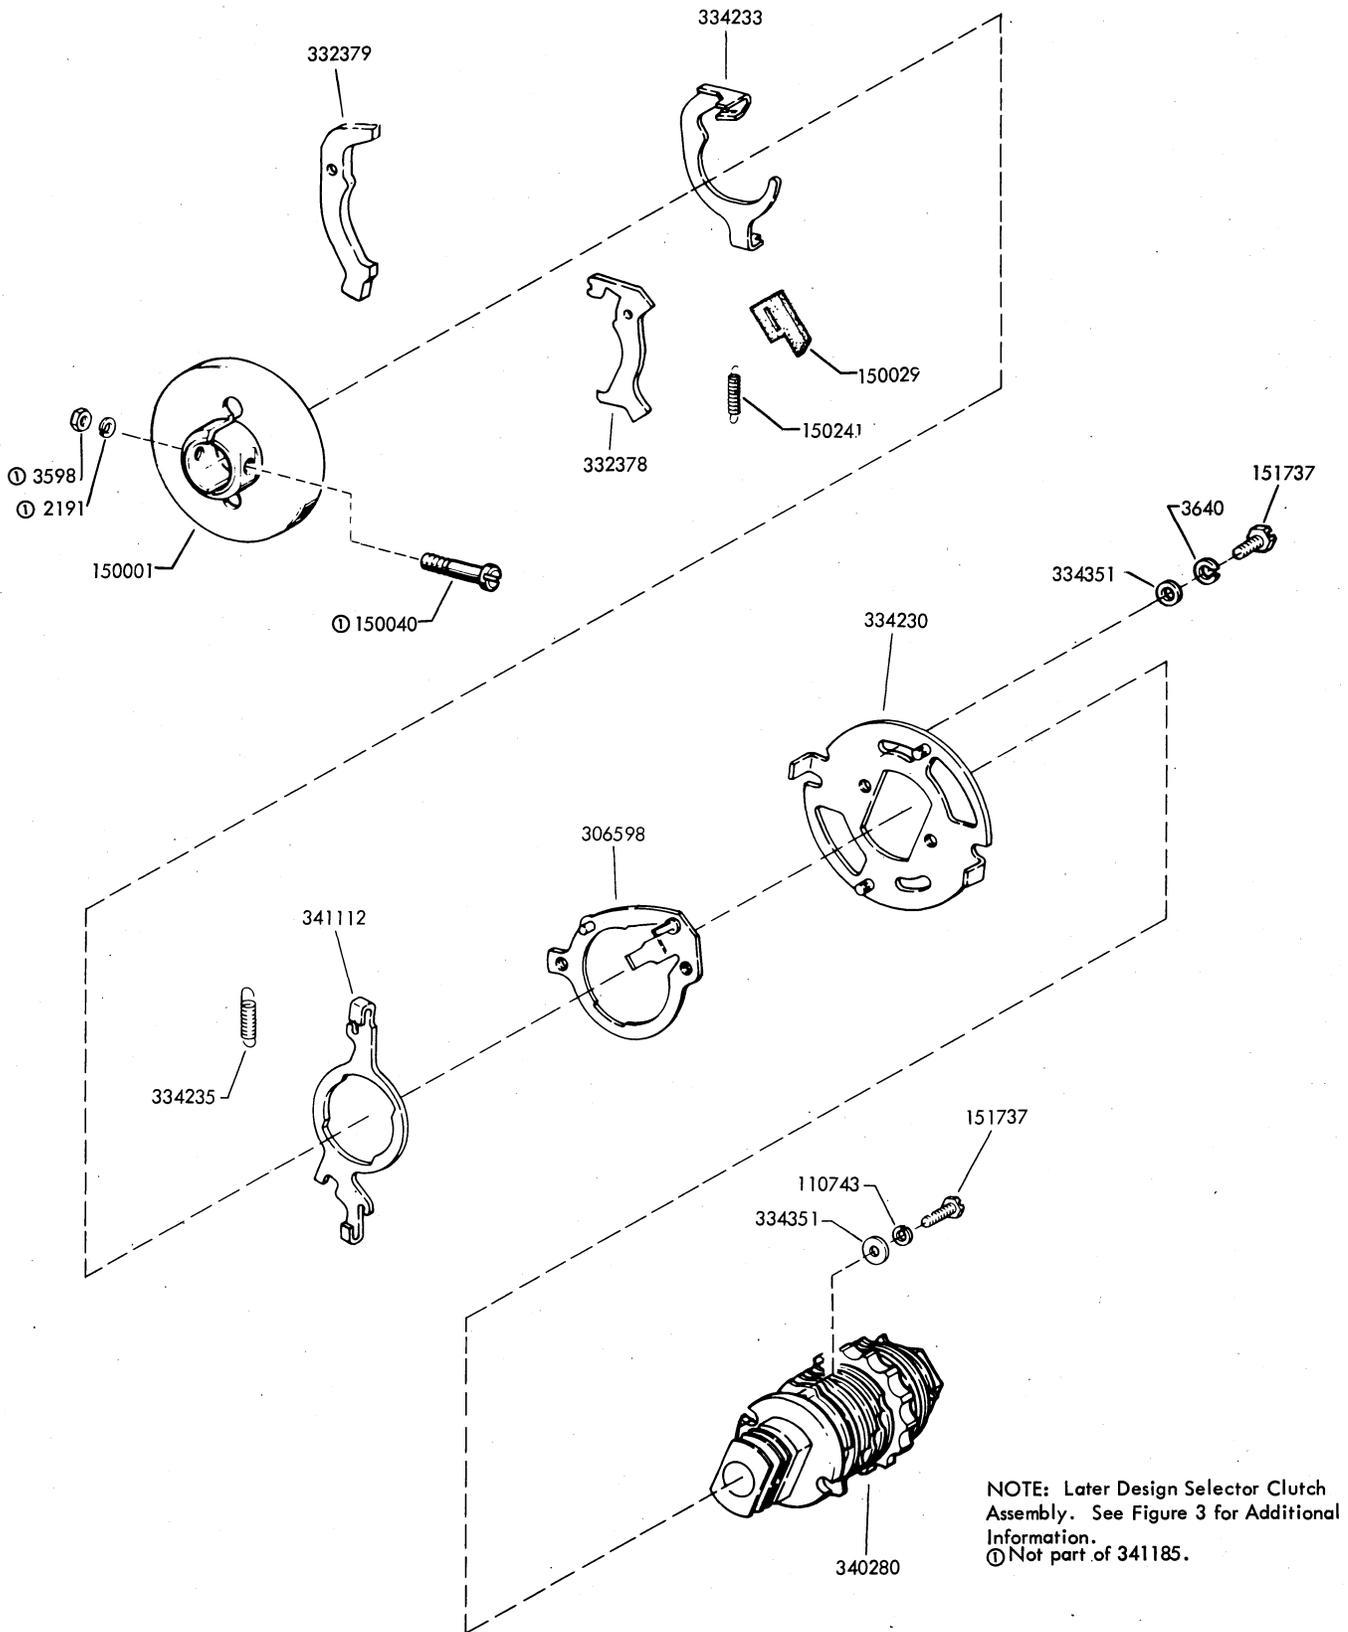


FIGURE 28. 341185 SELECTOR CLUTCH ASSEMBLY

## NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
271M	Coil, Magnet 15	72509	Lockwasher 5	112485	Screw, 6-32 x 1/4 Fil 22
302M	Coil, Magnet 10,21	73611	Wick, Felt 23	112626	Nut, 10-32 Hex 9
306M	Coil, Magnet 22	74283	Washer, Spring 14	112630	Spring 9
1028	Screw, 4-40 x 1/4 Fil 10	74536	Setscrew, 6-40 14	115122	Washer, Flat 9
1036	Nut, 6-40 Hex 6	74727	Terminal, Contact 23	115134	Washer, Felt 11
1210	Screw, 2-56 x 5/8 Fil 25	74965	Bushing, Insulating 24	119647	Ring, Retaining 6
1248	Screw, 6-40 x 1/2 Flat 5	76081	Washer, Flat 15	119648	Ring, Retaining 6,14,19,20,22
2034	Washer, Flat 2,19,21	76099	Washer, Flat 15	119649	Ring, Retaining 6,9,10,11,17,21,23
2191	Lockwasher 2 to 18,20 to 25,26	76246	Bushing, Insulating 23	119650	Ring, Retaining 7,17
2199	Nut, 7/16-32 Hex 9	76421	Spring 14	119651	Ring, Retaining 2,12,17,18,20,21,25
2407	Lockwasher 9	78103	Screw, 6-40 x 1-3/16 Hex 9	119652	Ring, Retaining 2,3,6,7,14,25
2438	Washer, Flat 10,15	79012	Insulator 15	119653	Ring, Retaining 14,17
2481	Washer, Flat 23	79513	Plate, Contact Top 25	119654	Ring, Retaining 4
2605	Spring 14	80334	Terminal, Contact 24	121100	Spring 14
2669	Lockwasher 2,3,25	80531	Washer, Flat 17	124177	Lockwasher 3,4,6,13
3438	Washer, Flat 2	81299	Bushing, Insulating 25	125011	Washer, Flat 2,5,6,8 to 14,22 to 25
3598	Nut, 6-40 Hex 3,4,6,8,10,11,13,14,18,26	81731	Spring 17	125015	Washer, Flat 3,8,15,18,19
3599	Nut, 4-40 Hex 5,7,8,10 to 12,14 to 16	81778	Screw, 4-40 x 3/16 Fil 15	125215	Screw, 4-40 x 3/16 Hex 21
3618	Insulator, 0.062" Thk 25	82392	Shim, 0.004" Thk 3	125231	Nut, 10-32 Hex 3
3640	Lockwasher 2,4,7 to 11,14,21 to 24,26	82547	Insulator, 0.094" Thk 24	125241	Spring 15
3647	Insulator, 0.094" Thk 25	82548	Insulator, 0.062" Thk 23,24	125802	Washer, Flat 17
3650	Washer, Flat 21	82726	Spring 10	128360	Ring, Retaining 9
3870	Spring 18	84226	Spring 17	130330	Washer, Felt 11
4812	Wick, Felt 2	84575	Spring 21	130667	Lockwasher 14
5363	Spring, Compression 6	85386	Bushing 10	131016	Washer, Felt 11
6344	Screw, 6-32 x 11 x 32 Hex 22	85823	Spacer, .188" Thk 17	139752	Screw, 4-40 x 11/64 Fil 2
6987	Washer, Flat 13	86079	Washer, Flat 10,11	150000	Drum, Clutch 4
7002	Washer, Flat 2,3,5,6,8 to 11,13 to 16,18,21,23,25	86714	Washer, Flat 17	150001	Drum, Clutch 4,21,26
7655	Spring 19	86774	Screw, 6-40 Shoulder 11	150029	Wick, Felt 4,26
8330	Washer, Flat 2,3,7,8,10,20,24	87401	Spring 2	150034	Disc, 2 Stop Clutch 4
8449	Spacer, 0.094" Thk 22	90437	Wick, Felt 14	150040	Screw, 6-40 x 5/8 Fil 26
36358	Spring 14	90560	Washer, Flat 20	150089	Screw, 4-40 x 1/2 Fil 15
41382	Spring 25	90573	Spring 3	150241	Spring 4,26
41732	Plate, Clamp 23,24	90615	Spring 18	150327	Roller, Ribbon 17
42661	Spring 14	90791	Lockwasher 6	150338	Spacer 22
42823	Washer, Flat 4	92260	Lockwasher 3,8,17	150355	Lever, Latch 2
47024	Washer, Flat 11	93118	Lockwasher 25	150356	Lever, Trip 2
49084	Spring 23	93356	Washer, Felt 2,6	150830	Bushing, Shoulder 4
55063	Spring 21	96717	Screw, 4-40 Shoulder 14	150841	Bearing 4
55064	Washer, Flat 14	97516	Bushing 17	150978	Screw, 6-40 x 1-1/8 Fil 15
70314	Washer, Flat 14	100832	Screw, No.0 x 3/16 Drive 2	150990	Washer, Felt 7,8
71681	Spool, Ribbon 17	101123	Washer, Felt 11		
72468	Spring 2	101714	Spring 13		
		104418	Screw, 4-40 x 5/32 Hex 13		
		104824	Spring 6		
		104827	Bearing, Ball 4		
		110743	Lockwasher 2,4 to 17,19,20,23 to 26		
		110879	Spring 8,12,18		
		111017	Screw, 6-40 x 5/16 Fil 17		

## NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
151073	Screw, 4-40 x 5/32 Fil 2, 14,20,23	152425	Post, Spring 15	156322	Link, Axial Toggle 11
151152	Screw, 4-40 x 3/16 Hex 2, 4,11,14,16,19,21,23,24	152426	Nut, 6-40 Self Locking 15	156366	Shaft, Rocker Bail 3,25
151222	Washer, Felt 7	152441	Washer, Flat 14	156369	Lever, Adjusting 11
151346	Screw, 6-40 x 3/8 Fil 4	152458	Shield, Terminal 15	156382	Roller, Guide 11
151362	Wick, Felt 3	152893	Screw, 4-40 x 1/4 Hex 2, 4,6,7,9,10,13,14,19,22 to 25	156388	Lever, Adjusting 2
151416	Nut, 6-40 Hex 6	153538	Screw, 6-40 x 7/16 Hex 4, 10,22,23	156389	Gear, 16T 9
151441	Plate, 2-3/4 Blank 23	153799	Screw, 4-40 x 21/64 Hex 10	156390	Washer, Flat 9
151442	Screw, 6-40 x 1/2 Hex 3, 5,9,11	153817	Screw, 4-40 x 3/8 Hex 20	156399	Nut, 6-40 Shoulder 3
151548	Spring, Compression 14	153819	Lockwasher 13	156403	Disc, Bearing 4
151603	Spacer 15	153839	Screw, 6-40 x 5/8 Hex 2, 9,13	156408	Arm, Clamp 9
151611	Bushing 7	153841	Screw, 6-40 x 9/16 Hex 7, 10,17,22	156413	Link, Drive 18
151618	Screw, 6-40 x 7/16 Fil 15	154191	Spring 6,8	156462	Bail, Oscillating 11
151629	Nut, 6-40 Lug 2,7,9,10	154242	Screw, 6-40 x 5/16 Hex 3	156465	Washer, Spring 4
151630	Screw, 6-40 x 1/4 Hex 2, 6,8,10, 12 to 14,18, 21,25	154638	Spring 18	156466	Rack, Typewheel 9
151631	Screw, 6-40 x 5/16 Hex 2, 3,6,8,10,13 to 16,18,20 22	155750	Sleeve, 3/32 ID x 1/2" Lg Insulating 22,24	156472	Post, Spring 14
151632	Screw, 6-40 x 3/8 Hex 3, 4,10,16,21	155754	Sleeve, 1/16 ID x 1/2" Lg Insulating 13,22,24	156484	Bracket 18
151637	Screw, 4-40 x 1/4 Fil 5, 9	156015	Plate, Spring 5	156488	Post, Spring 18
151657	Screw, 6-40 x 1/4 Fil 3, 14,24	156019	Washer, Felt 6	156489	Bushing, Ribbon Guide 9
151658	Screw, 6-40 x 5/16 Fil 2, 4,13,14	156042	Post, Spacing 6	156492	Bracket, Guide 8
151659	Screw, 6-40 x 1/2 Fil 10	156047	Spring, Torsion 6	156493	Stud 11
151685	Screw, 4-40 x 5/16 Fil 12	156052	Shoe, Tape 6	156501	Screw, 6-40 x 7/32 Fil 8, 9,14
151686	Screw, 4-40 x 3/8 Fil 15	156054	Lever, Detent 6	156515	Washer, Felt 17
151688	Screw, 4-40 x 5/8 Fil 15, 23,24	156057	Washer, Flat 4,19	156536	Screw, 4-40 x 1/8 Fil 14
151693	Screw, 6-40 x 9/16 Fil 4	156061	Arm, Tape Shoe 6	156558	Washer, Felt 9
151714	Spring 14	156062	Post, Pivot 6	156572	Washer, Felt 23
151722	Screw, 6-40 x 3/16 Hex 5, 6,14	156069	Plate 5	156576	Washer, Felt 3
151728	Spring 14	156103	Strip, Felt 7	156577	Roller, Detent Lever 6
151736	Spring 4	156136	Bracket, Shaft Mounting 10	156740	Screw, 6-40 x 7/32 Hex 10,21
151737	Screw, 4-40 x 11/64 Hex 4, 10,17,23,26	156165	Washer, Felt 2	156835	Ring, Retaining 9
151846	Post, Spring 9	156169	Washer, Felt 7	156871	Bail, Operating Blade 3
151880	Nut, 4-40 Hex 17	156173	Stud 5	156874	Screw, 4-40 x 5/16 Fil 8 12
152412	Link 14	156248	Latch 2	156875	Screw, 5/32 Fil 12
152415	Stud, Adjusting 15	156264	Lever, Detent 8,12	156876	Bushing 3
152420	Lamination, Magnet 15	156265	Bushing, Shoulder 12	156877	Washer, Felt 3
152421	Bracket, Shield Mounting 15	156266	Bushing, Shoulder 8,12	156880	Jumper, 2-3/8" Black 15
152423	Bracket, Armature Stop Mounting 15	156289	Bearing, Left Front 8	156881	Jumper, 1-1/2" Black 15
		156290	Bearing, Right Front 8	156887	Screw, 10-32 x 9/16 Hex 2
		156291	Bearing, Rear 8	156900	Roller 3
		156292	Housing, Upper Axial 12	156905	Block, Rack Guide 9
		156293	Housing, Lower Axial 12	156908	Post, Sector Pivot 11
		156306	Rod, Right Connecting 9	156909	Post, Toggle Link 11
		156311	Rod, Left Connecting 9	156931	Bracket, Hammer Mounting 9
		156321	Shaft, Oscillating 11	156937	Link, Printing Drive 18
				156938	Screw, 6-40 Eccentric Shoulder 18
				156948	Wick, Felt 11
				156987	Screw, 6-40 Spl 3

## NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
156994	Strip, Felt 3	159911	Plate 20	164526	Slide w/Post 17
157194	Retainer, Spring 15	159913	Screw, 6-40 Eccentric 20	164528	Bushing 16,17
157237	Shield, Terminal 15	159954	Link, Adjusting 21	164529	Lever, Ribbon Reverse 17
157252	Bushing 17	159955	Link, Drive 21	164530	Bushing 17
158177	Collar 4	159956	Post 21	164531	Pawl, Check 17
158182	Disc, Clutch Cam 4	159957	Link 21	164532	Pawl, Feed 17
158186	Screw, 4-40 x 7/32 Fil 4	159960	Eccentric 21	164535	Shaft, Right Ribbon Ratchet 17
158215	Plate, Nut 10	159962	Ring, Retaining 21	164538	Shaft, Left Ribbon Ratchet 17
158745	Clamp, Bearing 4,13	159976	Armature 21	164539	Spring, Compression 17
158760	Post, Spring 10,21	159977	Hinge 10	164540	Detent 17
158807	Screw, 3-48 x 11/64 Fil 13	159978	Shaft 10	164541	Arm, Ribbon Drive 17
158816	Spring, Contact 24	159987	Bracket, Guide 20	164851	Wheel, Feed 6
158907	Spring 14	160180	Armature w/Extension 15	164965	Washer, Flat 17
158923	Bearing, Sleeve 4	160182	Bracket w/Button 15	170193	Guard, Back Space 20
158924	Disc 4	160184	Plate, Stop 15	170198	Arm, Stop 14
158932	Cam 4	160185	Post 23	170199	Bracket, Anchor 6
158999	Post, Spring 25	160186	Bushing, Shoulder 15	170202	Post, Guide 2
159404	Post 12	160404	Spring, Contact 24	170204	Bracket, Spring 2
159411	Bearing Assembly 3	160581	Lever, Upper Reset 2	170211	Arm, Rocker 7
159431	Lever, Main Trip 2	160583	Spring, Contact 24	170216	Plate, Front 6,19,20,21
159480	Bushing, Eccentric 9	160672	Stud 20	170217	Post 6
159499	Lever, No.3, No.4, No.5 Transfer 16	160674	Nut, 6-40 Shoulder 20,21	170218	Shaft, Feed Wheel 6
159504	Spacer, .037" Thk 16	160679	Spring 14	170219	Stud, Die Wheel 6
159508	Lever, No.1 and No.2 Transfer 16	160839	Spacer, Shoulder 3	170220	Guide, Tape 6
159512	Link, Printing Trip 18	160843	Spring 17	170225	Block, Tape Guide 5
159519	Bushing, Drive Bail 11	160846	Bushing, Shoulder 11,22	170241	Screw, 6-40 Adjusting 6
159522	Bushing, Drive Bail 11	160944	Washer, Felt 23	170244	Wheel, Die 6
159525	Bracket, Axial Mounting 9,11,12	160948	Screw, 2-56 Spl 6	170247	Guide 5
159536	Gear, 15T 9	160997	Roller 23	170282	Nut, 6-40 Hex 9
159539	Arm, Printing Pivot 18	160998	Arm 23	173203	Sleeve, Bearing 4
159560	Spring 5	161107	Stud 6	173340	Collar 4
159565	Bracket w/Post 23	161139	Nut, 6-40 Hex 6	173715	Terminal, Plug Type 13,22
159568	Bracket, Contact 23	161324	Washer, Flat 9	173756	Lever, Print Hammer 9
159571	Stiffener 23	161443	Detent, Axial Shaft 12	173977	Shaft, Print Hammer 9
159575	Bracket, Stop 23	161444	Detent, Rotary Shaft 8	173978	Spring, Torsion 9
159578	Bail, Front Contact 23	161493	Post, Supporting 20	173981	Accelerator, Hammer 9
159579	Bail, Rear Contact 23	162350	Bail, Rocker 3,18	175860	Typewheel, AA 9
159580	Shaft, Actuating Bail 23	162573	Retainer 4	176252	Washer, Flat 3
159597	Washer, Flat 11,17	162575	Lever 10	176266	Spring, Torsion 2
159601	Bracket, Spring 23	162748	Spacer, 0.813" Thk 10	176489	Guide 2,3
159625	Bracket, Bail Guide 3,10	162753	Bracket, Spring 10	176640	Guard, Tape 15
159643	Shim, .008" Thk 12	162755	Plate w/Post 19	176647	Latch w/Hub 21
159654	Latch, Printing 18	162766	Plate w/Post 19	178178	Lever, Adjusting 17
159804	Spring 13	162770	Plate w/Stud 19	179573	Nut, 6-40 Hex 7,19
159901	Plate w/Post 20	162850	Handle 17	179579	Decal, Arrow 17
159903	Bellcrank 20	163327	Ring, Retaining 10	179782	Screw, 6-40 x 7/8 Hex 14
159909	Pawl, Feed 20	163429	Screw, 6-40 Shoulder 18	180860	Spring 2
		164386	Bracket, Magnet Mounting 15	180861	Spring 22
		164521	Plate w/Studs 17	180927	Ring, Retaining 9
		164525	Post, Spring 17	181129	Ribbon w/Spool 17

## NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
181654	Diode 13,21	199506	Gasket 19	324214	Latch 19
192013	Connector, 50 Pt Plug Type 13	304532	Spring 10	324216	Contact Assembly 23
192493	Spring 2	304542	Extension, Drive Link 18	324217	Solenoid Assembly 22
192661	Post 3	306102	Shaft 14	324218	Solenoid 22
192709	Link w/Hub 3	306109	Pushlever, No.1 14	324219	Bracket 22
192793	Guard 23	306115	Bracket 14	324220	Link 22
192800	Beam, No.1 Pulse 16	306116	Pushlever, Auxiliary 14	324221	Solenoid 22
192801	Beam, No.2 Pulse 16	306117	Lever, Auxiliary Strip 14	324222	Link, Front 9
192802	Beam, No.3 Pulse 16	306118	Bail, Stripper 14	324223	Link, Rear 9
192803	Beam, No.4 Pulse 16	306119	Bail, Start 14	324225	Contact Assembly 1,23
192805	Beam, No.6 Pulse 16	306121	Rack, Sector 14	324229	Link 19
192810	Separator 16	306125	Lever, Lift 14	324230	Contact Assembly 1,25
192811	Plate, No.2 Level 16	306127	Lever, Start 14	324231	Bracket 25
192812	Plate, No.3 Level 16	306128	Lever, No.2 Through 8 Selector 14	324232	Shim, .012" Thk 8
192813	Plate, No.4 Level 16	306130	Lever, No.1 Selector 14	324233	Retainer 8
192815	Plate, Top Level 16	306131	Plate w/Studs 14	324234	Bracket 13
192816	Plate, No.6 Level 16	306153	Stud 14	324235	Shaft w/Bearing 4,10
192818	Lock 16	306154	Bracket 14	324236	Blade 3
192820	Bracket, Separator 16	306156	Screw, 1/4-20 Spl 14	324237	Bracket 2,13,24,25
192823	Guide w/Pivot 16	306158	Arm 14	324238	Frame 2 to 4,5,8,10,12, 13,18,22,25
192824	Lever 16	306160	Clutch Assembly, Selector 4	324241	Pushbar, No.1 Axial 12
192825	Screw, 4-40 x 3/4 Hex 16	306300	Camsleeve 4	324242	Pushbar, No.2 Axial 12
192828	Plate w/Bushing 16	306314	Disc w/Gear 14	324243	Pushbar, No.3 8
192839	Spacer, Rear Function Plate 8,13	306315	Arm 14	324244	Pushbar, No.4 8
192854	Stiffener 25	306598	Disc, Adjusting 4,26	324245	Pushbar, No.5 8
192876	Screw, 4-40 x 21/32 Hex 16	306599	Lever, Shoe Release 4	324246	Pushbar, Figures 8
192882	Lever, Ribbon Oscillator 11	309191	Post 25	324247	Shaft, Right 8
192922	Housing, Typewheel Shaft 9	309193	Plate 25	324248	Shaft, Extension 9
193733	Cover, Contact 25	311492	Screw, 1-56 Spl 25	324250	Shaft, Typewheel 9
193804	Armature 21	312911	Diode 22	324252	Extension, Armature 22
193821	Bracket w/Post 21	312917	Diode w/Terminals 21	324253	Head, Hammer 9
193822	Clamp 21	312924	Lever w/Post 14	324254	Sector 11
193824	Latch w/Hub 21	312926	Bracket, Spring 14	324255	Rack w/Bushing 12
193875	Plate, Trip 10	312927	Bracket 14	324256	Shaft, Axial Eccentric 12
193876	Lever, Trip 10	312928	Reservoir, Oil 14	324257	Hub, Spacing 5
193877	Latch 2	312929	Wick, Leather 14	324258	Eccentric, Axial 12
194065	Contact Assembly 24	312930	Lubricator Assembly 14	324259	Bail 11
194164	Bearing, Ball 10	312931	Retainer, Wick 14	324261	Plate, Corrector 12
194168	Lever, Cam Follower 10	312932	Plate, Reservoir Top 14	324262	Post, Detent 12
194982	Clip, Connector 13	312974	Locklever, Space 14	324263	Plate 2,5,9,10,13
195240	Post 15	318777	Washer, 0.365" OD Sealing 14	324266	Bearing 7
195274	Spacer, .014" Thk 16	320408	Terminal, Spade Type 15	324267	Bracket, Guide 5
195878	Guide, Ribbon 9	320410	Terminal, Spade Type 13	324268	Slide w/Insulator 5
196505	Lever, Push 14	320418	Terminal, Ring Type 13,21	324269	Slide 5
199440	Screw, 6-40 x 5/8 Fil 4	321055	Modification Kit 1,25	324271	Bellcrank 13
		321056	Lever w/Hub 25	324272	Bellcrank 13
		324203	Storage Assembly, Slide 1,19	324273	Bellcrank 13
		324213	Bracket, Guide 8	324274	Bellcrank 13
				324275	Bellcrank 13

## NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
324276	Plate 13	324330	Plate 8,9,12,13,17	333543	Pinion, 8T 4
324277	Post, Eccentric 13	324335	Spring, Punch Block 19	333544	Gear, 84T 4
324279	Bar 13,23	324336	Hub, Spacing 5	333548	Pinion, 13T 4
324280	Armature 22	324337	Stud, Eccentric 6	333549	Gear, 78T 4
324281	Blade, Locking 13	324339	Spring, Contact 23	333550	Gearset 4
324282	Blade, Locking 13	324340	Spring, Contact 23	334230	Disc w/Post 26
324283	Guideplate, 13	324341	Spring, Contact 23	334233	Bar 26
324284	Spring 18	324343	Shaft w/Gear, Left 8	334235	Spring 26
324285	Spring 8	324346	Housing 9	334351	Washer, Flat 26
324286	Arm 21	324350	Shaft 22	334851	Lever, Slide Trip 2
324287	Magnet Assembly 21	326421	Bracket, Contact 24	334852	Lever, Trip 2
324288	Bearing 4	326427	Bracket, Guide 2,24	334853	Bracket 2
324290	Bushing 12	326995	Pinion, 10T 4	334854	Guide, Lever 3,25
324293	Magnet Assembly 22	326996	Gear 72T 4	334855	Bracket 14
324300	Feed Out Assembly, Delete Tape 1,10	327015	Gearset 4	334856	Washer, 0.035 Thk 4
324302	Lever 10	329044	Cable w/Coil and Diodes 22	334857	Washer, 0.050 Thk 4
324303	Shaft, Feed Out 10	329045	Lever, Rotary Corrector 9	334863	Retainer 12
324304	Bracket 10	329047	Rod 13	334864	Armature 10
324305	Link, Rear Drag 5,7	329054	Beam, No.7 Pulse 16	334865	Nut, 6-40 Hex 5
324306	Link, Front Drag 7,21	329057	Beam, No.5 Pulse 16	336985	Spring, Contact 25
324309	Bail 7	329060	Contact Assembly 1,24	336986	Spring, Contact 25
324313	Post 7	329061	Bracket 24	336988	Spring, Contact 25
324314	Plate, Rear 5,6,7	329062	Release w/Shaft 2	336999	Plate, Identification 2
324316	Guidepost 7,21	330544	Gearset 4	338087	Plate 12
324317	Pawl, Feed 7	332211	Follower 14	338088	Washer, Spacing 12
324319	Screw, 4-40 Eccentric Shoulder 7	332212	Bushing 14	340280	Cam, Selector 26
324320	Shaft, Extension 7	332378	Shoe, Secondary, Clutch 4, 26	340437	Set of Parts 4
324321	Bail, Reset 7,19	332379	Shoe, Primary, Clutch 4, 26	341112	Arm, Trip 26
324322	Bracket 22	333172	Plate, Selector 14,15	341185	Clutch Assembly, Selector 1,4,26
324323	Bracket, Guide 7	333174	Latch 14	342076	Feed Mechanism, Ribbon 1, 17
324324	Block Assembly, Punch 1,19	333175	Bracket 14	342077	Washer, Flat 17
324325	Magnet Assembly 10	333179	Guidepost 14	342108	Cover 20
324326	Cam 10	333180	Guide, Lower 14	343922	Eccentric, Right Rotary 8
324327	Latchlever 10	333540	Gearset 4	343923	Eccentric Left, Rotary 8
324328	Extension, Armature 10	333541	Pinion, 8T 4	343930	Spring 20
324329	Bracket, Guide 13	333542	Gear, 70T 4	343931	Spring 20