

**"DATASPEED\*" AP25 PRINTER**

**TESTING**

**1. GENERAL**

- 1.01 This section provides testing information for the DATASPEED AP25 Printer.
- 1.02 Whenever this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03 An installation checkout should be performed after installation to make sure the station is operable.
- 1.04 On trouble calls, an installation checkout should be performed after trouble correction to make sure the station is operable.
- 1.05 Following routine maintenance calls, an installation checkout should be performed.

1.06 The checkout routines are presented in table form with test conditions arranged in a specific sequence. A response is given to verify the test condition has passed.

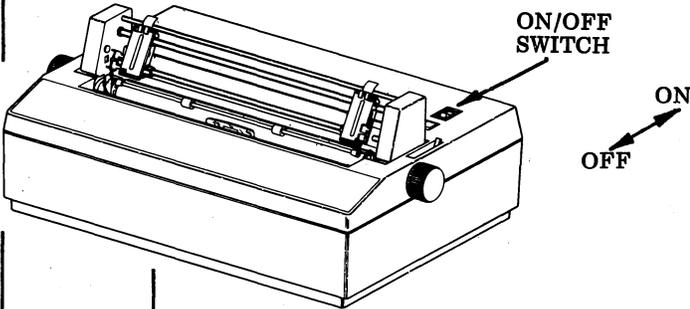
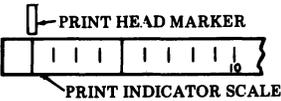
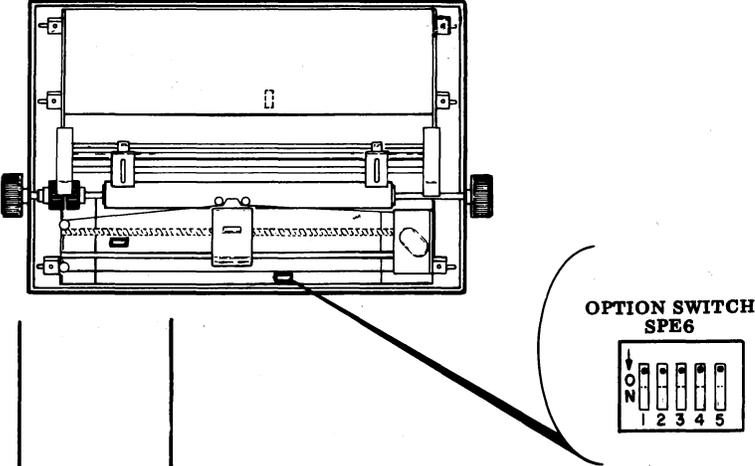
1.07 Always perform the tests in the order given. The test steps are based on satisfactory results of all previous steps.

1.08 If the indicated response is not obtained in any step of a test procedure, repeat the step to make sure that the procedure has been performed properly. If the results are still unsatisfactory, refer to the DATASPEED AP25 Printer Troubleshooting, Section 582-310-300.

1.09 When ordering components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410055).

\*Registered Trademark of AT&TCo

2. TESTING PROCEDURES

TEST	STEP	PROCEDURE	RESPONSE
<p>Power ON/OFF</p>	<p>1</p>	<p>Turn on power switch.</p> 	<p>Print head is indexed to the left margin.</p>
<p>Indicator Scale</p>	<p>2</p>		<p>Print head marker points to first mark on indicator scale.</p>
<p>Form Feed</p>	<p>3</p>	<p>Depress  key.</p> <hr/> <p>Depress  key a second time.</p>	<p>Printer performs a local form feed.</p> <hr/> <p>Paper feeds out a length corresponding to the form feed tape in the form feed tape reader. (See How to Operate Manual for form feed tape lengths.)</p>
<p>Printer Self-Test</p>	<p>4</p>	<p>Open the cover and place switch SPE6-1 in the ON position. Close cover.</p> 	<p>The following prints out:</p> <pre>!"#\$%&amp;'()*+,-./ 0123456789:;&lt;=&gt;? @ABCDEFGHIJKLMNO PQRSTUVWXYZ[\]^_ `abcdefghijklmnopqr stuvwxyz{ }~"</pre> <p>Open cover and turn off switch SPE6-1. Close cover.</p>
<p>Paper-Out Alarm</p>	<p>5</p>	<p>Remove the paper from the printer.</p>	 lamp lights.