

**Lucent Technologies**  
Bell Labs Innovations



# LINCS Server

Release 1.0

System Description

585-313-209  
Comcode 108599234  
October 1999  
Issue 2

Copyright © 1999 by Lucent Technologies. All rights reserved.

For trademark, regulatory compliance, and related legal information, see the copyright and legal notices section of this document.

# Copyright and Legal Notices

## Copyright

Copyright © 1999 by Lucent Technologies.  
All rights reserved.  
Printed in the USA.

This material is protected by the copyright laws of the United States and other countries. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts or licensing, without the express written consent of the Business Communications Systems (BCS) Global Learning Solutions organization and the business management owner of the material.

## Acknowledgment

This document was prepared by the Global Learning Solutions organization of the BCS division of Lucent Technologies. Offices are located in Denver CO, Columbus OH, Middletown NJ, and Basking Ridge NJ, USA.

## Trademarks

Lucent Technologies has made every effort to supply the following trademark information about company names, products, and services mentioned in the LINCS server documentation library:

- Adobe Systems, Inc. — Trademarks: Adobe, Acrobat.
- Enhanced Software Technologies, Inc. — Trademark: Quickstart.
- Equinox Systems, Inc — Registered trademark: Equinox
- Hewlett Packard Corporation — Registered trademarks: Hewlett-Packard and HP
- Intel Corporation — Registered trademarks: Pentium.
- International Business Machines Corporation — Registered trademarks: IBM, VTAM.
- Lucent Technologies — Registered trademarks: 4ESS, 5ESS, AUDIX, CONVERSANT, DEFINITY, Voice Power. Trademarks: FlexWord, Intuity, Lucent.
- Microsoft Corporation — Registered trademarks: Excel, Internet Explorer, Microsoft, MS, MS-DOS, Windows, Windows NT.
- Mylex Corporation — Registered trademark: Mylex.
- Novell, Inc. — Registered trademarks: Novell.

- Oracle Corporation — Trademarks: OBJECT\*SQL, ORACLE, ORACLE\*Terminal, PRO\*C, SQL\*FORMS, SQL\*Menu, SQL\*Net, SQL\*Plus, SQL\*ReportWriter.
- PCI Industrial Computer Manufacturers Group — Registered trademarks: CompactPCI and PICMG.
- Santa Cruz Operation, Inc. — Registered trademarks: UnixWare.
- Sun Microsystems — Registered trademarks: Sun, Sun Microsystems, Sun Workstation, Solaris (computer and peripherals). Trademarks: Solaris (operating system utilities) and Java
- UNIX System Laboratories, Inc. — Registered trademarks: UNIX.
- Xerox Corporation — Trademarks: Ethernet.

### Limited Warranty

Lucent Technologies provides a limited warranty on this product. Refer to the “Limited Use Software License Agreement” card provided with your package.

Lucent Technologies has determined that use of this electronic data delivery system cannot cause harm to an end user's computing system and will not assume any responsibility for problems that may arise with a user's computer system while accessing the data in these documents.

Every effort has been made to make sure that this document is complete and accurate at the time of release, but information is subject to change.

**United States FCC  
Compliance  
Information**

Part 15: Class A statement. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

**Canadian  
Department of  
Communications  
(DOC) Interference  
Information**

This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

Le Présent Appareil Numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

**Toll Fraud**

Toll fraud is the unauthorized use of your telecommunications system by an unauthorized party, for example, persons other than your company's employees, agents, subcontractors, or persons working on your company's behalf. Note that there may be a risk of toll fraud associated with your telecommunications system and, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

### **Your Responsibility for Your System's Security**

You and your system manager are responsible for the security of your system and for preventing unauthorized use. You are also responsible for reading all installation, instruction, and system administration documents provided with this product in order to fully understand the features that can introduce risk of toll fraud and the steps that can be taken to reduce that risk. Lucent Technologies does not warrant that this product is immune from or will prevent unauthorized use of common-carrier telecommunication services or facilities accessed through or connected to it. Lucent Technologies will not be responsible for any charges that result from such unauthorized use.

### **Lucent Technologies Fraud Intervention and Corporate Security**

If you suspect that you are being victimized by toll fraud and you need technical support or assistance, call the Lucent Technologies National Customer Care Center Toll Fraud Intervention Hotline at 1 800 643-2353.

Aside from whether immediate support is required, all toll fraud incidents involving Lucent products or services should be reported to Lucent Corporate Security at 1 800 821-8235. In addition to recording the incident, Lucent Corporate Security is available for consultation on security issues, investigation support, referral to law enforcement agencies, and educational programs.

**Documentation  
Ordering  
Information**

**Call or Write**

Lucent Technologies Publications Center  
2855 N. Franklin Road  
Indianapolis, IN 46219

Voice	1 800 457-1235	International Voice	317 322-6791
FAX	1 800 457-1764	International FAX	317 322-6699

**To Order**

To order a document, contact the Lucent Technologies Publications Center and specify the 9-digit document number, the issue number, and the issue date.

**Standing Orders**

You can be placed on a standing order list for this and other documents you may need. Standing order will enable you to automatically receive updated versions of individual documents or document sets, billed to account information that you provide. For more information on standing orders, or to be put on a list to receive future issues of this document, contact the Lucent Technologies Publications Center (see the contact information above).

<b>Copyright and Legal Notices</b>	<b>iii</b>
------------------------------------	------------

<b>About This Book</b>	<b>xiv</b>
------------------------	------------

Overview . . . . .	xiv
Intended Audiences . . . . .	xv
Release History . . . . .	xv
Training . . . . .	xv
Typographical Conventions . . . . .	xvi
Safety and Security Alert Labels . . . . .	xvii
Using the CD-ROM Documentation . . . . .	xviii
How to Comment on This Book . . . . .	xxii

<b>1 Introduction</b>	<b>1</b>
-----------------------	----------

Overview . . . . .	1
Hardware . . . . .	2
Software . . . . .	3
Features . . . . .	5
Feature Packages . . . . .	6

<b>2 Hardware</b>	<b>7</b>
Overview . . . . .	7
Views of the Server . . . . .	7
Standard System Hardware . . . . .	10
CompactPCI Backplane . . . . .	11
Midplane . . . . .	12
Media Bays . . . . .	12
Standard Circuit Cards . . . . .	13
Standard Buses . . . . .	19
Standard Peripheral Devices . . . . .	20
Cooling Fan Trays . . . . .	23
Power Supplies . . . . .	23
Optional System Hardware . . . . .	23
Optional Circuit Cards . . . . .	24
Optional Peripheral Equipment . . . . .	30
<b>3 Software</b>	<b>32</b>
Overview . . . . .	32
UnixWare Operating System Software . . . . .	34
LINUX Server Software . . . . .	34
ORACLE RDBMS Software . . . . .	38

<b>4</b>	<b>Features</b>	<b>41</b>
	Overview . . . . .	41
	Open Interfaces and Architecture . . . . .	42
	User Interfaces. . . . .	47
	Application Development Options . . . . .	48
	Voice Response Functions. . . . .	50
	Speech Capabilities . . . . .	51
	System Status and Monitoring . . . . .	56
	System Alarms. . . . .	57
	Data Network Interfaces . . . . .	61
	Hardware RAID . . . . .	61
	Telephony Interfaces. . . . .	62
	Terminal Emulation. . . . .	63
	Database Environment. . . . .	64
<b>5</b>	<b>Feature Packages</b>	<b>65</b>
	Overview . . . . .	65
	Asynchronous Host Interface Toolkit. . . . .	66
	Call Bridge Application. . . . .	69
	Call Classification Analysis . . . . .	69
	CDH Stub . . . . .	70

Data Collection Toolkit . . . . .	70
Dial Pulse Recognition. . . . .	71
E1 CAS Protocol. . . . .	72
FAX . . . . .	73
FlexWord Toolkit . . . . .	73
LSPS Set. . . . .	74
ORACLE RDBMS . . . . .	75
Primary Rate Interface. . . . .	78
Speech Recognition Packages . . . . .	82
WholeWord Speech Recognition. . . . .	83
FlexWord Speech Recognition . . . . .	86
T1 E&M Protocol. . . . .	89
Text-to-Speech. . . . .	89

## **6 Requirements and Specifications 92**

Overview . . . . .	92
Platform Specifications. . . . .	92
Telephony Interface Specifications. . . . .	96
General Specifications. . . . .	96
Specifications for T1 E&M . . . . .	101
Specifications for ISDN-PRI. . . . .	103
Specifications for E1 CAS . . . . .	105
Data Communications Specifications . . . . .	106



<b>A Documentation Guide</b>	<b>108</b>
Overview . . . . .	108
Documentation Set Listing . . . . .	110
Documentation Set Descriptions . . . . .	112
<b>Glossary</b>	<b>119</b>
<b>Index</b>	<b>191</b>

## Overview

The *LINCS Server System Description*, 585-313-209, answers basic questions about the LINCS server and its use. It provides a technical description of the system hardware, software, features, and feature packages, including requirements, specifications, and capacity information. This document is designed to supplement all other documents in the LINCS server set. A brief description of each document in the set is included in [Appendix A, Documentation Guide](#). Always refer to the appropriate document for specific information on planning, installing, operating, administering, or maintaining the system.

## Intended Audiences

The target audience for the *LINCS Server System Description* includes marketing, sales, technical support, and development personnel, or anyone who is looking for basic information about the functionality or content of the platform. Primary audiences are most interested in answering questions about the product and its features, such as “What is it?” and “How does it work?” Secondary audiences for this document include training and development organizations that would be interested in answering questions about system support and service.

## Release History

This document is the second release for the LINCS server.

## Training

For information on LINCS training, check the Lucent Message Institute web site at: <http://www.octel.com/octelu/index.html>

# Typographical Conventions

This document uses the following conventions for indicating commands and text:

- Literal values, commands, and text you type in or enter appear in **bold proportional** type, as in the following examples:

Example 1: Enter **display card 15** at the `enter` command: prompt.

Example 2: Type **yes** or **no** in the `Change immediate?:` field.

- Command variables are shown in ***bold proportional italic*** type when they are part of what you must type in, for example:

Type **restore card *card\_number***, where ***card\_number*** is the number of the card you want to restore, such as 5.

## Safety and Security Alert Labels

This document uses the following symbols to call your attention to potential problems that could cause personal injury, damage to equipment, loss of data, service interruptions, or breaches of toll fraud security:

 **CAUTION:**

Indicates the presence of a hazard that if not avoided *can* or *will* cause minor personal injury or property damage, including loss of data.

 **WARNING:**

Indicates the presence of a hazard that if not avoided *can* cause death or severe personal injury.

 **DANGER:**

Indicates the presence of a hazard that if not avoided *will* cause death or severe personal injury.

 **SECURITY ALERT:**

Indicates the presence of a toll fraud security hazard. Toll fraud is the unauthorized use of a telecommunications system by an unauthorized party.

# Using the CD-ROM Documentation

Lucent Technologies ships the documentation in electronic form. Using the Adobe Acrobat Reader application, you can read these documents on a Windows PC, on a Sun Solaris workstation, or on an HP-UX workstation. Acrobat Reader displays high-quality, print-like graphics on both UNIX and Windows platforms. It provides scrolling, zoom, and extensive search capabilities, along with online help. A copy of Acrobat Reader is included with the documents.

## Setting the Default Magnification

You can set your default magnification by selecting **File | Preferences | General**. We recommend the **Fit Page** option.

## Adjusting the Window Size

On HP and Sun workstations, you can control the size of the reader window by using the **-geometry** argument. For example, the command string **acroread -geometry 900x900 mainmenu.pdf** opens the main menu with a window size of 900 pixels square.

## Hiding and Displaying Bookmarks

By default, the document appears with bookmarks displayed on the left side of the screen. The bookmarks serve as a hypertext table of contents for the chapter you are viewing. You can control the appearance of bookmarks by selecting **View | Page Only** or **View | Bookmarks and Page**.

### Using the Button Bar

The button bar can take you to the book's index, table of contents, main menu, and glossary. It also lets you update your documents. Click the corresponding button to jump to the section you want to read.

### Using Hypertext Links

[Blue, underlined](#) type indicates a cross reference or hypertext link that will take you to another location in the document when you click on it.

### Navigating with Double Arrow Keys

The double right and double left arrows ( and ) at the top of the Acrobat Reader window are the go-back and go-forward functions. The go-back button takes you to the last page you visited prior to the current page. Typically, you use  to jump back to the main text from a cross reference or illustration.

### Searching for Topics

Acrobat has a sophisticated search capability. From the main menu, select **Tools | Search**. Then choose the **Master Index**.

### Displaying Figures

If lines in figures appear broken or absent, increase the magnification. You might also want to print a paper copy of the figure for better resolution.

### Printing the Documentation

If you would like to read the documentation in paper form rather than on a computer monitor, you can print all or portions of the online screens. You can also order the printed documents by calling the Lucent Technologies publications center at 1-800-457-1235.

## Printing an Entire Document

To print an entire document, do the following:

---

### *Begin*

- 1 From the documentation main menu screen, select one of the print-optimized documents. Print-optimized documents print two-screens to a side, both sides of the sheet on 8.5x11-in or A4 paper.
- 2 Select **File | Print**.
- 3 Enter the page range you want to print, or select **All**. Note that the print page range is different from the page numbers on the documents (they print two to a page).
- 4 The document prints.
- 5 Close the file. Do not leave this file open while viewing the electronic documents.

### *End*

---

## Printing Part of a Document

To print a single page or a short section, you can print directly from the online version of the document.

---

### *Begin*

- 1 Select **File | Print**.
- 2 Enter the page range you want to print, or select **Current**.  
The document prints, one screen per side, two sides per sheet.

### *End*

---

## How to Comment on This Book

We are interested in your suggestions for improving this book. Please send your comments to:

Lucent Technologies  
GLS Information Development Division  
Room 22-2H15  
11900 North Pecos Street  
Denver, Colorado 80234

You may also fax your comments to the attention of the Lucent Technologies LINCS writing team at (303) 538-1741.

Please mention the name and order number of this book, *LINCS Server System Description*, 585-313-209.

# 1 Introduction

## Overview

This chapter provides a high-level description of the LINC'S server for those seeking a quick summary of the hardware and software in the system. It serves as a road map for Chapters 2 through 5, which give in-depth descriptions of the components outlined here. Each of the main sections below lists the chapter that documents that area, followed by a brief overview of the primary components.

### About the Server

The LINC'S server, at its most basic level, is a high-performance computer consisting of controlling hardware, a UnixWare operating system, and middleware that handles call processing and media services, as well as standard operations, administration, and maintenance. The server is designed to support the speech-processing hardware and software that is used to develop an automated voice-response system.

Typically, the server is used to enhance the functionality of telecommunication switches and services operated by local and long-distance telephone companies. It is engineered to be a platform for an interactive media-processing system that meets central-office telecommunications standards.

# Hardware

**Chapter Reference** See [Chapter 2, Hardware](#), for complete information on server hardware components.

**Hardware Overview** The LINC Server is a CompactPCI unit with the types of hardware described below. The server is typically mounted in either a 5ESS equipment rack or a 19-inch commercial rack.

- Standard hardware — Standard hardware is the hardware required for the basic platform to function. The server comes with all standard hardware, which includes the following main components:
  - ~ CompactPCI backplane with 16 slots
  - ~ Two-card CPU complex that includes an integrated Ethernet LAN controller, a diskette drive, and a RAID (level 5) controller PCI Mezzanine card (PMC)
  - ~ Standard SCSI peripheral devices:
    - 3-6 SCA hard-disk drives (minimum of 3 to support RAID)
    - 1 cartridge-tape drive
    - 1 CD-ROM drive
  - ~ Telecom alarm module (TAM)

- Optional hardware — Optional hardware is not required for the platform to operate but can be essential for many applications. Optional hardware is ordered in addition to the standard hardware. Main optional hardware components include:
  - ~ E1/T1 digital telephony-interface circuit cards
  - ~ Speech and signal processing circuit cards (LSPS II and SSP)
  - ~ Asynchronous 8-port circuit card
  - ~ A second Ethernet LAN controller (a PMC)
  - ~ Optional peripheral equipment:
    - monitor, keyboard, and mouse (supplied together)
    - printer
    - modem

## Software

**Chapter Reference** See [Chapter 3, Software](#), for a complete list of standard and optional software packages for the server.

**Software Overview** The server comes with standard software, the software required for basic operation. Additional, optional software is ordered and purchased according to need.

- Standard software — The following software is required for the server to operate and is included with the system.
  - ~ UnixWare 2.1.3 operating system software
  - ~ Base LINCS server software
- Optional software — Optional software is not required for the server to operate, though one or more packages may be required for your applications to operate. These software packages are ordered according to need and are purchased in addition to the base system.
  - ~ LINCS server optional software — Includes such packages as speech-processing software and Primary Rate Interface (PRI) software.
  - ~ ORACLE Relational Database Management System (RMDBS) 7.3.2 software — Some systems require a database management system. Although optional, the ORACLE RMDBS is the supported package for all systems using a database. (Systems that do not need database functionality require the Intuity CDH Stub feature package, which handles the call data that would otherwise be stored in the database.)

In addition to the base ORACLE software, you can also purchase ORACLE development tools packages.

# Features

**Chapter Reference** See [Chapter 4, Features](#), for a detailed description of server features.

**Features Overview** A *feature* is software and/or hardware that is part of the standard equipment you receive when you purchase the base system. Depending on your needs, you can order additional software and hardware, called *feature packages*, to complete or enhance your system. See [Feature Packages](#) below for an overview of feature packages.

Examples of features include:

- Open interfaces and architecture, such as CompactPCI hardware, Ultra Wide SCSI, UnixWare, TCP/IP, and IRAPI
- Intelligent monitoring and alarm system (Telecom Alarm Module)
- Hardware RAID
- Basic voice-response functions and speech capabilities
- Telephony interfaces (when used in combination with the correct feature packages)

# Feature Packages

**Chapter Reference** See [Chapter 5, Feature Packages](#), for a complete description of server feature packages.

## Feature Packages Overview

A *feature package* is software and/or hardware that is used to enhance the operation or capacities of the base system. Feature packages are not required for the base system to function and are purchased separately when you want capabilities beyond what the base system provides.

Examples of feature packages include:

- Speech recognition and processing packages, such as WholeWord, FlexWord, and Text-to-Speech
- Dial Pulse Recognition
- Protocol packages, such as Primary Rate Interface (PRI) and T1 E&M protocol
- Asynchronous Host Interface Toolkit, a tool for developing applications that access host computers via an asynchronous data communication interface

## Overview


This chapter describes the LINCS server hardware, including platform capacities, and supported and orderable devices for the following:

- [Standard System Hardware](#) — all hardware required for the basic platform to function
- [Optional System Hardware](#) — supplemental hardware that generally is not required for the basic platform to run but might be required by your applications; includes telephony-interface and speech-processing circuit cards

## Views of the Server

[Figure 1 on page 8](#) shows a front view of the server and [Figure 2 on page 9](#) shows a back view.


Figure 1. Front View of the Server

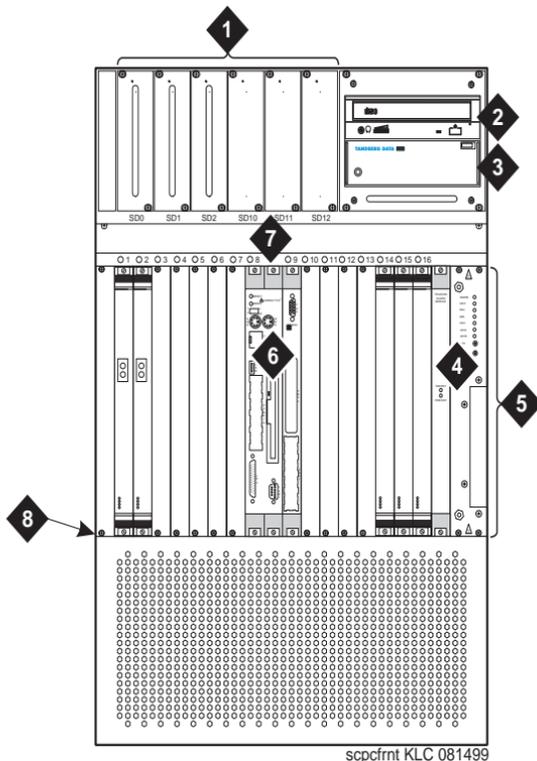

1. Hard disk drive media bay
2. CD-ROM drive media bay
3. Cartridge tape drive media bay
4. TAM and alarm panel
5. Circuit card area
6. CPU complex (includes diskette drive)
7. Upper fan tray
8. Lower fan tray with filter panel

scpcfrrt KLC 081499

Figure 2. Back View of the Server

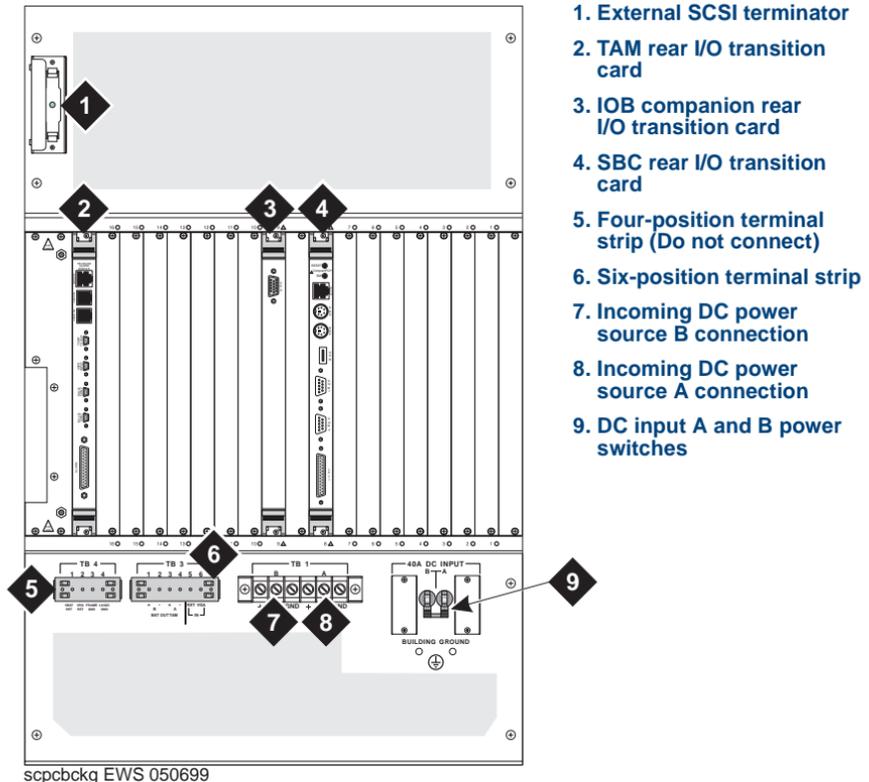

## Standard System Hardware

The LINCS server is a CompactPCI chassis that can be mounted in a 5ESS equipment rack or a 19-inch commercial rack.

LINCS server standard hardware (hardware that is required for the basic server to operate) includes the following components, each of which is described in detail in the sections that follow.

- [CompactPCI Backplane](#) — 16 slots for circuit cards and one custom slot occupied by the Telecom Alarm Module
- [Midplane](#) — provides for easy transfer between rear input/output (I/O) circuit cards and the CPU complex and SCA-SCSI backplane, and eliminates need for cables to rear I/O circuit cards
- [Media Bays](#) — six SCA hard-disk drive positions and two half-height drive positions
- [Standard Circuit Cards](#) — CPU complex and Telecom Alarm Module (TAM), and associated rear I/O circuit cards
- [Standard Buses](#) — CompactPCI, Computer Telephony (CT), and SCSI buses
- [Standard Peripheral Devices](#) — SCA hard-disks (three to six), cartridge-tape drive, CD-ROM drive, and diskette drive, plus an external SCSI connector

- [Cooling Fan Trays](#) — two trays with a total of eight cooling fans
- [Power Supplies](#) — dual redundant 500W DC output

## CompactPCI Backplane

### Backplane Slots

The CompactPCI backplane provides circuit-card mounting positions called *slots*. The backplane has 16 CompactPCI slots of 6U height, plus an additional slot where the Telecom Alarm Module (TAM) is installed. Of the 16 CompactPCI slots, slots 8 and 9 are occupied by the CPU board set (see [CPU Complex \(page 13\)](#)). The 14 remaining CompactPCI slots are available for telephony-interface cards, speech-processing cards, and an 8-port asynchronous card.

### Rear I/O Slots

The rear panel of the CompactPCI backplane contains slots for rear input/output (I/O) transition cards. The slots on the rear of the backplane correspond in number to the slots on the front of the backplane. Circuit cards having rear I/O will have an associated rear I/O transition card that plugs into the rear of the backplane. Some circuit cards, such as the E1/T1 telephony cards, have only rear I/O.

### Buses

The CompactPCI backplane contains the CompactPCI bus segments and the Computer Telephony (CT) bus. See [Standard Buses \(page 19\)](#) for details on these buses and the standard SCSI bus.

## Midplane

The midplane provides plug-in connections between the rear I/O circuit cards for the CPU complex and the Compact PCI backplane. The rear I/O circuit cards then can communicate with the CPU complex and SCA-SCSI backplane without requiring cables to the rear I/O circuit cards. Without cables, rear I/O circuit cards are easier to install or replace.

## Media Bays

The media bay is located at the top of the server and contains eight positions:

- 6 Single Connector Architecture (SCA) SCSI hard-disk positions — devices plug into a SCA-SCSI backplane
- 2 half-height drive positions — devices use discrete SCSI and power cabling

See [Standard Peripheral Devices \(page 20\)](#) for descriptions of the different SCSI-format devices.

## Standard Circuit Cards

Standard circuit cards are required for the basic platform to function. The server provides a central processing unit (a two-card set) and a Telecom Alarm system module, both of which are described below. In the server, all circuit cards are of 6U height (10.5 in.) and are mounted vertically in the card cage area with face plates on the front. Input/output (I/O) circuit cards can have front I/O but most often use rear I/O transition cards.

To achieve speech-processing functionality, your system will need additional circuit cards, such as telephony-interface cards and speech-processing cards. These cards are described in [Optional Circuit Cards \(page 24\)](#).


### CPU Complex

The processor for the server is one unit (the *CPU complex*) consisting of the two connected 6U cards listed below. The CPU complex occupies slots 8 and 9 in the CompactPCI backplane and is inserted or removed as one card.

- Single Board Computing (SBC) circuit card — slot 8, double width
  - ~ Processor operating at 233-MHz
  - ~ 128 Mbytes of RAM
  - ~ 512 Kbytes of level 2 cache
- I/O Companion card (IOB) — slot 9, single width

[Figure 3 on page 14](#) shows the faceplate of the CPU complex.

Figure 3. Faceplate of the CPU Complex

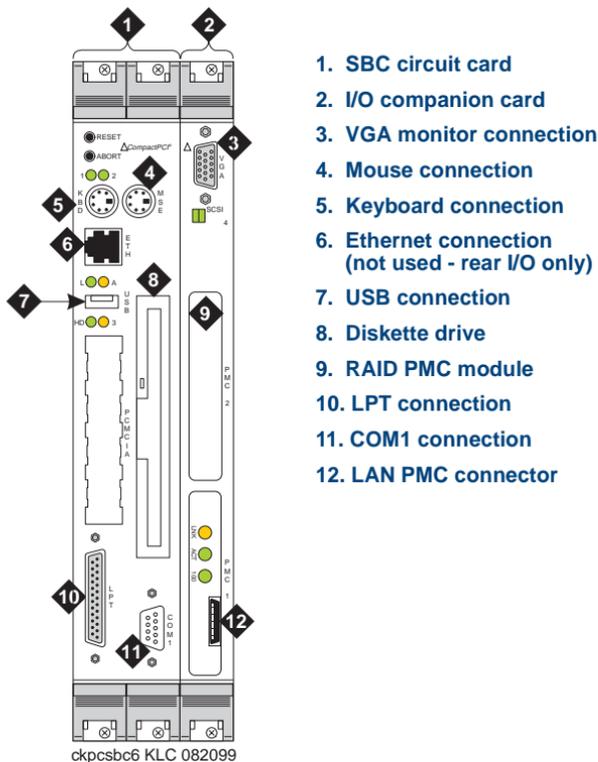

1. SBC circuit card
2. I/O companion card
3. VGA monitor connection
4. Mouse connection
5. Keyboard connection
6. Ethernet connection  
(not used - rear I/O only)
7. USB connection
8. Diskette drive
9. RAID PMC module
10. LPT connection
11. COM1 connection
12. LAN PMC connector

[Table 1](#) describes the main components that reside in the two cards of the CPU complex. All components of the CPU complex have front access. Components having rear I/O are indicated.

**Table 1. CPU Complex Components**

SBC Circuit Card	I/O Companion Card
Diskette drive	SVGA Video controller module
10/100Mbit Ethernet LAN controller, integrated on SBC card (rear I/O) See <a href="#">Ethernet LAN Controllers (page 17)</a> for details.	Optional 10/100Mbit Ethernet LAN PMC (front I/O cabled to the rear) See <a href="#">Ethernet LAN Controllers (page 17)</a> for details.
Keyboard connector (front or rear I/O)	RAID controller PMC
Mouse connector (front or rear I/O)	
USB connector (front or rear I/O)	
Line printer (LPT) port (front or rear I/O)	
<b>1 of 2</b>	

**Table 1. CPU Complex Components**

<b>SBC Circuit Card</b>	<b>I/O Companion Card</b>
COM1 serial port (front or rear I/O)	
COM2 serial port — not available for use; connected internally to the Telecom Alarm Module. See <a href="#">Telecom Alarm Module (page 18)</a> for details.	
	<i>2 of 2</i>

### RAID Controller

The server provides a RAID (redundant array of independent disks) PMC to ensure that system services are not lost when a hard-disk drive fails. This feature is implemented at level 5 and supports "hot swapping", which means you can replace a failed drive and restore data to the new drive while the system remains in full operation. For more information, see [Hardware RAID \(page 61\)](#) in [Chapter 4, Features](#).

### Ethernet LAN Controllers

An Ethernet LAN connection allows for communication with other systems. The server provides an integrated Ethernet LAN controller on the SBC circuit card of the CPU complex. A second, optional Ethernet LAN controller, a PMC (PCI Mezzanine Card), can be installed on the I/O Companion card of the CPU complex. [Table 2](#) describes characteristics of each.

**Table 2. Ethernet LAN Controllers**

Integrated LAN Controller	Optional LAN Controller
Integrated on SBC card of CPU complex	PMC on I/O Companion card of CPU complex
Rear I/O	Front I/O cabled to rear
Autosensing 10/100 Mbps BASE-T	Autosensing 10/100 Mbps BASE-T
RJ-45 twisted pair connector	Special cable and coupler are supplied to connect to RJ-45 cable

The Ethernet LAN controller can be programmed with software and provides the physical interface for the TCP/IP software that is part of the UnixWare operating system. For more information on TCP/IP, see [Data Network Interfaces \(page 61\)](#) in [Chapter 4, Features](#).

## Telecom Alarm Module

The Telecom Alarm Module (TAM) provides an intelligent monitoring and alarm system with visual and audible alarms. Visual indicators are displayed on the alarm indicator panel. The TAM resides in a customized 17th slot in the card cage area and generates alarms when the following conditions occur:

- high-temperature thresholds for the chassis are exceeded
- input voltage thresholds are not within specified range
- power supply output voltages are not within specified range
- chassis fan tray or power-supply fan fails
- watchdog timer function for the CPU complex expires, indicating the system software is not functioning

### CAUTION:

The TAM connects internally to the COM2 serial port. Note that because the connection occurs inside the chassis, the external port appears to be available. Do not make connections to the external COM2—doing so will interrupt the watchdog timer communication to the CPU and might cause a system reboot.

For more information on the TAM, see [System Alarms \(page 57\)](#) in [Chapter 4. Features](#).

## Standard Buses

The server has two CompactPCI bus segments, one Computer Telephony (CT) bus, and one SCSI bus.

### CompactPCI Bus Segments

The CompactPCI bus segments serve as the interface for the CompactPCI circuit cards. The server has two separate 8-slot, 32-bit CompactPCI bus segments. One segment consists of system slot 8 and the seven peripheral slots to the left, and the other segment consists of system slot 9 and the seven peripheral slots to its right. This bus is contained in the backplane.

### CT Bus

The Computer Telephony (CT) Bus is a type of TDM bus that is used by the cards involved in speech processing (SSP, LSPS II, and E1/T1) when they send digitized speech to other cards in the system. The CT Bus ranges from slots 1 through 16 and is contained in the backplane. This bus complies with the ECTF (Enterprise Computer Telephony Forum) H.110 standard, the hardware specification for implementing a CT bus for CompactPCI.

### SCSI Bus

The SCSI bus is the interface from the RAID controller to the SCSI devices, such as a hard-disk drive or tape drive. The server uses an Ultra Wide SCSI bus that runs at the rate of 40 Mbytes per second, for those devices that support it. The six hard-disk drives use Single Connector Architecture (SCA) connectivity and plug into the SCA-SCSI backplane. The cartridge tape and CD-ROM drives connect to a SCSI bus ribbon cable.

## Standard Peripheral Devices

The server comes with the following peripheral devices. Each is described in the sections that follow. For descriptions of peripheral devices that are not required for the platform to run (such as a monitor and keyboard), see [Optional Peripheral Equipment \(page 30\)](#).

- [Hard Disk Drives](#)
- [Cartridge Tape Drive](#)
- [CD-ROM Drive](#)
- [Diskette Drive](#) (located on the CPU complex)

The server has an external SCSI connector for external SCSI devices. For guidelines and restrictions on using the external connector, see [Adding External SCSI Devices \(page 22\)](#).

### Hard Disk Drives

The hard-disk drive provides storage and random access to large amounts of data for the system, including the operating system, application software, speech data, and database tables. The server comes with a minimum of three 4.5-Gbyte Single Connector Architecture (SCA) SCSI hard-disk drives and can support up to six SCA-SCSI hard-disk drives. Note that the hardware RAID feature requires a minimum of three hard-disk drives.

All hard-disk drives connect to the SCSI bus and input-power by plugging into the SCA-SCSI backplane (instead of using cables), making them easy to install or replace. The hard-disk drives are located in the media bay at the top of the server.

**Cartridge Tape Drive**

A cartridge-tape drive is used to back up and restore files using a tape cartridge, thereby eliminating the need to restore and back up files using diskettes.

The server has one 5.25-inch, 4-Gbyte SCSI cartridge-tape drive. This unit is a half-height peripheral located at the top of the server. It uses cables to connect to the SCSI bus and input power.

**CD-ROM Drive**

The CD-ROM drive is used to load system software. The server has one 5.25-inch, SCSI CD-ROM drive. This unit is a half-height peripheral located at the top of the server. It uses cables to connect to the SCSI bus and input power.

**Diskette Drive**

The diskette drive is used to load and back up system software. The server has a single 3.5-inch diskette drive. This unit is located on the SBC card of the CPU complex (slot 8) and uses standard 3.5-inch, 1.44-Mbyte, high-density diskettes.

## Adding External SCSI Devices

An external SCSI connector provides access to the SCSI bus for an external SCSI device. The external SCSI connector is a standard 68-pin Ultra Wide SCSI connector and is located on the back of the chassis.

**Note:** If the SCSI connector is not being used, an active termination must be plugged in to terminate the SCSI bus. A SCSI terminator is provided with all LINCS servers.

The server supports a maximum of 16 internal/external devices on the SCSI bus. The RAID controller, CD-ROM drive, and tape drive use 3 of the positions, and the hard-disk drives use from 3 to 6 of the positions. Therefore, from 9 to 12 positions will be open for SCSI devices supported by UnixWare, depending on the number of hard-disk drives installed. Be aware, however, of the following restrictions involved in connecting an external SCSI device:

- External cables must be Wide, and Ultra Wide SCSI restricts cable length to one meter.
- If you use the external SCSI connector, Mylex RAID controller transfer speed settings must be changed to a value slower than 40 Mbytes per second. A suggested speed is 10 Mbytes per second.
- The last device on the SCSI bus must be terminated with a Wide terminator.

## Cooling Fan Trays

The server contains two redundant, hot-swappable cooling fan trays. One tray is located above the card cage and has five fans. The second tray is located below the card cage and has three fans.

## Power Supplies

The server has dual redundant, hot-pluggable power supplies that produce 500W of output power from -48V DC input. Each power supply has its own cooling fan.

## Optional System Hardware

While standard hardware is required for the basic CompactPCI platform to function, optional hardware is required for many important features and functions. The circuit cards that provide network connections and speech-processing capabilities, for example, are optional hardware. This section describes the following optional hardware:

- [Optional Circuit Cards](#) — Digital telephony-interface (E1/T1), speech-processing (LSPS II and SSP), asynchronous 8-port, and Ethernet LAN PMC.
- [Optional Peripheral Equipment](#) — monitor, keyboard, mouse, printer, and modem

## Optional Circuit Cards

Optional circuit cards are used to provide interfaces for such features as the public switched telephone network (PSTN), LAN/WAN communications, and speech-processing capabilities. For more information on software associated with the following circuit cards, see [Chapter 4, Features](#) and [Chapter 5, Feature Packages](#).

This section describes the following circuit cards:

- [Telephony-Interface Circuit Cards](#) — E1/T1 (CWB2) with rear I/O transition card (CYD2)
- [Speech-Processing Circuit Cards](#) — LSPS II (6UB5) and SSP (CWB1)
- [Asynchronous 8-Port Circuit Card](#)
- [Ethernet LAN PMC](#) — A second LAN controller, a PMC, is optional on the I/O Companion card of the CPU complex; this PMC is described with the integrated Ethernet LAN controller in [Ethernet LAN Controllers \(page 17\)](#).

**Telephony-Interface  
Circuit Cards**

Digital circuit cards provide the telephony interface to the system. All telephony-interface circuit cards connect to the CT bus. The server uses the E1/T1 (CWB2) circuit card, each of which has a corresponding rear I/O transition card (CYD2). CWB2 plugs into the front of the CompactPCI backplane, and CYD2 plugs into the corresponding slot of the rear of the backplane.

The CWB2 circuit card is referred to as an E1/T1 circuit card because it can be used for both T1-rate and E1-rate services.

**Maximums and Capacities**

The server has 14 CompactPCI slots that can be used for E1/T1 circuit cards; however, at least one speech processing card (SSP or LSPS II) is required to play or code speech for the channels.

At its T1-rate, the CWB2 provides a 24-channel digital interface between a telephone switch and the system. A T1 digital circuit carries information at a rate of 1.544 Mbps. At its E1 rate, the CWB2 provides a 32-channel digital interface (30 voice channels and 2 signaling and framing channels) between the switch and the system. An E1 digital circuit carries information at a rate of 2.048 Mbps. Using the E1 rate significantly improves system connectivity and reduces the number of circuit cards required to support multiple channels.

## Speech-Processing Circuit Cards

The speech-processing circuit cards provide processing power for the various speech-technology features. The CompactPCI platform supports the following two types of high-performance speech-processing circuit cards:

- SSP (speech and signal processing)
- LSPS II (Lucent speech processing solutions)

Both circuit cards support speech coding and playback, WholeWord, FlexWord, and Text-to-Speech (TTS). The LSPS II card offers advanced speech-processing options, such as more finely tuned Text-to-Speech and subword recognition for very large vocabularies. (Note that the LSPS II card does not support Dial Pulse Recognition (DPR), FAX, or Call Classification Analysis (CCA); only the SSP card supports DPR, FAX, and CCA.)

All LSPS II or SSP circuit cards connect to the CT bus. These cards do not require external I/O and so have no corresponding rear I/O transition cards. The speech-processing circuit cards do not connect directly to the telephone network and must be used with at least one E1/T1 circuit card.

### Using SSP and LSPS II Circuit Cards Together

A server can contain both LSPS II cards and SSP cards. However, speech files and custom grammars developed with one type of speech-processing circuit card cannot be used with the other type. A speech-processing function, such as Text-to-Speech or FlexWord, must be assigned to only one type of card, either LSPS II or SSP, but not to both. For example, if Text-to-Speech functions are assigned to an LSPS II card, Text-to-Speech functions

cannot be assigned to an SSP card. Likewise, if Whole Word and FlexWord functions are assigned to an SSP card, they cannot also be assigned to an LSPS II card.

### Speech-Processing Circuit Card Capacities

The server will support up to ten speech-processing circuit cards per system. [Table 3 on page 28](#) shows SSP and LSPS II circuit-card channel capacities. Many factors influence channel counts at a given time, and the numbers provided here are approximate. Channel counts are also affected by rapidly improving technology; see future release notes for updates.

Unless otherwise indicated, the channel counts shown below are based on the condition that the entire circuit card is dedicated to the specified feature. The size of wordlists also affects channel counts. Numbers for the SSP circuit card reflect wordlists containing a combined total of up to 2000 words. The LSPS II circuit card can process larger grammars with up to 10,000 words, but the channel count will decrease. The LSPS II circuit card should be tuned according to the size of grammar you are using. See *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212, for more information.

**Table 3. Speech Processing Circuit Card Channel Capacities**

<b>Feature</b>	<b>LSPS II</b>	<b>SSP</b>
FlexWord speech recognition	24 — varies with size of wordlists* (14 with Text-to-Speech assigned to same card)	15 without barge-in 12 with play and barge-in in use
WholeWord speech recognition	30 (18 with Text-to-Speech assigned to same card)	15 without barge-in 12 with play and barge-in in use
Echo cancellation	64 — Does not reduce capacities of other functions	60 — Reduces capacities of other functions
Playback/record in 64-Kbps PCM	64/64 — Level of one does not affect the other. Combined maximum would be 128.	120/120 — Level of one affects the other inversely. Combined maximum cannot exceed 120.
Playback/record in 32-Kbps OKI ADPCM	64/64 — Level of one does not affect the other. Combined maximum would be 128.	—
Playback/record in 16- or 32-Kbps ADPCM	—	120/120 — Level of one affects the other inversely. Combined maximum cannot exceed 120.
		<i>1 of 2</i>

**Table 3. Speech Processing Circuit Card Channel Capacities**

<b>Feature</b>	<b>LSPS II</b>	<b>SSP</b>
Playback/record in 16-Kbps CELP	—	120/60 — Level of one affects the other inversely. Combined maximum cannot exceed 180.
Text-to-Speech	64 (20 with FlexWord and/or WholeWord assigned to same card)	60
Dial pulse recognition (DPR)	—	60
Call Classification Analysis (CCA)	—	24
FAX	—	90
		<b>2 of 2</b>

\* This value assumes a typical grammar with most wordlists containing around 50 words and some larger ones containing around 500 words. For larger wordlists containing 2000 words, about 15 channels would be supported; for smaller wordlists with under 50 words, about 32.

**Asynchronous 8-Port Circuit Card**

The asynchronous 8-port circuit card provides eight additional serial data connections on the system. These connections can be used to support asynchronous host computer links, multiple serial printers, on-site and remote monitoring systems, or extra modems.

**Ethernet LAN PMC**

An integrated Ethernet LAN controller is standard on the SBC circuit card of the CPU complex. A second, optional Ethernet LAN controller, a PMC, can be installed on the I/O Companion card of the CPU complex. Both are described in the section [Ethernet LAN Controllers \(page 17\)](#).

## Optional Peripheral Equipment

The peripheral equipment described in this section is not an exhaustive list of all devices that can be used with the server. If you have equipment that you would like to use, discuss its compatibility with a Lucent Technologies representative.

For details on peripheral connections to your system, see *LINCS Server New System Installation*, 585-313-127.

In some cases, Lucent Technologies does not provide or recommend a particular model or brand of each device when ordering. Customers must inform their sales representative about the desired peripheral equipment during the planning of a new system. This section describes the following types of optional peripheral equipment:

- [Monitor, Keyboard, and Mouse](#) (supplied together)
- [Printer](#)
- [Modem](#)

**Monitor, Keyboard, and Mouse**

You can connect a color monitor to any server if you would like a visual user interface. When you purchase a monitor, a standard 104-key keyboard and a PS2 mouse are provided. (Note that the server can be operated and administered without a mouse.)

**Printer**

A printer can be used to print hard copies of system screens and reports. The server supports printers that have UnixWare 2.1.3 drivers and use parallel ports.

**Modem**

An external modem can be connected to the system to allow administrators, operators, or remotely located technical support personnel to initiate commands and remotely monitor the system for installation and maintenance purposes. A modem is also used if asynchronous communication with another machine or device is needed. In such cases, a modem is only used if the device is located too far away from the system to use a null-modem.

The server supports modems that have UnixWare 2.1.3 drivers and use standard ports.

## Overview

A number of software packages are included when you purchase the LINCS server, referred to here as standard or *base software*. Optional feature packages are also available and can be implemented with some combination of optional hardware and software. This chapter lists the base and optional software available for the server.

[Table 4 on page 33](#) lists the main software types and shows the delivery media for each. Details for each are given in the sections that follow.

**Note:** To see a list of what software is installed in your system, use the **pkginfo | pg** command. The **pkginfo** command is described in full in Appendix A, “Summary of Commands,” in *LINCS Server Administration*, 585-313-507.

Table 4. Overview of Software

Software	Media	Notes
UnixWare	2 boot diskettes	See <a href="#">UnixWare Operating System Software (page 34)</a> . Additional UnixWare software is included on the LINCS Base CD-ROM.
LINCS	LINCS Base CD-ROM	Includes base software, optional software, and UnixWare operating system software. See <a href="#">LINCS Server Software (page 34)</a> .
Quickstart	1 boot diskette	Included as part of LINCS base software
ORACLE RDBMS	ORACLE Base CD-ROM	ORACLE Relational Database Management System (RDBMS) 7.3.2 for systems needing a database management system. See <a href="#">ORACLE RDBMS 7.3.2 (page 38)</a> .
	Optional for ORACLE: <ul style="list-style-type: none"> <li>• ORACLE Tools CD-ROM</li> <li>• ORACLE PRO*C CD-ROM</li> </ul>	Two ORACLE development tools packages that you can purchase in addition to the RDBMS. Each package comes on its own CD-ROM.

## UnixWare Operating System Software

The UnixWare operating system is the software platform upon which all of the system software runs, including feature packages and applications. Use the UnixWare boot diskettes to load the UnixWare operating system.

Additional software relating to the UnixWare operating system is included on the LINCS Base CD-ROM, such as files including peripheral and networking utilities, software programming packages, and electronic documentation. The driver for the Ethernet LAN controller is also included.

## LINCS Server Software

The LINCS Base CD-ROM contains the LINCS server base and optional software, as well as additional UnixWare software. LINCS base and optional software is listed below.

### Base Software

The base software acts as a foundation for the rest of the system and provides an environment for the execution of the application software running on the platform. It contains all major software utilities and subsystems related to processes, maintenance, and operations and is required for the platform to operate.

**Note:** All base software packages are licensed on a per-machine basis.

Base software packages are as follows:

- Intuity Utilities Package
- Intuity Runtime Processing Package
- Intuity Maintenance Package
- Intuity Logger/Alerter Package
- Intuity AUDIX Logger Package
- Intuity Backup/Restore Utilities
- Intuity Telecom Alarms Package
- Intuity Platform LINCS Tuning Package
- Intuity T1/E1 Board Driver
- EEPROM Driver
- Intuity Administration Screens Package
- Intuity Transaction State Machine Package
- Intuity License Modification Package
- Intuity Hardware RAID Integration
- Global Array Manager
- Intuity Unix Management Screens Package

The Quickstart package is also included with the base software; it comes on a separate boot diskette.

**Optional Software**

Optional software is ordered according to need and is purchased in addition to the purchase of the base LINCS software. Generally, optional software is not required for the server to operate. However, one or more optional packages may be required for your applications to operate.

Optional software packages are listed below. Most of the software packages listed are directly related to a feature package.

- Intuity ASP Driver Package
- Intuity Call Bridge Application Package
- Intuity Call Classification Analysis Package
- Intuity CDH Stub
- Intuity CSG Asynchronous Host Interface Toolkit
  - ~ ASYNC\_TEST Transactions Script Builder Backup
  - ~ ASYNC\_TEST Speech Script Builder Backup
- Intuity Data Collection Toolkit
- Intuity Dial Pulse Recognition Package
- Intuity E1 CAS R2 MFC Interface Package – Mexico
- Equinox SST Loadable STREAMS Device Driver (EISA/ISA/MCA/PCI/CPCI)
- Intuity Next Generation FAX package

- Intuity Feature Test Script Package
- Intuity FlexWord Recognition Base
- Intuity FlexWord Recognition — US English
- Intuity FlexWord Toolkit
- LSPS Set:
  - ~ LSPS Speech Driver
  - ~ LSPS Speech RealTime Environment (RTE)
  - ~ Low-level LSPS API
  - ~ LSPS Software Development Kit (includes documentation)
  - ~ LSPS Diagnostics
  - ~ LSPS II Integration Package
  - ~ LSPS Automatic Speech Recognition for North American English
  - ~ LSPS Text-to-Speech Module for North American English
- Intuity ISDN Primary Rate Interface Package
- Intuity Advanced PRI Package
- Intuity Nortel NIS A211-1PRI Package
- Intuity SNMP Emanate Agent
- Intuity T1 E&M Interface Package

- Intuity Text to Speech Package
- Intuity Whole Word ASR Base
- Intuity WholeWord Recognition — US English

## ORACLE RDBMS Software

Many systems using the LINC Server will require database management software. One of the following software packages must be installed, according to whether or not the system requires database software:

- [ORACLE RDBMS 7.3.2](#) — The supported package for systems that need a database management system.
- [Intuity CDH Stub](#) — Required for systems that do not install ORACLE RDBMS.

### ORACLE RDBMS 7.3.2

The ORACLE Relational Database Management System (RDBMS) 7.3.2 software package allows a user to establish and maintain a local ORACLE RDBMS on the system.

The primary ORACLE software comes on its own CD-ROM. You can also purchase the ORACLE development tools, which are delivered on two additional CD-ROMS.

### Base ORACLE Software (ORACLE Base CD-ROM)

The base ORACLE software is delivered on the ORACLE Base CD-ROM, which includes the following packages:

- Base and Extended ORACLE RDBMS 7.3.2
- ORACLE 7 Integration Package
- ORACLE SQL\*NET TCP/IP 7.3 (provides remote database connectivity)

**Note:** The Base and Extended package and the Integration package are required; the SQL\*NET TCP/IP package is not required, but it is installed automatically as part of the base set.

### ORACLE Development Tools (Two CD-ROMs)

In addition to the ORACLE RDBMS package, you can purchase the optional ORACLE development tools. These tools are delivered on the following two CD-ROMs:

- ORACLE Tools CD-ROM — contains the following packages:
  - ~ SQL\*FORMS/MENU
  - ~ ORACLE\*ReportWriter
- ORACLE PRO\*C CD-ROM — contains the PRO\*C package for developing ORACLE applications in the C programming language

**Intuity CDH Stub**

The Intuity CDH (Call Data Handling) Stub software package is required when the ORACLE RDMBS package is not installed. The CDH Stub software manages the call data that would otherwise be stored in an ORACLE database.

The CDH Stub package is included on the LINCS Base CD-ROM.

## Overview

A *feature* is software and/or hardware that is part of the standard equipment you receive when you purchase the base system. Depending on your needs, you can order additional software and hardware, called *feature packages*, to complete or enhance your system. This chapter explains the standard features of the server. See [Chapter 5, Feature Packages](#), for details on feature packages.

- [Open Interfaces and Architecture](#)
- [User Interfaces](#)
- [Application Development Options](#)
- [Voice Response Functions](#)
- [Speech Capabilities](#)
- [System Status and Monitoring](#)
- [System Alarms](#)
- [Data Network Interfaces](#)

- [Hardware RAID](#)
- [Telephony Interfaces](#)
- [Terminal Emulation](#)
- [Database Environment](#)

## Open Interfaces and Architecture

The move to more open systems in the computer and telecommunications industries is growing as standardization of hardware and software increases. Standardization makes for quicker system engineering and allows new technologies to be more easily incorporated. As used here, the term *open* means adherence to a set of industry standards or specifications that promotes interoperability, which is the ability for diverse platforms, interfaces, and software to work together smoothly. When formal standards do not exist, *open* here means general interoperability. The LINCS server uses a number of open hardware devices, interfaces, and software; this section describes some of the main ones.

### CompactPCI

CompactPCI is a high-performance platform composed of many components based on industry standards. The PCI Industrial Computer Manufacturers Group (PICMG) develops specifications for PCI-based systems for industrial and telecommunications applications. The LINCS server complies with the following PICMG standards:

- PICMG 2.0 CompactPCI Specification R2.1 (for the server and cards)
- PICMG 2.5 CompactPCI Computer Telephony Specification R1.0
- PICMG 2.1 CompactPCI Hot Swap Specification R1.0

### PCI Plug and Play BIOS

The LINCS server BIOS supports PCI (Peripheral Component Interconnect) Plug and Play, which allows for circuit cards to be configured automatically when the system is started. Automatic configuration saves time and helps prevent configuration errors. The BIOS is compliant with the PCI Special Interest Group (SIG) PCI 2.1 specification. PCI SIG fosters development and sponsors specifications for PCI architecture.

### Ultra Wide SCSI

The hard-disk drives in the server use Ultra Wide Small Computer System Interface (SCSI), a high-speed hardware interface for connecting peripheral devices. Ultra Wide SCSI provides fast data transfer at the rate of 40 Mbytes per second. The disk drives also use Single Connector Architecture (SCA)—the drives plug directly into the backplane, eliminating cables and making for easy replacement. See [Chapter 2, Hardware](#), for specific information on the SCSI devices in the server.

**10/100 Base T Ethernet**

The Ethernet interface used by the LINCS server is compliant with the Institute of Electrical and Electronic Engineers (IEEE) 802.3 Carrier Sense Multiple Access with Collision Detection (CSMA/CD) standard for LAN protocol, now a popular, world-wide networking standard. The transmission rates of 10 Mbps and 100 Mbps are supported.

**TCP/IP**

Transmission Control Protocol/Internet Protocol (TCP/IP) is one of the most widely accepted networking protocols for communicating across different kinds of hardware and operating systems. Very reliable, TCP/IP is one of the main software networking components of the UnixWare operating system and is used often with Ethernet LANs. TCP/IP is the de facto standard for data communications for the Internet.

**ECTF H.110 CT Bus**

The Enterprise Computer Telephony Forum (ECTF) is an organization dedicated to fostering Computer Telephony (CT) interoperability and publishing standards and agreements. The CT bus used in the LINCS server is compliant with the ECTF H.110 standard, which is a hardware specification for implementing a CT bus for CompactPCI. This version of the CT Bus offers greater fault tolerance and minimizes speech-processing disruption through redundant clocking and hot-swap capabilities.

- T1 E&M** T1 E&M is a trunking arrangement where either side can initiate actions. It is a common and reliable connection between switches and networks, computer telephony systems, or other switches. The server uses robbed bit signaling and preserves high voice quality. T1 is a standard digital transmission link in the United States. T1 E&M is an optional feature package. For more information, see [T1 E&M Protocol \(89\)](#) in [Chapter 5, Feature Packages](#).
- PRI** Primary Rate Interface (PRI) is an ISDN (Integrated Services Digital Network) configuration that functions like an enhanced T-1 circuit. ISDN is an international telecommunications standard for voice, video, and data transmission over digital lines. The LINCServer supports AT&T PRI and Nortel PRI; other forms of PRI and PRA (Primary Rate Access) are supported on a custom basis. With PRI, the LINCServer can communicate with Lucent Technologies or AT&T private branch exchanges (PBXs) or switches; other PBXs or switches are supported on a custom basis. PRI is offered as an optional feature package. For more information, see [Primary Rate Interface \(78\)](#) in [Chapter 5, Feature Packages](#).
- UnixWare** UnixWare provides the power and flexibility of the UNIX operating system with its multi-tasking, multiple-user capabilities. Customers and developers can easily tailor their system with UnixWare interfaces. At the highest level, it provides system administration capabilities, shell interfaces, programming development environments, and networking interfaces, all of which allow for customization.

**Network File System (NFS)**

Network File System (NFS), along with TCP/IP, is one of the primary software networking components of UnixWare. It allows data to be shared over a wide variety of machines, operating systems, and networks, and is a good example of interoperability.

**IRAPI**

Intuity Response Application Programming Interface (IRAPI) is a C-language interface for developing system applications for speech-processing and telephony functions. IRAPI is a Lucent Technologies API that communicates with UnixWare, the ORACLE RDBMS, and other applications. Application developers who know C-language programming can easily develop custom APIs. See [Application Development Options \(48\)](#) for more information on IRAPI.

**ORACLE RDBMS**

The ORACLE Relational Database Management System (RDBMS) is a popular database system that is supported by a wide variety of platforms. It includes SQL (Standard Query Language) software to take advantage of SQL's extensive querying and processing capabilities, and you can purchase ORACLE development tools (optional) for producing reports and developing screen-based applications.

ORACLE RDBMS is an optional feature package for the LINC/S server. However, it is the supported feature package if your system is going to use a database management system. See [ORACLE RDBMS \(75\)](#) in [Chapter 5, Feature Packages](#) for more information.

# User Interfaces

The LINCServer provides a screen user interface and a command-line user interface.

## Screen Interfaces

The screen user interface is invoked by using the **cvis\_menu** command or **sysadm** command. These commands take users into a series of menus and screens from which they can perform various system operations, such as adding users, running reports, and so forth.

## Command-Line Interfaces

The command-line user interface is initiated from the system's UnixWare prompt. Though most operations can be accomplished through the **cvis\_menu** screens, you can invoke operations from the command line. Valid and supported commands are documented in *LINCServer Administration*, 585-313-507.

## Application Development Options

Automated transactions are known as *applications*. Each application is designed and developed to meet a specific customer's need. An application *script* is a set of instructions written for the system that informs it how to carry out the automated transaction. Scripts define the flow of the call and determine what the caller hears and how the caller responds to the system.

In the standard LINCS server software, the following mechanisms are provided for developing applications:

- [TAS Script](#) (Transaction Assembler Script)
- [IRAPI](#) (Intuity Response Application Programming Interface)

### TAS Script

Transaction Assembler Script (TAS), formerly called Native Script, is an assembly-type instruction language. A sequence of instruction calls run within the generic TSM software that manages the low-level interactions required to operate the system. At any time, TAS can be used to assemble, load, change, or replace a script without affecting the other scripts running on TSM or other IRAPI programs running the system.

For more information on TAS script, see *LINCS Server Application Development with Advanced Methods*, 585-313-214.

**IRAPI**

Intuity Response Application Programming Interface (IRAPI) is a C-language interface used to develop system applications that can be directly integrated with the other features of the UnixWare system. IRAPI gives users the capabilities offered by the system script language—the ability to play and code phrases, collect touch-tone digits, answer incoming calls, generate outgoing calls, and so forth—from a C-language program.

The Resource Manager (RM) manages the resources and the Application Dispatch (AD) process controls the dispatching of applications with some help from the IRAPI library.

For more information on IRAPI, see *LINCS Server Application Development with Advanced Methods*, 585-313-214.

## Voice Response Functions

The LINCS server provides many voice-response functions as standard features. Most of these functions are accomplished with a script instruction. Some of the most commonly used functions include:

- Answering the line (answer function)
- Speaking to the caller (announce function), playing phrases and values in succession
- Connecting the caller to background music or prerecorded speech that has been installed on the system (background function)
- Disconnecting the system from the caller (disconnect function)
- Making calls (originate function), having the system place calls, as in surveys

You can purchase additional packages to extend your voice-response capabilities. For example, the Text-to-Speech feature package is an optional software package that converts ASCII text into spoken, computer-generated prompts and announcements; it is used to read and speak lines of text. Other feature packages include Call Bridge Application, which allows for third-party connections, and Call Classification Analysis, which provides a way to classify the disposition of a call (such as busy or no-answer) and then respond accordingly. Also available are different speech-recognition packages. All of these feature packages are described in more detail in [Chapter 5. Feature Packages](#).

## Speech Capabilities

The speech played during a call is the system's main interaction with the caller and is an important part of any application. All speech to be played as part of an application resides as UnixWare files in a mounted UnixWare file system.

**Note:** Speech developed for use with the LSPS II speech-processing circuit card cannot be used with the SSP circuit card, and vice versa.

There are several methods for developing speech:

- Record a professional speaker
- Purchase a custom speech package from Lucent Technologies (supported by SSP circuit card only)
- Share or import speech already recorded for another application (for the same type of speech-processing circuit card)
- Use the Text-to-Speech optional feature package. For more information on Text-to-Speech, see [Chapter 5, Feature Packages](#).

**Coding and Storage** Once speech is recorded, it must be encoded and digitized into an acceptable format. Lucent Technologies can develop custom speech packages for your system (only for use with SSP card).

Digitized speech phrases are stored as digital data. The system then assigns a phrase number and stores the phrases in talkfiles. (Note that certain talkfile numbers are reserved for various optional features.) By default, talkfiles are stored in specific places on the system. Systems that have more than 72 telephone network connections can use a second hard-disk drive (non-RAID) for speech storage.

For more information on developing speech and on talkfiles and their location, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

### Speech Channel Capacities

The default coding method used for recording speech for the SSP circuit card is adaptive differential pulse code modulation (ADPCM) using a sampling rate of 32 Kbps; the default coding method for the LSPS II circuit card is OKI ADPCM with a sampling rate of 32 Kbps.

[Table 5 on page 53](#) shows the playback and coding channel capacity for each SSP or LSPS II circuit card for the various code types. All playback numbers are for single-speed playback.

Table 5. Speech Channel Capacities per Speech Processing Circuit Card

Coding Type	SSP Playback/Record	LSPS II Playback/Record
CELP 16 Kbps	120/60 — Level of one affects the other inversely. Combined maximum cannot exceed 180.	—
ADPCM 16/32 Kbps (32 is default for SSP card)	120/120 — Level of one affects the other inversely. Combined maximum cannot exceed 120.	—
OKI ADPCM 32 Kbps (default for LSPS II card)	—	64/64 — Level of one does not affect the other. Combined maximum would be 128.
PCM (Mu-law) 64 Kbps	120/120 — Level of one affects the other inversely. Combined maximum cannot exceed 120.	64/64 — Level of one does not affect the other. Combined maximum would be 128.

## Speech Storage Capacities

The amount of space allocated for storing speech can vary, depending on your needs and your system. One speech block consists of 8KB. The number of seconds per block depends on the coding rate of the speech-encoding method that you use.

**Note:** There is wasted space whenever a speech phrase does not fill a block. For example, enhanced basic speech is stored on an SSP circuit card at 32-Kbit ADPCM, with 2 seconds of speech per block. If a phrase is less than 2 seconds, the remaining space within that speech block is not available for other use.

[Table 6 on page 55](#) shows sample speech storage capacities. Your system can have space allocated on more than one disk. You can allocate more space on this disk if you have it, or you can allocate additional space on another disk. The table shows samples for the default allocation for speech on the primary disk, which is 500 MB, and for each additional 2.5 Gbyte allocation.

Table 6. Sample Speech Storage Capacities

<b>Coding Method</b>	<b>500 MB default on primary disk (62,500 speech blocks)</b>	<b>Each additional 2 G-bytes allocated (256,000 speech blocks)</b>
16 Kbit CELP/ADPCM (4 sec. per block)	~70 hours	~290 hours
32 Kbit ADPCM (2 sec. per block) (default for SSP card)	~35 hours	~145 hours
32 Kbit OKI ADPCM (2 sec. per block) (default for LSPS II card)	~35 hours	~145 hours
64 Kbit PCM (Mu-law) (1 sec. per block)	~17.5 hours	~72.5 hours

## System Status and Monitoring

The system is set up with several mechanisms to help customers troubleshoot and correct problems with the system. This section highlights some of those mechanisms.

For more information on these commands, and related menus and screens, see *LINCS Server Administration*, 585-313-507.

### Diagnostics

The diagnose procedure is used to perform diagnostics on E1/T1, SSP, and LSPS II circuit cards or the CT bus. To fully diagnose the system hardware, diagnose all the circuit cards and the bus.

Diagnose is accomplished through the Configuration Management menu or the **diagnose card** and **diagnose bus** commands.

### System Monitor

System monitor is used to verify that each incoming telephone trunk and its associated E1/T1 circuit card is functioning properly. You may display the Voice Channel and Host Session Monitors through the System Monitor menus.

System monitor is accomplished through the System Monitor menus or the **sysmon** command.

## Trace

Tracing capabilities allow you to trace the actions of a specified process or channel. The trace capability is one way to view how a call is being handled and therefore is a useful tool when troubleshooting problems in an application.

Trace is accomplished through the Command Menu Trace Service menu or the **trace** command.

## Local System Status and Alerting

The system uses messages to alert you to problems, potential problems, or a change in the status of the system. These message are collected in the Message Log Report and can be displayed to a screen using the Message Log Report Screen. Through the use of this Message Log Report, a customer or technician can detect, report, and fix problems as quickly as possible to minimize disruption to normal service. (For the procedure to run the Message Log Report, see *LINCS Server Administration*, 585-313-507.)

# System Alarms

The Telecommunication Alarm Module (TAM) provides an intelligent monitoring and alarm system for the LINCS server hardware resources and operating system. Like most central-office telecommunications equipment, the TAM separates system maintenance and alarm messages into three classes: CRITICAL, MAJOR, and MINOR. A programmer can classify each system message into one of these three classes and can trigger a separate alarm corresponding to each alarm class. The TAM offers both visual and audible alarms. Visual indicators of an alarm are displayed on the alarm panel. Alarm information is sent over the COM2 serial port.

 **CAUTION:**

The TAM connects internally to the COM2 serial port. Note that because the connection occurs inside the chassis, the external port appears to be available. Do not make other connections to the COM2—doing so will interrupt the watchdog timer communication to the CPU and might cause a system reboot.

The resources that the TAM monitors are described in the next sections.

**Internal Chassis  
Temperatures**

Two sensors monitor the temperature of the air entering and exiting the chassis. [Table 7](#) shows the default first and second thresholds for high temperatures. If the temperature exceeds the first threshold, the TAM is set to generate a MAJOR alarm. A CRITICAL alarm is generated if the temperature continues to rise and exceeds the second threshold.

**Table 7. Temperature Thresholds**

<b>Sensor</b>	<b>First Threshold and Alarm Status</b>	<b>Second Threshold and Alarm Status</b>
Air Inlet	38C — MAJOR	49C — CRITICAL
Air Outlet	46C — MAJOR	60C — CRITICAL

## Input Voltage Levels

The input voltage levels are monitored according to the default low and high levels given in [Table 8](#). A CRITICAL alarm is generated if the voltage level falls below the low threshold or exceeds the high threshold.

**Table 8. Input Voltage Level Thresholds**

Input Voltage Sensor	Low Threshold	High Threshold
-48VA	-36.0V	-72.0V
-48VB	-36.0V	-72.0V

## Power Supplies

Sensors monitor the state of the two power supplies and the voltage levels for the four power supply outputs.

If a power supply is detected as missing or not functioning, a MAJOR alarm is generated.

Voltage levels for the four power supply outputs are monitored according to the levels given in [Table 9 on page 60](#). A CRITICAL alarm is generated if a voltage level falls below the low threshold or exceeds the high threshold.

**Table 9. Power Supply Output Voltage Thresholds**

<b>Output Voltage Sensor</b>	<b>Low Threshold</b>	<b>High Threshold</b>
+3.3V	+3.069V	+3.531V
+5V	+4.65V	+5.35V
+12V	+11.2V	+12.84V
-12V	-11.2V	-12.84V

### Cooling Fans

The TAM monitors operation of the ten cooling fans in the server, as listed below. If a sensor detects that a fan has stopped running, the TAM generates a MAJOR alarm.

- Power supply fans (2)
- Upper-tray cooling fans (5)
- Lower-tray cooling fans (3)

### CPU Status

A watchdog timer is set to monitor the operation of the central processing unit (CPU), with a refresh rate of 210 seconds. If the watchdog timer expires, indicating the UnixWare operating system has failed, a CRITICAL alarm is generated and the system is rebooted.

## Data Network Interfaces

The LINCS server supports the Transmission Control Protocol/Internet Protocol (TCP/IP) data network communication interface, through base and optional software and hardware.

TCP/IP is a process-to-process protocol. TCP/IP within the system provides high-speed data transmission over a 10/100Mbit Ethernet local area network (LAN). The server provides an integrated Ethernet LAN controller on the CPU complex. A second Ethernet LAN controller (a PMC) is optional. The Ethernet Driver package is part of the base software.

## Hardware RAID

This feature uses Hardware RAID (redundant array of independent disks), level 5, to prevent the data loss and work disruption that can occur when a hard-disk drive fails. Data and parity information are stored across multiple hard-disk drives (striping) so that should a hard-disk drive fail, data can be reconstructed completely from the remaining drives. Striping provides data redundancy while using much less storage space than that required by disk mirroring.

This feature also provides "hot-swap" capabilities, which means that system operators can replace a hard-disk drive while the system remains in full operation. When a hard-disk drive fails, a message is sent to the system operator, who can then remove the failed drive, install a new drive, and rebuild the data on the new drive, all without interrupting the system.

Hardware RAID is implemented with a PCI RAID controller PMC and associated RAID software and requires at least three SCSI hard-disk drives.

## Telephony Interfaces

The system connects to the public switched telephone network (PSTN) to communicate with external callers. This interface to the PSTN uses a digital connection to send information to callers. In some system applications, it also connects to private data networks so it can access host computer databases for information to complete certain types of calls.

The system supports asynchronous private data network interfaces. These interfaces provide connections from the system to other computing devices such as remote monitoring systems, as well as host computer databases.

Digital interfaces are established with the E1/T1 (CWB2) circuit card and its rear I/O transition card (CYD2). Supported protocols are T1 E&M, E1 CAS, and Primary Rate Interface (PRI). For descriptions of these packages, see [Chapter 5. Feature Packages](#).

In a digital configuration, the system provides connectivity through an E1/T1 circuit to digital network facilities such as a central office switch. E1/T1 connections also provide dialed number identification service (DNIS) information for automation of incoming calls for customers with multiple 800 or 900 numbers. If your system has PRI, E1/T1 connections also provide automatic number identification (ANI).

See *LINCS Server Communication Development*, 585-313-213, for more information on digital interfaces. For more information on digital connection switch settings, see *LINCS Server Administration*, 585-313-507.

## Terminal Emulation

The following terminal types are supported for administrative screens under the UnixWare operating system:

- AT386 (console)
- 4410 (Terranova or PROCOMM PLUS emulations)
- 513 (Terranova emulation)
- 4425
- 715 BCT, 605
- Sun terminal
- Sun shell tool

## Database Environment

The LINC Server uses the ORACLE Relational Database Management System (RDBMS) 7.3.2 software to provide a database system and management tools. However, because not all systems require database functionality, the ORACLE RDBMS is an optional, rather than standard, feature of the server.

Although ORACLE RDBMS is optional, it is the supported feature package if your system is going to need a database management system. Note that if you do not install ORACLE RDBMS, you must install the Intuity CDH Stub feature package to handle the call data that would otherwise be stored in an ORACLE database. Both ORACLE RDBMS and Intuity CDH Stub are described in [Chapter 5. Feature Packages](#).

# 5 Feature Packages

## Overview

A *feature package* is software and/or hardware used to enhance the operation or capacities of the base system. Feature packages are not required for the basic server and voice system to function and are not supplied with the base system. Feature packages are purchased separately from the base software.

This chapter describes each feature package available with the LINCS server and states software and hardware requirements. Note that the software and hardware requirements assume that the base software and hardware required for the platform to run are already installed. Feature packages are presented in alphabetical order.

- [Asynchronous Host Interface Toolkit](#)
- [Call Bridge Application](#)
- [Call Classification Analysis](#)
- [CDH Stub](#)
- [Data Collection Toolkit](#)

- [Dial Pulse Recognition](#)
- [E1 CAS Protocol](#)
- [FAX](#)
- [FlexWord Toolkit](#)
- [LSPS Set](#)
- [ORACLE RDBMS](#)
- [Primary Rate Interface](#)
- [Speech Recognition Packages](#)
  - ~ [WholeWord Speech Recognition](#)
  - ~ [FlexWord Speech Recognition](#)
- [T1 E&M Protocol](#)
- [Text-to-Speech](#)

## Asynchronous Host Interface Toolkit

The Asynchronous Host Interface Toolkit provides operational software, source code, and documentation to develop system applications that access host computers using an asynchronous data communication interface.

The asynchronous host interface toolkit offers these functions:

- Sends messages of application-specified content to the remote host
- Supplies host response data to the application
- Accepts unsolicited messages from the host and makes them available for application processing
- Multiplexes messages from multiple channels onto the asynchronous line
- Performs normal transaction processing functions while handling multiple asynchronous messages on a fully loaded system

One asynchronous communication port, labeled COM1, is provided as standard equipment and is available to use. A second port, COM2, is used only for the Telecom Alarm Module.

 **CAUTION:**

The TAM connects internally to the COM2 serial port. Note that because the connection occurs inside the chassis, the external port appears to be available. Do not make other connections to the COM2—doing so will interrupt the watchdog timer communication to the CPU and might cause a system reboot.

[Table 10](#) lists asynchronous host interface toolkit capacities.

**Table 10. Asynchronous Host Interface Toolkit Capacities**

Item	Maximum Number	Comments
Physical asynchronous connections allowed to the system	1 (9 with the asynchronous 8-port circuit card)	Two connections exist (COM1 and COM2), but COM2 is connected to the Telecom Alarm Module. See cautionary text above.
Host systems to which asynchronous connections may be made	2	Can be increased with asynchronous 8-port circuit card and custom modification
Multiplexed channels (sessions) allowed per link	24	48 channels is the maximum number per system (two links)
Transfer rate, in Kbits/second (Kbps)	28.8	
Message size, in characters	127	
Messages recognized by the system per link, per second	2	At 19.2-Kbps with capacity reserved for normal processing functions

## Call Bridge Application

The Call Bridge Application feature package allows an application to place an outbound call to a third party and maintain the connection while the caller interacts with the third party. When the third party hangs up, the script continues with the next action step. The call bridge feature is used most often when call transfer is not available on the private branch exchange or central office.

## Call Classification Analysis

The Call Classification Analysis (CCA) feature package allows application developers to classify the disposition of originated and transferred calls. Some of the dispositions include busy, answered, ring no-answer, and reorder. CCA provides *intelligent transfer*, a type of call transfer where the application dials the third-party number to start the transfer and then listens to the call progress signals to determine if the line is busy, ringing, or has been answered. CCA has a rudimentary voice-energy detector for identifying answered calls.

### Hardware Requirements

At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2) must be installed and operational. The LSPS II speech-processing circuit card does not support CCA.

## CDH Stub

The CDH (Call Data Handling) Stub feature package is required if the ORACLE Relational Database Management System (RDBMS) 7.3.2 software is not installed on the LINCServer. ORACLE RDBMS is the supported package for any system that must have database functionality. If the system does not need database functionality, CDH Stub must be installed to dispense with the call data in the message queue that would otherwise be stored in an ORACLE database.

## Data Collection Toolkit

The Data Collection Toolkit feature package is available on a custom basis only. This toolkit provides support for collecting speech samples by authorized Lucent Technologies affiliates who then build custom speech recognition models for the collected data. This data is also forwarded and archived at Lucent Technologies for future speech modeling; such data collection and development is key for producing and refining WholeWord speech recognition vocabularies.

Developing a vocabulary for WholeWord speech recognition requires a large number of speech samples for each utterance or word. This toolkit provides the proper method of speech-sample collection. Because of the need for extremely uniform and accurate sample-taking, this package is only provided to certain development partners who agree to collect speech samples to further enhance their WholeWord speech recognition accuracy.

This tool may also be used to create custom vocabulary sets outside of the list of words that are included in the standard vocabulary set ("zero" through "nine", "yes", "no", and "oh"). However, custom vocabulary is still time consuming and more costly to develop than a FlexWord vocabulary.

## Dial Pulse Recognition

The Dial Pulse Recognition (DPR) feature package allows users with rotary telephones, or push-button telephones that generate dial pulses, to interact with system applications. DPR processes the caller input by using a recognizer that relies on the speech and signal processing (SSP) circuit card. (Touch-tone input requires resources from the telephony interface circuit card.) DPR can be added on a channels per system basis to all supported digital interfaces.

DPR recognizes the digits on a rotary phone, which consists of 0 through 9 but not the asterisk (\*) or pound sign (#). Barge-in, also referred to as "dial-through," is also supported and allows callers to enter dial-pulse input during the system prompts; callers do not have to listen to the entire prompt before responding.

DPR can work simultaneously with either WholeWord or FlexWord speech recognition, although the WholeWord and FlexWord recognizers are not able to work together. Combining DPR with a speech recognizer gives the caller the choice of using dial pulse or touch tone input, as well as spoken input. If the standard recognition types with this feature package do not meet your needs, Lucent Technologies can develop custom recognition types for you. For additional information, contact your Lucent Technologies representative.

For more information, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

#### Hardware Requirements

At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2) must be installed and operational. The LSPS II speech-processing circuit card does not support Dial Pulse Recognition.

## E1 CAS Protocol

The E1 channel associated signaling (CAS) protocol feature package works with the E1/T1 (CWB2) circuit card and provides E1 signaling types. This protocol is used with the DEFINITY switch and is compatible with CAS protocols in Mexico.

For more information on the E1 CAS protocol, see *LINCS Server Communication Development*, 585-313-213.

#### Hardware Requirement

At least one E1/T1 (CWB2) circuit card must be installed and operational.

## FAX

With the Next Generation FAX feature package, you can send and receive faxes. IRAPI commands are used to control the process.

For information on using IRAPI for FAX, see *LINCS Server Application Development with Advanced Methods*, 585-313-214.

### Hardware Requirement

At least one SSP (CWB1) circuit card must be installed and operational. Note that the LSPS II circuit card does not support the FAX feature package.

## FlexWord Toolkit

The FlexWord Toolkit feature package provides enhancements to the FlexWord recognition feature package, for use with the SSP speech-processing circuit card. (See [FlexWord Speech Recognition \(page 86\)](#)). The FlexWord Toolkit makes it possible to separate FlexWord vocabularies from the FlexWord Recognition package so that you can create your own words, wordlists, and vocabularies. You can also verify and fine-tune the phonetic definitions of the words in the wordlists, and package and install the customer-defined vocabularies.

The FlexWord Toolkit can operate with the system still running; you do not need to shut down the voice system to run the toolkit.

**Note:** It is recommended that you use the Text-to-Speech (TTS) feature package (for the SSP circuit card) when you are developing a U.S. English FlexWord vocabulary to ensure that errors are not introduced while editing the FlexWord phoneme strings. This checking helps avoid minor errors in FlexWord phoneme strings that can cause a large degradation in recognition accuracy.

For more information on the FlexWord Toolkit, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

### Hardware and Software Requirements

- At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2), installed and operational
- ASP driver, installed and operational
- Text-to-Speech feature package

## LSPS Set

The LSPS Set feature package includes the software necessary to use the LSPS II speech-processing circuit card for speech playback and recording, automatic speech recognition (WholeWord and FlexWord), and Text-to-Speech. The package is installed as a set and includes the Software Development Kit (SDK). The SDK contains the header files and libraries for the LSPS application program interface (API), code examples, and tools to assist with code development and testing.

See also [Speech Recognition Packages \(page 82\)](#) in this chapter for information on the speech-processing capabilities of the LSPS II circuit card.

### Documentation

The LSPS Software Development Kit comes with its own documentation. The SDK documentation resides on the system at **`/usr/lsp/doc/pdf/sdk.pdf`**

### Hardware Requirement

At least one LSPS II circuit card (6UB5) and one E1/T1 circuit card (CWB2) must be installed and operational.

## ORACLE RDBMS

The ORACLE Relational Database Management (RDBMS) System 7.3.2 software package allows a LINC user to establish and maintain a local ORACLE RDBMS on the system. This package is the supported package for systems that need a database management system. It includes optional ORACLE SQL\*NET TCP/IP software for establishing remote database connectivity.

**Note:** The Intuity CDH Stub software package is required when the ORACLE RDBMS package is not installed. The CDH Stub software manages the Call Data Handling traffic data that would otherwise be stored in an ORACLE database. The CDH Stub package is included on the LINC Base CD-ROM.

In addition to the ORACLE RDBMS package, you can purchase the optional development tools package, described in [ORACLE Development Tools](#) below.

For complete information on the delivery media for the different ORACLE packages, see [ORACLE RDBMS Software \(page 38\)](#) in [Chapter 3, Software](#).

## ORACLE Development Tools

The ORACLE development tools package contains the following tools:

- SQL\*FORMS/MENU — for developing screen-based ORACLE applications (ORACLE Tools CD-ROM)
- ORACLE\*ReportWriter — for developing ORACLE applications to produce reports from the database (ORACLE Tools CD-ROM); see [ORACLE Reports](#) below for information on the kinds of reports available
- PRO\*C — for developing ORACLE applications in the C programming language (ORACLE PRO\*C CD-ROM)

### ORACLE Reports

ORACLE RDBMS reports make it possible to create a compiled list of system statistics, including the number of calls made to the system, transfer attempts, or call information for a specific day. The Reports Administration screen gives you access to system reports, including system call classification reports, call data detail reports, call data summary reports, message log reports, and traffic reports. The system enables you to tailor each report to your needs and specifications.

[Table 11](#) shows storage capacities for system reports.

**Note:** These capacities assume that the database has been sized properly for call volume and call data events.

**Table 11. Storage Capacities for Reports**

<b>Report</b>	<b>Maximum Storage Capacity</b>
Call Data Detail Report	7 days of data (data is sorted from the current day plus data from 7 previous days, then summarized)
Call Classification Report	365 days of data
Call Data Summary Report	7 days of data
Traffic Summary Report	7 days of data
Event Log Messages	500–20 Kbps messages (compressed)

## Primary Rate Interface

The Primary Rate Interface (PRI) feature package allows the system to communicate directly with a Lucent Technologies or AT&T private branch exchange or switch using the AT&T ISDN Primary Rate Interface. Nortel PRI is also supported. Other forms of PRI and PRA (Primary Rate Access), as well as other PBXs and switches, are supported on a custom basis. The ISDN PRI is a digital interface and only supports E1 or T1 line usage.

### Supported Switches

The ISDN PRI package can be used with the following switches:

- 4ESS
- 5ESS — Note that 5ESS does not support Non-Facility Associated Signaling (NFAS) for AT&T PRI.
- DEFINITY — G3i, System 85, and System 75 (not used by the LINCS server)
- Phase 1 or Phase 2 Service Node Controller
- ISDN Network Controller
- Nortel DMS-100 — Requires the Nortel NIS A211-1PRI package

## PRI Versions

Two different versions of the primary rate interface feature package can be used with the server:

- ISDN Primary Rate Interface package

This version of PRI supports ISDN-PRI at both the E1 and T1 rate and supports the E1/T1 circuit card (CWB2). It supports ISDN-PRI interfaces at the TAS Script, IRAPI, and General Purpose PRI library levels.

- Advanced PRI package

This version requires the preceding ISDN Primary Rate Interface version and provides a developer's toolkit for more advanced PRI services.

This package includes a developer's guide and sample applications that show how to go beyond the built-in features of the ISDN Primary Rate Interface version. Also included are sample applications that extend the IRAPI library to receive or send additional Information Elements (IEs), exchange additional information messages with the switch, and use the General Purpose PRI library to more flexibly exchange messages with the switch. Note that this package only needs to be installed on developer machines; it does not need to be installed on customer machines that are running General Purpose PRI applications.

Due to the potential for signaling errors or fraud, and the development expertise required, this package is limited to Lucent Technologies or others with a need for this level of control. Development organizations within these companies may use the Advanced PRI version to develop other add-on applications that meet specific customer needs.

**Hardware and Software Requirements**

- At least one E1/T1 (CWB2) circuit card must be installed and operational.
- At least one LSPS II or SSP circuit card is required for speech coding or playback with all E1/ T1 circuit cards.
- Intuity ISDN Primary Rate Interface package — The Advanced PRI package is optional, but it requires the ISDN PRI package.

**Documentation**

Documentation for the PRI feature package is a separate document that is included with the package.

**PRI Interface Capacities**

[Table 12 on page 81](#) shows primary rate interface capacities.

Note that AT&T PRI on 5ESS requires a separate D-channel for each T1 (for example, 13 23B+D can be used).

Table 12. Primary Rate Interface Capacities

Component	Maximum Number	Comments
Data channels on CWB2, per system	13	For example, up to 13 23B+D interfaces are supported
Supported voice channels per system at the T1 rate	311	311 B-channels are supported when using 1 D-channel (for example, 311B +D) <i>or</i> 299 B-channels are supported when using 13 23B+D interfaces  Depends on the capability of the switch. Not all switches support all PRI configurations.
Supported voice channels per system at the E1 rate	390	From 1 to 13 30B+D interfaces are supported.

For more information on ISDN PRI, see *LINCS Server Communication Development*, 585-313-213. For more information about Advanced PRI, consult a Lucent Technologies sales representative.

## Speech Recognition Packages

Speech recognition packages allow the system to recognize and respond to spoken responses from the caller. For those who want to accommodate callers using a rotary telephone, speech recognition packages provide a way to interact with applications without requiring touch-tone input. Applications using speech recognition can differ greatly. Two methods of providing this capability are offered:

- [WholeWord Speech Recognition](#) — based on comparing entire spoken words
- [FlexWord Speech Recognition](#) — based on comparing phonemes (units of sound)

Both WholeWord and FlexWord can be added on a channels per system basis.

Speech-recognition packages require speech-processing circuit cards. The LINC Server offers two speech-recognition circuit cards, the SSP and the LSPS II. Although the two types of circuit cards use different speech-recognition software packages (see [Hardware and Software Requirements \(page 84\)](#)), the SSP software and the LSPS II software both supply the features of WholeWord and FlexWord.

**Note:** Speech recognition functions cannot be shared across the two types of speech-processing circuit cards (SSP and LSPS II); all speech-recognition functions must be assigned either to the LSPS II card or to the SSP card, but not to both.

## WholeWord Speech Recognition

WholeWord speech recognition provides a *whole word* method of recognition by comparing an entire spoken word with a statistical model of the same word spoken by thousands of different people.

WholeWord speech recognition is well suited to tasks where the required input is digits or “yes” and “no” responses. WholeWord custom vocabulary packages are also available. If you have special words, such as “checking” or “savings,” that need to be recognized, Lucent Technologies can develop the software to recognize those requested words. Lucent Technologies collects speech samples of the requested words and creates statistical models of each word.

If you require a larger customized vocabulary, FlexWord speech recognition may be more appropriate. See [FlexWord Speech Recognition](#) below for more information on FlexWord. Both WholeWord and FlexWord input can be used in the same application.

All WholeWord speech recognition language packages support connected digit recognition and barge-in.

**Hardware and  
Software  
Requirements****SSP Circuit Card Requirements**

- At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2), installed and operational
- ASP driver, installed and operational
- WholeWord ASR Base feature package
- WholeWord Recognition feature package — US English

**LSPS II Circuit Card Requirements**

- At least one LSPS II circuit card (6UB5) and one E1/T1 circuit card (CWB2), installed and operational
- LSPS Set

## WholeWord Capacities

[Table 13](#) lists WholeWord speech recognition capacities.

**Table 13. WholeWord Speech Recognition Capacities**

Item	Maximum Number
Channels of simultaneous speech recognition per speech processing card	Dedicated to WholeWord: <ul style="list-style-type: none"> <li>• SSP — 15 without barge-in 12 with play and barge-in in use</li> <li>• LSPS II — 30</li> </ul>
Connected digits recognized (using standard recognition types)	Application dependent; recognition accuracy improves significantly if fixed length is used. <ul style="list-style-type: none"> <li>• SSP — 15</li> <li>• LSPS II — 30</li> </ul>

For more information on WholeWord speech recognition capacities, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

## FlexWord Speech Recognition

FlexWord speech recognition provides a different method of constructing and recognizing speech vocabularies than does WholeWord. The FlexWord speech recognition package relies on phonemic recognition.

The English language is made of approximately 40 phonemes. These phonemes are units of sound that, when strung together in particular orders, form recognizable words. The word “sales,” for example, consists of four phonemes: “s-A-l-z.” The FlexWord speech recognition package operates on this principle so that custom vocabularies can be created much more easily and cheaply than if done with WholeWord technologies.

Because FlexWord vocabularies are much easier and less time consuming to construct, customers have a cost-effective method of designing large, customized vocabularies.

The system also incorporates FlexWord technology improvements, namely, word spotting and phrase screening, into the FlexWord Speech Recognition package. Word spotting provides the ability to search past extraneous speech input during recognition. Phrase screening provides the ability to reject speech that is outside the FlexWord vocabulary.

**FlexWord Toolkit**

The FlexWord Toolkit feature package provides enhancements to the FlexWord recognition feature and enables customers to define application-specific vocabularies. For more information, see [FlexWord Toolkit \(page 73\)](#) in this chapter. Note that FlexWord Toolkit is available for use only with the SSP circuit card.

**Hardware and Software Requirements****SSP Circuit Card Requirements**

- At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2), installed and operational
- ASP driver, installed and operational
- FlexWord Recognition Base feature package
- FlexWord Recognition feature package — US English

**LSPS II Circuit Card Requirements**

- At least one LSPS II circuit card (6UB5) and one E1/T1 circuit card (CWB2), installed and operational
- LSPS Set

## FlexWord Capacities

[Table 14](#) lists FlexWord speech recognition capacities.

**Table 14. FlexWord Speech Recognition Capacities**

Item	Maximum Number
Words in a wordlist	500 is the recommended maximum; however, the SSP circuit card can accommodate up to 2000 words. The LSPS II card is tunable and can process larger wordlists with up to 10,000 words. Note that performance is affected with larger wordlists.
Wordlists	200
Channels of simultaneous speech recognition per card	<p>Approximate counts when card is dedicated to FlexWord and is using wordlists with under 500 words:</p> <ul style="list-style-type: none"> <li>SSP — 15 without barge-in 12 with play and barge-in in use</li> <li>LSPS II — 24 (32 with most wordlists having under 50 words; 15 for wordlists having around 2000 words)</li> </ul>

For more information on the FlexWord speech recognition feature package, and on tuning the LSPS II circuit card, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

## T1 E&M Protocol

The T1 E&M protocol feature package supports the E1/T1 (CWB2) circuit card and provides T1 signaling types and the following three addressing types:

- DTMF (dual tone multi-frequency)
- MF (multi-frequency)
- Dial pulse

For more information on this feature and other features that use the T1 E&M protocol, see *LINCS Server Communication Development*, 585-313-213.

### Hardware Requirement

This package requires that at least one E1/T1 (CWB2) circuit card be installed and operational.

## Text-to-Speech

The Text-to-Speech (TTS) feature package allows you to include speech in an application using ASCII text as input. The text is converted to synthesized speech via speech-processing circuit cards, either the SSP circuit card (CWB1) or the LSPS II circuit card (6UB5). Speech is available in U.S. English, spoken in a male voice; the Text-to-Speech package for the LSPS II circuit card also offers female voice. The text can be used for text retrieved from a database or host, or for prompts, and can be spoken in an application with synthesized speech.

TTS is an alternative to using prerecorded phrases for voice response. It can be essential in some applications that must speak dynamic text (for example, names and addresses) and that have large amounts of speakable text (for example, electronic news). Without TTS, these types of applications can require many hours of recording and much disk space. These applications can also use TTS for static text for consistency.

The TTS technology can distinguish between different classes of text, such as zip codes and telephone numbers, and will pronounce the text string in the appropriate spoken format. When constructing speech, parameters such as pitch and duration are adjusted to make the outcome sound more natural. In addition, the ASCII text is preprocessed to expand abbreviations. For example, "Dr." would be expanded to "doctor" or "drive," depending on the context.

**Note:** TTS functions cannot be shared across the two types of speech-processing circuit cards (SSP and LSPS II); all TTS functions must be assigned either to the LSPS II card or to the SSP card, but not to both. Special ASCII control codes used for one type of card might not work with the other type of card.

Text-to-Speech can be added on a channels per system basis. For more information on this feature package, see *LINCS Server Speech Development, Processing, and Recognition*, 585-313-212.

**Hardware and Software Requirements****SSP Circuit Card Requirements**

- At least one SSP circuit card (CWB1) and one E1/T1 circuit card (CWB2), installed and operational
- ASP driver, installed and operational
- Intuity Text-to-Speech package

**LSPS II Circuit Card Requirements**

- At least one LSPS II circuit card (6UB5) and one E1/T1 circuit card (CWB2), installed and operational
- LSPS Set (includes the LSPS Text-to-Speech Module for North American English)

**Capacities**

The maximum number of concurrent instances of TTS on one dedicated speech-processing circuit card:

- one SSP card — 60
- one LSPS II card — 64 (20 with FlexWord and/or WholeWord assigned to the same card)

# 6 Requirements and Specifications

## Overview

This chapter provides information on the requirements and specifications that each LINCS server system requires for proper operation:

- [Platform Specifications](#) — Power requirements, space requirements, and environmental considerations
- [Telephony Interface Specifications](#) — General telephony specifications and specifications for T1 E&M, E1 CAS, and ISDN-PRI type configurations
- [Data Communications Specifications](#) — General specifications for asynchronous connections

## Platform Specifications

This section presents the power and space requirements for the LINCS server and provides temperature and humidity guidelines.

**Power Requirements**

Note the following power requirements for the LINCS server:

- Each server, modem (optional), and printer (optional) should be located near a power source.
- Communication cables must be kept separate from power cables. Installation of communication and power cables must be in accordance with National Electrical Codes (NEC) and country-specific requirements.

[Table 15](#) shows the power that must be available for each server.

**Table 15. Power Requirements**

<b>Attribute</b>	<b>LINCS Server</b>
Voltage	-48 Volts DC
Current	16 Amps DC
Maximum power output	500W
Heat dissipation	2700 BTU/hr

[Table 16](#) shows the power that must be available for each optional monitor.

**Table 16. Power Requirements for Optional Monitor**

Attribute	Monitor
Voltage	90–264 Volts AC auto sensing
Frequency	50–60 Hertz (Hz)
Phase	Single
Power consumption	80 Watts maximum
Input cords	NEMA 5-15P
Unit input receptacles	IEC-320 inlet

## Space Requirements

[Table 17](#) shows the dimensions of the LINCS server:

**Table 17. Space Requirements for LINCS Server**

Height	Width	Depth
66.7 cm (26.25 in.)	43.8 cm (17.25 in.)	42.5 cm (16.75 in.) plus 5 cm (2 in.) for SCSI terminator guard on back of server

**Weight** The weight of the server will vary according to the components installed, ranging from approximately 99 lbs to 113 lbs. For example, a server weighs approximately 99 lbs (44.91 kg) when equipped with all standard hardware (includes three hard-disk drives), one E1/T1 circuit card with a companion rear I/O card, and two speech processing circuit cards.

**Environmental Considerations** Locate each server in an area that follows the temperature and humidity requirements shown in [Table 18](#).

**Table 18. Temperature and Humidity Requirements**

Condition	Operating State	Nonoperating State
Temperature	+10 to +38°C (+50 to+100°F)	-40 to +60°C (-40 to+140°F)
Relative humidity	20 to 55%, 20 to 80% short-term	5 to 95%, noncondensing

## Telephony Interface Specifications

The LINCServer supports up to 144 code and play voice channels and up to 312 channels for bridging applications.

**Note:** If your system is going to use more than 144 channels, you must tune the NCHANNELS parameter accordingly. Use the following commands: **`/etc/conf/bin/ldtune`** and **`/etc/conf/bin/ldbuild -B`**

[Table 19](#) through [Table 21 on page 103](#) show the various digital interface specifications for all E1/T1 protocols.

## General Specifications

**Table 19. Digital Telephony Interface General Specifications**

Attribute	Specification for CWB2/CYD2 Circuit Cards
Trunk types	T1 E&M, ISDN-PRI
Physical connector	RJ-48C
Line impedance	100 Ohms
FCC registration	AS5USA-27438-XD-E

1 of 5

**Table 19. Digital Telephony Interface General Specifications**

Attribute	Specification for CWB2/CYD2 Circuit Cards
Safety approval	UL-1459 and UL-1950 for US markets
Clock rate	1.544 Mb/seconds +/- 32 ppm
Pulse width	323 (nominal)
Electrical compliance	ANSI T1.403, T1.408
Clock/timing/jitter compliance	AT&T TR62411, Stratum 4 enhanced
Framing	D4, ESF
Line coding/zero suppression	AMI/ZCS, AMI/B8ZS
Signal level	3.0V nominal peak to peak up to 655 feet (A CSU is required if the distance to the DS-X is greater than 655 feet.)
Remotely initiated loopback	via CSU only
Recommended CSU type	Paradyne (PEC 21581-ESF), Verilink 551VST List 2, or equivalent. (A CSU is required for long haul connections, wet loop connections, or to provide power line and/or other types of primary protection.)

*2 of 5*

Table 19. Digital Telephony Interface General Specifications

Attribute	Specification for CWB2/CYD2 Circuit Cards
Input gain	
~ DS-1 to CTBus, non-bridging	0dB nominal*
~ DS-1 to CTBus, bridge to analog port	0dB
~ DS-1 to CTBus, bridge to digital port	0dB
Output gain	
~ CTBus to DS-1, non-bridging	0dB
~ CTBus to DS-1, bridge to analog port	+3dB nominal*
~ CTBus to DS-1, bridge to digital port	0dB nominal*
DTMF generation	
~ Power level	-7dBm per tone nominal*
~ Timing	70mS ON, 70mS OFF nominal*
<i>3 of 5</i>	

Table 19. Digital Telephony Interface General Specifications

Attribute	Specification for CWB2/CYD2 Circuit Cards
DTMF detection	
~ Power levels, frequency deviation, twist, duration	Nominally comply with Bellcore LSSGR section 6.* With DTMF muting enabled, the DTMF receiver's minimum ON time for detection is increased and may not meet LSSGR requirements. DTMF muting does not impact LSSGR compatibility during call setup.
~ Number of DTMF receivers	24
MF generation	
~ Power level	-8Bm per tone nominal*
~ Timing	70mS ON, 70mS OFF nominal*
~ KP timing	100mS ON, 70mS OFF nominal*
MF detection	
~ Power levels, frequency deviation, twist, duration	Nominally comply with Bellcore LSSGR section 6*
~ Number of MF receivers	24

4 of 5

Table 19. Digital Telephony Interface General Specifications

Attribute	Specification for CWB2/CYD2 Circuit Cards
Call progress tone generation	
~ Power level	-20dBm per tone nominal*
~ Cadence timing	<ul style="list-style-type: none"> <li>• Busy tone — 500mS ON, 500mS OFF nominal*</li> <li>• Ring tone — 2 S ON, 4 S OFF nominal*</li> <li>• Reorder tone — 250mS ON, 250mS OFF nominal*</li> </ul>
Dial pulse generation timing	60mS ON, 40mS OFF, 650mS interdigit time nominal*
Supported protocols	<ul style="list-style-type: none"> <li>• T1 E&amp;M</li> <li>• AT&amp;T T1 ISDN-PRI</li> <li>• Nortel NIS A211- ISDN PRI</li> <li>• E1 CAS</li> </ul>

5 of 5

\* Can be tuned through digital switch interface packages.

## Specifications for T1 E&M

**Table 20. T1 Telephony Interface Specifications for T1 E&M Type Configurations**

Attribute	Specifications for CWB2/CYD2 Circuit Cards
DS-1 framing	D4
DS-1 line coding	AMI-ZCS
Protocol	Robbed-bit (A-bit only) 4-wire E&M
Alerting in/out	Wink/wink
Wink generation	230 mS nominal (tunable:* 20–2500 msec)
Wink detection range	100–350 mS
Addressing (outgoing)	DTMF (touch tone) or MF, 15-digit maximum

1 of 2

**Table 20. T1 Telephony Interface Specifications for T1 E&M Type Configurations**

Attribute	Specifications for CWB2/CYD2 Circuit Cards
Addressing (incoming)	DTMF (touch tone) or MF, 16-digit maximum
~ DNIS digits	Will wait for up to 15 digits nominally*. Can also be configured to not wait for DNIS digits.
~ Initial digit timer	Will wait for up to 4 seconds for first digit. Can also be configured to not wait for digits.
~ Interdigital timer	Will wait for up to 2 seconds between digits.
ANI capacity	Not supported
Transfer capability	Not supported
<i>2 of 2</i>	

\* Can be tuned through digital switch interface packages.

## Specifications for ISDN-PRI

**Table 21. Digital Telephony Interface Specifications for ISDN-PRI Type Configurations**

Attribute	Specifications for CWB2/CYD2 Circuit Cards
DS-1 framing	For T1 rate, ESF (recommended) or D4, CEPT for E1
DS-1 line coding	B8ZS (with ESF framing only) or HDB3 (with CEPT framing only) ZCS (with D4 framing only)
B-channel capacities	Without NFAS <sup>*</sup> : 23 B+D per board for T1, 30 B+D per board for E1  With NFAS: 47B+D, 71B+D, 95B+D, and so forth in increments of 24, up to 311B+D  Not all switches support all configurations
D-channel capacities	Multiple D-channels are supported up to the maximum number of E1/T1 boards (13 channels for 13 T1 boards, 30 channels for E1 boards)
Interface ID	1 (for card with a D-channel, not selectable) 2–13 (for card without a D-channel)
DNIS capacity	0–15 digits

1 of 2

**Table 21. Digital Telephony Interface Specifications for ISDN-PRI Type Configurations**

Attribute	Specifications for CWB2/CYD2 Circuit Cards
ANI capacity	0–15 digits
D-channel backup	Not supported
Transfer capability	Not supported
<i>2 of 2</i>	

\* Non-Facility Associated Signaling

For additional information on T1 telephony interfaces, see *LINCS Server Communication Development*, 585-313-213.

## Specifications for E1 CAS

**Table 22. Digital Telephony Interface Specifications for E1 CAS**

Attribute		
Line signaling	System R2	Compatible with ITU Q.421
Register signaling	Multifrequency-compelled signaling (supports forward groups I, II, III and backward groups A, B, C)	Compatible with ITU Q.440
Called number (DNIS)	Maximum number of 16 digits received	Expected number of DNIS digits is settable by the user
Calling number (ANI)	Maximum number of 16 digits received or translated	<p>Can be programmed to request/ignore ANI from network</p> <p>Can be programmed to send originating ANI if requested by the network on a per-system or a per-call basis</p>
Protocol variations	Table driven line and register signaling	Supports country-specific variations of ITU Q.421 and Q.440

For additional information on E1 CAS, see Chapter 3, “Digital Telephony Interfaces,” in *LINCS Server Communication Development*, 585-313-213.

## Data Communications Specifications

[Table 23](#) details the data communications characteristics for the LINCS server.

**Table 23. Data Communications Characteristics**

Attribute	Asynchronous Specifications
Ports	1 (up to 9 with asynchronous 8-port circuit card)
Ports available for host communication	1 (COM1) — The Telecom Alarm is connected internally to the second port (COM2) which precludes it from external use. See <a href="#">System Alarms (page 57)</a> in <a href="#">Chapter 4, Features</a> , for details.
Simultaneous host sessions (LUs)	N/A
Mode	Full duplex

1 of 2

**Table 23. Data Communications Characteristics**

<b>Attribute</b>	<b>Asynchronous Specifications</b>
Protocols	Xon/Xoff
Data rates	To 28.8 Kbps
Interface	EIA-232C
<i>2 of 2</i>	

# A Documentation Guide

## Overview

The System Description document is designed to supplement all other documents in the LINCS server document set. This appendix provides a list of the documentation that supports the LINCS server system ([Table 24 on page 110](#)), followed by a more detailed description of each document. Documents cover the following topics:

- [System Description](#) — General description of the hardware and software packages (*LINCS Server System Description*)
- [Installation](#) — Installing the LINCS server and peripherals (*LINCS Server New System Installation*)
- [Administration](#) — Administering the system and common operations (*LINCS Server Administration*)
- [Maintenance](#) — Installing and replacing hardware and software (*LINCS Server Maintenance*)
- [Troubleshooting, Alarms, and Common Procedures](#) — Online help system for troubleshooting and diagnostics; includes common system procedures (*LINCS Server System Reference*)

- [Application Design and Development](#) — References for developing speech applications (*LINCS Server Speech Development, Processing, and Recognition* and *LINCS Server Application Development with Advanced Methods*)
- [Speech and Communication Development](#) — Reference for developing communication interfaces (*LINCS Server Communication Development*)
- [Database Management](#) — Documentation set for ORACLE RDBMS
- [UnixWare Operating System](#) — Documentation set for Unixware

# Documentation Set Listing

Each document in the LINCS server set is listed in [Table 24](#). See the section [Documentation Set Descriptions \(page 112\)](#) for a more detailed description of each document.

**Table 24. Supporting Documents for LINCS Server**

<b>Title</b>	<b>Document Number</b>	<b>Comcode</b>
<i>LINCS Server System Description</i>	585-313-209	108599234
<i>LINCS Server New System Installation</i>	585-313-127	108599226
<i>LINCS Server Administration</i>	585-313-507	108599200
<i>LINCS Server Maintenance</i>	585-313-126	108599218
<i>LINCS Server System Reference</i>	585-313-210	108599242
<i>LINCS Server Speech Development, Processing, and Recognition</i>	585-313-212	108600313
<i>LINCS Server Communication Development</i>	585-313-213	108600321
<i>LINCS Server Application Development with Advanced Methods</i>	585-313-214	108600339

**1 of 2**

**Table 24. Supporting Documents for LINC Server**

<b>Title</b>	<b>Document Number</b>	<b>Comcode</b>
LINC Server Documentation on CD-ROM	585-313-806	108599267
ORACLE On-Line Documentation CD-ROM	585-310-920	108242942
ORACLE 7.3 Server Custom Library Set	N/A	108242819
ORACLE SQL*Net 2.3 Custom Documentation Set	N/A	108242934
UnixWare 2.1.2 User Documentation	N/A	108288622

*2 of 2*

# Documentation Set Descriptions

## System Description *LINCS Server System Description*

Document number 585-313-209

Issue 2

October 1999

Provides a technical description of the LINCS server. Includes information on hardware, software, features, and feature packages, as well as technical requirements and specifications. The appendix contains a documentation guide.

This document is intended primarily for sales, marketing, and technical support, or anyone looking for basic information about the functionality of the server. Other audiences include training and development.

## Installation

### *LINCS Server New System Installation*

Document number 585-313-127

Issue 2

October 1999

Describes procedures to unpack and install a LINCS server (that has been assembled loaded, and tested at the factory), connect peripherals, make cable connections, and perform initial administration and acceptance testing of the system. Appendices include troubleshooting procedures, pinouts, and a system installation checklist.

This document is intended primarily for on-site technical personnel who are responsible for installing the system and performing initial administration and acceptance testing.

## Administration

### *LINCS Server Administration*

Document number 585-313-507

Issue 2

October 1999

Provides the procedures needed to perform full system administration for the UnixWare operating system, the voice system, feature packages, switch interfaces, databases, peripherals, and common operations. The appendix contains a summary of commands

This document is intended primarily for system administrators. Other audiences include field support and helpline personnel.

**Maintenance***LINCS Server Maintenance*

Document number 585-313-126

Issue 2

October 1999

Provides a single source of information and procedures needed to maintain a LINCS server. Topics include getting inside the computer, installing or replacing circuit cards, replacing the hard disk drive and other components, and installing software (base system, LINCS server, ORACLE, LSPS II, and feature packages). Appendices include information on component ordering numbers, how to build a system, and disaster recovery.

This document is intended primarily for the personnel responsible for installing the system and performing routine and scheduled maintenance. This book is also useful to the system administrator who wants to troubleshoot the system.

**Troubleshooting,  
Alarms, and  
Common  
Procedures***LINCS Server System Reference*

Document number 585-313-210

Issue 2

October 1999

Provides information on basic troubleshooting procedures for the most common system problems. Also provides diagnostic procedures, common system procedures, as well as a list of system alarms and messages.

This document is intended primarily for the on-site service technician and system administrators. Other audiences include technical support organizations and helpline personnel.

**Application Design  
and Development***LINCS Server Speech Development, Processing, and Recognition*

Document number 585-313-212

Issue 1

October 1999

Provides information on developing and editing speech, recognizing speech input, including WholeWord speech recognition, FlexWord speech recognition, and Dial Pulse Recognition, and how to put it all together. Appendices include information on speech file formats, advanced Text-to-Speech features, and recognition post-processing.

Serves as a reference for those who develop applications for the system using speech development features.

### *LINCS Server Application Development with Advanced Methods*

Document number 585-313-214

Issue 1

October 1999

Serves as a reference for those who develop applications for the system using the TSM script level language and/or C-language. Provides information about application design and structure, TAS script instructions, data interface processes, IRAPI programming, and the message logger. Appendices include sample applications, a summary of TAS script instructions, and C-library functions.

This book is intended primarily for those who write application scripts. Other audiences include development, sales and service support, and training.

### **Speech and Communication Development**

### *LINCS Server Communication Development*

Document number 585-313-213

Issue 1

October 1999

Provides information on digital telephony interfaces, call classification analysis, network communications, and network connectivity alarms. An appendix contains transmission level adjustment information.

This document is intended primarily for application developers who are responsible for establishing the communication interface between the caller, administrators, and the system. Other audiences include field support, technical support, and helpline personnel.

### UnixWare Operating System

#### *UnixWare 2.1.2 User Documentation*

Complete documentation (paper only) on how to use UnixWare is included with the LINC/S server.

### Database Management

The following ORACLE documentation sets are available:

- ORACLE On-Line Documentation CD-ROM  
Document number 585-310-920
- *ORACLE 7.3 Server Custom Library Set* (paper documentation)
  - ~ *Oracle7 Server Concepts, 7.3*
  - ~ *Oracle7 Server Administrator's Guide, 7.3*
  - ~ *Server Application Developer's Guide, 7.3*
  - ~ *Server SQL Reference Manual, 7.3*
  - ~ *Server Utilities Guide, 7.3*
  - ~ *Server Messages, 7.3*
  - ~ *Server Reference*
  - ~ *PL/SQL User's Guide and Reference, 2.3*

- ~ *Programmer's Guide to the Oracle Call Interfaces*
- ~ *Programmer's Guide to the Oracle Pro\*C/C++ Precompiler*
- ~ *Programmer's Guide to Oracle Precompilers*
- ~ *SQL\*Plus User's Guide and Reference*
- *ORACLE 7 SQL\*Net Custom Documentation Set*  
(paper documentation)
  - ~ *Oracle Network Manager Administrator's Guide, 2.3*
  - ~ *Oracle Network Product Troubleshooting Guide, 2.3*
  - ~ *Understanding SQL\*Net, 2.3*

## Numerics

### **23B+D**

23 bearer (communication) and 1 data (signaling) channel on a T1 PRI circuit card.

### **30B+D**

30 bearer (communication) and 1 data (signaling) channel (plus framing channel 0) on an E1 PRI circuit card.

### **47B+D**

47 bearer (communication) and 1 data (signaling) channel on two T1 PRI circuit cards.

### **4ESS<sup>®</sup>**

A large Lucent central office switch used to route calls through the telephone network.

**5ESS<sup>®</sup>**

A Lucent electronic switching machine used to route calls through the telephone network or private branch exchange.

**A****AC**

alternating current

**ACD**

[automatic call distributor](#)

**AD**

application dispatch

**AD-API**

application dispatch application programming interface

**adaptive differential pulse code modulation**

A means of encoding analog voice signals into digital signals by adaptively predicting future encoded voice signals. This adaptive modulation method reduces the number of bits required to encode voice. See also [pulse code modulation](#).

**adjunct products**

Products (for example, the Adjunct/Switch Application Interface) that the system administers via cut-through access to the inherent management capabilities of the product itself; this is in opposition to the ability of the system to administer the switch directly.

**ADPCM**

[adaptive differential pulse code modulation](#)

**ADU**

[asynchronous data unit](#)

**advanced speech recognition**

A speech recognition ability that allows the system to understand WholeWord and FlexWord™ inputs from callers.

**affiliate**

A business organization that Lucent controls or with which Lucent is in partnership.

**AGL**

application generation language

**ALERT**

System alerter process

**alerter**

A system process that responds to patterns of events logged by the “logdaemon” process.

**American Standard Code for Information Interchange**

A standard code for data representation that represents alphanumeric characters as binary numbers. The code includes 128 upper- and lowercase letters, numerals, and special characters. Each alphanumeric and special character has an ASCII code (binary) equivalent that is 1 byte long.

**analog**

An analog signal, such as voice or music, that varies in a continuous manner. An analog signal may be contrasted with a digital signal, which represents only discrete states.

**ANI**

[automatic number identification](#)

**announcement**

A message the system plays to the caller to provide information. The caller is not asked to give a response. Compare to [prompt](#).

**API**

Application programming interface

**application**

The automated transaction (interactions) among the caller, the voice response system, and any databases or host computers required for your business.

**application administration**

The component of the system that provides access to the applications currently available on your system and helps you to manage and administer them.

**application verification**

A process in which the system verifies that all the components needed by an application are complete.

**ASCII**

[American Standard Code for Information Interchange](#)

**ASI**

analog switch integration

**ASR**

[advanced speech recognition](#)

**asynchronous communication**

A method of data transmission in which bits or characters are sent at irregular intervals and spaced by start and stop bits rather than by time. Compare to [synchronous communication](#).

**asynchronous data unit**

An electronic communications device that allows computer systems to communicate over asynchronous lines more than 50 feet (15 m) in length.

**automatic call distributor**

That part of a telephone system that recognizes and answers incoming calls and completes these calls based on a set of instructions contained in a database. The ACD can send the call to an operator or group of operators as soon as the operator has completed a previous call or after the system has played a message to the caller.

**automatic number identification**

A method of identifying the calling party by automatically receiving a string of digits that identifies the calling station of a particular customer.

**B****back up**

The preservation of the information in a file in a different location, so that the data is not lost in the event of hardware or system failure.

**backing up an application**

Using a utility that makes an archive copy of a completed application or an interim copy of an application in progress. The back-up copy can be restored to the system if the on-line version is damaged, or if you make revisions and want to go back to the previous version.

**barge-in**

A capability provided by WholeWord and FlexWord speech recognition and Dial Pulse Recognition (DPR) that allows callers to speak or enter their responses during the prompt and have those responses recognized (similar to the Speak with Interrupt capability). See also [echo cancellation](#).

**batch file**

A file containing one or more lines, each of which is a command executable by the UNIX shell.

**BB**

bulletin board

**blind transfer protocol**

A protocol in which a call is completed as soon as the extension is dialed, without having to wait to see if the telephone is busy or if the caller answered.

**bps**

bits per second

**BRDG**

call bridging process

**bridging**

The process of connecting one telephone network connection to another over the system TDM bus. Bridging decreases the processing load on the system since an active bridge does not require speech processing, database access, host activity, etc., for the transaction.

**bundle**

In the context of the Enhanced File Transfer package, this term is used to denote a single file, a group of files (package), or a combination of both.

**byte**

A unit of storage in the computer. On many systems, a byte is 8 bits (binary digits), which is the equivalent of one character of text.

**C****call classification analysis**

A process that enables application designers to use information available within the system to classify the disposition of originated and transferred calls. CCA is an optional feature package.

**call data event**

A parameter that specifies a list of variables that are appended to a call data record at the end of each call.

**call data handler process**

A software process that accumulates generic call statistics and application events.

**called party number**

The number dialed by the person making a telephone call. Telephone switching equipment can use this number to selectively route an incoming call to a particular department or agent.

**caller**

The party who calls for a service, gets connected to the system, and interacts with it. As the system can also make outbound calls for service, the caller can also be the person who responds to those outbound calls.

**call flow**

See [transaction](#).

**call progress tones**

Standard telephony sounds that indicate the status of the call. These sounds include busy, fast busy, ringback, reorder, etc.

**card cage**

An area within a hardware platform that contains and secures all of the standard and optional circuit cards used in the system.

**cartridge tape drive**

A high-capacity data storage/retrieval device that can be used to transfer large amounts of information onto high-density magnetic cartridge tape based on a predetermined format. This tape can be removed from the system and stored as a backup, or used on another system.

**CAS**

channel associated signalling

**caution**

An admonishment or advisory statement used in the system documentation to alert the user to the possibility of a service interruption or a loss of data.

**CCA**

[call classification analysis](#)

**CDH**

[call data handler process](#)

**CELP**

[code excited linear prediction](#)

**central office**

An office or location in which large telecommunication devices such as telephone switches and network access facilities are maintained. These locations follow strict installation and operation requirements.

**central processing unit**

See [processor](#).

**CGEN**

Voice system general message class

**channel**

See [port](#).

**channel associated signaling**

A type of signaling that can be used on E1 circuit cards. It occurs on channel 16.

**circuit card upgrade**

A new circuit card that replaces an existing card in the platform. Usually the replacement is an updated version of the original circuit card to replace technology made obsolete by industry trends or a new system release.

**cluster controller**

A bisynchronous interface that provides a means of handling remote communication processing.

**CO**

[central office](#)

**code excited linear prediction**

A means of encoding analog voice signals into digital signals that provides excellent quality with use of minimum disk space.

**command**

An instruction or request the user issues to the system software to make the system perform a particular function. An entire command consists of the command name and options.

**configuration**

The arrangement of the software and hardware of a computer system or network. The system configuration includes either a standard or custom processor, peripheral equipment (for example, printers and modems), and software applications. Configuration also refers to the way the switch network is set up; that is, the types of products that are in the network and how those products communicate.

**configuration management**

The component of the system that allows you to manage the current configuration of voice channels, host sessions, and database connections, assign scripts to run on specific voice channels or host sessions, assign functionality to SSP and E1/T1 circuit cards, and perform various maintenance functions.

**connect and disconnect (C and D) tones**

DTMF tones that inform the system when the attendant has been connected (C) and when the caller has been disconnected (D).

**connected digits**

A sequence of digits that the system can process as a group, rather than requiring the caller to enter the digits one at a time.

**controller circuit card**

A circuit card used on a computer system that controls its basic functionality and makes the system operational. These circuit cards are used to control magnetic peripherals, video monitors, and basic system communications.

**copying an application**

A utility in which information from a source application is directed into the destination application.

**coresidency**

The ability of two products or services to operate and interact with each other on a single hardware platform.

**CPE**

customer provided equipment or customer premise equipment

**CPN**

[called party number](#)

**CPT**

[call progress tones](#)

**CPU**

[central processing unit](#)

**CPU Complex**

The processor for the LINCS server consisting of a single-board computing circuit card and an I/O companion board (SBC/IOB). The CPU complex is also used in other compactPCI platforms.

**crash**

An interactive utility for examining the operating system core and for determining if system parameters are being exceeded.

**CSU**

channel service unit

**custom speech**

Unique words or phrases to be used in system voice prompts that Lucent Technologies custom records on a per-customer basis.

**custom vocabulary**

A specialized package of unique words or phrases created on a per-customer basis and used by WholeWord or FlexWord speech recognition.

**CVS**

converse vector step

**D****danger**

An admonishment or advisory statement used in system documentation to alert the user to the possibility of personal injury or death.

**data interface process**

A software process that communicates with Script Builder applications.

**database**

A structured set of files, records, or tables.

**database field**

A field used to extract values from a local database and form the structure upon which a database is built.

**database record**

The information in a database for a person, product, event, etc. The database record is made up of individual fields for each information item.

**database table**

A structure, made up of columns and rows, that holds information in a database. Database tables provide a means of storing information that changes too often to “hard-code,” or store permanently, in the transaction outline.

**dB**

decibel

**DB**

database

**DBC**

database checking process

**DBMS**

database management system

**DC**

direct current

**DCE**

data communications equipment

**DCP**

digital communications protocol

**debug**

The process of locating and correcting errors in computer programs; also referred to as [troubleshooting](#).

**default**

The way a computer performs a task in the absence of other instructions.

**default owner**

The owner of a channel when no process takes ownership of that channel. The default owner holds all idle, in-service channels. In terms of the IRAPI, this is typically the Application Dispatch process.

**diagnose**

The process of performing diagnostics on a bus or on Tip/Ring, E1/T1, or SSP circuit cards.

**dial ahead**

The ability to collect and process touch-tone inputs in sequence, even when they are received before the prompts.

**dial pulse recognition**

A method of recognizing caller pulse inputs from a rotary telephone.

**dialed number identification service**

A service that allows incoming calls to contain information about the telephone number for which it is destined.

**dial through**

A capability provided by touch-tone and dial pulse recognition that allows callers to enter their responses during the prompt and have those responses recognized (similar to the Speak with Interrupt capability). See also [barge-in](#) and [echo cancellation](#).

**DIO**

disk input and output process

**DIP**

[data interface process](#)

**directory**

A type of file used to group and organize other files or directories.

**DMA**

direct memory address

**DNIS**

[dialed number identification service](#)

**DPR**

[dial pulse recognition](#)

**DSP**

digital signal processor

**DTE**

data terminal equipment

**DTMF**

[dual tone multi-frequency](#)

**DTR**

data terminal ready

**dual tone multi-frequency**

A touch-tone sound that is an audio signal including two different frequencies. *DTMF feedback* is the process of the “switch” providing this information to the system. *DTMF muting* is the process of ignoring these tones (which might be simulated by human speech) when they are not needed for the application.

**dump space**

An area of the disk that is fixed in size and should equal the amount of RAM on the system. The operating system “dumps” an image of core memory when the system crashes. The dump can be fetched after rebooting to help in analyzing the cause of the crash.

**E****E&M**

[Ear and Mouth](#)

**E1 / T1**

Digital telephony interfaces, commonly called *trunks*. E1 is an international standard at 2.048 Mbps. T1 is a North American standard at 1.544 Mbps.

**Ear and Mouth**

A common T1 trunking protocol for connection between two “switches.”

**EBCDIC**

Extended Binary Coded Decimal Interexchange Code

**echo cancellation**

The process of making the channel quiet enough so that the system can hear and recognize WholeWord, FlexWord, and dial pulse inputs during the prompt. See also [barge-in](#).

**editor system**

A system that allows speech phrases to be displayed and edited by a user.

**EIA**

Electronic Industries Association

**EISA**

Extended Industry Standard Architecture

**EMI**

electromagnetic interference

**Enhanced Basic Speech**

Pre-recorded speech available from Lucent Technologies in several languages. Sometimes called [standard speech](#).

**error message**

A message on the screen indicating that something is wrong with a possible suggestion of how to correct it.

**ESD**

electrostatic discharge

**ESS**

electronic switching system

**EST**

Enhanced Software Technologies, Inc.

**ET**

error tracker

**Ethernet**

A name for a local area network that follows IEEE standard 802.3. Supported implementations are 10BaseT and/or 100BaseT.

**event**

The notification given to an application when some condition occurs that is generally not encountered in normal operation.

**EXTA**

external alarms feature message class

**external actions**

Specific predefined system tasks that Script Builder can call or *invoke* to interact with other products or services. When an external action is invoked, the systems displays a form that provides choices in each field for the application developer to select. Examples are Call\_Bridge, Make\_Call, SP\_Allocate, SR\_Prompt, etc. In Voice@Work, external actions are treated as [external functions](#).

**external functions**

Specific predefined (or customer-created) system tasks that Voice@Work or Script Builder can call or *invoke* to interact with other products or services. The function allows the application developer to enter the argument(s) for the function to act on. Examples are concat, getarg, length, substring, etc. See also [external actions](#).

**F****FCC**

Federal Communications Commission

**FDD**

floppy disk drive

**feature**

A function or capability of a product or an application within the system.

**feature package**

An optional package that may contain both hardware and software resources to provide additional functionality to a standard system.

**feature\_tst script package**

A standard system software program that allows a user to perform self-tests of critical hardware and software functionality.

**FEP**

front end processor

**field**

See [database field](#).

**FIFO**

first-in-first-out processing order

**file**

A collection of data treated as a basic unit of storage.

**file transfer**

An option that allows you to transfer files interactively or directly to and from UNIX using the file transfer system (FTS).

**filename**

Alphabetic characters used to identify a particular file.

**FlexWord speech recognition**

A type of speech recognition based on subword technology that recognizes phonemes or parts of words in a specific language. See also [subword technology](#).

**foos**

facility out-of-service state

**FTS**

file transfer process message class

**function key**

A key, labeled F1 through F8, on your keyboard to which the system software gives special properties for manipulating the user interface.

**G****GEN**

PRISM logger and alerter general message class

**grammar**

The inputs that a recognizer can match (identify) from a caller.

**GUI**

graphical user interface

**H****hard disk drive**

A high-capacity data storage/retrieval device that is located inside a computer platform. A hard disk drive stores data on nonremovable high-density magnetic media based on a predetermined format for retrieval by the system at a later date.

**hardware**

The physical components of a computer system. The central processing unit, disks, tape, and floppy drives, etc., are all hardware.

**hardware upgrade**

Replacement of one or more fundamental platform hardware components (for example, the CPU or hard disk drive), while the existing platform and other existing optional circuit cards remain.

**HDD**

[hard disk drive](#)

**hwoos**

hardware out-of-service state

**Hz**

Hertz

**IBM**

International Business Machines

**iCk or ICK**

The system integrity checking process.

**ID**

identification

**IDE**

integrated disk electronics

**idle channel**

A channel that either has no owner or is owned by its default owner and is onhook.

**IE**

information element

**IEEE**

Institute of Electrical and Electronic Engineers

**IND\$FILE**

The standard SNA file transfer utility that runs as an application under CICS, TSO, and CMS. IND\$FILE is independent of link-level protocols such as BISYNC and SDLC.

**independent software vendor**

A company that has an agreement with Lucent Technologies to develop software to work with the system to provide additional features required by customers.

**indexed table**

A table that, unlike a nonindexed table, can be searched via a field name that has been indexed.

**industry standard architecture**

A PC bus standard that allows processors and other circuit cards to communicate with each other.

**INIT**

voice system initialization message class

**initialize**

To start up the system for the first time.

**inserv**

in-service state

**Integrated Services Digital Network**

A network that provides end-to-end digital connectivity to support a wide range of voice and data services.

**intelligent CCA**

Monitoring the line after dialing is complete to determine whether a busy, reorder (fast busy), or other failure has been encountered. It also recognizes when the extension is answered or if the extension is not answered after a specified number of rings. The monitoring capabilities are dependent on the network interface circuit card and protocol used.

**interface**

The access point of a system. With respect to the system, the interface is designed to provide you with easy access to the software capabilities.

**interrupt**

The termination of voice and/or telephony functions when some condition occurs.

**Intuity Response Application Programming Interface**

A library of commands that provide a standard development interface for voice-telephony applications.

**IOB**

I/O companion card to the [SBC](#). This is part of the [CPU Complex](#).

**IPC**

interprocess communication

**IPC**

intelligent ports card (IPC-900)

**IRAPI**

[Intuity Response Application Programming Interface](#)

**IRQ**

interrupt request

**ISA**

[industry standard architecture](#)

**ISDN**

[Integrated Services Digital Network](#)

**ISV**

[independent software vendor](#)

**ITAC**

International Technical Assistance Center

**K****Kbps**

kilobytes per second

**Kbyte**

kilobyte

**keyboard mapping**

In emulation mode, this feature enables the keyboard to send 3270 keyboard codes to the host according to a configuration table set up during installation.

**keyword spotting**

A capability provided by WholeWord speech recognition that allows the system to recognize a single word in the middle of an entire phrase spoken by a caller in response to a prompt.

**L****LAN**

[local area network](#)

**LDB**

[local database](#)

**LED**

light-emitting diode

**library states**

The state information about channel activities maintained by the IRAPI.

**LIFO**

last-in-first-out processing order

**LINCS**

Lucent Integrated Network Call Server

**line side E1**

A digital method of interfacing a system to a PBX or “switch” using E1-related hardware and software.

**line side T1**

A digital method of interfacing a system to a PBX or “switch” using T1-related hardware and software.

**listfile**

An ASCII catalog that lists the contents of one or more talkfiles. Each application script is typically associated with a separate listfile. The listfile maps speech phrase strings used by application scripts into speech phrase numbers.

**local area network**

A data communications network in a limited geographical area. The LAN provides communications between computers and peripherals.

**local database**

A database residing on the system.

**LOG**

System logger process message class

**logical unit**

A type of SNA Network Addressable Unit.

**logdaemon**

A UNIX system information and error logging process.

**logger**

See [logdaemon](#).

**logging on/off**

Entering or exiting the system software.

**LSE1**

[line side E1](#)

**LSPS II**

[Lucent speech processing solutions II circuit card \(6UB5\)](#)

**LST1**

[line side T1](#)

**LU**

[logical unit](#)

**Lucent speech processing solutions II circuit card (6UB5)**

A high-performance speech processing circuit card capable of simultaneous support for various speech technologies. In addition to the basic speech-processing features, The LSPS II circuit card provides enhanced Text-to-Speech capabilities and subword recognition for large vocabularies.

**M****magnetic peripherals**

Data storage devices that use magnetic media to store information. Such devices include hard disk drives, floppy disk drives, and cartridge tape drives.

**main screen**

The system screen from which you are able to enter either the System Administration or Voice System Administration menu.

**maintenance process**

A software process that runs temporary diagnostics and maintains the state of circuit cards and channels.

**manooos**

manually out-of-service state

**masked event**

An event that an application can ignore (that is, the application can request not to be informed of the event).

**master**

A circuit card that provides clock information to the TDM bus.

**Mbps**

megabits per second

**MByte**

[megabyte](#)

**megabyte**

A unit of memory equal to 1,048,576 bytes (1024 x 1024). It is often rounded to one million.

**menu**

Options presented to a user on a computer screen or with voice prompts.

**MF**

[multifrequency](#)

**MHz**

megahertz

**ms**

millisecond

**msec**

millisecond

**MS-DOS**

A personal computer disk operating system developed by the Microsoft Corporation.

**MTC**

[maintenance process](#)

**multifrequency**

Dual tone digit signalling (similar to DTMF), used for trunk addressing between network switches or by network operators.

**multithreaded application**

A single process/application that controls several channels. Each thread of the application is managed explicitly. Typically this means state information for each thread is maintained and the state of the application on each channel is tracked.

**N****NCP**

Network Control Program

**NEBS**

Network Equipment Building Standards

**NEMA**

National Electrical Manufacturers Association

**netoos**

network out-of-service state

non-facility associated signalling

**NFS**

network file sharing

**NM-API**

Network Management - Application Programming Interface

**NMVT**

network management vector transport

**nonex**

nonexistent state

**nonindexed table**

A table that can be searched only in a sequential manner and not via a field name.

**nonmasked event**

An event that must be sent to the application. Generally, an event is nonmaskable if the application would likely encounter state transition errors by trying to it.

**null value**

An entry containing no value. A field containing a null value is normally displayed as blank and is different from a field containing a value of zero.

## O

**OEM**

original equipment manufacturer

**on-line help**

Messages or information that appear on the user's screen when a function key (usually F1) is pressed.

**option**

An argument used in a command line to modify program output by modifying the execution of a command. When you do not specify any options, the command executes according to its default options.

**ORACLE**

A company that produces relational database management software. It is also used as a generic term that identifies a database residing on a local or remote system that is created and maintained using an ORACLE RDBMS product.

**P****PBX**

[private branch exchange](#)

**PC**

personal computer

**PCB**

printed circuit board

**PCI**

[peripheral component interconnect](#)

**PCI Mezzanine Card**

A PCI module, such as a LAN or RAID controller, that connects to the [CPU Complex IOB](#) companion card.

**PCM**

[pulse code modulation](#)

**PEC**

price element code

**peripheral (device)**

Equipment such as printers or terminals that is in addition to the basic processor.

**peripheral component interconnect**

A newer, higher speed PC bus that is gradually displacing ISA for many components.

**permanent process**

A process that starts and initializes itself before it is needed by a caller.

**phoneme**

A single basic sound of a particular spoken language. For example, the English language contains 40 phonemes that represent all basic sounds used with the language. The English word “one” can be represented with three phonemes, “w” - “uh” - “n.” Phonemes vary between languages because of guttural and nasal inflections and syllable constructs.

**phrase filtering (screening)**

The rejection of unrecognized speech. The WholeWord and FlexWord speech recognition packages can be programmed to reprompt the caller if the system does not recognize a spoken response.

**phrase tag**

A string of up to 50 characters that identifies the contents of a speech phrase used by an application script.

**platform migration**

See [platform upgrade](#).

**platform upgrade**

The process of replacing the existing platform with a new platform.

**pluggable**

A term usually used with speech technologies, in particular standard speech, to indicate that a basic algorithmic technique has been implemented to accept one or more sets of parameters that tailors the algorithm to perform in one or more languages.

**PMC**

[PCI Mezzanine Card](#)

**poll**

A message sent from a central controller to an individual station on a multipoint network inviting that station to send if it has any traffic.

**polling**

A network arrangement whereby a central computer asks each remote location whether it wants to send information. This arrangement enables each user or remote data terminal to transmit and receive information on shared facilities.

**port**

A connection or link between two devices that allows information to travel to a desired location. See [telephone network connection](#).

**PRI**[Primary Rate Interface](#)**Primary Rate Interface**

An ISDN term for connections over E1 or T1 facilities that are usually treated as trunks.

**private branch exchange**

A private switching system, either manual or automatic, usually serving an organization, such as a business or government agency, and usually located on the customer's premises.

**processor**

In system documentation, the computer on which UnixWare and system software runs. In general, the part of the computer system that processes the data. Also known as the [central processing unit](#).

**prompt**

A message played to a caller that gives the caller a choice of selections in a menu and asks for a response. Compare to [announcement](#).

**pseudo driver**

A driver that does not control any hardware.

**PSTN**

public switch telephone network

**pulse code modulation**

A digital modulation method of encoding voice signals into digital signals. See also [adaptive differential pulse code modulation](#).

**R****RAID**

redundant array of independent disks

**RAID Array**

An assembly of disk drives configured to provide some level of RAID functionality

**RAM**

random access memory

**RDMBS**

ORACLE relational database management system

**RECOG**

speech recognition feature message class

**recognition type**

The type of input the recognizer can understand. Available types include touch-tone, dial pulse, and Advanced Speech Recognition (ASR), which includes WholeWord and FlexWord speech recognition.

**recognizer**

The part of the system that compares caller input to a grammar in order to correctly match (identify) the caller input.

**record**

See [database record](#).

**recovery**

The process of using copies of the system software to reconstruct files that have been lost or damaged. See also [restore](#).

**remote database**

Information stored on a system other than your current system that can be accessed by your current system.

**REN**

ringer equivalence number

**reports administration**

The component of a system that provides access to system reports, including call classification, call data detail, call data summary, message log, and traffic reports.

**restore**

The process of recovering lost or damaged files by retrieving them from available back-up tapes or from another disk device. See also “recovery.”

**restore application**

A utility that replaces a damaged application or restores an older version of an application.

**reuse**

The concept of using a component from a source system in a target system after a software upgrade or platform migration.

**RFS**

remote file sharing

**RM**

resource manager

**roll back**

To cancel changes to a database since the point at which changes were last committed.

**rollback segment**

A portion of the database that records actions that should be undone under certain circumstances. Rollback segments are used to provide transaction rollback, read consistency, and recovery.

**RTS**

request to send

**S****SCA**

single connector architecture

**SBC**

A single-board computing circuit card used in LINCS servers. It is part of the CPU complex.

**screen pop**

A method of delivering a screen of information to a telephone operator at the same time a telephone call is delivered. This is accomplished by a complex chain of tasks that include identifying the calling party number, using that information to access a local or remote ORACLE database, and pulling a “form” full of information from the database using an ORACLE database utility package.

**script**

The set of instructions for the system to follow during a transaction.

**Script Builder**

An optional software package that provides a menu-oriented interface designed to assist in the development of custom voice response applications on the system (see also [Voice@Work](#)).

**SCSI**

[small computer system interface](#)

**SDN**

software defined network

**shared database table**

A database table that is used in more than one application.

**shared speech**

Speech that is a part of more than one application.

**shared speech pools**

A parameter that allows the user of a voice application to share speech components with other applications.

**SID**

station identification

**single-threaded application**

An application that runs on a single voice channel.

**slave**

A circuit card that depends on the TDM bus for clock information.

**SLIP**

serial line interface protocol

**small computer system interface**

A disk drive control technology in which a single SCSI adapter circuit card plugged into a PC slot is capable of controlling as many as seven different hard disks, optical disks, tape drives, etc.

**SNA**

systems network architecture

**SNMP**

simple network management protocol

**software**

The set or sets of programs that instruct the computer hardware to perform a task or series of tasks — for example, UnixWare software and the system software.

**software upgrade**

The installation of a new version of software in which the existing platform and circuit cards are retained.

**source system**

The system from which you are upgrading (that is, your system as it exists *before* you upgrade).

**speech and signal processor circuit card (CWB1)**

A high-performance signal processing circuit card capable of simultaneous support for various speech technologies.

**speech energy**

The amount of energy in an audio signal. Literally translated, it is the output level of the sound in every phonetic utterance.

**speech envelope**

The linear representation of voltage on a line. It reflects the sound wave amplitude at different intervals of time. This envelope can be plotted on a graph to represent the oscillation of an audio signal between the positive and negative extremes.

**speech file**

A file containing an encoded speech phrase.

**speech filesystem**

A collection of several talkfiles. The filesystem is organized into 16-Kbyte blocks for efficient management and retrieval of talkfiles.

**speech modeling**

The process of creating WholeWord speech recognition algorithms by collecting thousands of different speech samples of a single word and comparing them all to obtain a statistical average of the word. This average is then used by a WholeWord speech recognition program to recognize a single spoken word.

**speech space**

An area that contains all digitized speech used for playback in the applications loaded on the system.

**speech phrase**

A continuous speech segment encoded into a digital string.

**speech recognition**

The ability of the system to understand input from callers.

**SPIP**

signal processor interface process

**SPPLIB**

speech processing library

**SQL**

[structured query language](#)

**SR**

[speech recognition](#)

**SSP**

[speech and signal processor circuit card \(CWB1\)](#)

**standard speech**

The speech package available in several languages containing simple words and phrases produced by Lucent Technologies for use with the system. This package includes digits, numbers, days of the week, and months, each spoken with initial, medial, and falling inflection. The speech is in digitized files stored on the hard disk to be used in voice prompts and messages to the caller. This feature is also called Enhanced Basic Speech.

**standard vocabulary**

A standard package of simple word speech models provided by Lucent Technologies and used for WholeWord speech recognition. These phrases include the digits “zero” through “nine,” “yes,” “no,” and “oh,” or the equivalent words in a specific local language.

**string**

A contiguous sequence of characters treated as a unit. Strings are normally bounded by white spaces, tabs, or a character designated as a separator. A string value is a specified group of characters symbolized by a variable.

**structured query language**

A standard data programming language used with data storage and data query applications.

**subword technology**

A method of speech recognition used in FlexWord recognition that recognizes phonemes or parts of words. Compare to [WholeWord speech recognition](#).

**switch**

A software and hardware device that controls and directs voice and data traffic. A customer-based switch is known as a [private branch exchange](#).

**switch hook**

The device at the top of most telephones that is depressed when the handset is resting in the cradle (in other words, is *on hook*). The device is raised when the handset is picked up (in other words, when the telephone is *off hook*).

**switch hook flash**

A signaling technique in which the signal is originated by momentarily depressing the “switch hook.”

**switch interface administration**

The component of the system that enables you to define the interaction between the system and switches by allowing you to establish and modify switch interface parameters and protocol options for both analog and digital interfaces.

**switch network**

Two or more interconnected telephone switching systems.

**synchronous communication**

A method of data transmission in which bits or characters are sent at regular time intervals, rather than being spaced by start and stop bits. Compare to [asynchronous communication](#).

**SYS**

UNIX system calls message class

**sysgen**

system generation

**system administrator**

The person assigned the responsibility of monitoring all system software processing, performing daily system operations and preventive maintenance, and troubleshooting errors as required.

**system architecture**

The manner in which the system software is structured.

**system message**

An event or alarm generated by either the system or end-user process.

**system monitor**

A component of the system that tests to verify that each incoming telephone line and its associated Tip/Ring or T1 circuit card is functional. Through the "System Monitor" component, you are able to see displays of the Voice Channel and Host Session Monitors.

**T****T1**

A digital transmission link with a capacity of 1.544 Mbps.

**table**

See [database table](#).

**talkfile**

An ASCII file that contains the speech phrase tags and phrase tag numbers for all the phrases of a specific application. The speech phrases are organized and stored in groups. Each talkfile can contain up to 65,535 phrases, and the speech filesystem can contain multiple talkfiles.

**talkoff**

The process of a caller interrupting a prompt, so the prompt message stops playing.

**TAM**

[telecom alarm module](#)

**target system**

The system to which you are upgrading (that is, your system as you expect it to exist *after* you upgrade).

**TAS**

[transaction assembler script](#)

**TCP/IP**

transmission control protocol/internet protocol

**TDM**

time division multiplexing

**telecom alarm module**

An intelligent alarm module that provides critical, major, and minor alarm indicators.

**telephone network connection**

The point at which a telephone network connection terminates on a system. Supported telephone connections are Tip/Ring, T1, and E1.

**Text-to-Speech**

An optional feature that allows an application to play US English speech directly from ASCII text by converting that text to synthesized speech. The text can be used for prompts or for text retrieved from a database or host, and can be spoken in an application with prerecorded speech.

**ThickNet**

A 10-mm (10BASE5) coaxial cable used to provide interLAN communications.

**ThinNet**

A 5-mm (10BASE2) coaxial cable used to provide interLAN communications.

**time-division multiplex**

A method of serving a number of simultaneous channels over a common transmission path by assigning the transmission path sequentially to the channels, with each assignment being for a discrete time interval.

**Tip/Ring**

Analog telecommunications using four-wire media.

**token ring**

A ring type of local area network that allows any station in the network to communicate with any other station.

**trace**

A command that can be used to monitor the execution of a script.

**traffic**

The flow of information or messages through a communications network for voice, data, or audio services.

**transaction**

The interactions (exchanges) between the caller and the voice response system. A transaction can involve one or more telephone network connections and voice responses from the system. It can also involve one or more of the system optional features, such as speech recognition, 3270 host interface, FAX Actions, etc.

**transaction assembler script**

The computer program code that controls the application operating on the voice response system. The code can be produced from Voice@Work, Script Builder, or by writing directly in TAS code.

**transaction state machine process**

A multi-channel IRAPI application that runs applications controlled by TAS script code.

**transient process**

A process that is created dynamically only when needed.

**troubleshooting**

The process of locating and correcting errors in computer programs. This process is also referred to as debugging.

**TSO**

time share operation

**TSM**

[transaction state machine process](#)

**TTS**

[Text-to-Speech](#)

**TWIP**

T1 interface process

**U****UK**

United Kingdom

**US**

United States of America

**UNIX Operating System**

A multiuser, multitasking computer operating system originally developed by Lucent Technologies.

**UNIX shell**

The command language that provides a user interface to the UNIX operating system.

**upgrade scenario**

The particular combination of current hardware, software, application and target hardware, software, applications, etc.

**usability**

A measurement of how easy an application is for callers to use. The measurement is made by making observations and by asking questions. An application should have high usability to be successful.

**USOC**

universal service ordering code

**UVL**

unified voice library

**V****VDC**

video display controller

**vi editor**

A screen editor used to create and change electronic files.

**virtual channel**

A channel that is not associated with an interface to the telephone network (Tip/Ring, T1, LSE1/LST1, or PRI). Virtual channels are intended to run “data-only” applications which do not interact with callers but may interact with DIPs. Voice or network functions (for example, coding or playing speech, call answer, origination, or transfer) will not work on a virtual channel. Virtual channel applications can be initiated only by a “virtual seizure” request to TSM from a DIP.

**vocabulary**

A collection of words that the system is able to recognize using either WholeWord or FlexWord speech recognition.

**vocabulary activation**

The set of active vocabularies that define the words and wordlists known to the FlexWord recognizer.

**vocabulary loading**

The process of copying the vocabulary from the system where it was developed and adding it to the target system.

**Voice@Work**

An optional software package that provides a graphical interface to assist in development of voice response applications on the system (see also [Script Builder](#)).

**voice channel**

A channel that is associated with an interface to the telephone network (T1, E1, or PRI). Any system application can run on a voice channel. Voice channel applications can be initiated by being assigned to particular voice channels or dialed numbers to handle incoming calls or by a “soft seizure” request to TSM from a DIP or the **soft\_szr** command.

**voice processing co-marketer**

A company licensed to purchase voice processing equipment to market and sell based on their own marketing strategies.

**voice response output process**

A software process that transfers digitized speech between system hardware (for example, Tip/Ring and SSP circuit cards) and data storage devices (for example, hard disk, etc.)

**voice response unit**

A computer connected to a telephone network that can play messages to callers, recognize caller inputs, access and update a databases, and transfer and monitor calls.

**voice system administration**

The means by which you are able to administer both voice-related aspects of the system.

**VPC**

[voice processing co-marketer](#)

**VROP**

voice response output process

**VRU**

[voice response unit](#)

**W****warning**

An admonishment or advisory statement used in system documentation to alert the user to the possibility of equipment damage.

**watchdog timer**

An timer that activates a [TAM](#) alarm when CPU activity is not received within the 30-second threshold.

**WholeWord speech recognition**

An optional feature package based on whole-word technology that can recognize the numbers one through zero, “yes”, and “no” (the key words). This feature is reliable, regardless of the individual speaker. This feature can identify the key words when spoken in phrases with other words. A string of key words, called *connected digits*, can be recognized. During the prompt announcement, the caller can speak or use touch tones (or dial pulses, if available). See also [whole-word technology](#).

**whole-word technology**

The ability to recognize an entire word, rather than just the phoneme or a part of a word. Compare to “subword technology.”

**wink signal**

An interruption of current to a busy lamp indicating that there is a line on hold.

**word**

A unique utterance understood by the recognizer.

**wordlist**

A set of words available for FlexWord recognition by an application during a Prompt & Collect action step.

**word spotting**

The ability to search through extraneous speech during a recognition.

## Numerals

6UB5, see Lucent speech processing solutions (LSPS II) circuit cards

## A

Acrobat Reader

- adjusting the window size [xviii](#)
- hiding and displaying bookmarks [xviii](#)
- navigating [xix](#)
- printing from [xix](#)
- searching [xix](#)
- setting the default magnification [xviii](#)

ADPCM (adaptive differential pulse code modulation) speech coding method [52](#)

alarm system, see Telecom Alarm Module (TAM)

Asynchronous [30](#)

asynchronous 8-port circuit card [30](#)

Asynchronous Host Interface Toolkit  
feature package description [66](#)

## B

backplane slots and buses [11](#)

barge-in

- with Dial Pulse Recognition [71](#)
- with FlexWord [88](#)
- with WholeWord [85](#)

bays, see media bays

BIOS

- PCI specifications [43](#)

bridging calls [69](#)

buses

- CompactPCI [19](#)
- computer telephony [19](#)
- SCSI [19](#)
- standard [19](#)

## C

- Call Bridge Application
  - feature package description [69](#)
- Call Classification Analysis
  - feature package description [69](#)
- call data handling (CDH) stub [70](#)
- cartridge-tape drive [21](#)
- caution labels [xvii](#)
- CDH Stub
  - feature package description [70](#)
- CD-ROM drive [21](#)
- CELP (code excited linear prediction) speech coding method [52](#)
- channel capacities
  - LSPS II circuit card [27](#), [52](#)
  - Primary Rate Interface [80](#)
  - SSP circuit card [27](#), [52](#)
- channels, tuning for more than 144 [96](#)
- circuit cards
  - asynchronous 8-port [30](#)
  - LSPS II [26](#)
  - optional [24](#)
  - Single Board Computing (SBC) [13](#)
  - SSP [26](#)
  - standard [13](#)
  - telephony-interface (E1/T1) [25](#)
- COM2 serial port, usage caution [18](#), [57](#)
- command line user interface [47](#)
- CompactPCI
  - backplane [11](#)
  - PICMG specifications [43](#)
- computer telephony (CT) bus, H.110
  - description [19](#)
  - ECTF compliance [44](#)
- CPU complex [13](#)
- CT, see computer telephony (CT) bus
- CWB1, see speech and signal processor (SSP) circuit cards
- CWB2, see E1/T1 circuit card

## D

- Data Collection Toolkit
  - feature package description [70](#)
- data communications specifications [106](#)
- diagnose commands
  - bus [56](#)
  - card [56](#)
- dial pulse [89](#)
- dial pulse recognition (DPR)
  - feature package description [71](#)
- dimensions of the server [94](#)
- diskette drive [21](#)
- documentation
  - description of document set [108](#)
  - printing electronic [xix](#)
  - purchasing printed copies [xix](#)
  - Software Data Kit documentation for use with LSPS II [74](#)
- dual tone multi-frequency (DTMF) [89](#)

## E

- E1 CAS protocol
  - feature package description [72](#)
  - telephony interface specifications [105](#)
- E1/T1 (CWB2) circuit cards
  - E1 CAS telephony interface specifications [105](#)
  - hardware description [25](#)
  - ISDN-PRI telephony interface specifications [103](#)
  - T1 E&M telephony interface specifications [101](#)
- echo cancellation, see barge-in
- ECTF H.110 CTBus standard [44](#)
- electronic documentation, printing [xix](#)
- environmental requirements [95](#)
- Ethernet LAN controllers
  - description [17](#)
  - IEEE 802.3 standard [44](#)
- external SCSI connector [22](#)

**F**

## fans

- cooling [23](#)
- monitoring [60](#)
- power supply [23](#)

## feature packages

- definition and descriptions [65](#)

## features

- definition and descriptions [41](#)

## FlexWord speech recognition

- feature package description [86](#)

## FlexWord toolkit

- feature package description [73](#)

## floppy drive, see diskette drive

**H**H.110 CTBus [19](#)hard-disk drives [20](#)

## hardware

- optional [23](#)
- standard [10](#)

host computers, accessing [66](#)

## hot swap

- definition [61](#)

humidity requirements [95](#)**I**I/O Companion card [13](#)IEEE 802.3 CSMA/CD LAN standard [44](#)input voltage levels, monitoring [59](#)intelligent call transfer [69](#)IRAPI (Intuity Response Application Programming Interface) [49](#)

## ISDN-PRI, see Primary Rate Interface

**K**

## keyboards

- connectors for [15](#)
- description [30](#)

**L**

## LAN, see Ethernet LAN controllers

- local alerting
  - system messages [57](#)
- LSPS II, see Lucent speech processing solutions circuit cards
- LSPS Set
  - feature package description [74](#)
  - Software Development Kit [74](#)
- Lucent speech processing solutions (LSPS II)
  - circuit cards (6UB5)
    - channel capacities [27](#)
    - hardware description [26](#)
    - LSPS Set feature package description [74](#)
    - using with SSP circuit cards [26](#)

## M

- media bays [12](#)
- Message Log Report screen [57](#)
- midplane [12](#)
- modems [30](#)

- monitoring
  - chassis temperatures [58](#)
  - cooling fans [60](#)
  - input voltage levels [59](#)
  - output voltage levels [59](#)
  - power supplies [59](#)
  - system status [56](#)
  - watchdog timer [60](#)
- monitors
  - connector for [15](#)
  - description [30](#)
- mouse
  - connector for [15](#)
  - description [30](#)
- multi-frequency (MF) [89](#)

## N

- NCHANNELS tuning parameter [96](#)
- Network File System (NFS) [46](#)

## O

- OKI ADPCM (adaptive differential pulse code modulation) speech coding method [52](#)

open interfaces and architecture [42](#)

operating system, UnixWare

software [34](#)

watchdog timer [60](#)

ORACLE

development tools [75](#)

feature package description [75](#)

reports [76](#)

software

base RDBMS [38](#)

development tools [39](#)

OS, see operating system

output voltage levels, monitoring [59](#)

## P

PCI Industrial Computer Manufacturers Group (PICMG)

CompactPCI specifications [43](#)

PCI Special Interest Group (SIG), BIOS specification [43](#)

PCM (pulse code modulation) speech coding method [52](#)

peripheral devices

optional [30](#)

standard [20](#)

PICMG, see PCI Industrial Computer Manufacturers Group

pkginfo command [32](#)

Plug and Play BIOS [43](#)

PMC (PCI Mezzanine Card), Ethernet LAN [17](#)

ports

asynchronous specifications [106](#)

LPT [15](#)

power requirements [93](#)

power supplies

description [23](#)

monitoring [59](#)

PRI, see Primary Rate Interface

Primary Rate Interface (PRI)

Advanced PRI [79](#)

feature package description [78](#)

switch integration protocols [78](#)

telephony interface specifications [103](#)

- printers
  - description [30](#)
  - power requirements [94](#)
- PRO\*C (ORACLE) [76](#)

## R

- RAID (redundant array of independent disks)
  - controller [16](#)
  - feature description [61](#)
- rear I/O transition slots [11](#)
- reports
  - ORACLE RDBM [76](#)
- ReportWriter (ORACLE) [76](#)

## S

- safety and security alert labels [xvii](#)
- SCA, see single connector architecture
- screens
  - user interface [47](#)

- SCSI
  - bus [19](#)
  - devices [20](#)
  - hard-disk drives [20](#)
  - terminator guard [94](#)
  - Ultra Wide description [43](#)
- SDK, see Software Development Kit
- Single Board Computing (SBC) circuit cards [13](#)
- single connector architecture (SCA) [20](#)
- slots, backplane [11](#)
- software
  - displaying list on your system [32](#)
  - LINCS server
    - base [34](#)
    - optional [36](#)
  - list of all [32](#)
  - ORACLE
    - base RDBMS [38](#)
    - development tools [39](#)
  - UnixWare [34](#)
- Software Development Kit (SDK) for LSPS II [74](#)

speech and signal processor (SSP) circuit cards (CWB1)

channel capacities [27](#)

hardware description [26](#)

using with LSPS II circuit cards [26](#)

speech recognition

FlexWord feature package [86](#)

WholeWord feature package [83](#)

with SSP and LSPS II circuit cards [82](#)

SQL\*FORMS/MENU (ORACLE) [76](#)

SQL\*NET TCP/IP (ORACLE) [75](#)

SSP, see speech and signal processing circuit cards

striping (with RAID) [61](#)

sysmon command [56](#)

system

status and monitoring [56](#)

## T

T1 E&M Protocol

feature package descriptions [89](#)

telephony interface specifications [101](#)

TAM, see Telecom Alarm Module

tape drive [21](#)

TAS (Transaction Assembler Script) [48](#)

TCP/IP

feature description [61](#)

open interfaces [44](#)

Telecom Alarm Module (TAM)

feature description [57](#)

hardware overview [18](#)

telephony interfaces [62](#)

general specifications [96](#)

ISDN-PRI specifications [103](#)

T1 E&M specifications [101](#)

temperatures

environmental requirements for server [95](#)

internal chassis, monitoring [58](#)

terminal emulation [63](#)

Text-to-Speech (TTS)

feature package description [89](#)

using with FlexWord [74](#)

trace command [57](#)

transferring calls

intelligent transfer [69](#)

troubleshooting

mechanisms for [56](#)

TTS, see Text-to-Speech  
typographical conventions [xvi](#)

## U

UnixWare operating system  
  software [34](#)  
  watchdog timer [60](#)  
USB connector [15](#)  
user interfaces  
  overview of all [47](#)

## V

video controller module (SVGA) [15](#)  
views of the server [7](#)  
voice response  
  common functions [50](#)  
voltage sensors  
  input [59](#)  
  output [59](#)

## W

watchdog timer [60](#)  
weight of the server [95](#)  
WholeWord speech recognition  
  feature package description [83](#)