


CODED GAUGES

NOS. 73A TO 81

GAUGE, 73A
 GAUGE, 73B

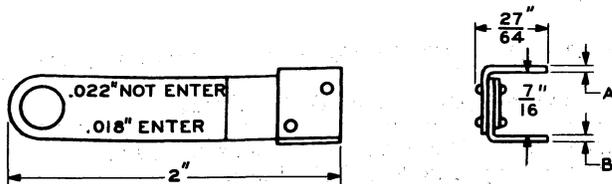


| Code No. | Dim."A" | Dim."B" | Name of Gauge |
|----------|---------|---------|---------------------------------|
| 73A | .022" | .018" | .018" and .022" thickness gauge |
| 73B | .008" | .007" | |

For use on 208- and 214-type relays.

GAUGE, 73C Manufacture Discontinued.
 Replaced by the No. 73D gauge.

GAUGE, 73D

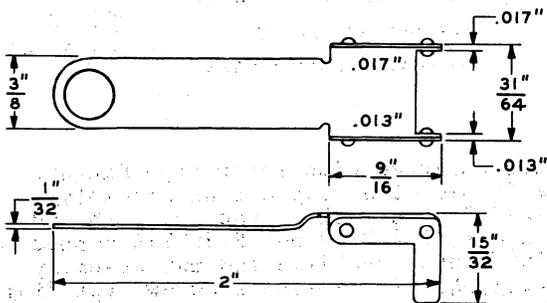

.013" and .017" thickness gauge.

Replaces the No. 73C gauge.


For use on 208-type relays.

GAUGE, 74A Manufacture Discontinued.
 Replaced by the No. 74D gauge.

GAUGE, 74B Manufacture Discontinued.
 Replaced by the No. 74D gauge.

GAUGE, 74C Manufacture Discontinued.
 Replaced by the No. 74D gauge.

GAUGE, 74D

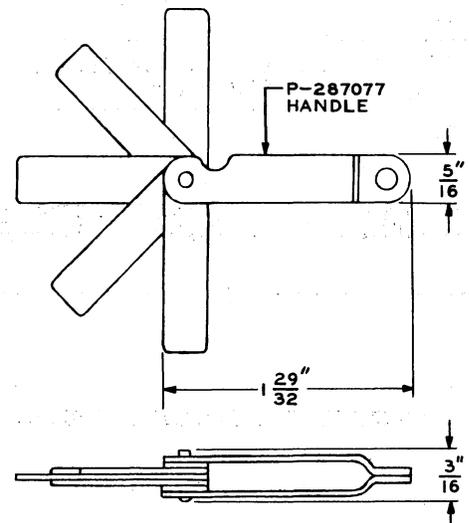


Thickness gauge nest. Consists of the following 75-type gauges mounted in a handle. The individual gauges are readily removable and replaceable.

| Code No. | Thickness In. | Code No. | Thickness In. |
|----------|---------------|----------|---------------|
| 75B | .003" | 75H | .018" |
| 75C | .004" | 75J | .007" |
| 75D | .005" | 75K | .009" |
| 75E | .006" | 75L | .011" |
| 75F | .002" | 75M | .010" |
| 75G | .012" | 75N | .008" |

Replaces the Nos. 74A, 74B and 74C gauges.

For general use.

GAUGE, 76

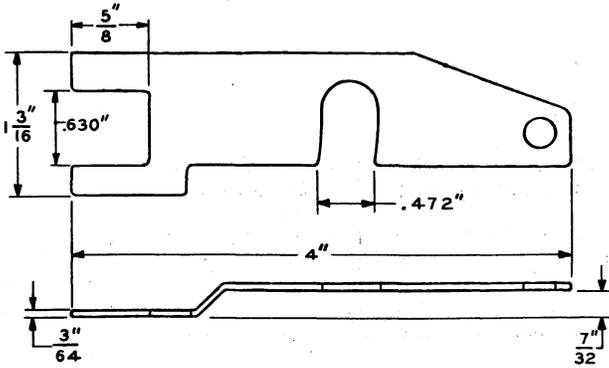


Interrupter locating gauge.

For use on reciprocating bar type inter-rupters.

GAUGE, 77 Manufacture Discontinued. Replaced by the No. 77B gauge.

GAUGE, 77B

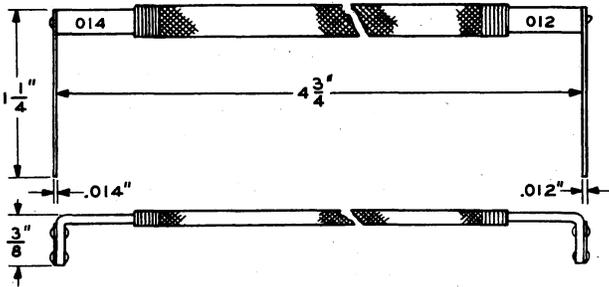


.012" and .014" double-end thickness gauge.

Replaces the No. 77 gauge.

For use on 207- and 213-type relays.


GAUGE, 77C

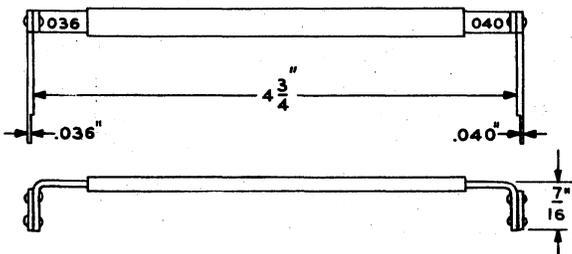

.036" and .040" double-end thickness gauge.

For use on the 1-type translators.

GAUGE, 78

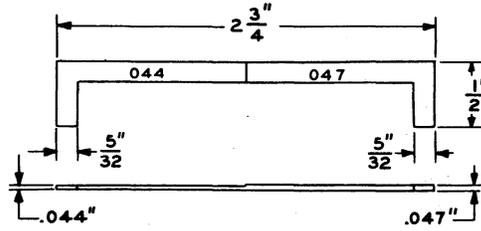


.044" and .047" double-end thickness gauge.

For use on 50-type dial testers.

GAUGE, 79A Manufacture Discontinued. Replaced by the No. 79C gauge.

GAUGE, 79B
GAUGE, 79C

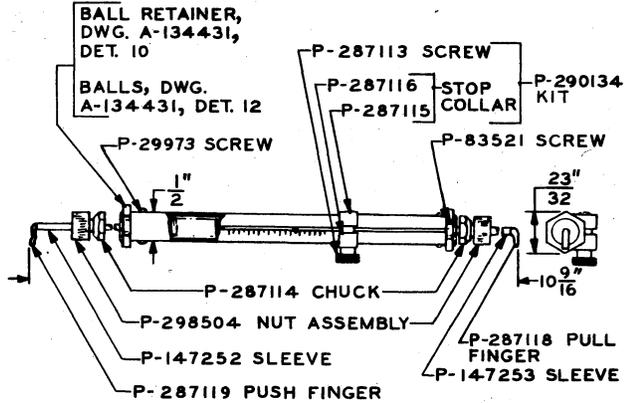

Gauges equipped with screw type fingers may be fitted with stop collar assembly, P-290134, as well as the new push and pull fingers, P-287119 and P-287118 respectively, with chuck, P-287114 and nut assembly P-298504. To replace a screw type finger, order the chuck and nut assembly as well as the push and pull fingers.

No. 79B gauge - 0-1000 gram push-pull tension gauge.

No. 79C gauge - 0-200 gram push-pull tension gauge.

No. 79C gauge replaces the No. 79A gauge.


For apparatus requirements and adjusting procedures for these gauges, refer to Section A438.920.

For general use.

GAUGE, 79D Manufacture Discontinued.
Replaced by the No. 79F gauge.

GAUGE, 79E Manufacture Discontinued.
Replaced by the No. 79F gauge.

GAUGE, 79F

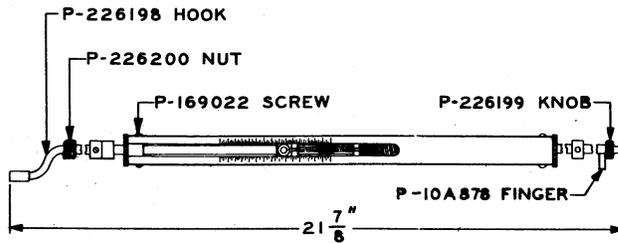

0-6000 gram push-pull tension gauge.

Replaces the Nos. 79D and 79E gauges.


For apparatus requirements and adjusting procedures for this gauge, refer to Section A438.920.

If the P-10A878 finger is required, it must be ordered separately.

For general use.

GAUGE, 80 Manufacture Discontinued.
Replaced by the No. 80B gauge.

GAUGE, 80B

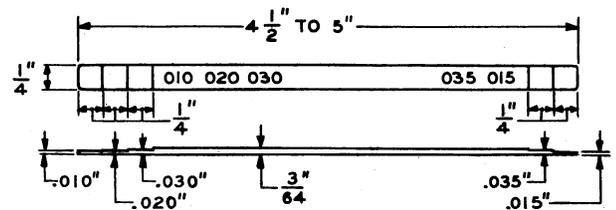


.010"-.020"-.030" and .015"-.035" double end thickness gauge.

Replaces the Nos. 54, 56, 71 and 80 gauges.

For use on clutches and elevator apparatus.

GAUGE, 81

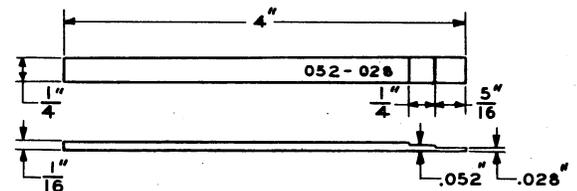

.028" and .052" double-step thickness gauge.

Replaces the Nos. 57 and 58 gauges.

For use on clutches.