

SUBSCRIBER SETS — 685B

COMMON BATTERY — NETWORK TYPE — CONNECTIONS

**TABLE A
 CONNECTIONS**

Type of Service	Subscriber Set Connections (Wire or Lead)																	
Prepay Manual and Dial Type Coin Collectors	TERMINAL LOCATION	Ringer Lead				Straps Network to Terminal Block		S-36 Relay Lead				Local Wiring from Coin Collector						
		SL	BK	R	SL-R	SL-BR	BR-Y	R	Y	BK*	SL	GN	R	BK	Y	GN	R	Y
Hand Set Types																		
191, 195, 196, 197 (CN, DN, GN, HN) (CNS, DNS, GNS, HNS) (CNT, DNT, GNT, HNT) 220, 223 (C, D, G, H) (CT, DT, GT, HT) 230, 233 (C, D, G, H)	NETWORK	K	—	—	—	C	A	—	—	B	—	GN	R	B	RR	—	—	—
	TERMINAL BLOCK	—	L1	L2	1	L2	1	L1	L2	—	K	—	—	—	—	L2	L1	K

* Sets received from the distributing house may have BK lead from S-36 relay connected to terminal 2 of terminal block. Move strap to terminal B of 425B network.

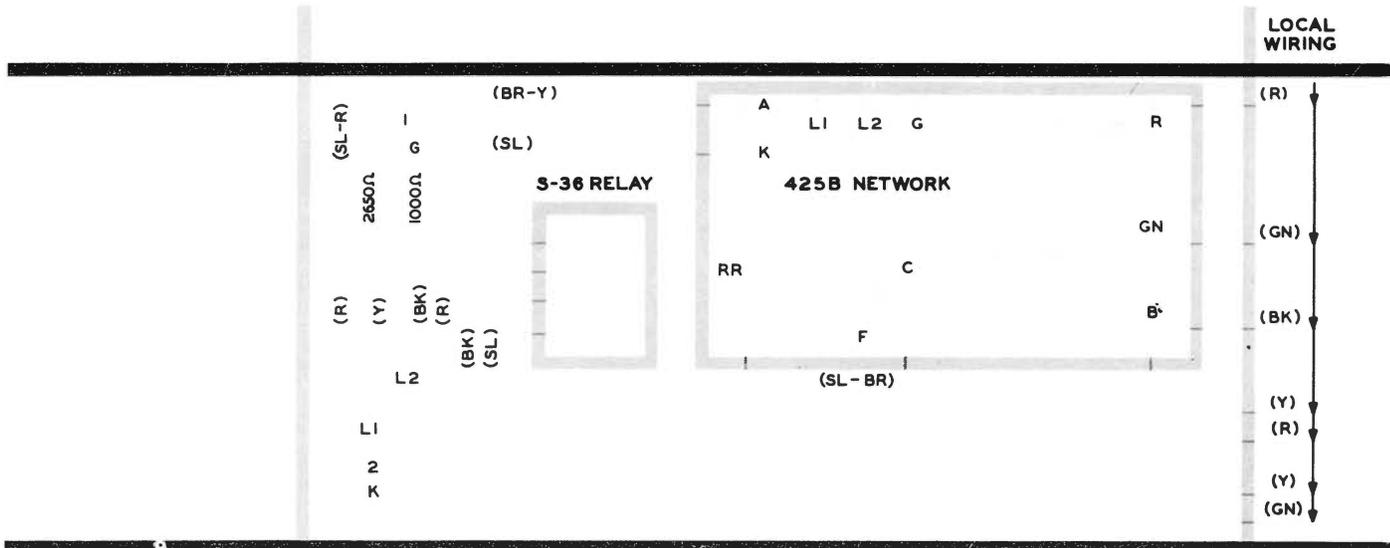


Fig. 1 — Circuit Diagram for Connection with Coin Collectors