

TELEPHONE SETS — 302AA, AC  
COMMON BATTERY — CONNECTIONS

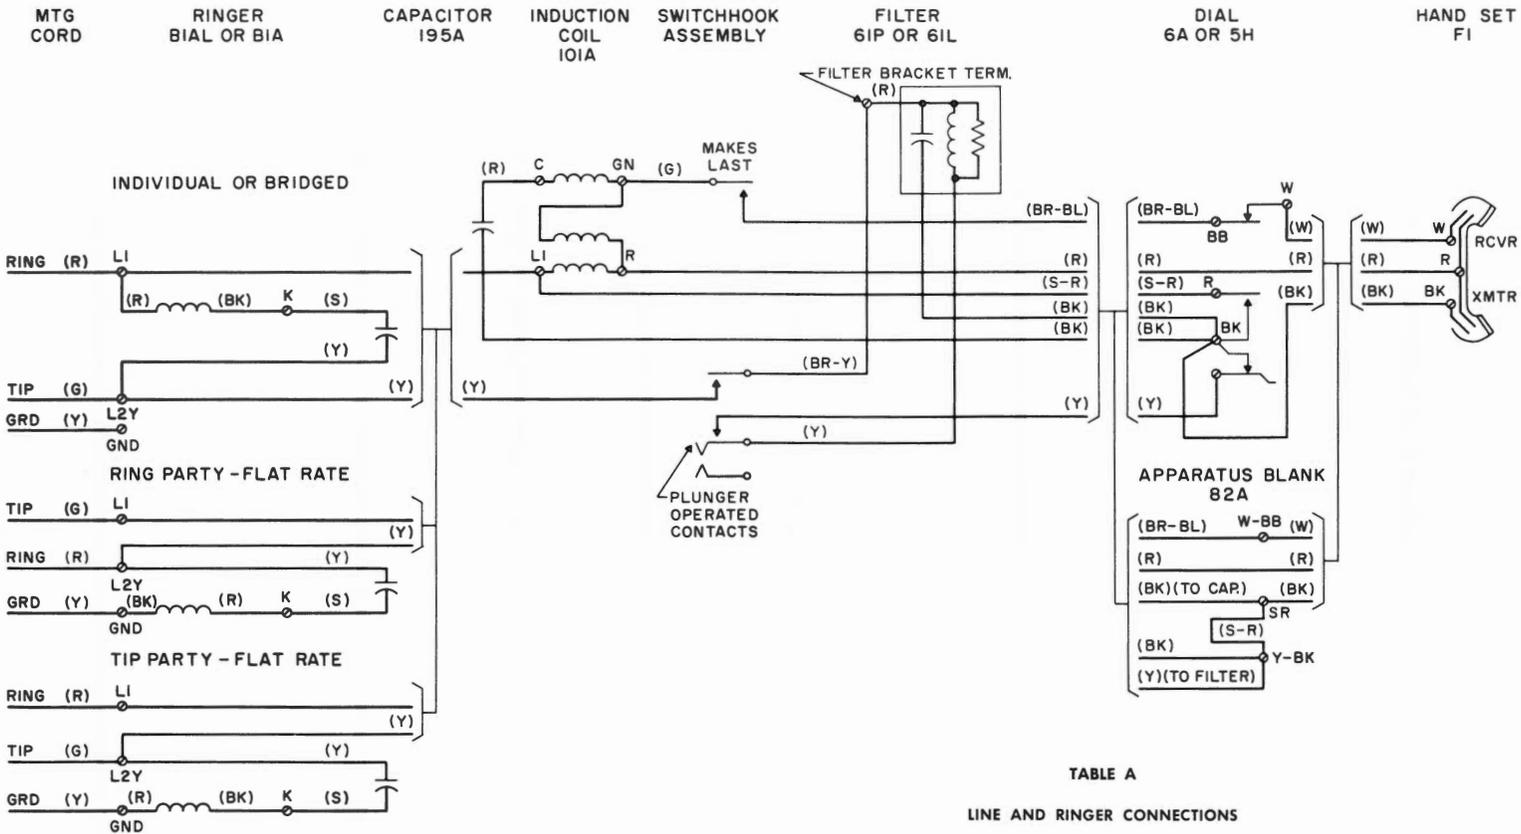


TABLE A  
LINE AND RINGER CONNECTIONS

| Wire or Lead                      |      | Individual or Bridged | Ring Party Flat Rate | Tip Party Flat Rate |
|-----------------------------------|------|-----------------------|----------------------|---------------------|
| Mounting Cord in Set              | R    | L1                    | L2Y                  | L1                  |
|                                   | G    | L2Y                   | L1                   | L2Y                 |
|                                   | Y    | Gnd                   | Gnd                  | Gnd                 |
| Ringer Lead                       | R    | L1                    | K                    | Gnd                 |
|                                   | BK   | K                     | Gnd                  | K                   |
| Mounting Cord at Connecting Block | R    | R                     | R                    | R                   |
|                                   | G    | G                     | G                    | G                   |
|                                   | Y    | Y                     | Y                    | Y                   |
| Line Wire at Connecting Block     | Ring | R                     | R                    | R                   |
|                                   | Tip  | G                     | G                    | G                   |
|                                   | Grd  | Y                     | Y                    | Y                   |

Note 1: These sets must be equipped with filter.

Note 2: To silence ringer permanently, connect both red and black ringer leads to K terminal.

Note 3: To convert to manual, remove slate-red wire from L1 of induction coil and R of dial, and terminate on SR and Y-BK of apparatus blank.

Fig. 1 — 302 AA, AC Telephone Sets