

50 AND 150 TYPE COIN COLLECTORS

ANTI-SIDETONE CONNECTIONS

1. GENERAL

1.01 This section gives information covering the connections for 50 and 150 type coin collectors and associated anti-sidetone subscriber sets. It is reissued to add three wire anti-sidetone subscriber set connections for 50 type coin collectors and to add the connections for 150-U and 150-W coin collectors.

1.02 The 150 type coin collectors differ in general from the 50 type in that they provide for an additional conductor between the subscriber set and the coin collector that is needed for anti-sidetone connections. The 150 type may be used with sidetone subscriber sets by omitting or not using the black conductor between the coin collector and the subscriber set.


1.03 In general, manual and dial prepayment coin collectors and dial postpayment coin collectors are used only on individual lines. Postpayment manual coin collectors can, however, be used on either individual or party lines. When postpayment coin collectors are used on party lines, use the proper subscriber sets for the class of service specified and make line and ringer connections in accordance with sections in Subdivision C46.

1.04 The three wire anti-sidetone circuit employing a 50 type coin collector and an anti-sidetone subscriber set requires that the L₂Y and BK terminals be strapped in the subscriber set. The connections in the coin collector are the same as for sidetone circuits. See the section in Subdivision C52 covering sidetone connections for information on 50 type coin collector connections.

1.05 Coin collectors for anti-sidetone connections are not provided for Local Battery Talking, Common Battery Signaling Stations.

2. COIN COLLECTOR CONNECTIONS


2.01 Individual Lines—Prepayment Manual and Dial Service.

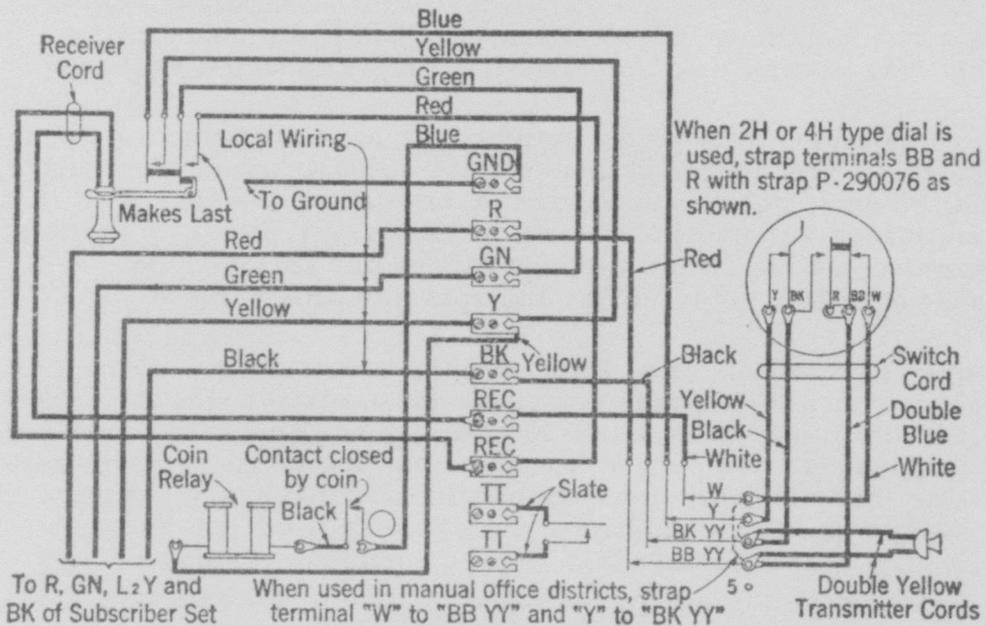

150-G and 150-H Type Coin Collectors

Fig. 1.


2.02 Individual Lines—Postpayment Dial Service.

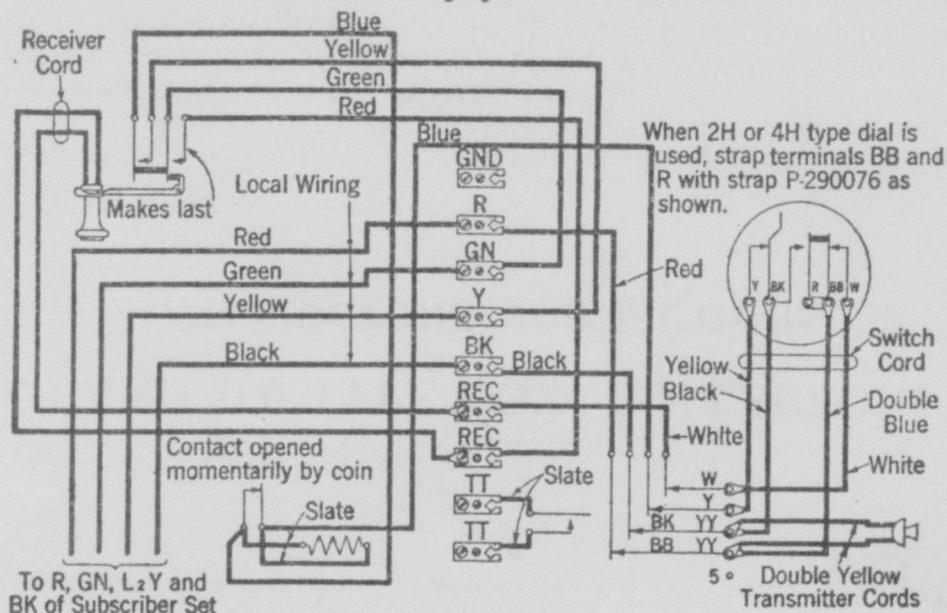

150-U and 150-W Coin Collectors

Fig. 2.


2.03 Individual and Party Lines—Postpayment Manual Service.

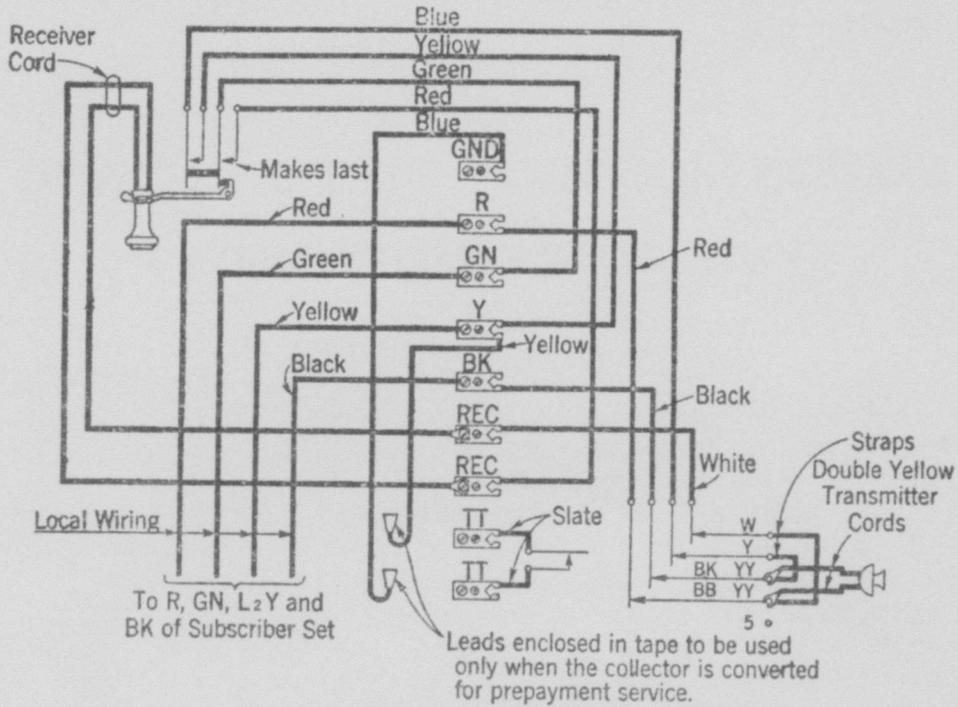

150-K and 150-L Coin Collectors
Fig. 3.


3. SUBSCRIBER SET CONNECTIONS

3.01 Individual Lines—Prepayment and Postpayment Manual and Dial Service—Using 150 Type Coin Collectors.

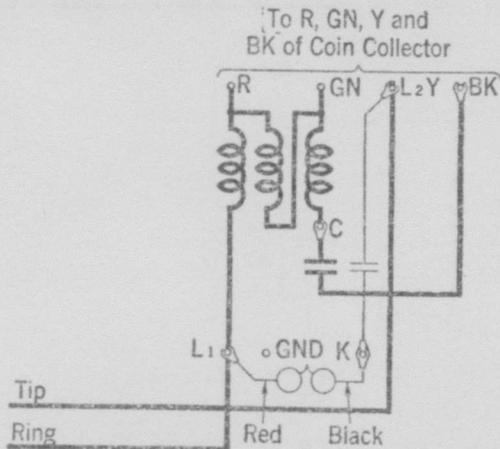

684-A Subscriber Set Shown
Fig. 4.

3.02 Individual Lines—Prepayment and Postpayment Manual
and Dial Service—Using 50 Type Coin Collectors.

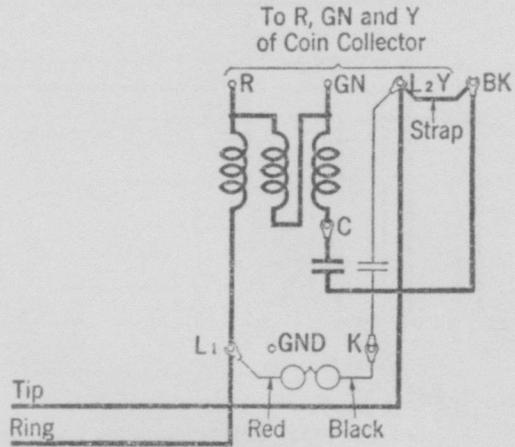

684-A Subscriber Set Shown
Fig. 5.