
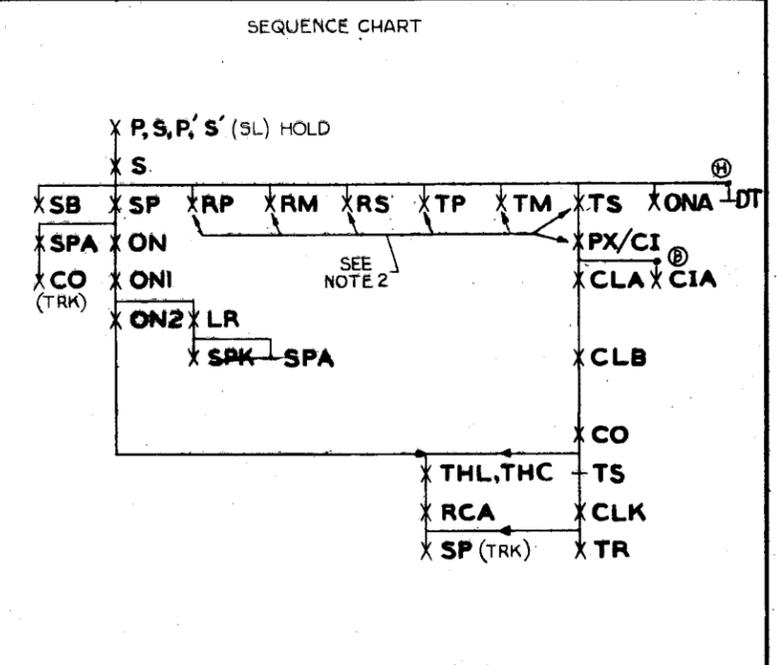


MP-11642

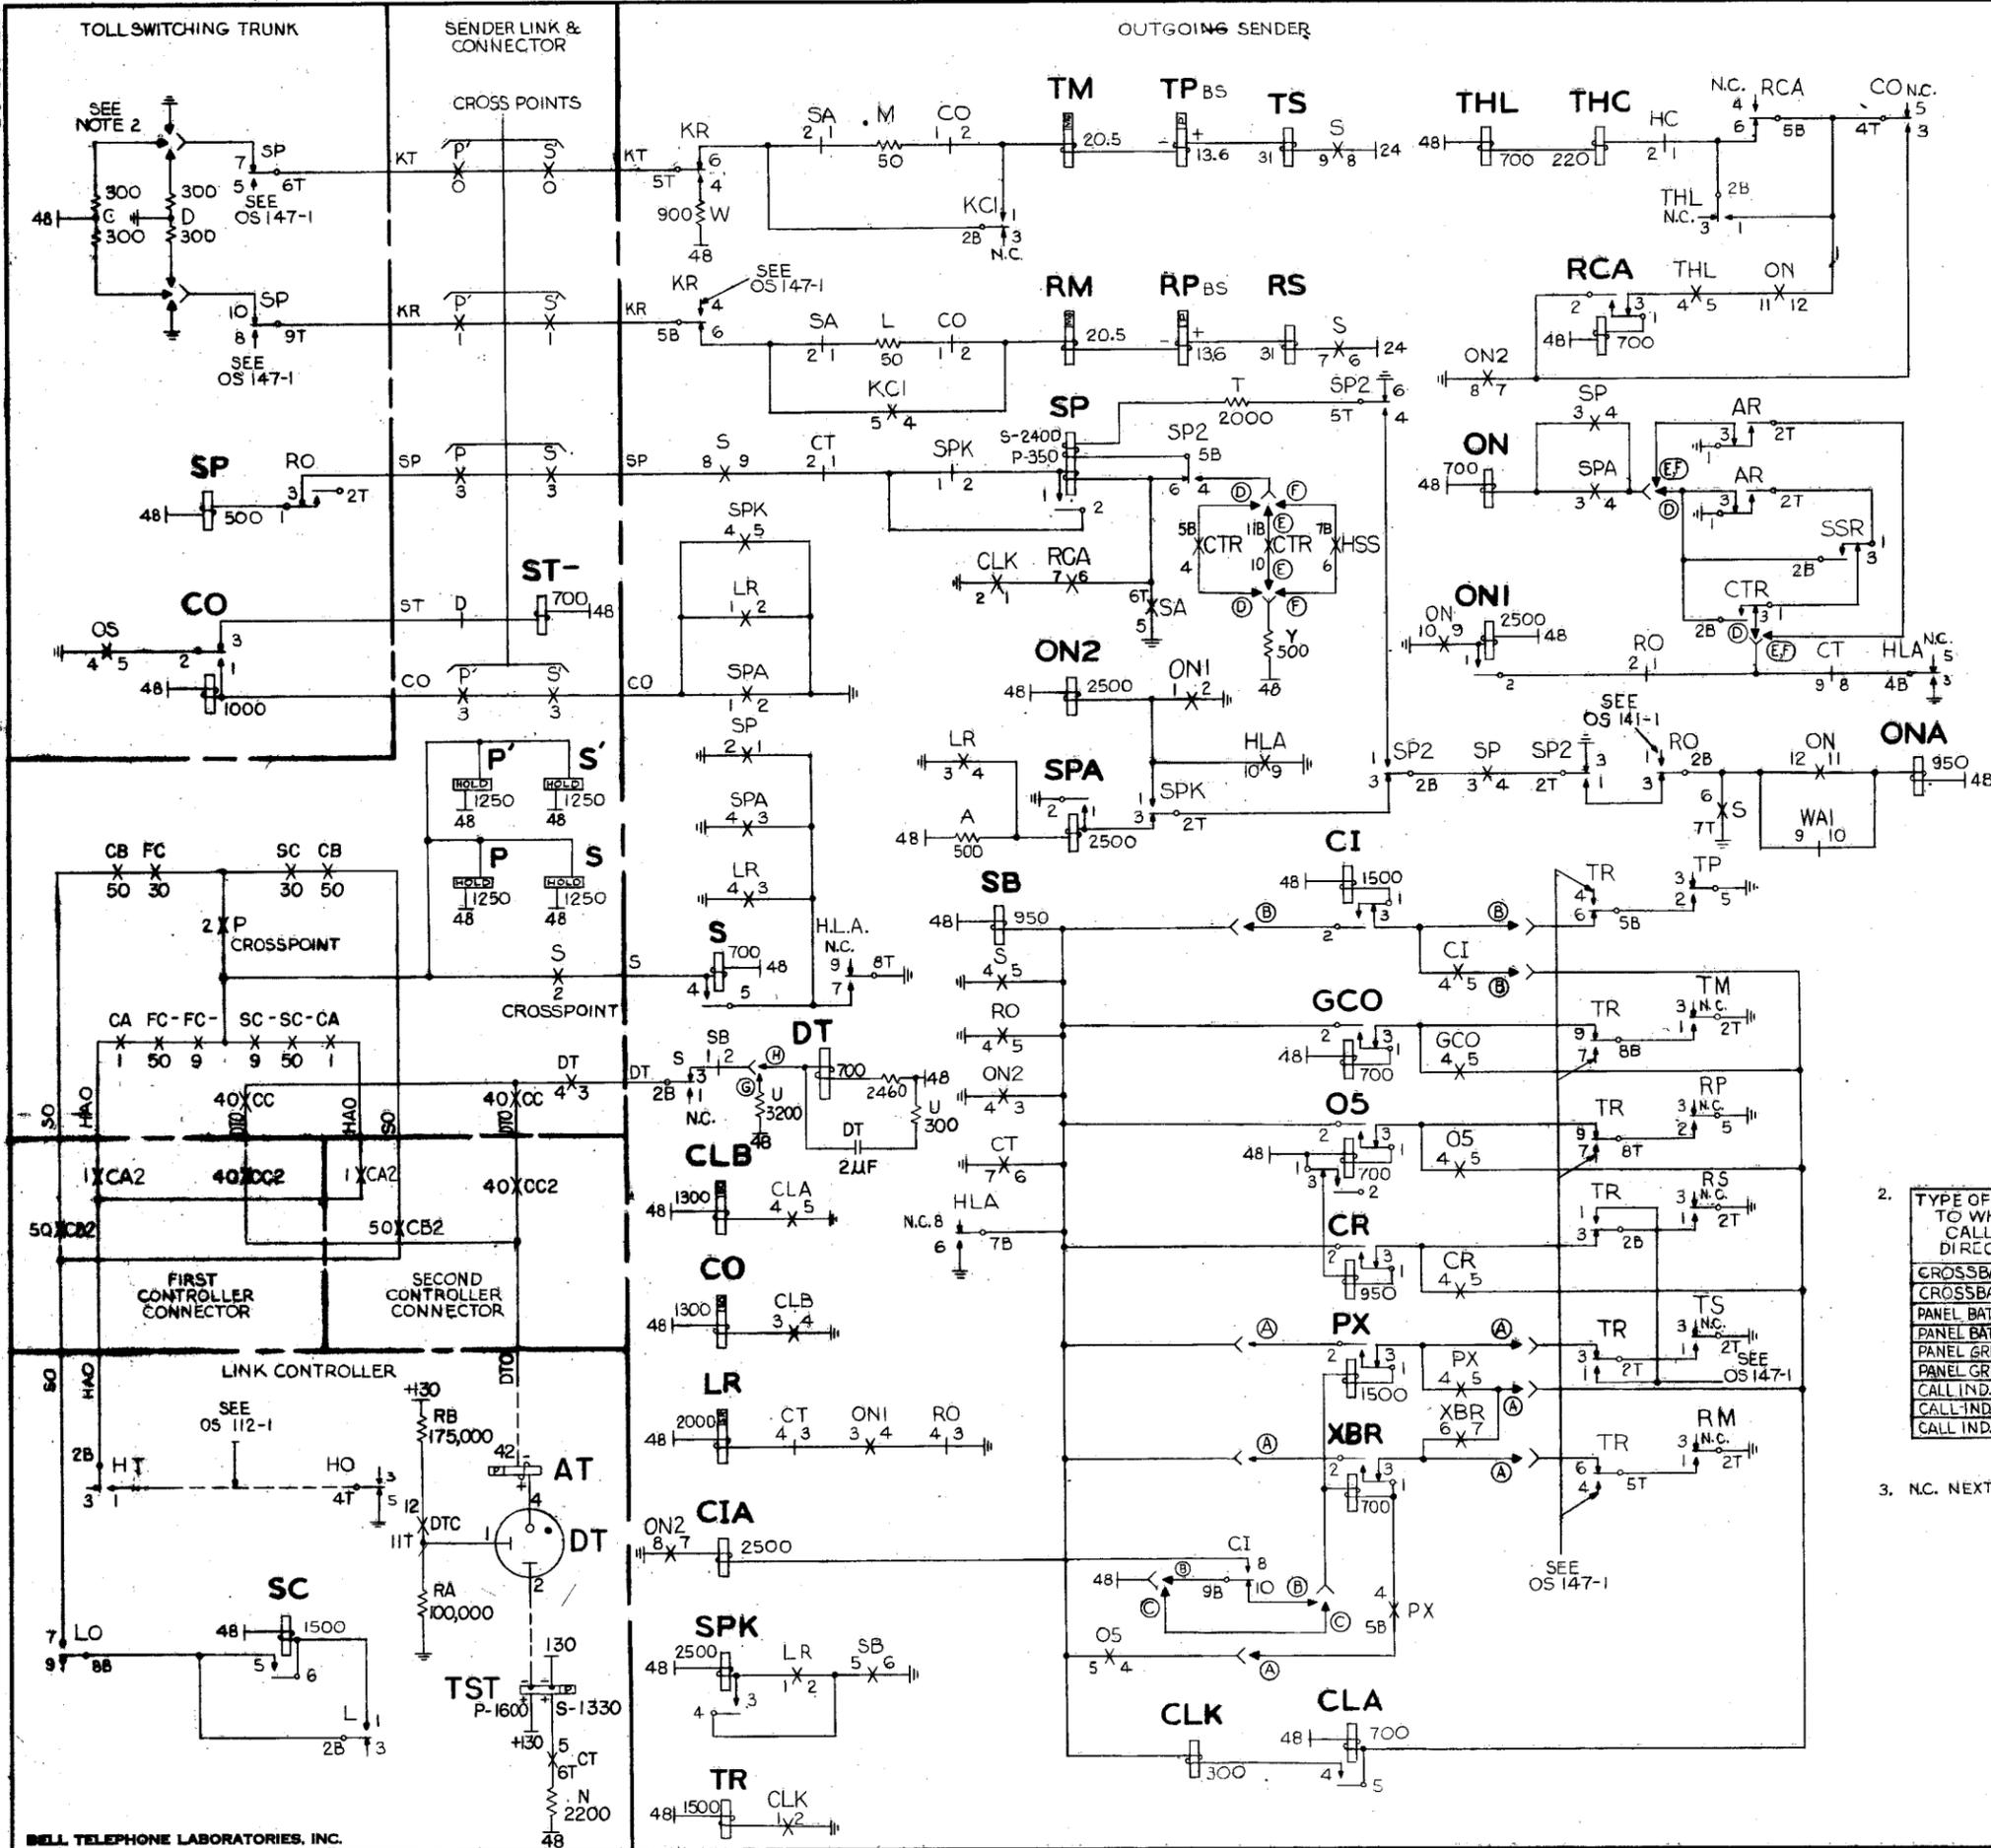

OS OPTION	FEATURE OR OPTION	SD OPTION	SD
A	WHEN USED FOR DIAL OFFICES EQUIPPED FOR REVERTIVE PULSES.	U	
B	WHEN USED FOR MANUAL OFFICES EQUIPPED FOR P.C.I. PULSES	ZQ	
C	WHEN FEATURE ABOVE IS NOT PROVIDED.	"Z" LOOP	
D	WHEN CHAIN K.T. AND (CTR) KEY METHOD FOR HOLDING STUCK SENDERS IS PROVIDED	FIG. A	68018-01
E	WHEN COMMON KEY METHOD FOR HOLDING STUCK SENDERS IS PROVIDED.	FIG. B	
F	WHEN COMMON KEY METHOD FOR HOLDING STUCK SENDERS IS PROVIDED. FOR MODIFICATION OF OFFICES TO COMMON KEY METHOD. FOR ADDITIONS TO OFFICES THAT HAVE BEEN MODIFIED AND FOR OFFICES WHERE FIG. A HAS NEVER BEEN INSTALLED.	FIG. C	
G	IMPROVED LK. CONT. HOLDBACK OR TR. USAGE REC.	FIG. D	
H		FIG. E	

OFFICE CLASS INDICATIONS

TYPE OF OFFICE TO WHICH CALL IS DIRECTED	TYPE OF RINGING	WIRING OPTIONS		PULSE AND CLASS RECEIVING RELAYS								CLASS REGISTER RELAYS					
		CONT.	AUTO	KT	KR	TS	RS	TP	RP	TM	RM	O5	PX	XBR	CR	GCO	CI
CROSSBAR	✓			300Ω GRD.	300Ω BAT.	X	X		X			X	X	X	X	X	X
CROSSBAR	✓			300Ω GRD.	GRD.	X	X				X	X	X	X	X	X	X
PANEL BAT. CUT-OFF	✓			300Ω GRD.	OPEN	X	X				X	X	X	X	X	X	X
PANEL BAT. CUT-OFF	✓			300Ω GRD.	300Ω GRD.	X	X				X	X	X	X	X	X	X
PANEL GRD. CUT-OFF	✓			GRD.	OPEN	X	X				X	X	X	X	X	X	X
PANEL GRD. CUT-OFF	✓			GRD.	300Ω GRD.	X	X				X	X	X	X	X	X	X
CALL IND. TO 9999	✓			300Ω BAT.	OPEN	X	X				X	X	X	X	X	X	X
CALL IND. TO 10499	✓			300Ω BAT.	GRD.	X	X				X	X	X	X	X	X	X
CALL IND. TO 10999	✓			300Ω BAT.	300Ω BAT.	X	X				X	X	X	X	X	X	X

X DENOTES RELAY OPERATED.

3. N.C. NEXT TO CONTACT MEANS NO CONNECTION ON THAT CONTACT.

CONTROLLER CONNECTOR CKT. SD-68336-01, ISS. 9
 LINK CONTROLLER SD-68028-01, ISS. 28
 * OUTGOING SENDER (REV. & P.C.I.) SD-68018-01, ISS. 28
 SENDER LINK & CONN. CKT. SD-68334-01, ISS. 14
 TOLL SWITCHING TRUNK CKT. SD-68326-01, ISS. 10

NO. 4A OR 4M TOLL

OUTGOING SENDER SEIZURE
 OS 146-1