

MARKER


DECODER CONNECTOR

DP INCOMING SENDER

SENDER LINK AND CONNECTOR

I.T. TRUNK

INCOMING LINK AND CONNECTOR

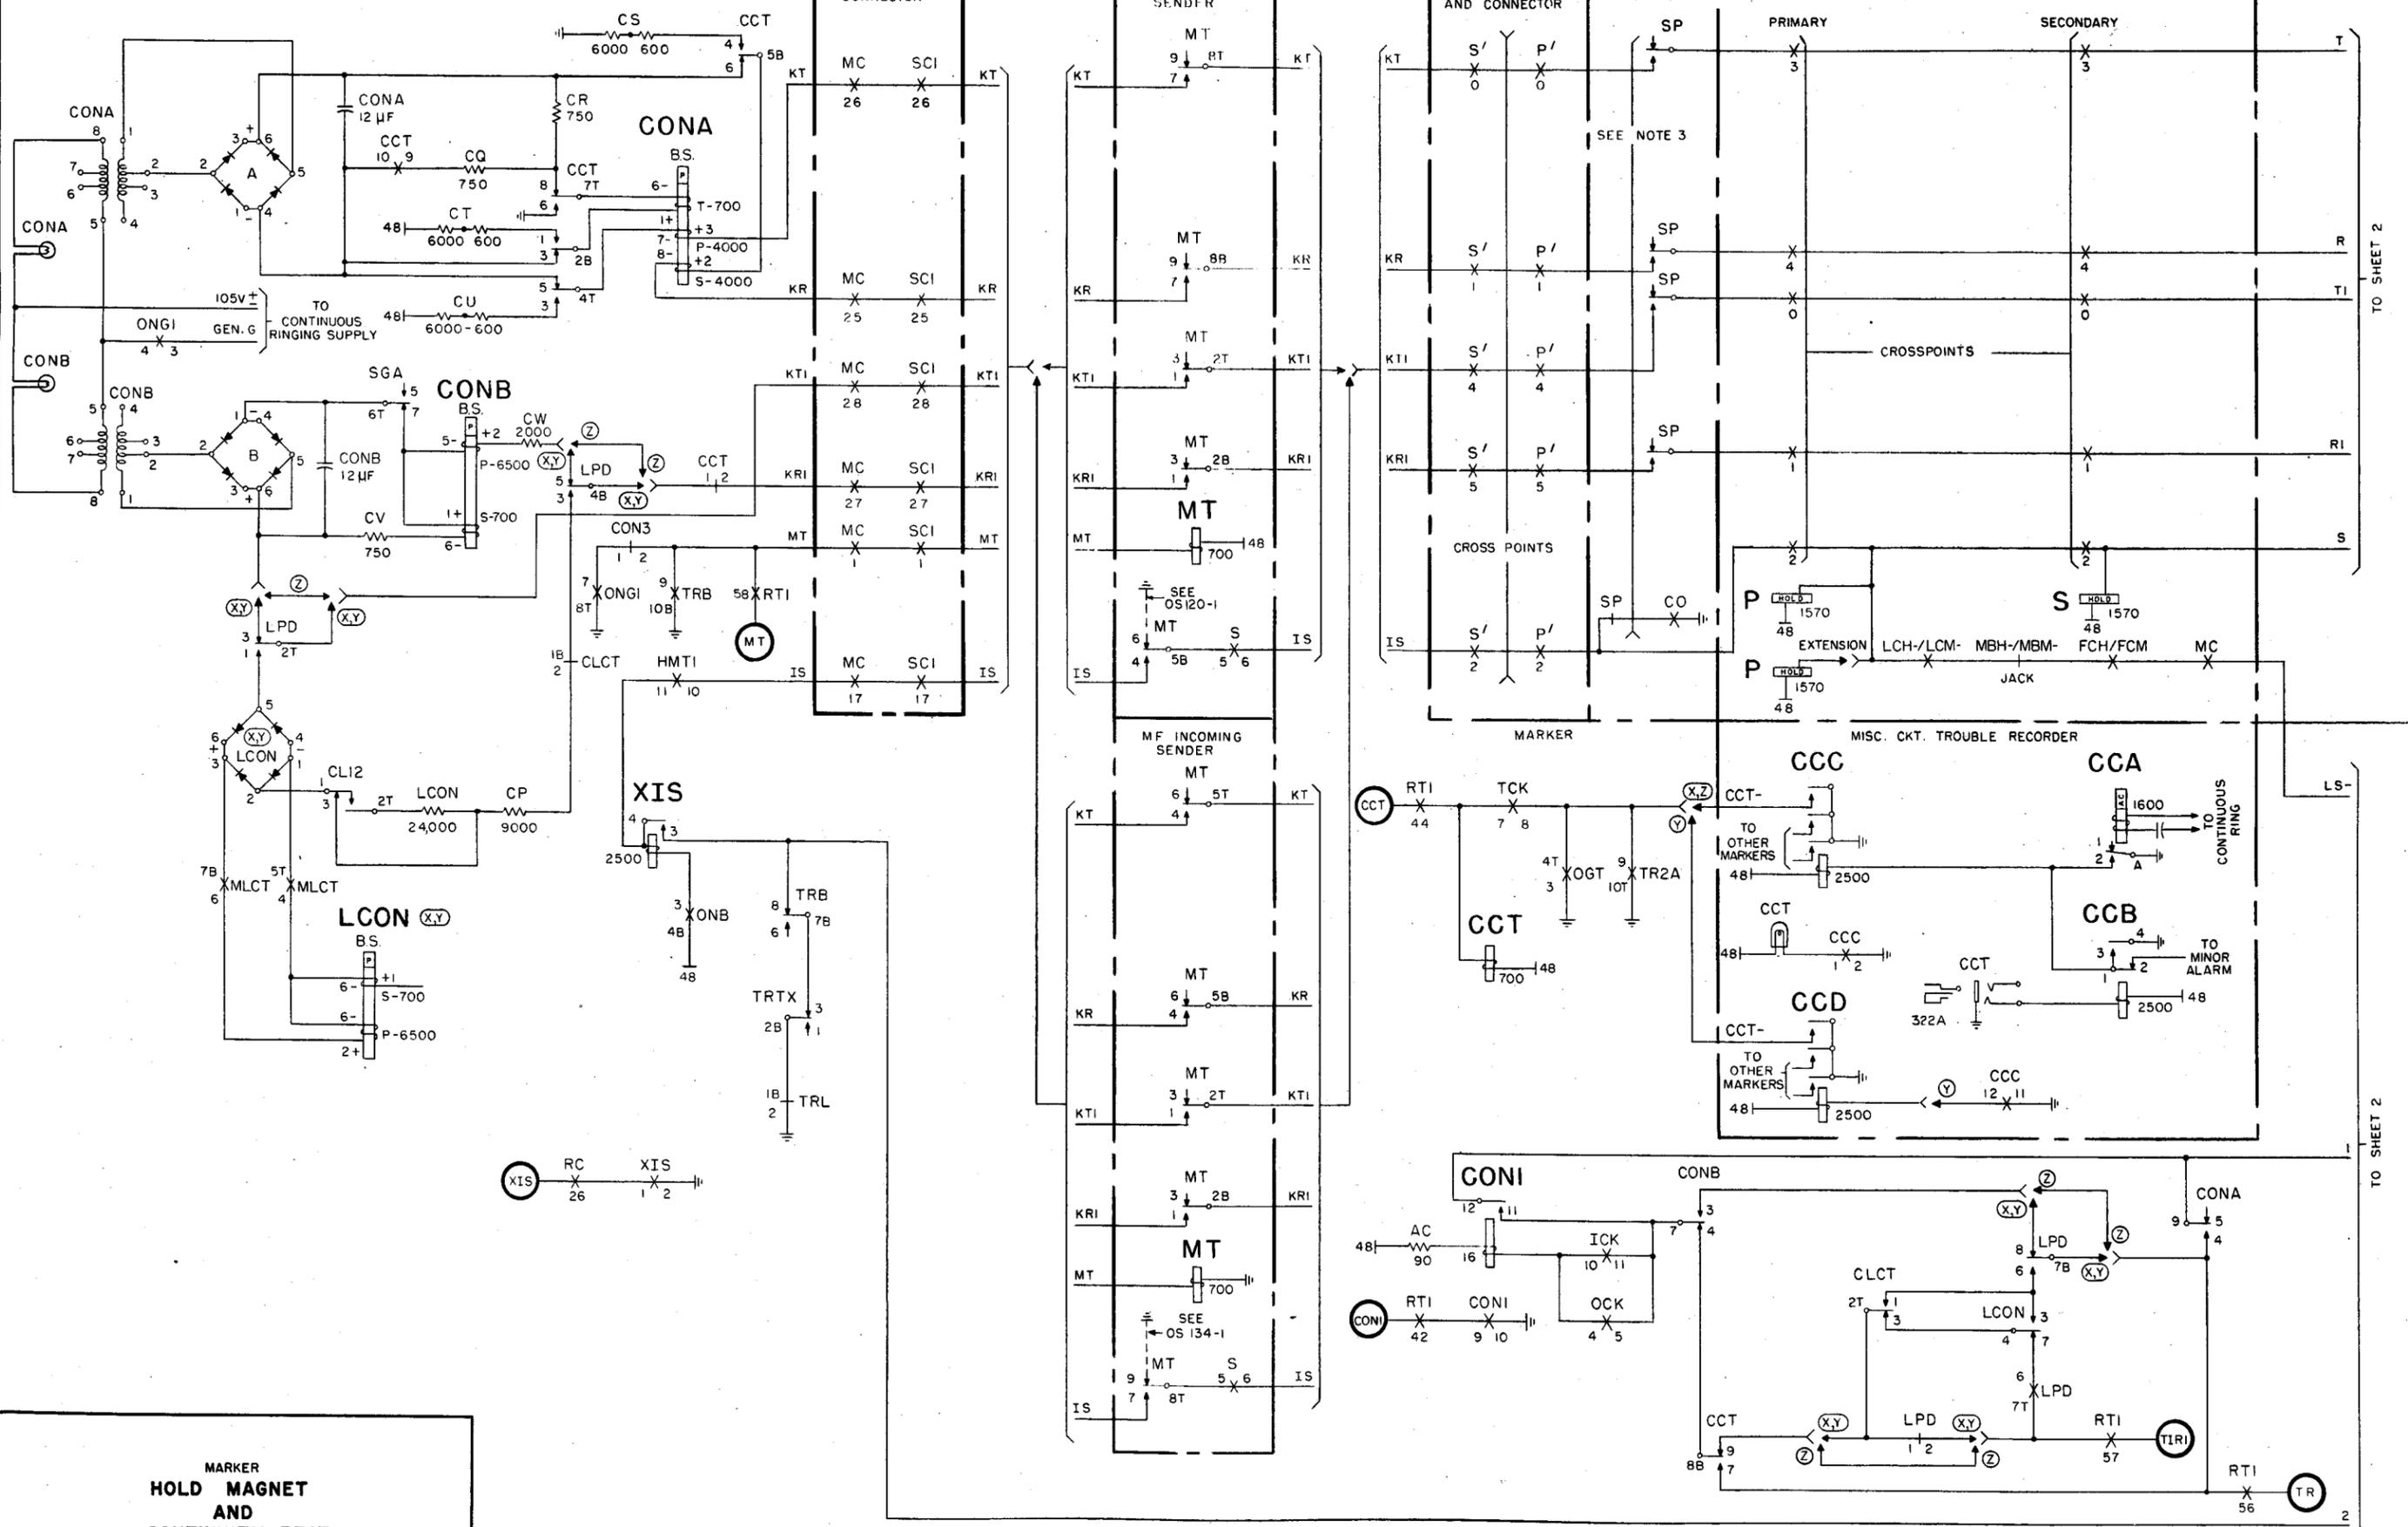

TO SHEET 2

TO SHEET 2

ISSUE	1
DATE	10-1-51


3 SHEETS, SHEET 1

MP-11701

MARKER  
HOLD MAGNET  
AND  
CONTINUITY TEST



SEQUENCE CHART

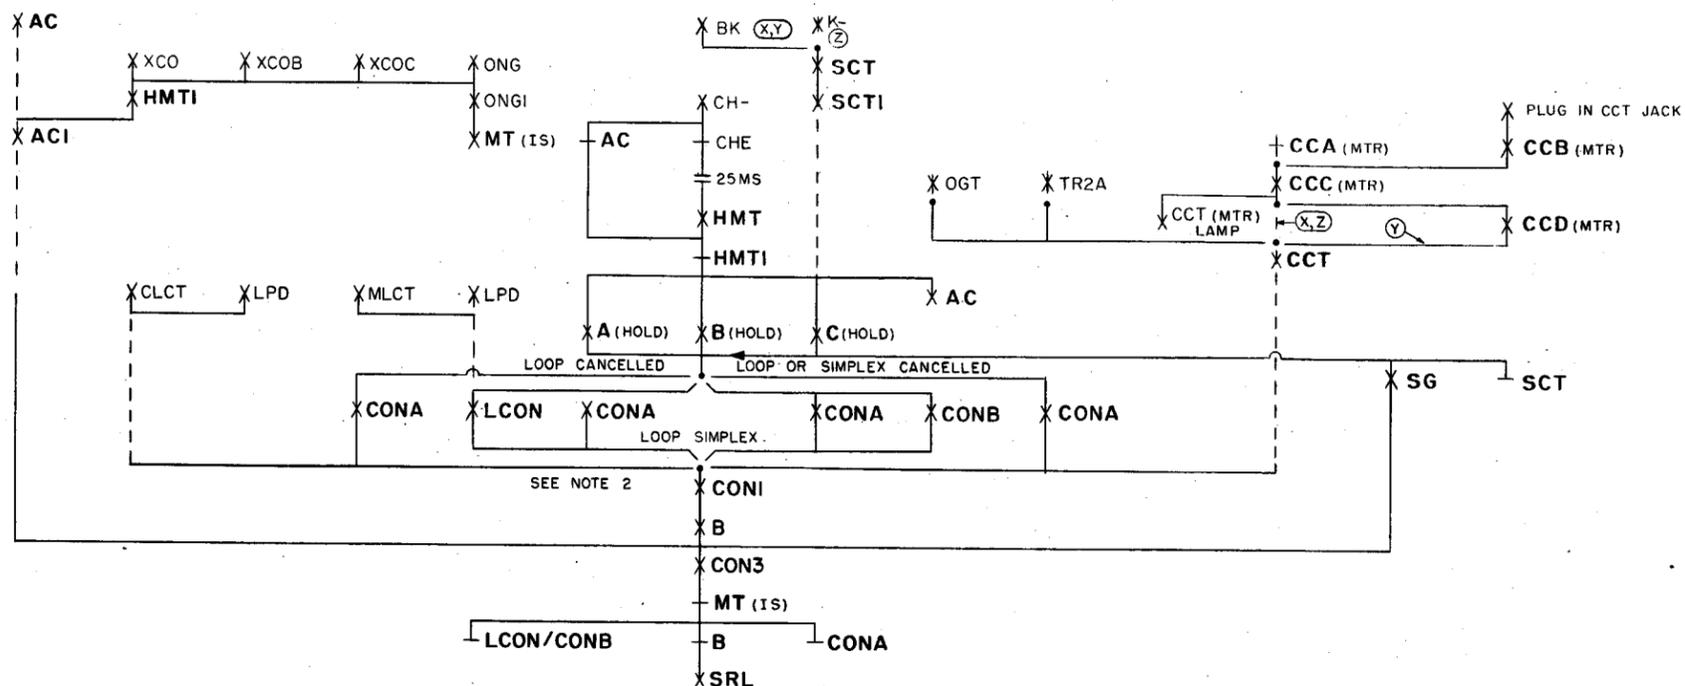

NOTES:

OS OPTION	FEATURE OR OPTION	SD OPTION	SD
X	FOR COMBINED MARKERS	X	68388-01
Y	FOR TOLL COMPLETING MARKERS	Y	68388-01
Z	FOR INTERTOLL MARKERS	Z	68388-01

2.

CONI RELAY OPERATING CONDITIONS				
CLASS RELAYS OPERATED	LPD RELAY OPERATED	TYPE OF OUTGOING TRUNK	CONDITIONS FOR CANCELLATION OF CONTINUITY TEST ON OTI-ORI	RELAY OPERATIONS REQUIRED TO OPERATE CONI RELAY
0-7 AND 14	NO	SIMPLEXED OT-OR & OTI-ORI	NONE-CONTINUITY TEST MADE RINGING SUPPLY FAILURE, OUTGOING TRUNK TEST BY 17-C TESTBOARD, SECOND TRIAL, OR PLUG IN CC JACK	CONA AND CONB  CONA AND CCT
8-13	YES	SIMPLEXED OT-OR AND LOOP OTI-ORI	NON-CONTINUITY TEST MADE RINGING SUPPLY FAILURE, OUTGOING TRUNK TEST BY 17-C TESTBOARD, SECOND TRIAL, OR PLUG IN CC JACK CANCEL LOOP CONTINUITY TEST INSTRUCTION FROM DECODER	CONA AND LCON  CONA AND CCT  CONA AND CLCT

3. CONTACT ARRANGEMENTS VARY DEPENDING ON TYPE OF INTERTOLL TRUNK

- DECODER CONNECTOR CKT. SD-68339-01, ISS. 2
- INCOMING INTERTOLL TRK. CKT. DP SD-68135-01, ISS. 13
- INCOMING INTERTOLL TRK. CKT. MF SD-68230-01, ISS. 4
- INCOMING LINK & CONNECTOR CKT. SD-68393-01, ISS. 5
- INCOMING SENDER CKT. DP SD-68221-01, ISS. 12
- INCOMING SENDER CKT. MF SD-68222-01, ISS. 12
- \* MARKER CKT. SD-68388-01, ISS. 2
- MISC. CKT. TROUBLE RECORDER SD-68392-01, ISS. 3
- OUTGOING IT TRUNK CKT DP OR MF CX SIGNAL SD-68231-01, ISS. 5
- OUTGOING LINK & CONNECTOR CKT. SD-68394-01, ISS. 4
- SENDER LINK & CONNECTOR CKT. SD-68334-01, ISS. 11
- TOLL SWITCHING TRUNK CKT. SD-68242-01, ISS. 7
- TRUNK BLOCK CONNECTOR CKT. SD-68027-01, ISS. 16
- 2-WAY INTERTOLL TRK. CKT. DP SD-68232-01, ISS. 9
- 2-WAY INTERTOLL TRK. CKT. MF SD-68233-01, ISS. 11

ISSUE	1	2	3	4	5
DATE	10-1-51				

MARKER  
HOLD MAGNET  
AND  
CONTINUITY TEST