



Carrier VoIP

# SAM21 Shelf Controller Performance Management

Document status: Standard  
Document version: 08.01  
Document date: 20 October 2006

Copyright © 2006, Nortel Networks  
All Rights Reserved.

The information in this document is sourced in Canada, the United States of America, and the United Kingdom.

This is the Way, This is Nortel, Nortel, the Nortel logo, the globemark design, and the NORTEL NETWORKS corporate logo, are trademarks of Nortel Networks. All other trademarks are the property of their respective owners. All rights reserved.

---

# SAM21 Shelf Controller Performance Management

---

## New in this release

There are no changes in this release.

## Strategy

With the exception of the ATM interface OMs, the Shelf Controllers do not generate performance data. However, software on the Shelf Controller monitors the status of itself and generates a log report or alarm to record trouble conditions.

The Shelf Controllers do not require periodic hardware exercise tests or SWACTs to reduce faults or improve reliability.

## Review ATM interface operational measurements

If the SNMP Poller application is configured to retrieve ATM interface operation measurements (OM) from the Shelf Controller, the data is retrieved and stored in the /data/oms directory on the host that provides the CS 2000 Management Tools. These OMs are best viewed and analyzed with an OSS tool.

Operational measurement	Value and possible action
cellDropCount	This integer value indicates the cumulative number of dropped cells.
cellDropCountEventTimestamp	This integer value indicates the timestamp for the most recently dropped ATM cell. This integer is expressed in seconds since January 1, 1970.
totalBytesSent	<p>This integer value indicates the cumulative number of bytes sent over the interface during a 15 minute interval. If an ATM connection becomes unavailable during an interval, the statistics related to that connection are not recorded.</p> <p>For example, the reported value for an interval is 156739 bytes. One connection is lost, and the reported value for the next interval is 124398. The reported number of bytes sent in the second interval decreased because the statistics related to the dropped connection were not included in the total number of bytes sent.</p>
bytesSentPerSec	<p>This integer value represents the totalBytesSent value for the previous 15 minute interval subtracted from the totalBytesSent value for the current 15 minute interval, and then divided by 900.</p> $\frac{\text{current totalBytesSent} - \text{previous totalBytesSent}}{900 \text{ seconds}} = \text{bytesSentPerSec}$
totalBytesRxd	This integer value indicates the cumulative number of bytes received by the interface during a 15 minute interval. The behavior described for totalBytesSent also applies to this statistic.
bytesRxdPerSec	This integer value reports the same information as bytesSentPerSec, except that the statistics are for the receiving direction.
oversizedPDUCount	This integer value indicates the cumulative number of oversized protocol data units (PDU).

Operational measurement	Value and possible action
rxedTimeoutCount	This integer value indicates the cumulative number of timeouts received at the far end node.
omUpdateTime	This integer value indicates when the operational measurements were last updated. This integer is expressed in seconds since January 1, 1970.

## Configure access to GWC and Shelf Controller MIB data

---

### Purpose of this procedure

Use this procedure to configure the IP address of a device or application that can access gateway controller (GWC) and SAM21 Shelf Controller MIB information.

This allows GWCs and SAM21 Shelf Controllers to be polled for MIB data by an Integrated Element Management System (IEMS) application (the preferred method) deployed on a host other than the CS 2000 Management Tools server.

This procedure does not interfere with the SNMP PM Poller application available at the CS 2000 Management Tools server. SNMP polling from the IEMS can be configured in addition to the PM Poller application residing on the CS 2000 Management Tools server.

**Note 1:** The IEMS may reside on the CS 2000 Management Tools server. In this case, the IEMS uses the IP address of the SSPFS server for element management communications.

**Note 2:** You can also use this procedure to configure access to GWC and SAM21 Shelf Controller MIB data from an SNMP poller application that is not part of an IEMS.

**Note 3:** Performance statistics for the SAM21 Shelf Controllers are available only if the SAM21 Shelf Controllers are configured with ATM interfaces.

### When to use this procedure

Use this procedure if you are adding an IEMS to your network.

You can also use this procedure to configure access to GWC and SAM21 Shelf Controller MIB data from an SNMP poller application that is not part of an IEMS.

### Prerequisites and guidelines

Performance data from the GWC is collected using one of the following applications:

- IEMS data collection job  
From SN08 onwards, this is the recommended method.
- SNMP PM Poller on the CS 2000 Management Tools server. This application is available, but is no longer supported.

If no server is configured, the GWCs and SAM21 Shelf Controllers continue to respond to SNMP requests from the PM Poller application deployed on the CS 2000 Management Tools.

Immediately after performing this procedure, a message is sent from the CS 2000 SAM21 Manager server application to the SAM21 Shelf Controllers to allow SNMP requests from the newly configured device or application. It is not necessary to reboot the GWC or SC cards.

## Action

---


### Step Action

---

*At the CS 2000 SAM21 Manager client*

- 1 At the CS 2000 SAM21 Manager Subnet View, click on the **Configuration** menu and select **Subnet Level Configuration**.

The Subnet Configuration window opens.

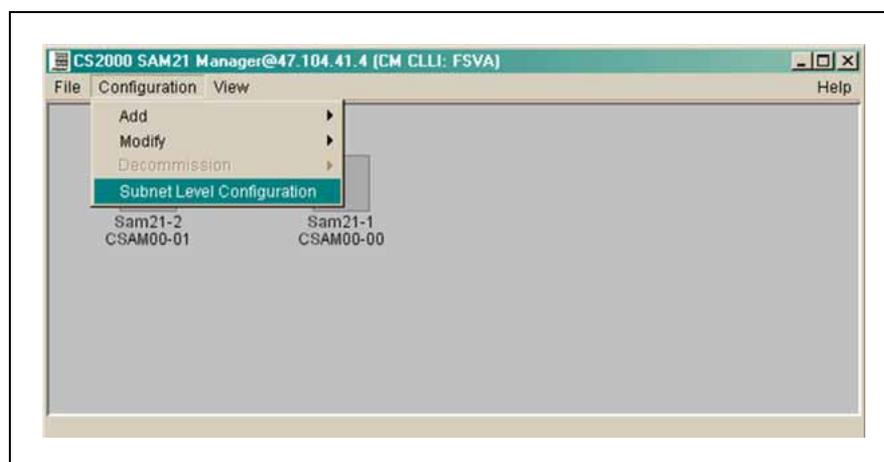

- 2 Determine your next step using the following table:

If	Do
you wish to configure a device or application to access MIB information (initial configuration)	<a href="#">step 3</a>
you wish to remove the setting for a device or application that currently has access to MIB information	<a href="#">step 4</a>
you wish to change the device or application that has access to MIB information	<a href="#">step 5</a>


---

- 3 Perform the following steps to configure a device or application to access MIB data (initial configuration):

- a. Enter a valid IP address for the device or application in the IP field.

Use the format <0-255>.<0-255>.<0-255>.<0-255>.

If the IP address is not valid, the IP field is outlined in red. Click the **Details** button for help on entering a valid address.

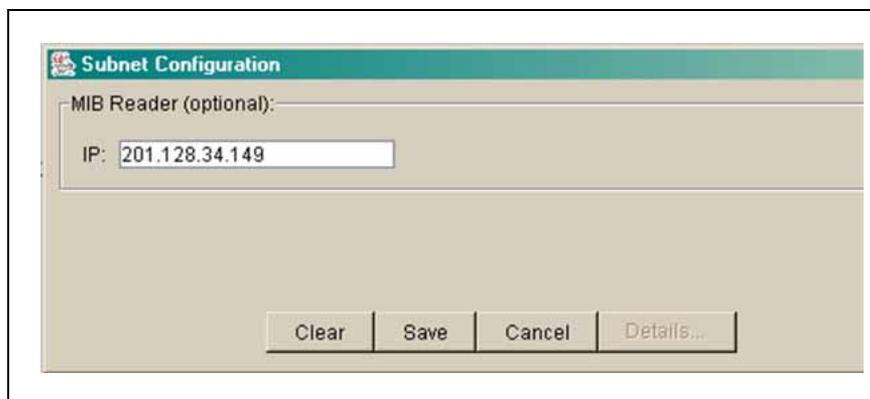

- b. Click the **Save** button to implement the change.

GWCs and the SAM21 Shelf Controllers will now respond to SNMP request from the IP address identified in the previous step.

- c. Go to [step 6](#).

- 4 Perform the following steps to remove an existing subnet configuration setting from the system:

**Note:** The current IP address setting appears in the IP field.

- a. Click the **Clear** button to remove the entry in the IP field.  
b. Click the **Save** button to implement the change.

The existing setting is removed. Any SNMP requests from the IP address previously configured are now rejected.

- c. Go to [step 6](#).

- 5 Perform the following steps to change an existing subnet configuration setting:

**Note:** The current IP address setting appears in the IP field.

- a. Click the **Clear** button to remove the entry in the IP field.  
b. At the Subnet Configuration window, enter a valid IP address for the IEMS in the IP field.

Use the format <0-255>.<0-255>.<0-255>.<0-255>.

If the IP address is not valid, the IP field is outlined in red. Click the **Details** button for help on entering a valid address.

- c. Click the **Save** button to implement the change.

The setting is changed. MIB data for the GWC and SAM21 Shelf Controller is now available to the IP address configured in the previous step. Any SNMP requests from the IP address previously configured are now rejected.

- 6 This procedure is complete.

---

—End—

---





Carrier VoIP

## SAM21 Shelf Controller Performance Management

Copyright © 2006, Nortel Networks  
All Rights Reserved.

Publication: NN10155-711  
Document status: Standard  
Document version: 08.01  
Document date: 20 October 2006

To provide feedback or report a problem in this document, go to [www.nortel.com/documentfeedback](http://www.nortel.com/documentfeedback).

The information in this document is sourced in Canada, the United States of America, and the United Kingdom.

The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose it only to its employees with a need to know, and shall protect it, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

This is the Way, This is Nortel, Nortel, the Nortel logo, the globemark design, and the NORTEL NETWORKS corporate logo, are trademarks of Nortel Networks. All other trademarks are the property of their respective owners. All rights reserved.

