




# 360fly 4K Battery Replacement

This page will guide you on the replacement of the battery on your 360fly 4K camera.

Written By: Jacob Herron

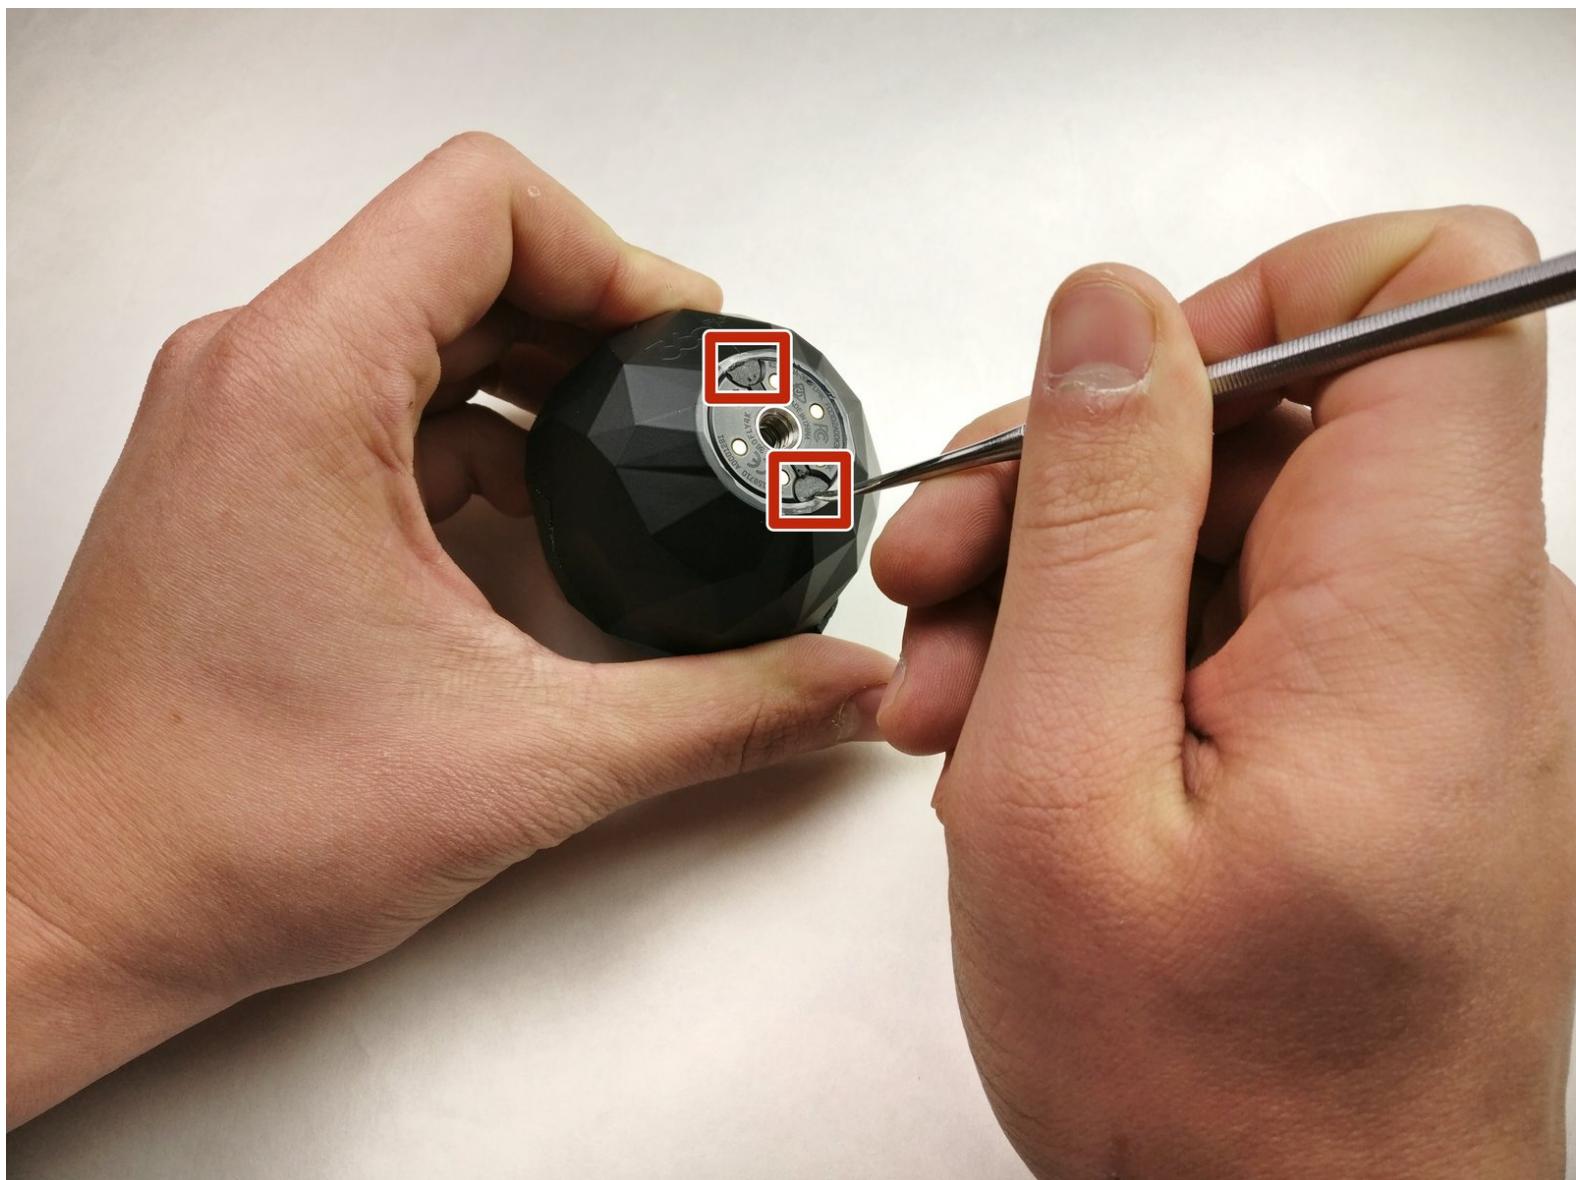


## INTRODUCTION

This page will guide you on the replacement of the battery on your 360fly 4K camera.

### TOOLS:

- [T4 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery

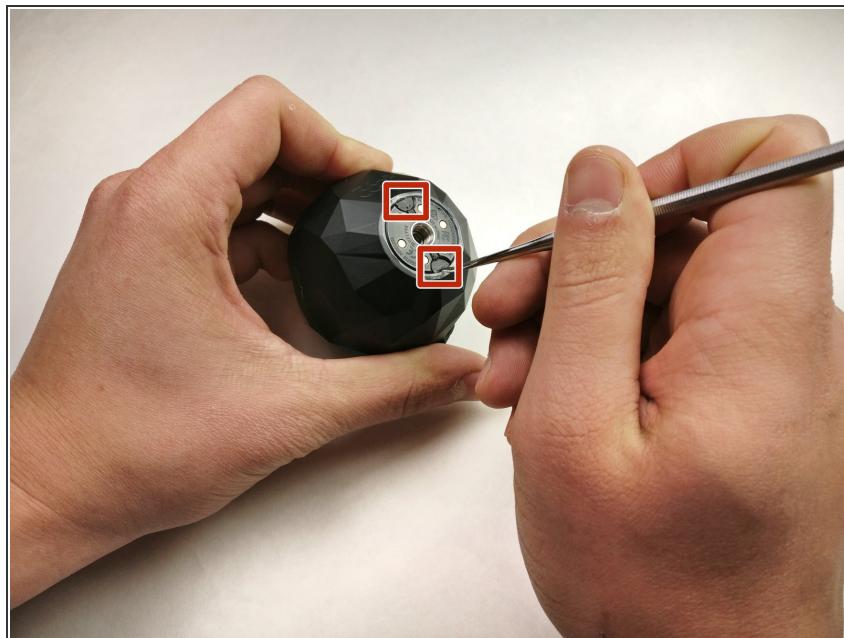


- Flip the camera upside down and peel off the two plastic screw covers with the metal spudger to reveal the screws.

## Step 2



- Remove the two 5mm T4 screws from the bottom of the camera with a t4 screw driver.

## Step 3

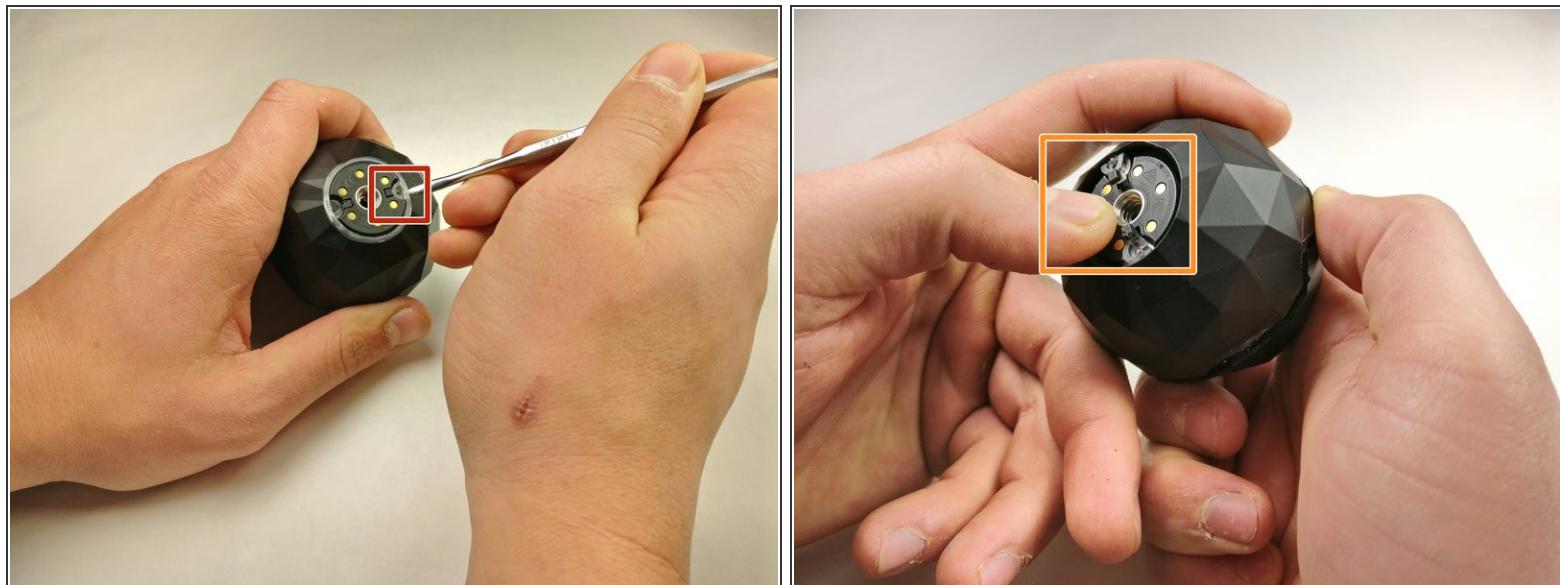



- Gently pry the plastic ring from around the charging plate with the metal spudger.
- Remove the outside shell by pressing against the center of the charging plate and pulling the bottom shell away from the top shell.

## Step 4




- Remove the five 2mm T4 screws and pull off the charging plate assembly with the t4 screw driver.

## Step 5

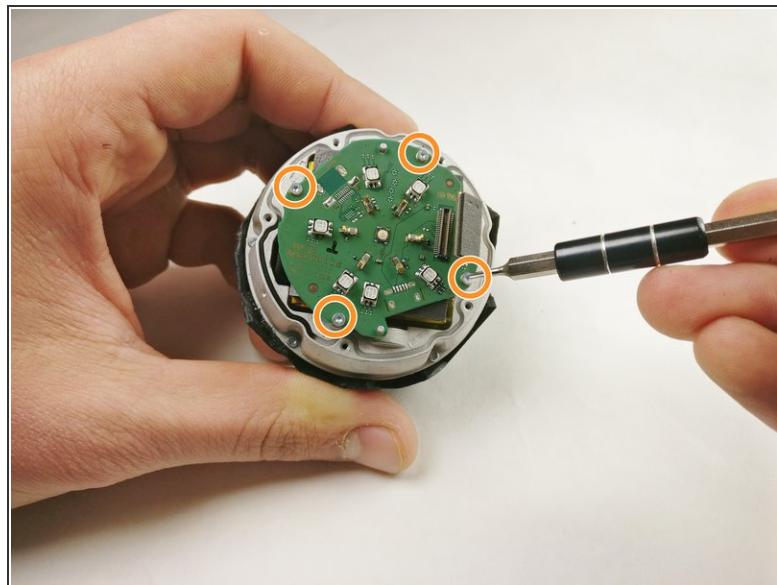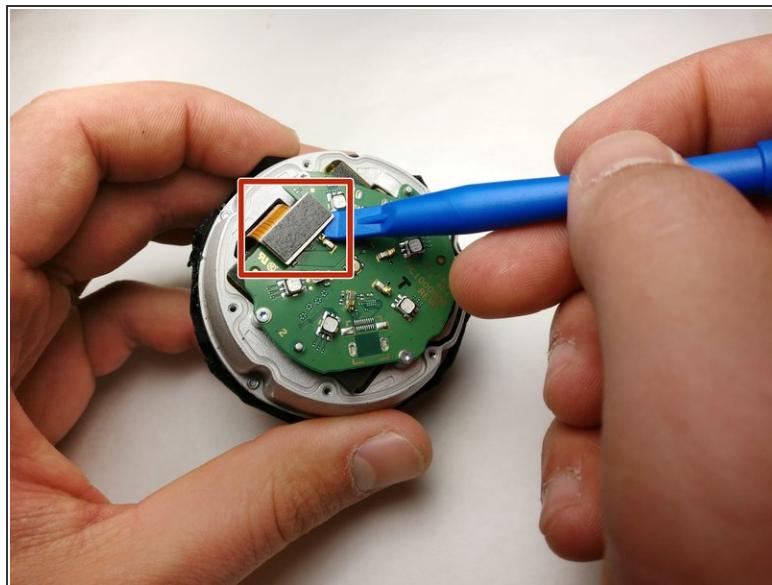

- Gently pry the plug off the port on the circuit board with a plastic opening tool.
- Remove the four 2mm T4 screws and take off the circuit board with a T4 screw driver.

## Step 6

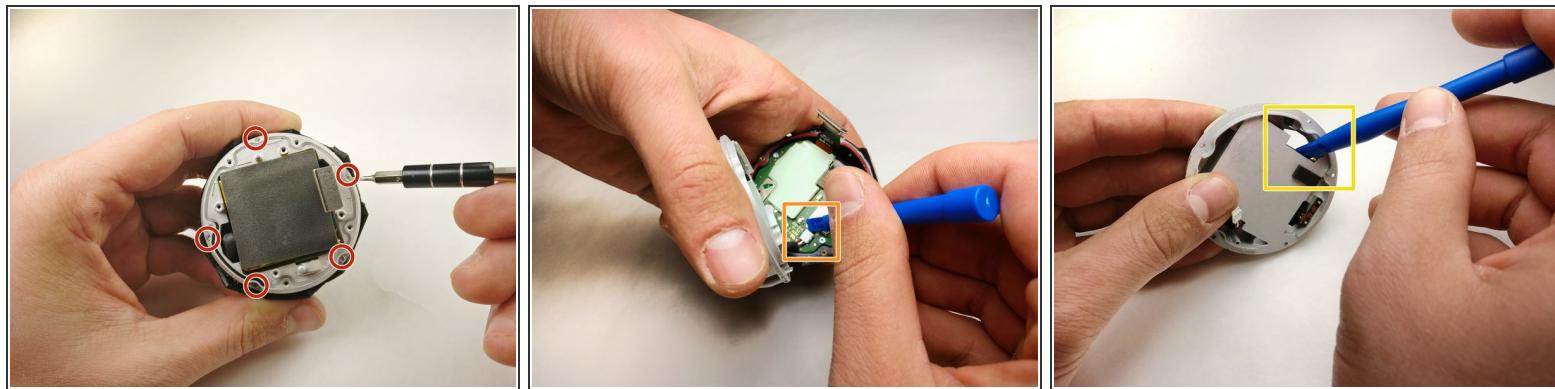

- Remove the five 4mm T4 screws around the battery assembly with a t4 crew driver.
- Lift the battery assembly and gently pry the plug out of its port on the board below with a plastic opening tool.
- Press the battery from the back of the battery assembly to remove it with a plastic opening tool until the glue releases the battery.

**⚠** Do not puncture or bend the battery. Use a small amount of heat to assist in softening the adhesive if necessary.

To reassemble your device, follow these instructions in reverse order.