



ASUS Eee PC 900HD Track Pad Replacement

This repair will be necessary incase of any type of damages or faulty track pads. In order to prepare for this repair you will need a few tools. Note: some of the screws will be a different size from the others. So try not to place screws all together.

Written By: Kendall Marie Mehlhorn



INTRODUCTION

This guide will teach you how to properly take apart your Asus to replace the track pad.

TOOLS:


- [Philips JO Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Track Pad




- Flip the laptop over and locate the battery lock tabs.
- Slide the right tab to the unlock position (right) so that a red dot is showing. Then, slide and hold the left tab to its unlock position (left).
- Pull the battery out.

Step 2

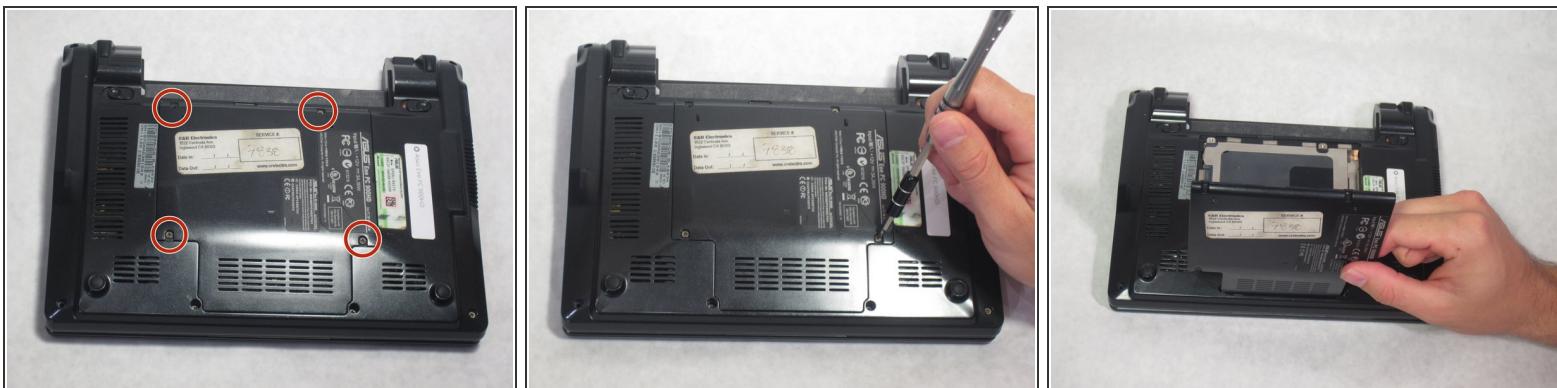

- Remove the four 4.76 mm screws using the Phillips J0 screwdriver.
- Lift up on the hard drive cover to remove.

Step 3

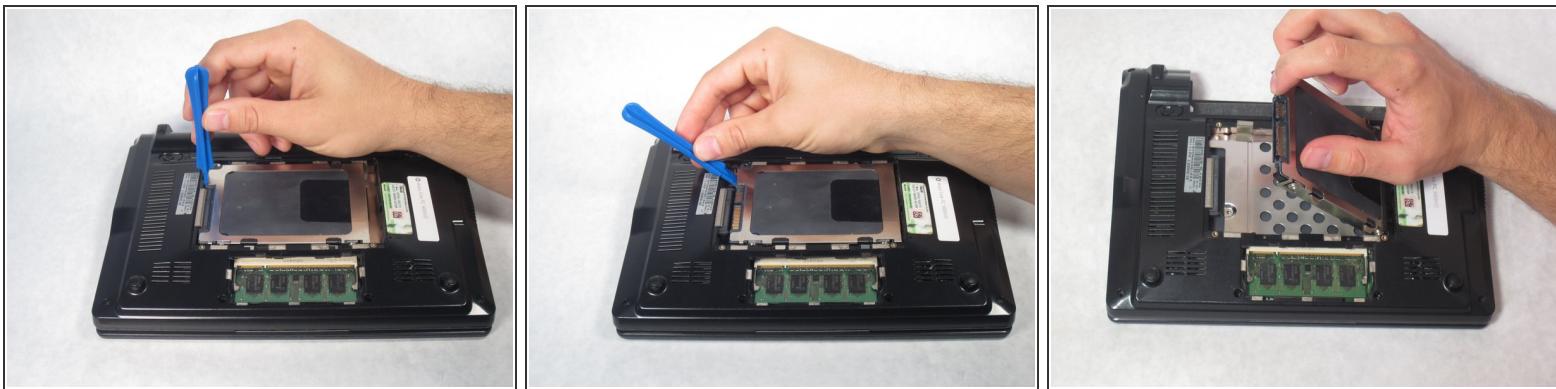

- Starting from the left, use a plastic opening tool to slide the hard drive all the way to the right.
- Once the hard drive is all the way to the right, lift it up on the hard drive and pull it out.

Step 4




- Remove the 4.76 mm screw under the hard drive using the Phillips J0 screwdriver.

Step 5




- Flip the laptop back over and unlock the three keyboard tabs at the top of the keyboard by pushing down on the silver tabs with tweezers .

Step 6

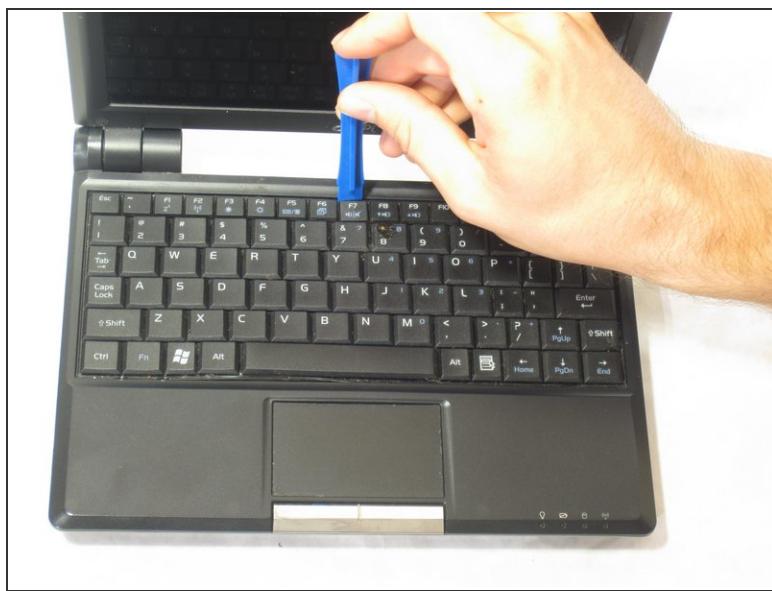

- Use the plastic opening tool to lift up the keyboard.


Step 7

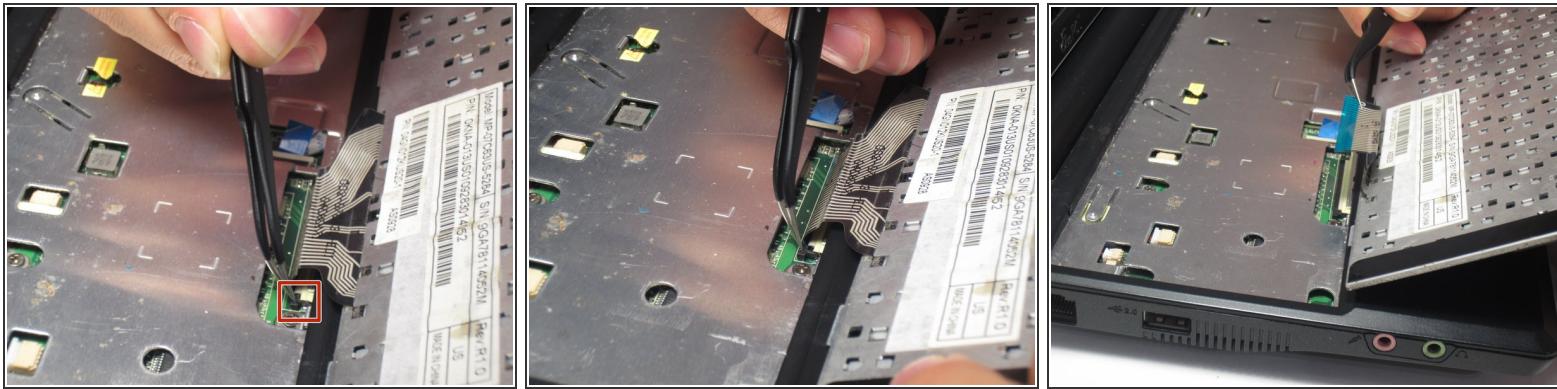

- Using a pair of tweezers, disconnect the cable at the bottom of the keyboard by flipping the two black lock switches up on both sides of the cable.



 Carefully pull the cable out.

Step 8

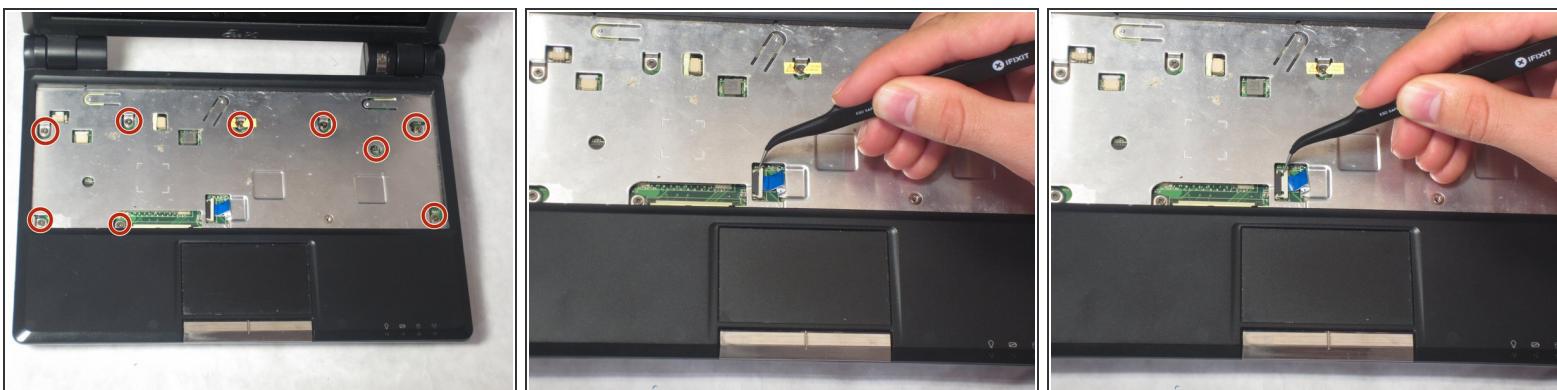


- Remove the nine 4.76 mm screws from the surface of the laptop using the Phillips J0 screwdriver.
- Using a pair of tweezers, unlock the blue touch pad ribbon by pushing the white lock tab to the right.

Step 9

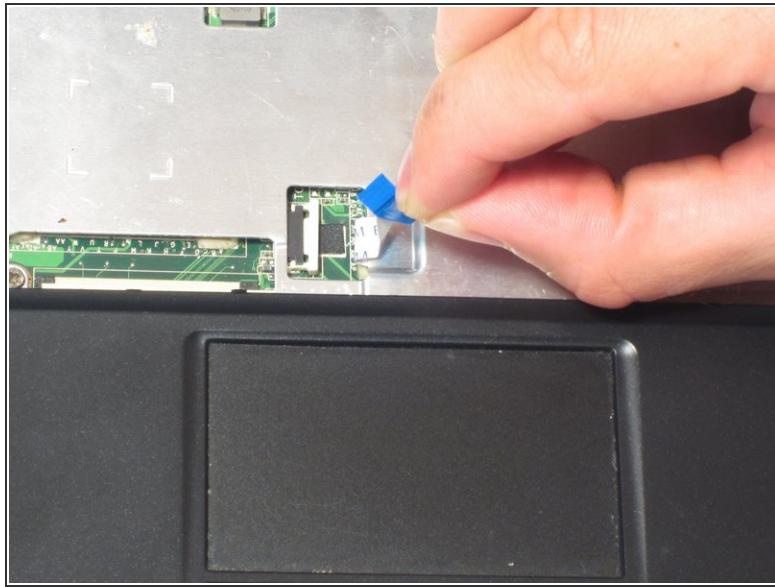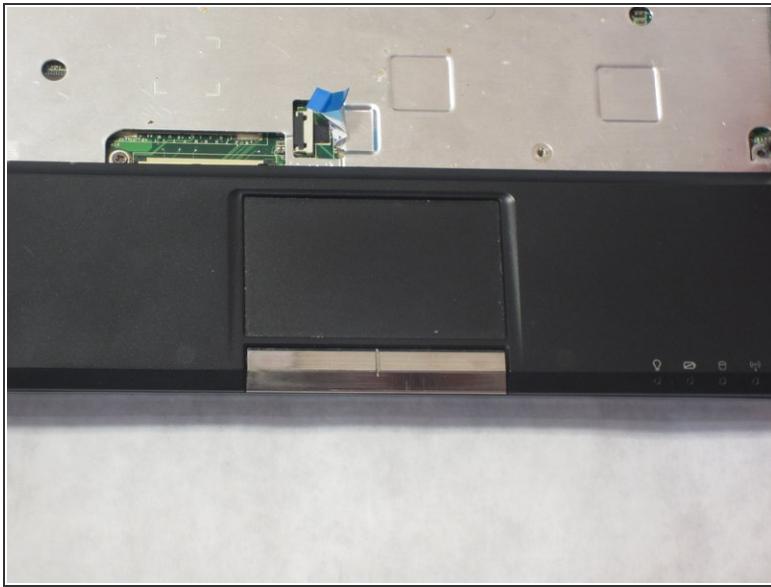

- Carefully pull the blue touchpad ribbon to the right.


Step 10

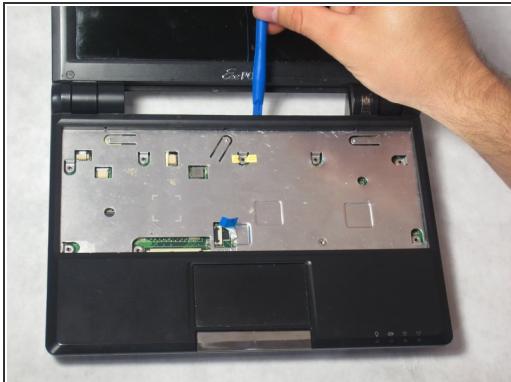

- Using a plastic opening tool, remove the cover of the laptop by prying up the edges.



⚠ Be careful around the audio and microphone jacks as they can be easily damaged. Lift the right half of the cover and move it towards the left.

Step 11

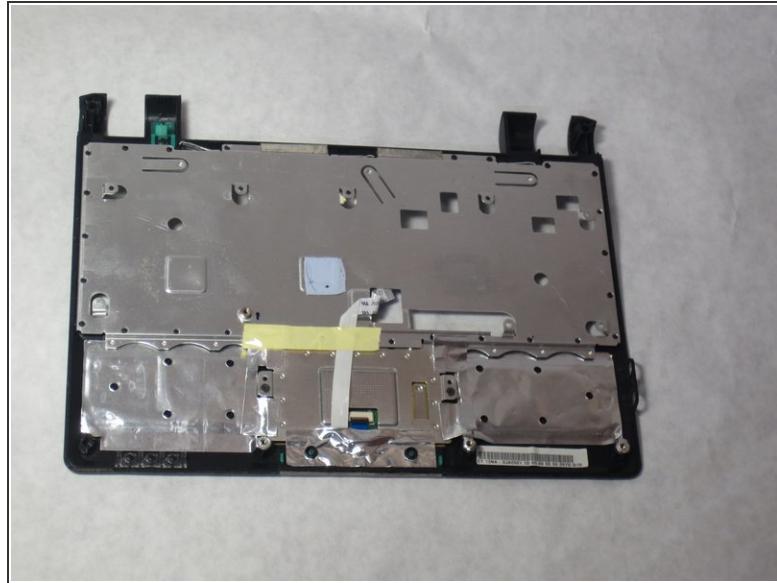


- Lift up and remove the top cover of the laptop.
- Flip this cover over to reveal the back.

Step 12

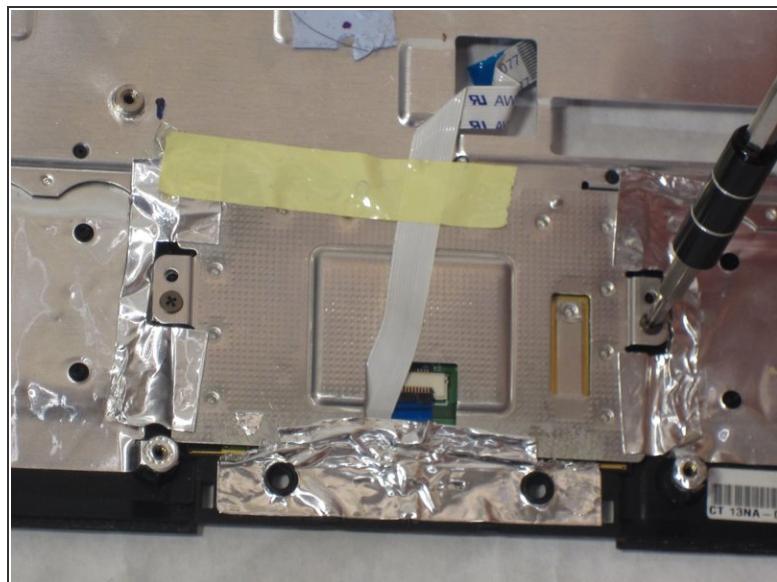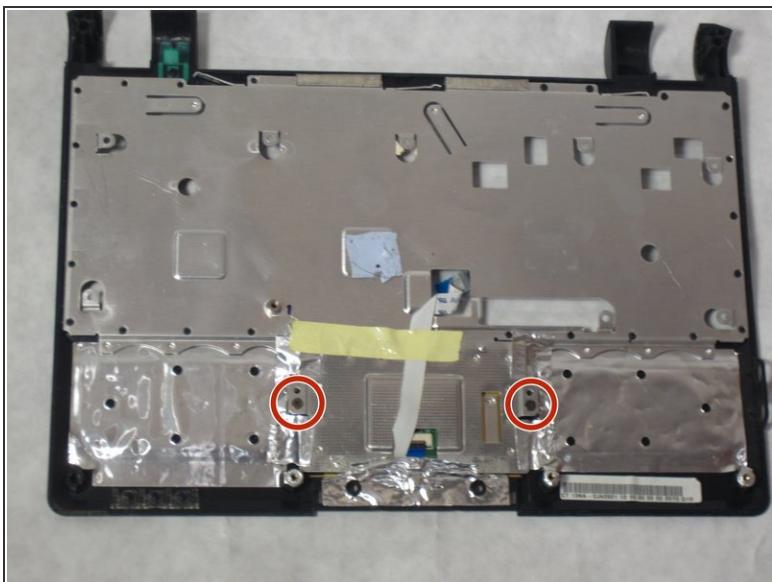

- Remove the two 4.76 mm screws using the Philips JO screwdriver.

Step 13

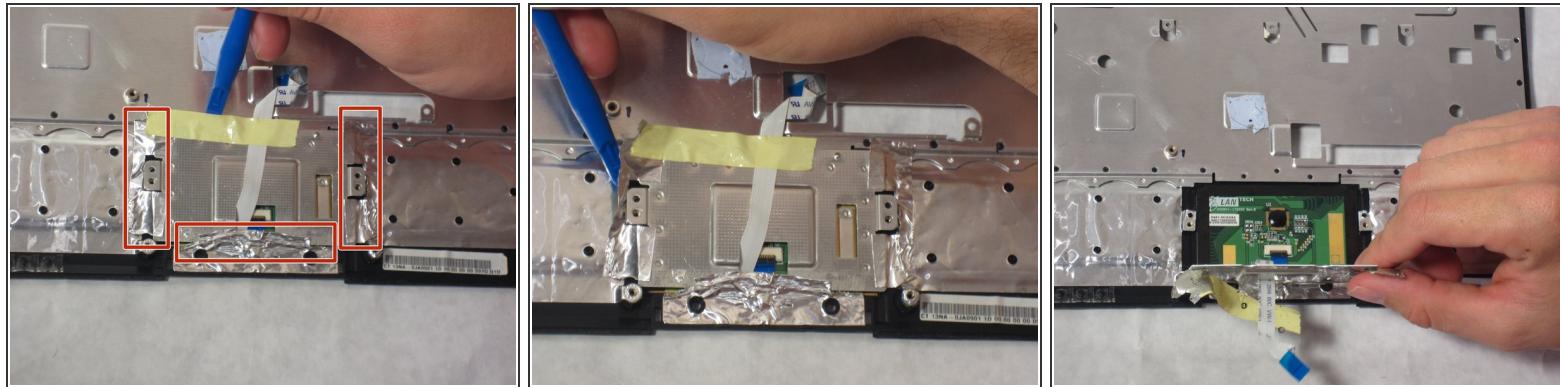

- Using the plastic opening tool, gently pry the metal foil up around the edges of the trackpad.
- ⚠ **Caution:** Do not completely remove the foil.
- Lift the metal plate up to expose the trackpad.
- Now you can safely remove the track pad.

To reassemble your device, follow these instructions in reverse order.