



ASUS N550JK-DS71T Laptop Screen Replacement

This guide will show you how to replace the screen on a Asus N550JK-DS71T laptop.

Written By: Steven Hahn



INTRODUCTION

This guide will show you how to replace the screen on a Asus N550JK-DS71T laptop.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [JIS #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Back Case




- Turn the laptop off and unplug all cables.
- Flip over so the bottom is facing you.
- Remove the ten 3mm Torx T5 screws from the bottom cover.

Step 2

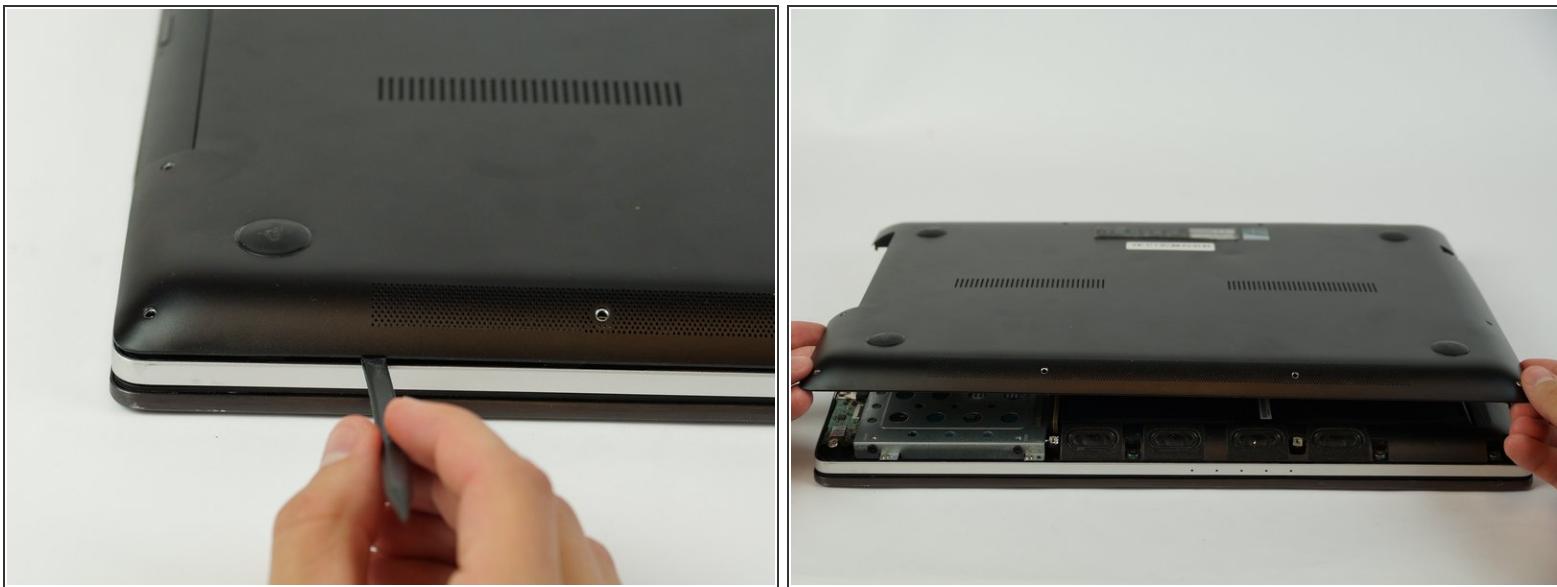


- Use a spudger to wedge between the laptop and bottom cover—lift upwards to pry open.
- Run the spudger along the perimeter of the bottom cover to remove.

Step 3 — Battery

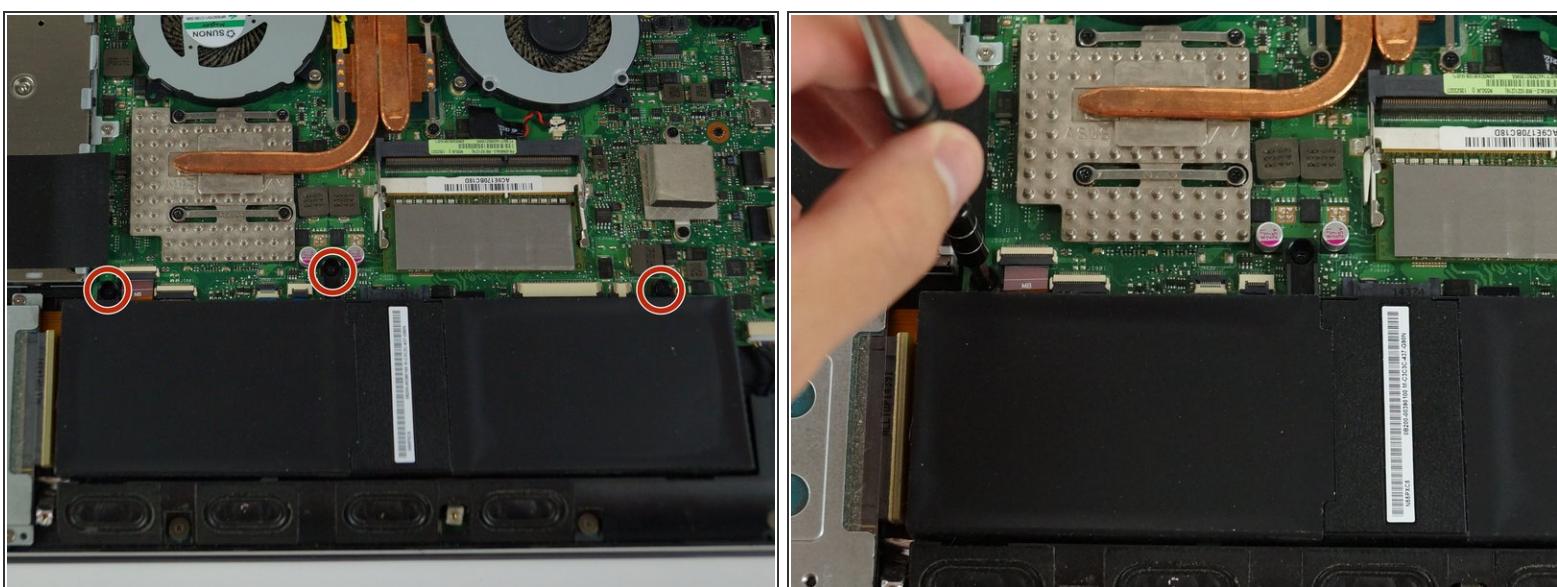

- Remove the three 4mm JIS #0 screws from the battery.

Step 4

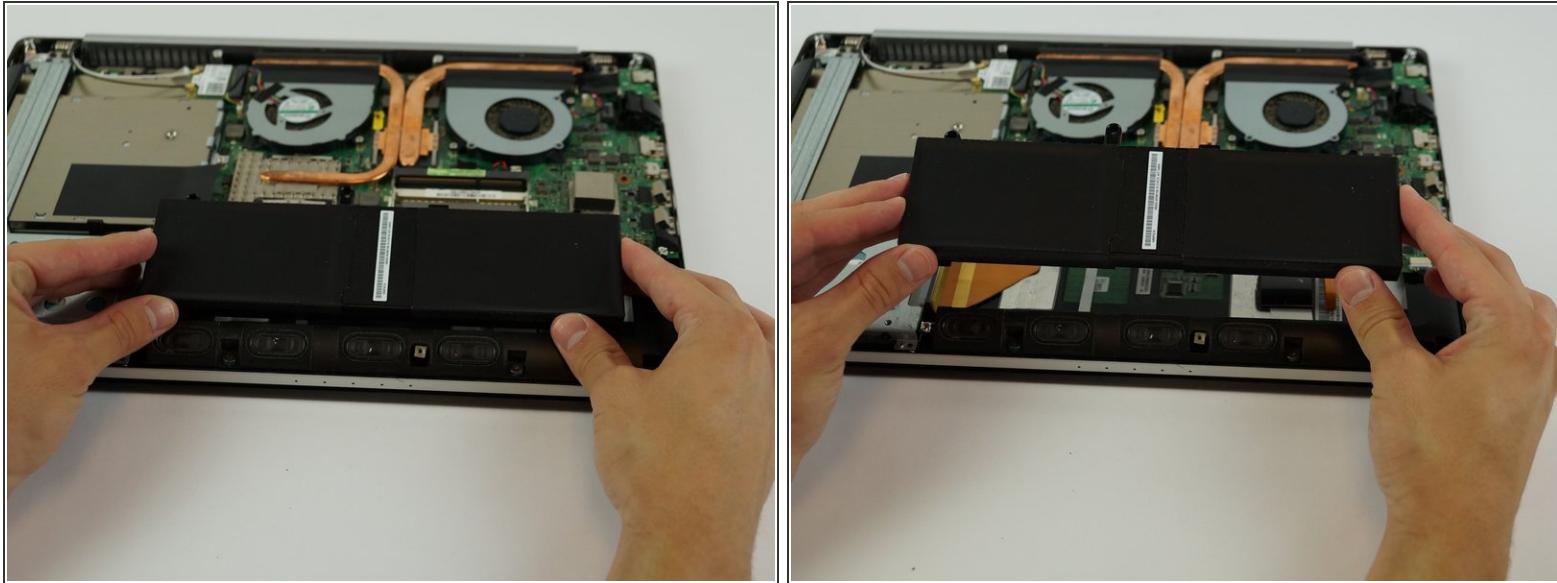



- Using both hands, lift the battery vertically out of the device.

Step 5 — Screen




- Flip the laptop over with the keyboard facing up.
- Carefully use the metal spudger to pry both ends of the grey hinge cap.
 The grey hinge cap may break if not removed carefully.
- Lift the grey hinge cap to remove.

Step 6

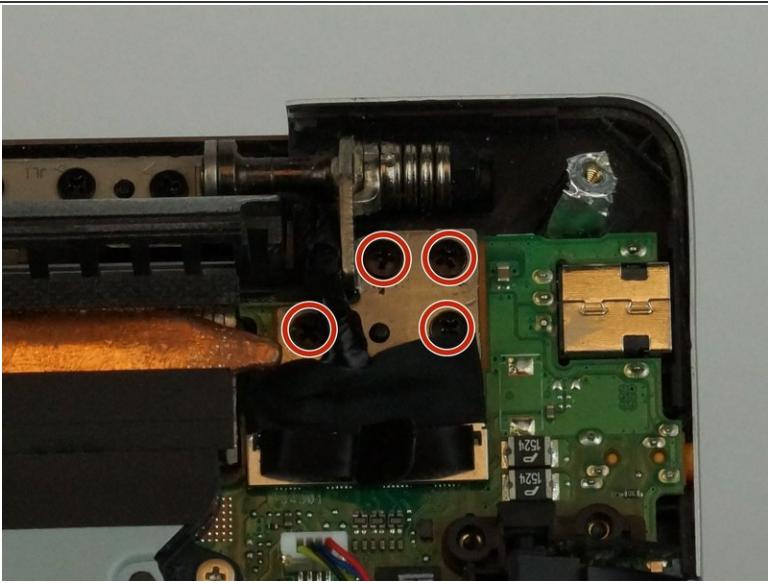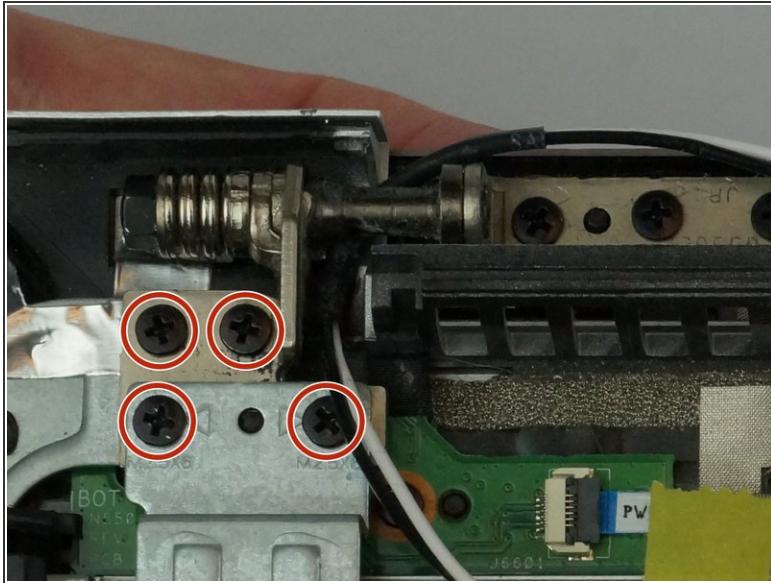


- Remove the eight black 4mm Phillips #1 screws holding display to laptop base.

Step 7

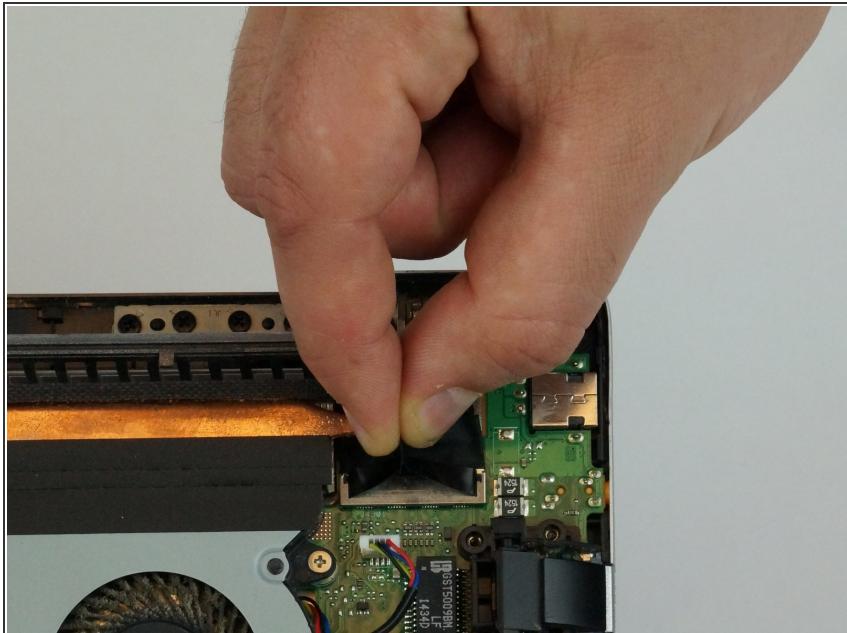


- Lift the tab on the thick black wire to disconnect the display connector.

Step 8

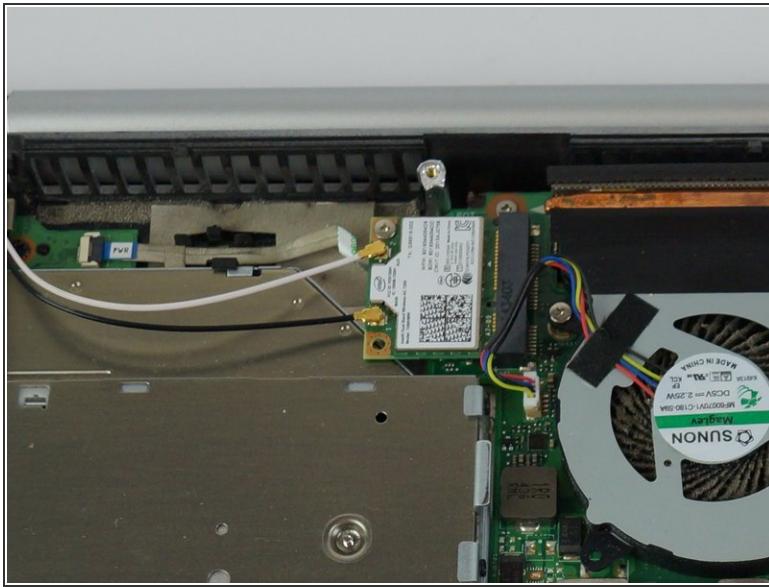



- Remove the thin black and white wire connectors from the Wi-Fi card.
- ☒ The white wire should be above the black wire.

Step 9

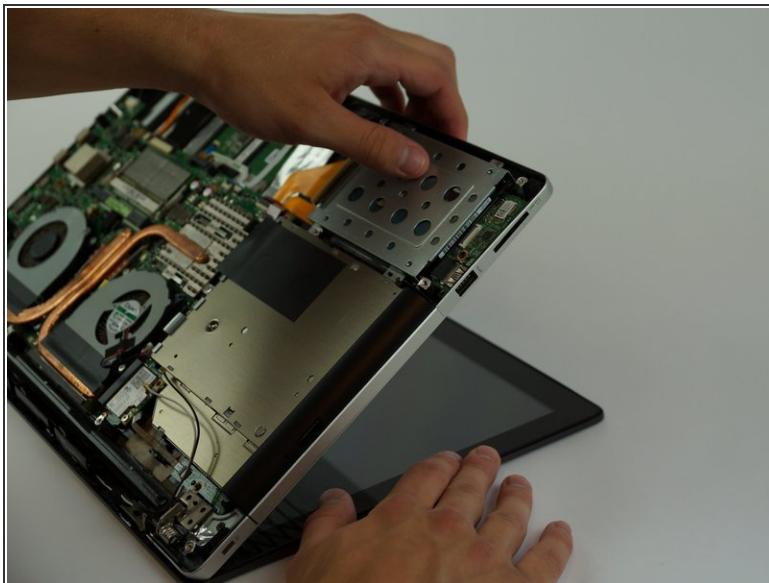


- Open then close the laptop to separate the metal hinges between display and base.
- Open the laptop again then gently remove the base of the laptop from the display.

Step 10

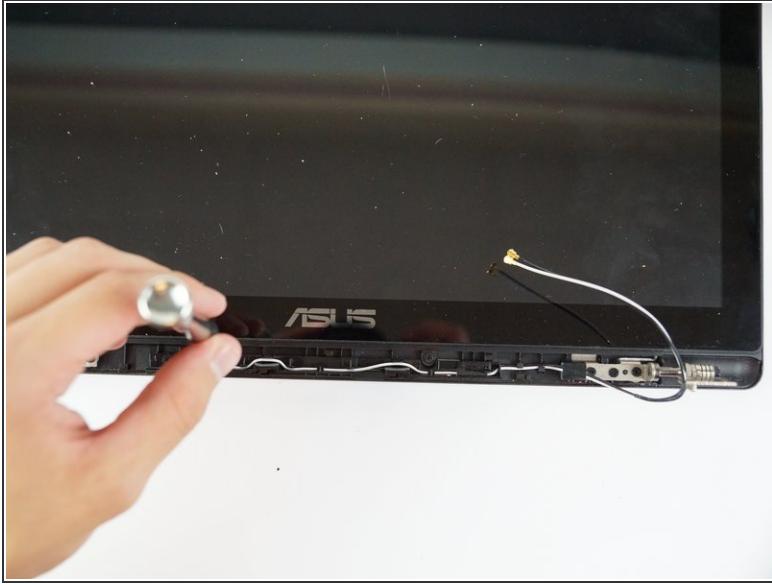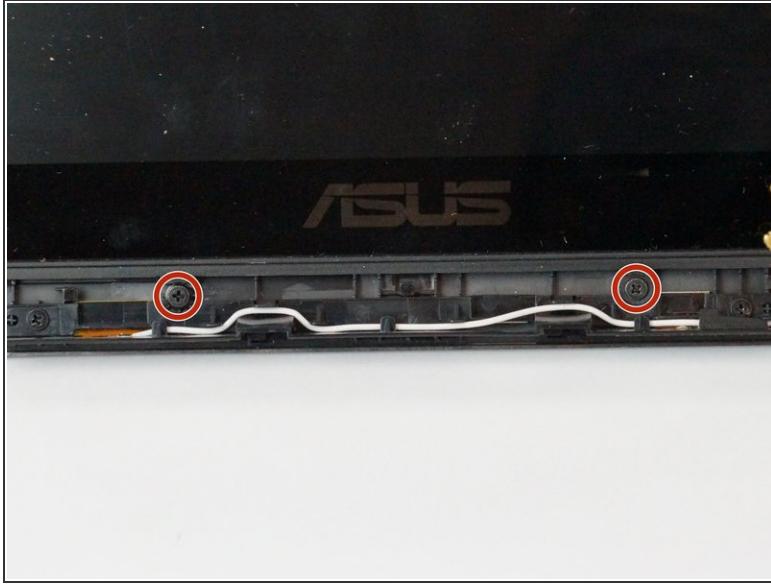

- Remove the two 4mm black Phillips #0 screws from the bottom of the display.

Step 11

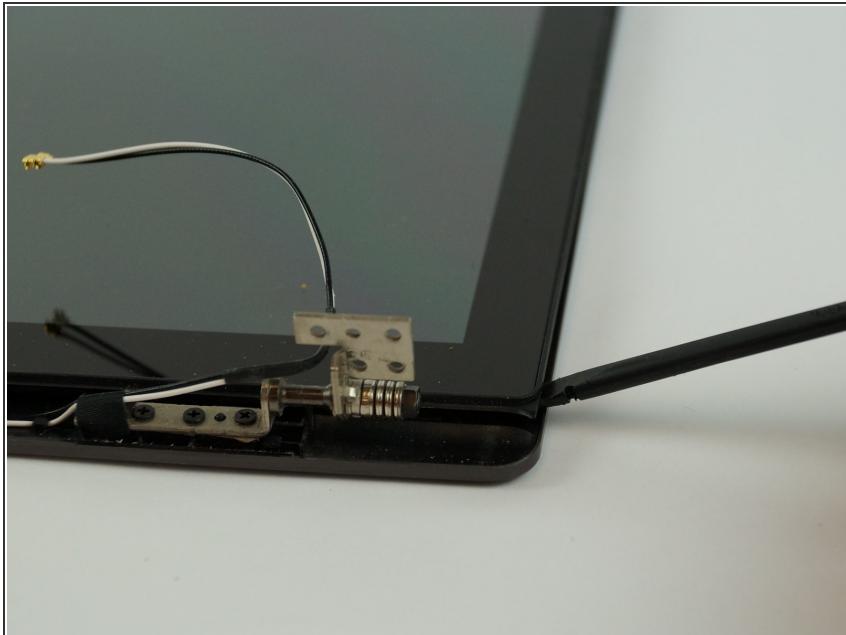

- Slide the Spudger down along the edge display.

 **WARNING:** Do not pull up as mentioned in this picture! This will destroy the mountings!

Step 12



- Lift the screen from the display to remove.

To reassemble your device, follow these instructions in reverse order.