




ASUS PadFone X Front Facing Camera Replacement

This is a replacement guide for the ASUS PadFone X Front Facing Camera.

Written By: Keith Cooper

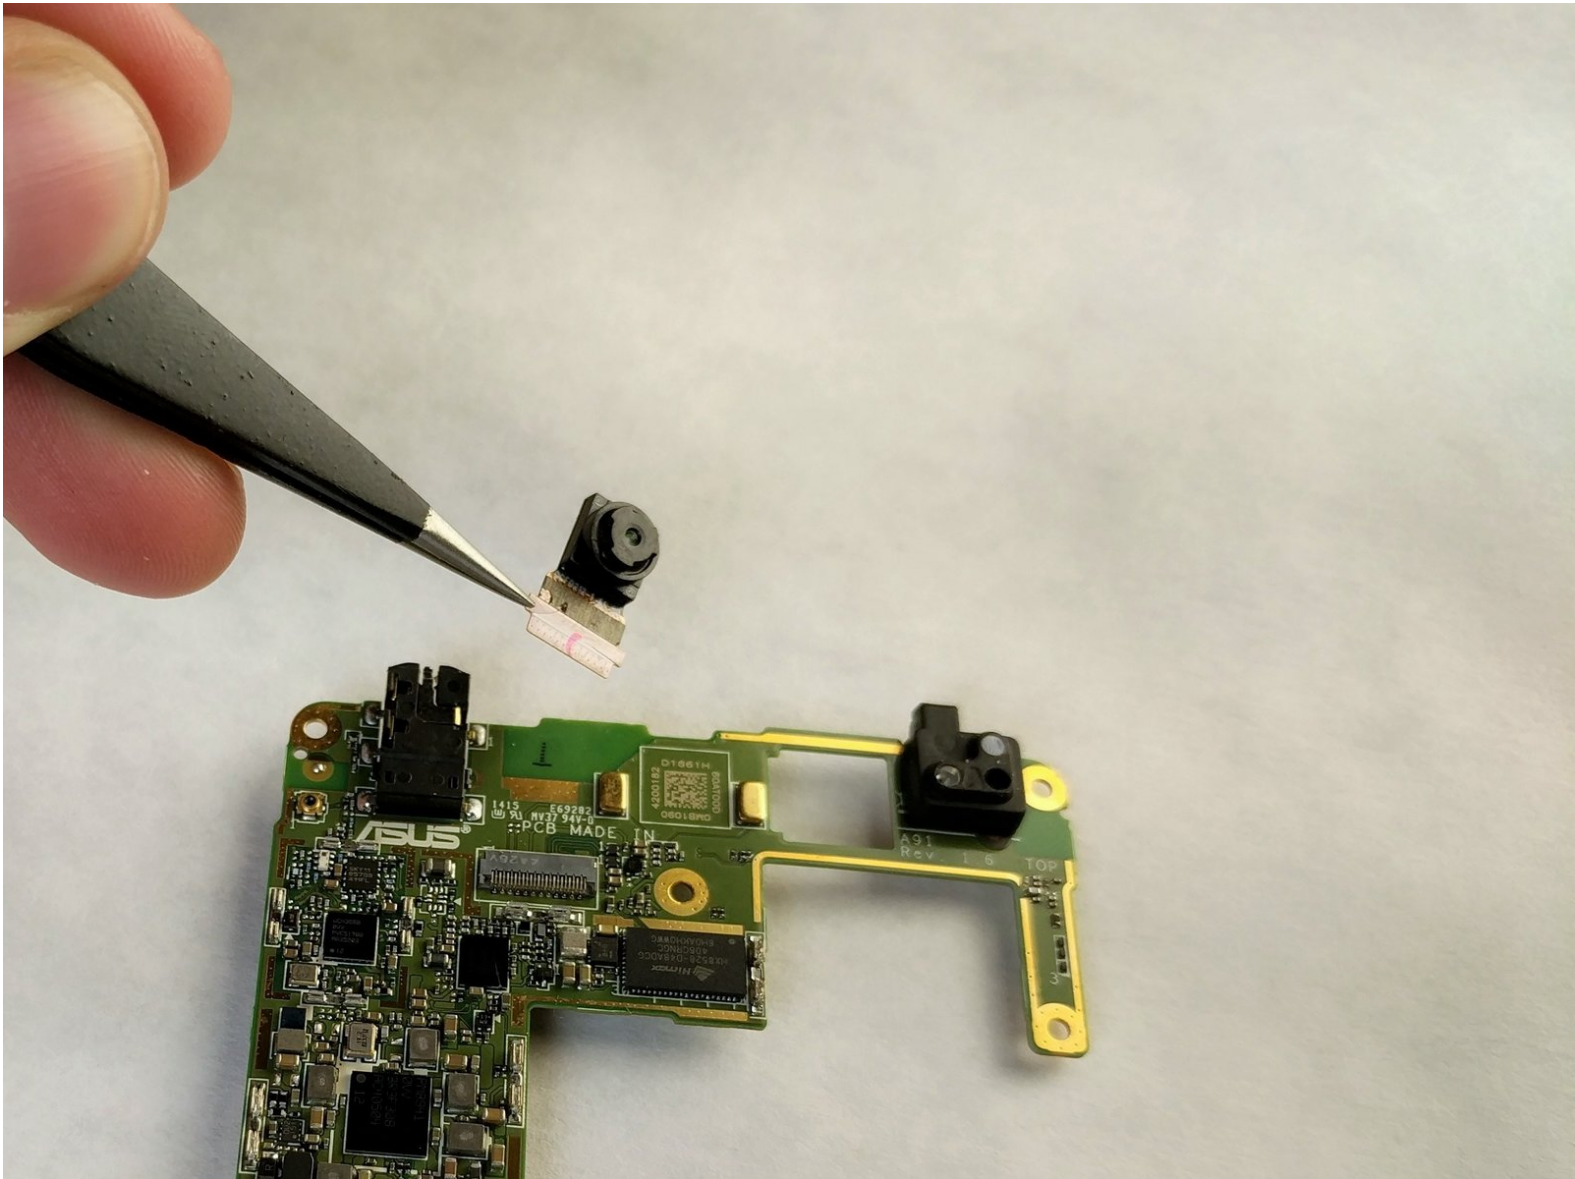

INTRODUCTION

Need a good selfie? This guide will lead you through replacing your front camera.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Motherboard



- Using the blue plastic opening tool, insert the tip into the crease between the back cover and the phone and pry it upwards.
- Work your way around the phone until the entire back cover is loose.

Step 2

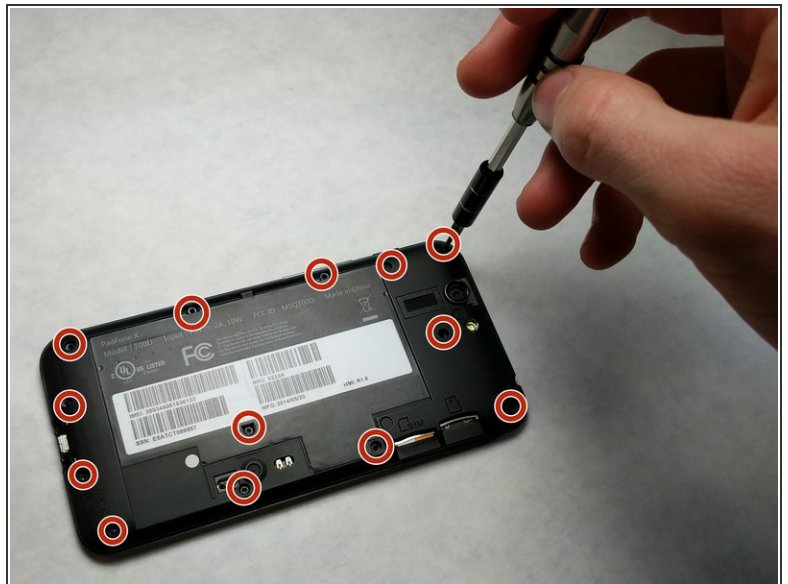

- Remove the thirteen 3.6 mm screws using the Torx T5 bit in the screwdriver.

Step 3




- Using the blue plastic opening tool, insert the tip into the crease between the mid-frame and the phone and pry it upwards.
- Work your way around the phone until the entire back cover is loose and remove the mid-frame.

Step 4




- Using the plastic blue plastic opening tool, gently disconnect the battery cable from the motherboard.
- ⚠ Applying too much force will damage the connector.

Step 5

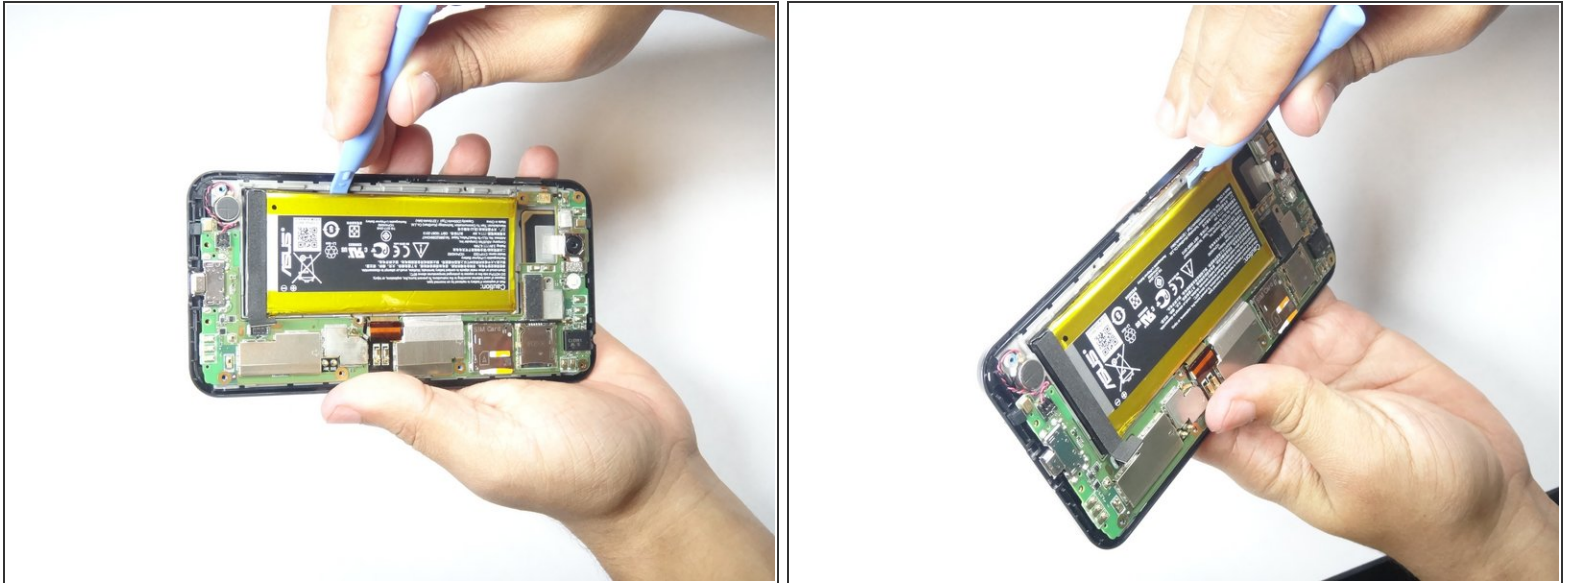


- Use the blue plastic opening tool to pry the battery pack from the phone. Pry along edge away from the motherboard as this might damage the motherboard.
- ⓘ The battery pack is held on by double sided tape, you will have to apply some force when prying out the battery.

Step 6

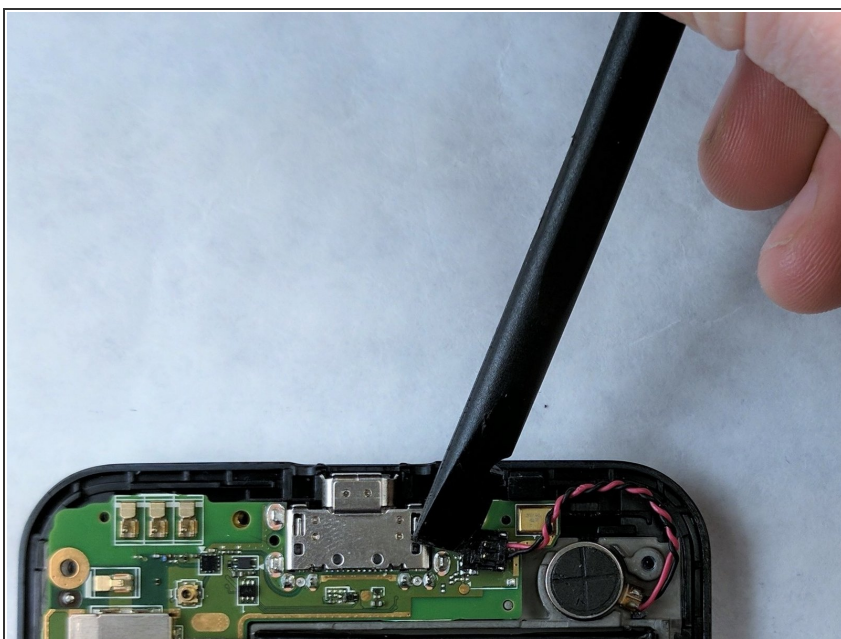

- Using a spudger, pry the vibration motor connector from the motherboard.


Step 7

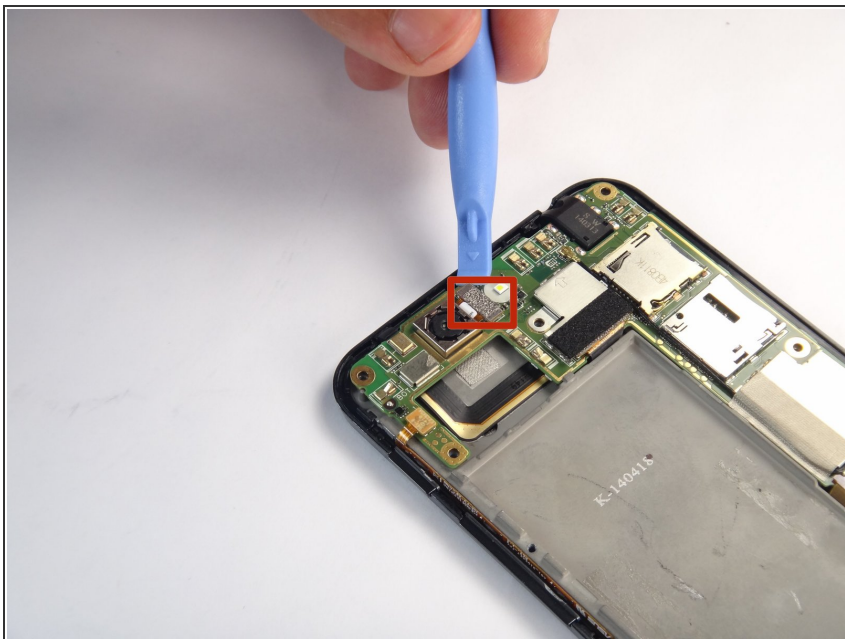

- Use the blue plastic opening tool to gently pry the camera connector up from its socket on the motherboard.

⚠ Applying too much force will damage the connector



Step 8

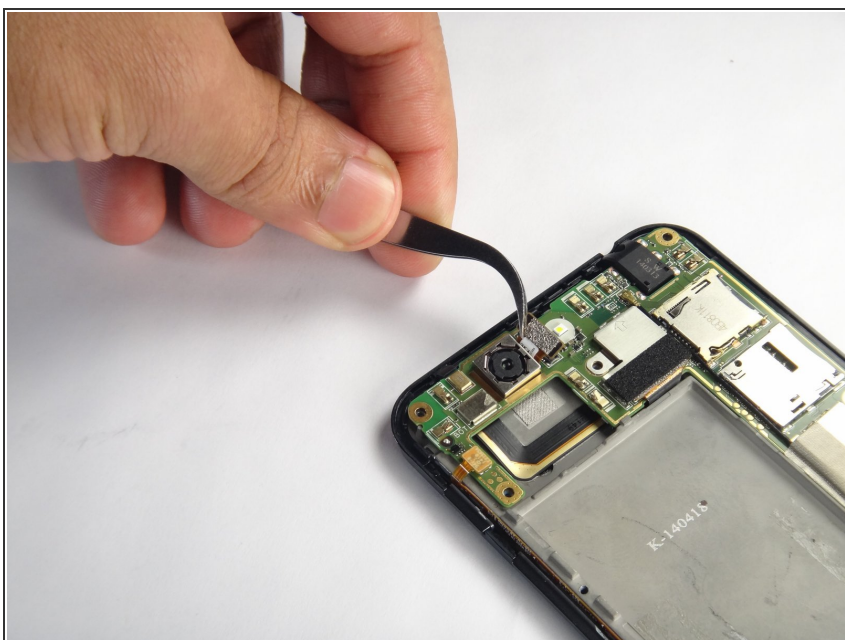

- Using the tweezers, remove the rear camera from the Padfone X.


ⓘ The camera is lightly glued to the motherboard. You may need to use a plastic opening tool to loosen the adhesive under the camera.

Step 9

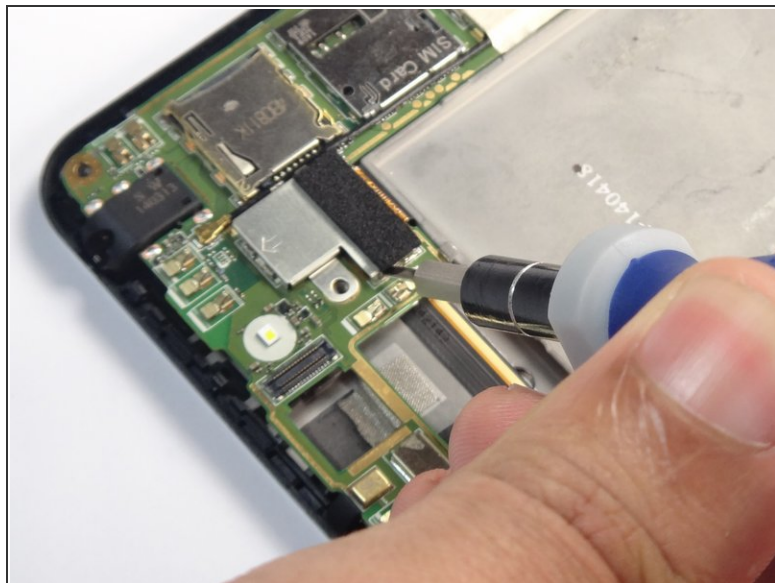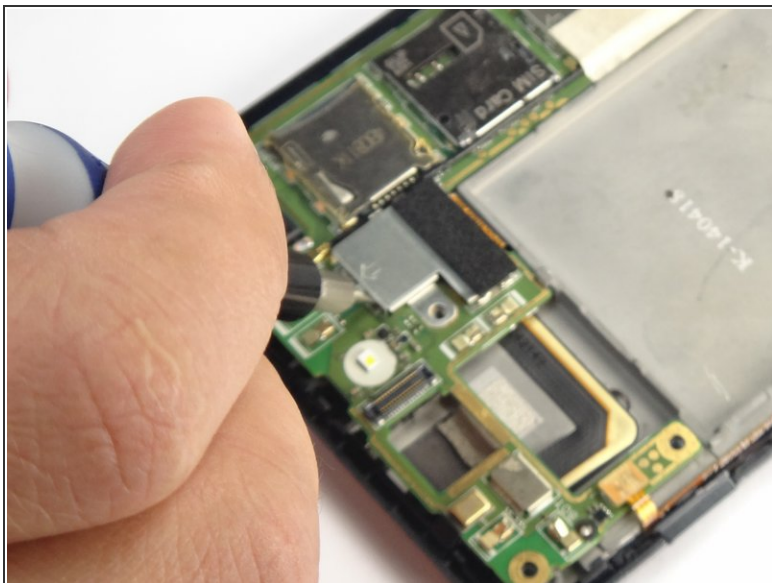


- Insert the tip of the flat head screwdriver between the panel and the metal clip then gently push down until the clip is slightly bent away from the panel.
- Do this for all the clips holding the panel down.
- After all clips are bent away, remove the panel.

Step 10

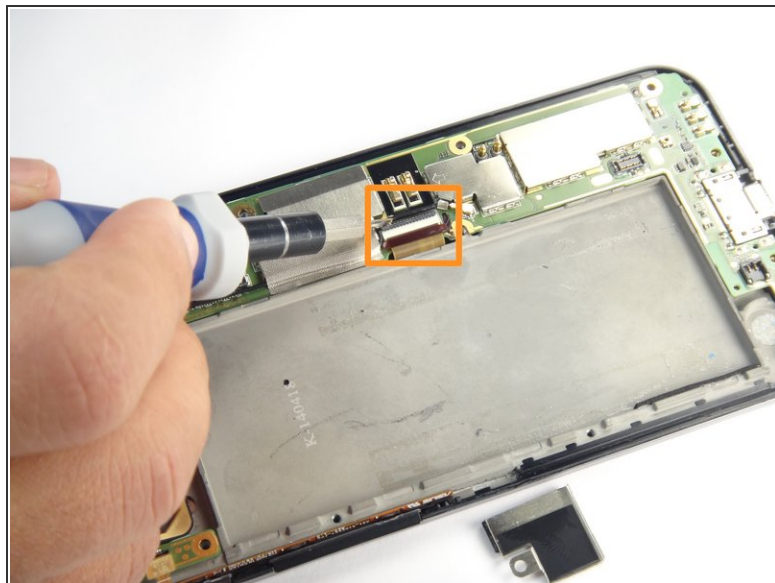


- Disconnect the first connector by prying it upward using the blue plastic opening tool.
- Disconnect the second connector by first lifting the lock then pulling the connector outward.

Step 11

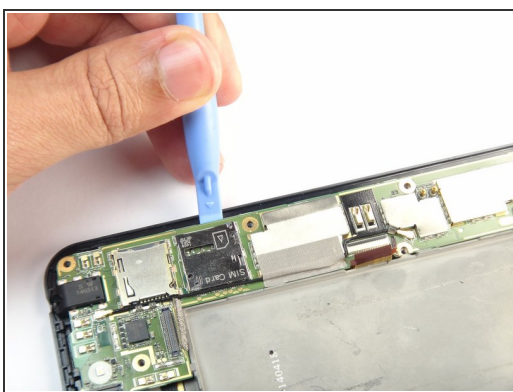



- Insert the tip of the blue plastic opening tool under the motherboard and gently pry upward.
- Work your way around until the motherboard is free.

Step 12

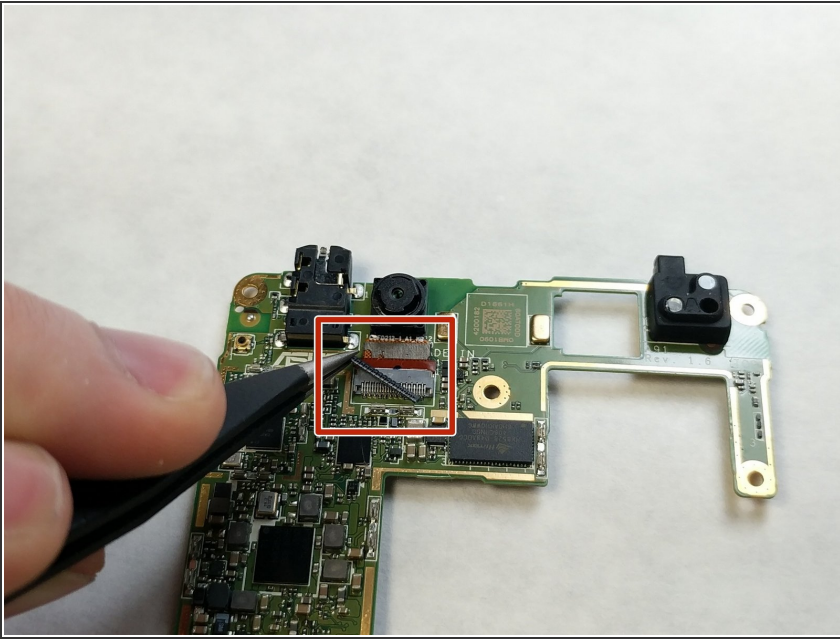

- Flip the motherboard over and locate the front facing camera.
- Using the tweezers gently remove the black locking mechanism.
- ⚠ The black locking mechanism is very fragile and extreme care should be exercised during removal.

Step 13

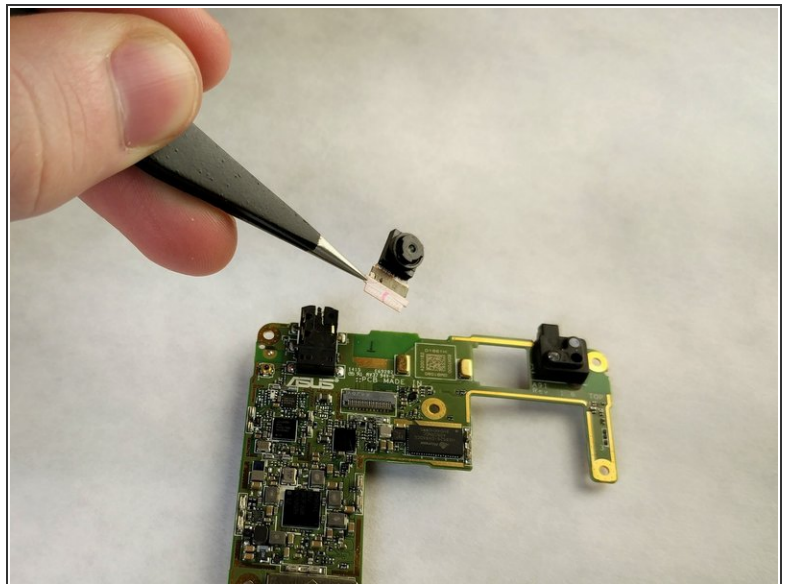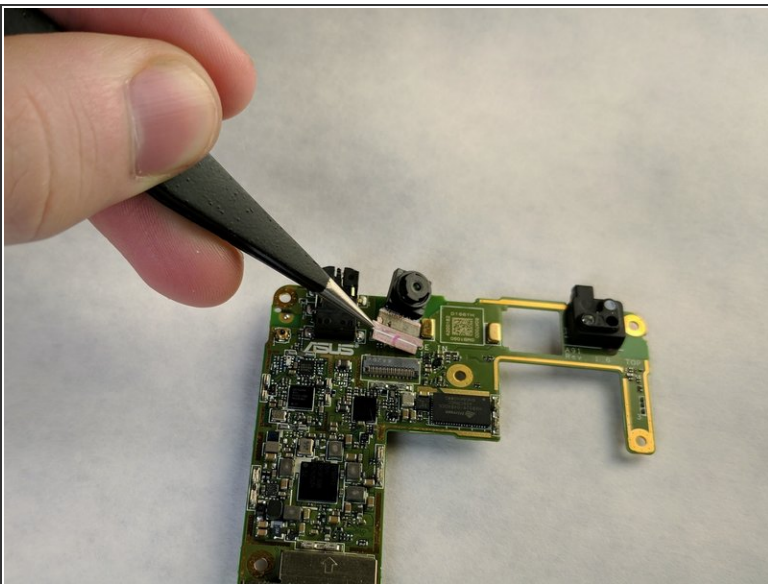

- Use the tweezers to gently pull on the connector to remove the camera.

To reassemble your device, follow these instructions in reverse order.