



Acer Aspire 4743-6481 Keyboard Replacement

This guide will lead you through the steps to successfully replace your Acer Aspire 4743-6481 laptop's keyboard.

Written By: David Veres



INTRODUCTION

If your keyboard has issues and/or doesn't function properly, use this guide to replace it with a new one.

TOOLS:

- [Tweezers \(1\)](#)
- [Metal Spudger Set \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Battery

- Turn over the laptop to view the underside.



Step 2

- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.



Step 3

- You can lift the battery up and out now.




Step 4 — Keyboard

- Remove the two 6.0 mm screws that secure the keyboard using a Phillips head screwdriver.
- *(i)* They can be easily identified by looking for the screws with the keyboard icon next to them.




Step 5

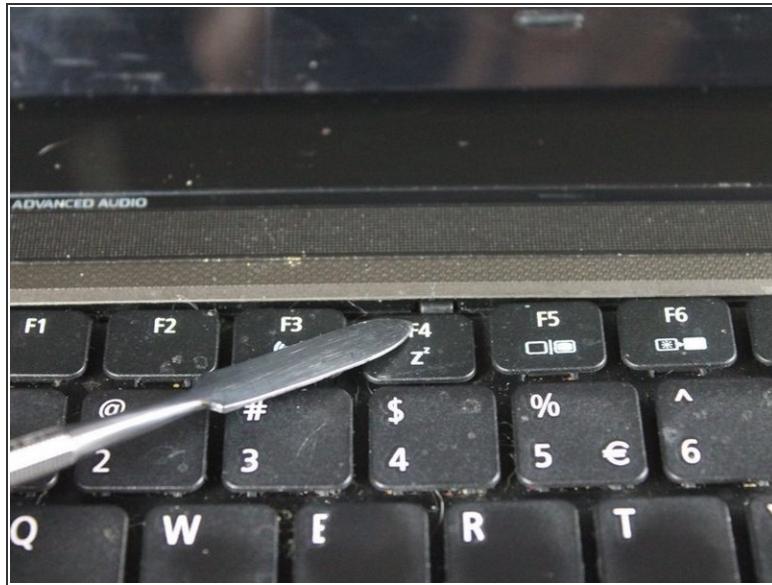

- Turn the laptop over and open it.
- Use flat edged tools to gently separate the keyboard from the laptop. It should snap off with a small amount of force.

ⓘ Be sure to push the small tabs along the top of the keyboard, while lifting to successfully free the keyboard.

Step 6

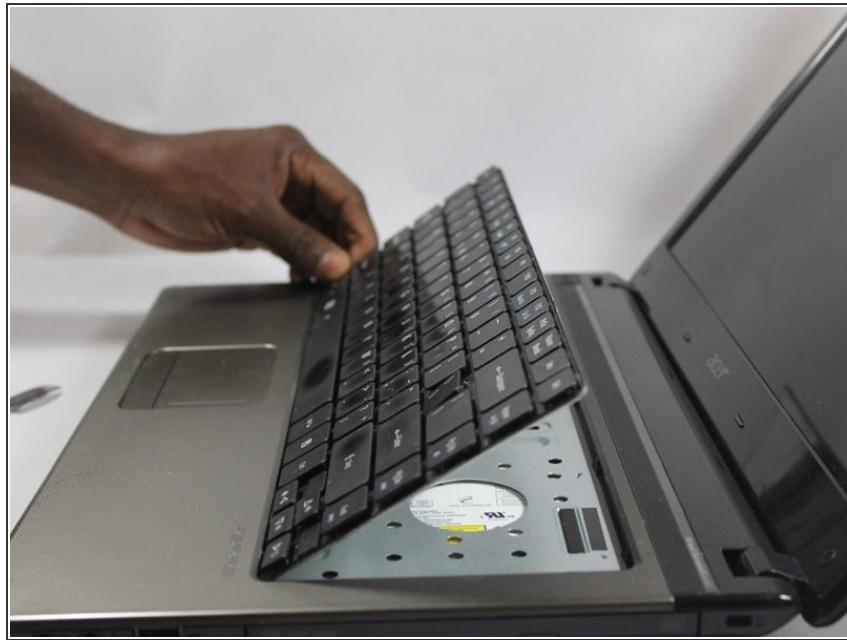

- Gently lift away the keyboard, making sure not to damage the data cable or the connector.


i The connection is located beneath the bottom center of the keyboard.

Step 7



- Remove piece of tape that covers the connection between the data cable and the connector.

Step 8

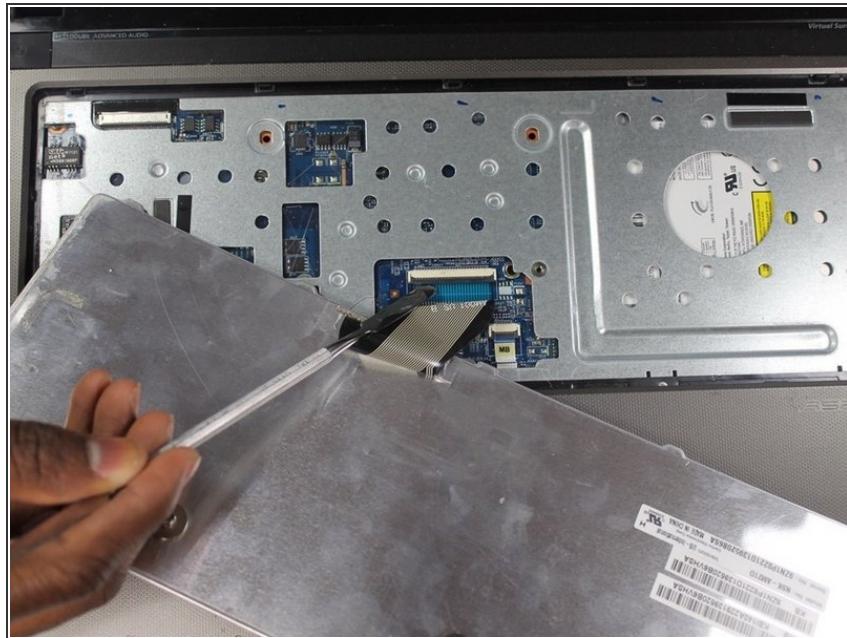

- Detach the data cable by flipping up the small black latch on the connector.
- Once the latch is lifted, the keyboard should be completely free.

To reassemble your device, follow these instructions in reverse order.