



Acer Aspire One A150-1570 Keyboard Replacement

This guide will explain and demonstrate how to replace the keyboard in the Acer Aspire One A150-1570.

Written By: Blue



This document was generated on 2019-10-03 03:23:02 PM (MST).

INTRODUCTION

This guide is simple to follow. The keyboard can easily be removed and installed within minutes.



TOOLS:

- [Heavy-Duty Spudger](#) (1)



PARTS:

- [keyboard panel](#) (1)

Step 1 — Keyboard



- Flip device over so that the battery is farthest from you.
- Identify the switch on the upper left corner and push it left to be in "unlocked" position.

Step 2



- Identify the latch on the upper right hand corner. Drag and hold the latch to the right.
- Pull the battery out.

Step 3



- Now flip device back over to show the keyboard.
- Locate the three tabs at the top of the keyboard.


Step 4



- Start on the top-right and use the spudger to push off the tab from the keyboard.
- Move to the middle tab while still holding the right side up so the tab doesn't fall back into place.
- Continue to hold up keyboard while disconnecting the last tab.

⚠ DO NOT lift keyboard yet. This will be addressed in the next step.

Step 5

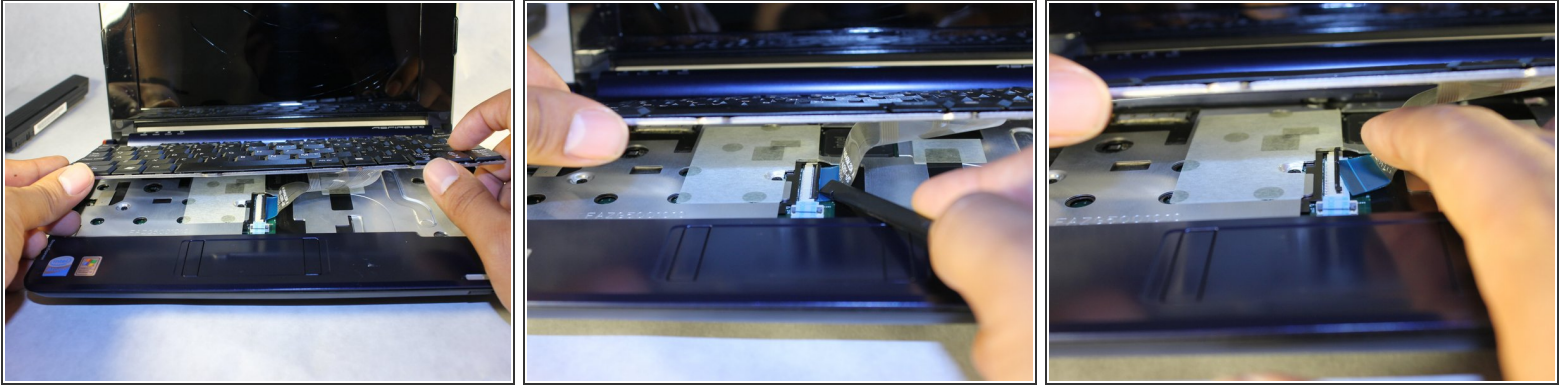

- Here you can see that the keyboard is still attached to the device.
- Use the Spudger to lift the ZIF (Zero Insertion Force) to release the keyboard ribbon.
- Once tab is lifted, the keyboard ribbon should come right out.

To reassemble your device, follow these instructions in reverse order.