



Acer Aspire V5-571-6891 Keyboard Replacement

The Keyboard can be replaced as a whole, and is easily accessible.

Written By: Lakhbir Sheffield




INTRODUCTION

The keyboard may be easily replaced if a key or keys no longer works. It is accessible without removing the back cover of the computer.

TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery

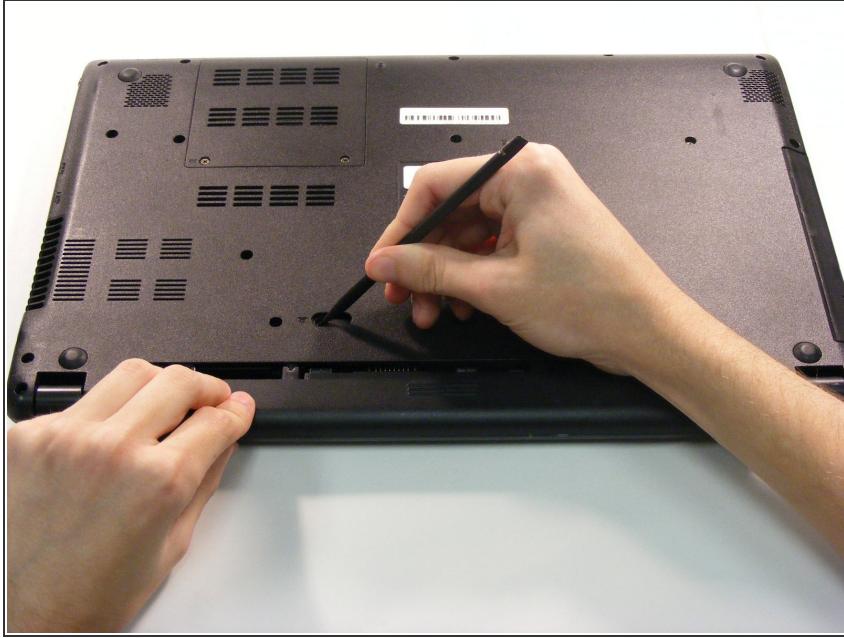

- Use the pointed end of the spudger to slide the battery lock until the battery pops loose.

Step 2




- Slide the battery out of the battery slot.

Step 3 — Keyboard



- Remove the two 6mm PH1 screws from the bottom of the laptop.

Step 4

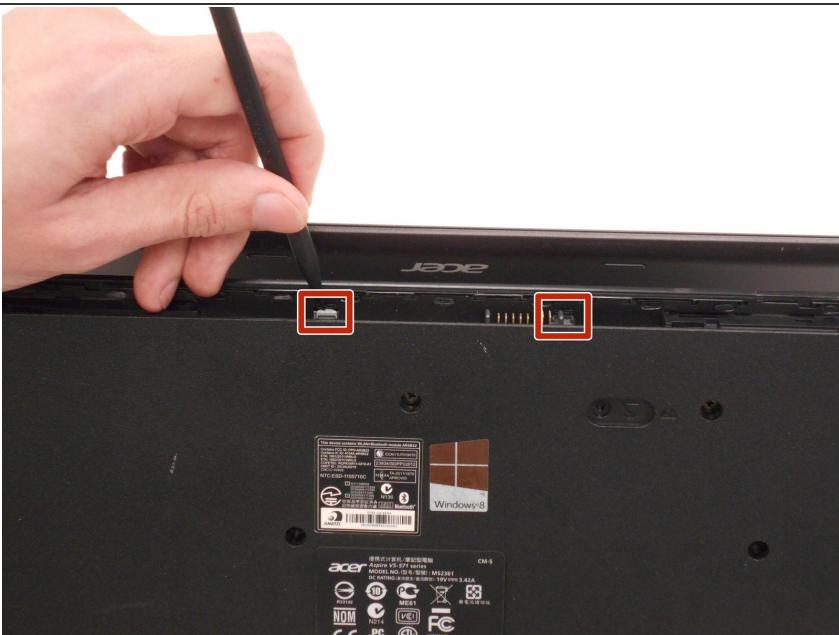


- Use the spudger, push the two tabs, located in the battery slot, through their slots to release the keyboard.
- Do this with the computer slightly open for ease.

Step 5




- Open the laptop.
- Start top of the keyboard and use the opening tool to pop the remaining tabs around the keyboard loose.
- The keyboard can be flipped onto its face once removed.

Step 6

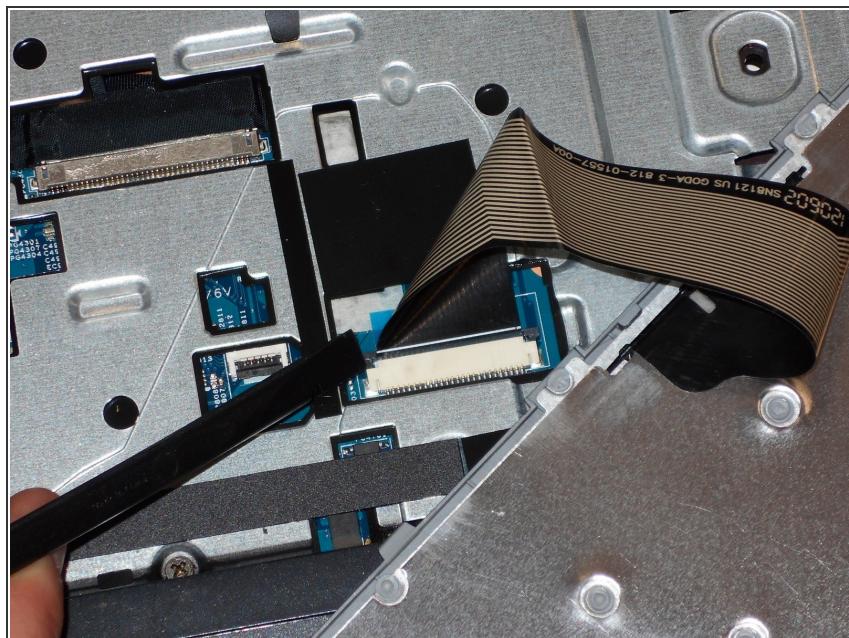

- Use the spudger and slide the grey tabs on either side of the keyboard wires away from the white plastic.

Step 7

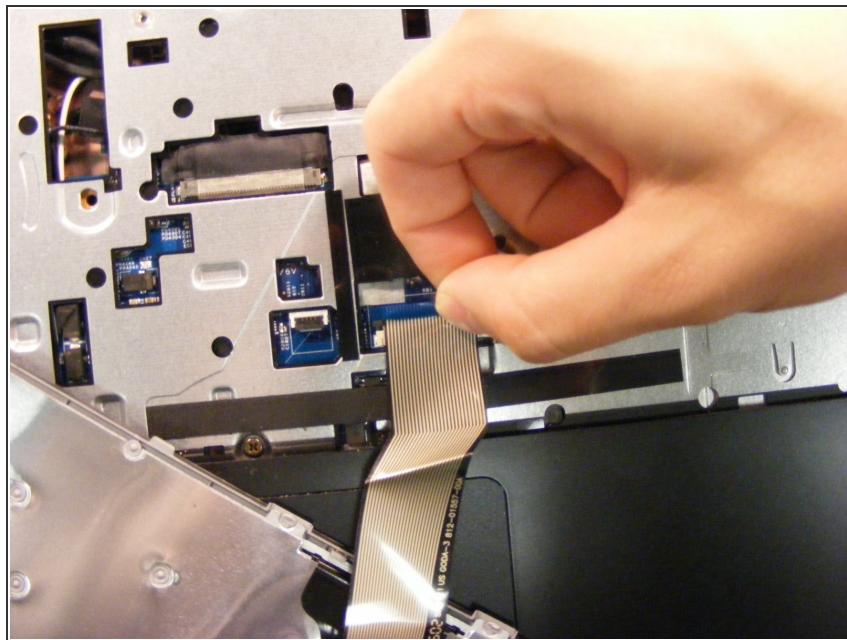

- Disconnect the keyboard by pulling the blue tape on the wire strip.

To reassemble your device, follow these instructions in reverse order.