




AmazonBasics BTV1 AUX Input Jack Replacement

This guide will demonstrate how to replace the AUX Input Jack on your AmazonBasics BTV1.

Written By: Chris Shannon

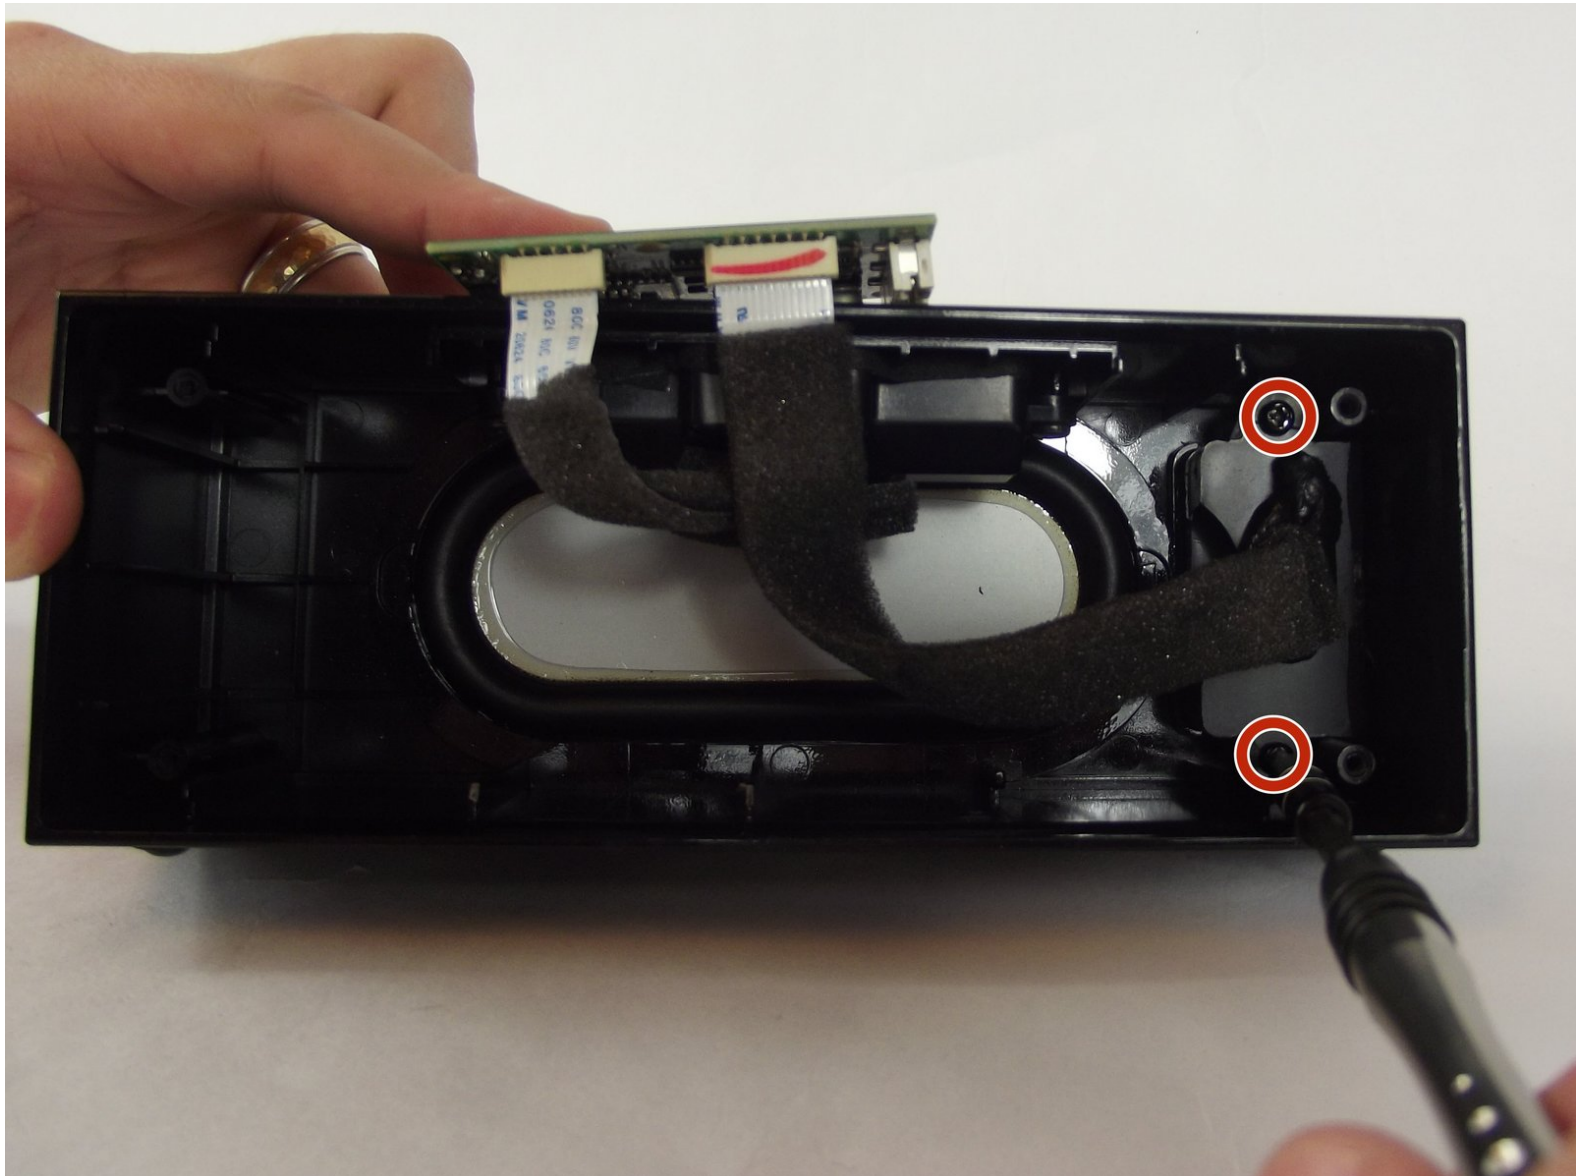


INTRODUCTION

Sometimes the AUX Input Jack will stop working properly and may need replacing. This guide requires use of a Soldering Iron and should only be attempted by those with soldering experience. If soldered incorrectly, your device may be permanently damaged.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Battery

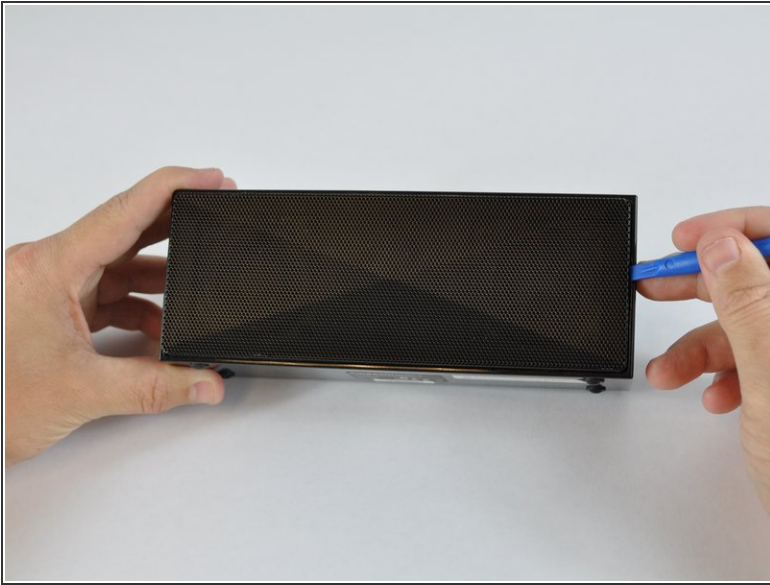

- Hold the speaker firmly and wedge a plastic opening tool in between the faceplate and the body of the speaker.
- Move the tool back and forth along the entire perimeter of the face plate until you feel the plate loosen, then pry the plate off.

Step 2





- Using a Phillips #1 screwdriver, remove the four black 10mm screws around each of speakers.
- Using a Phillips #1 screwdriver, remove the four black 10mm screws securing the inside panel to the case.

Step 3




- Tilt the case downwards until the speakers fall out of their housings.
- Reach your thumb and forefinger past the speakers and detach the front speaker panel from the unit.

Step 4

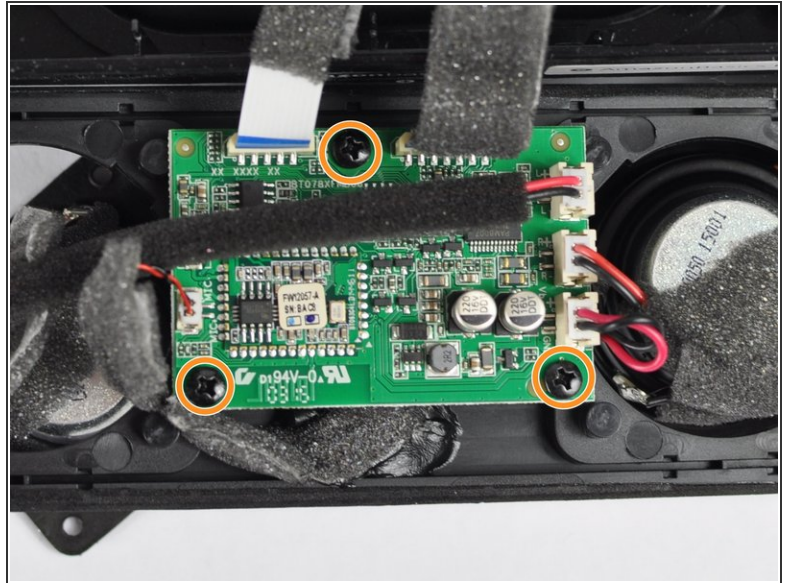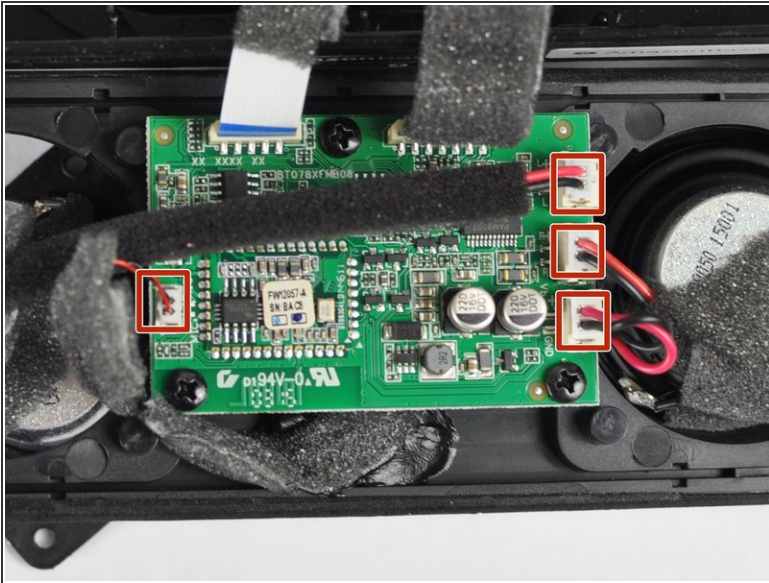




- Gently pull each plastic connector from the motherboard.
- ☑ Take a note of which connector goes with each component for easy reassembly.
- Use a Phillips #1 screwdriver to remove each of the three black 9.6mm screws from the motherboard.

Step 5

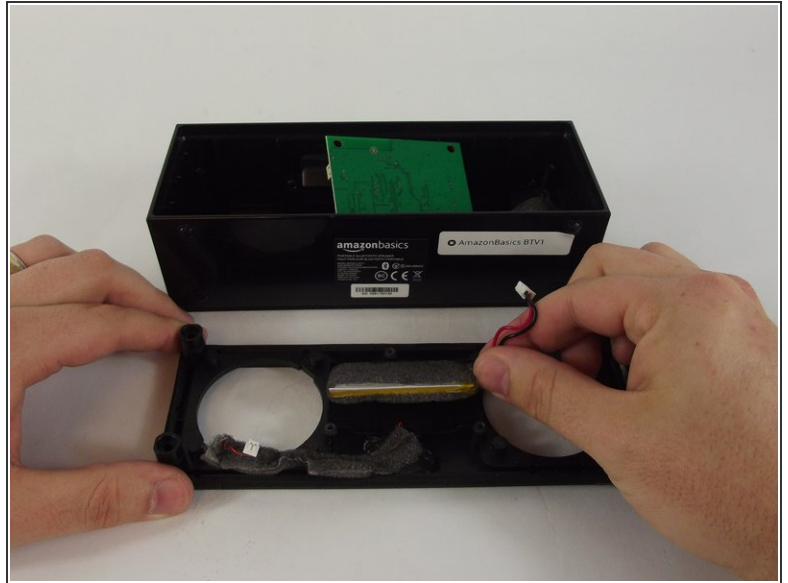



- Lift the motherboard off the face plate, exposing the battery.
 - Lift the battery out of its housing.
- ⚠ Use caution when using tools around the battery; batteries can be dangerous if punctured.

Step 6 — AUX Input Jack

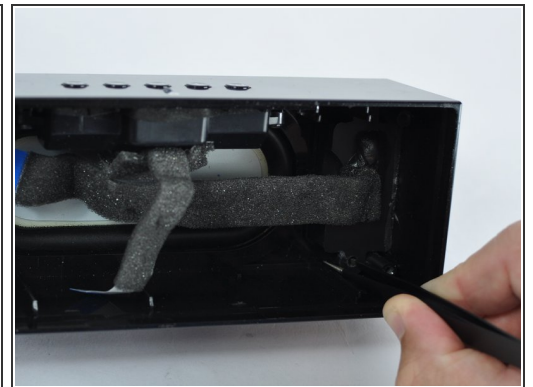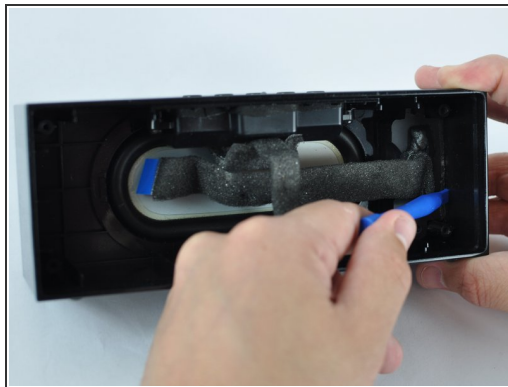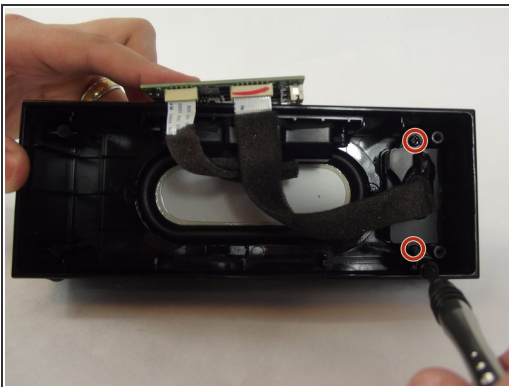



- Using a Phillips #1 screwdriver, remove the two black 10mm screws on the interior of the case on the side with the USB and AUX inputs.
- Using the prying tool and tweezers at different points to work the audio input casing off.

Step 7

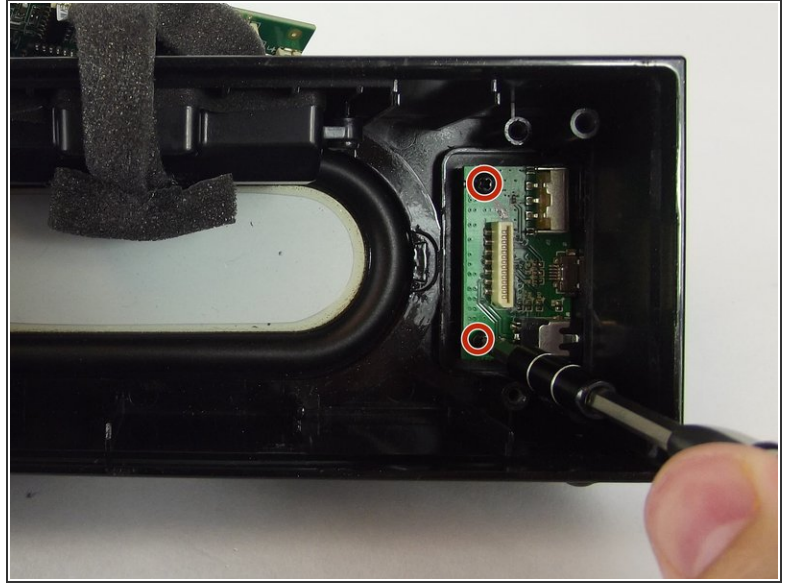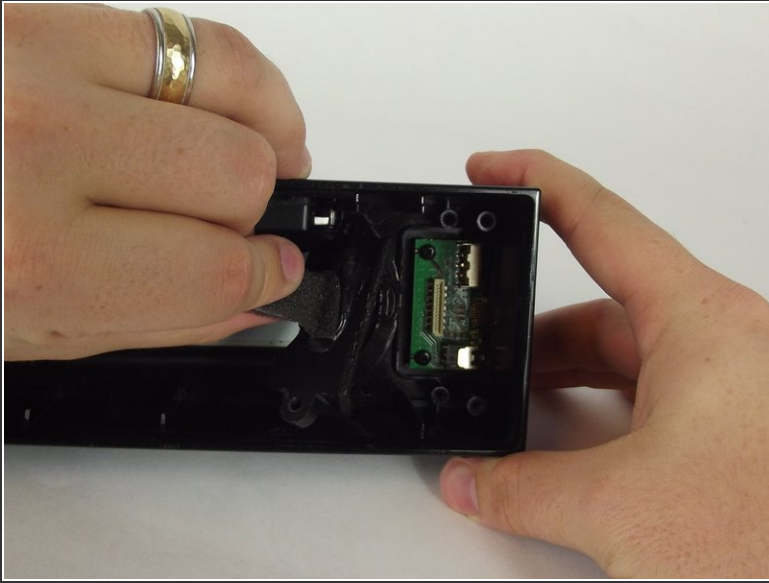


- Use your fingers to pull casing off by the ribbon.
- Use a Phillips #1 screwdriver to remove the two 7.6mm screws that hold the board in place.

Step 8

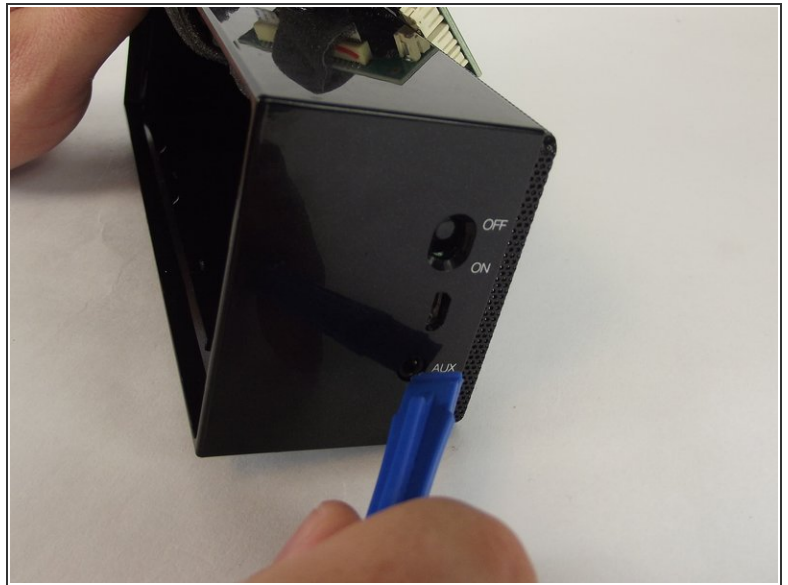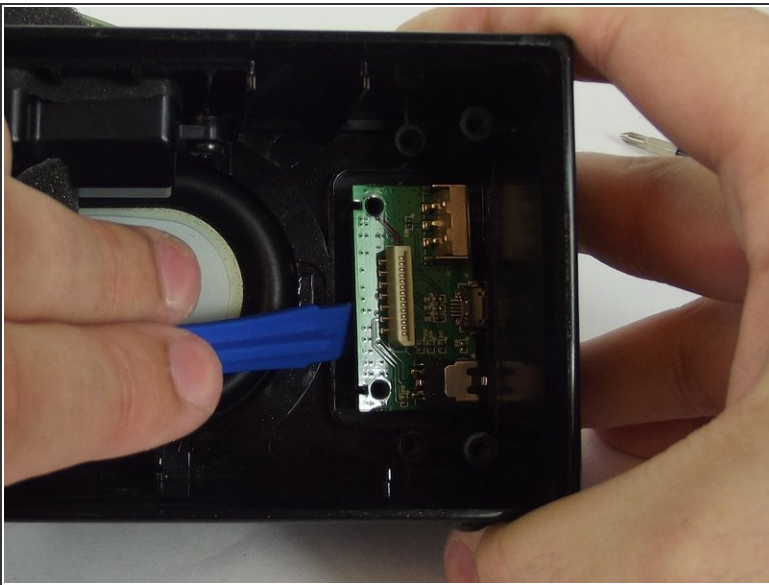

- Use plastic opening tool to lift up the board.
- Use plastic opening tool to gently push the aux input jack out of its housing.

Step 9

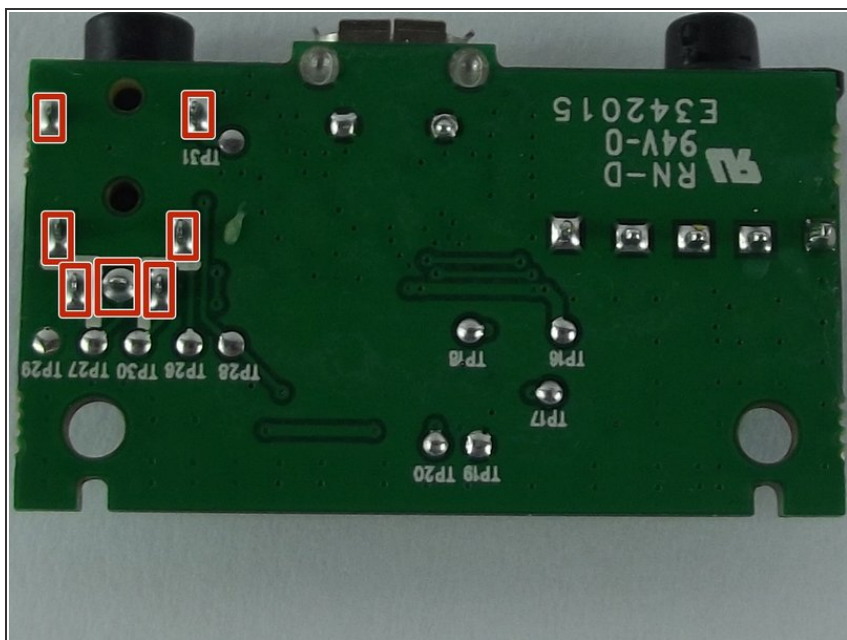

- Use the soldering iron to heat up solder joint and desoldering wick to remove the solder on each solder pad.
- ⚠ Do not apply heat from soldering iron for lengthy periods of time as this could potentially damage the board.

To reassemble your device, follow these instructions in reverse order.