



Asus Chromebook C201PA-DS02-LG Keyboard Replacement

How to replace a keyboard on your Asus Chromebook C201PA-DS02-LG.

Written By: Brittany M Won



INTRODUCTION

Are your keys not clicking? Did you spill any liquids on your keyboard recently? This guide will help you resolve these situations.

TOOLS:

- [iFixit Opening Tools](#) (1)
- Metal Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Keyboard




- Use a metal spudger to pry off the two feet closest to the hinge of the laptop.
- ☒ The feet are attached to the laptop by adhesives, therefore they may not stick as well after multiple removals.

Step 2



- Use a Phillips #0 screwdriver to unscrew the six 5mm screws.
- Use a Phillips #0 screwdriver to unscrew the two 6mm screws.

Step 3

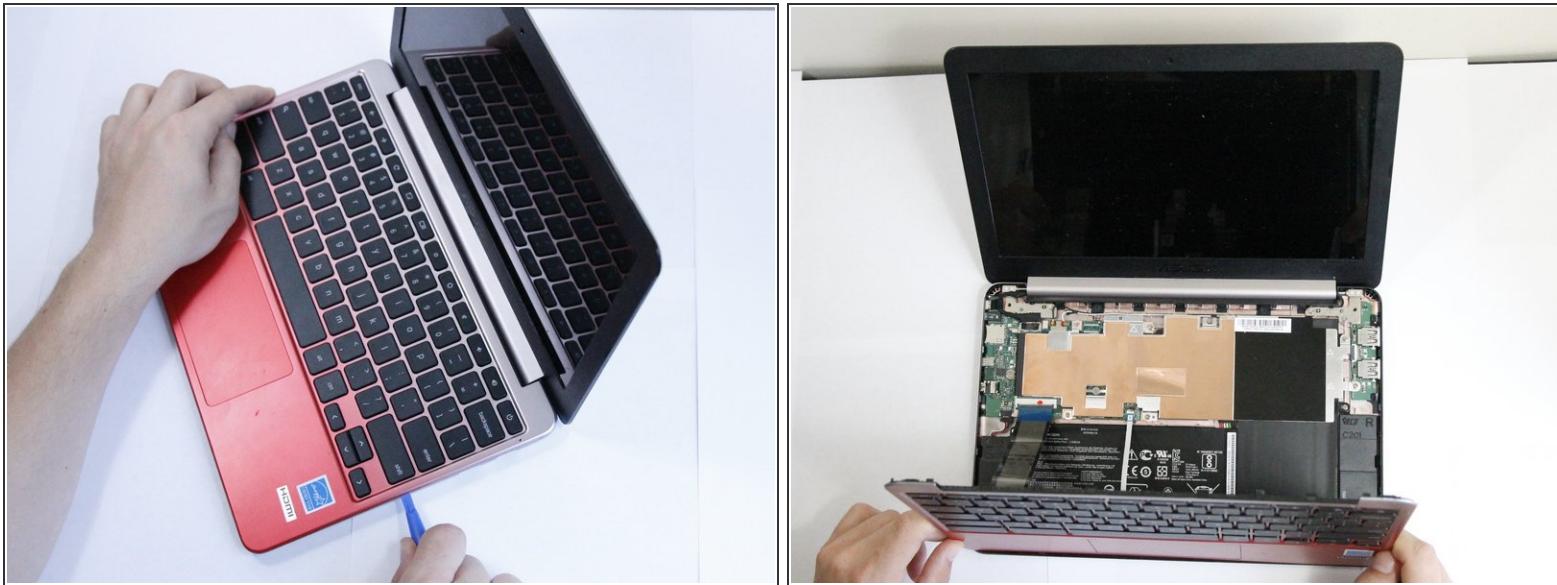


- Use a plastic opening tool to pry the keyboard off the edges of the computer.
- *i* The edges will make a popping noise.

Step 4



- Flip up the white bar that connects the thin white strip using a plastic opening tool.
- Grab the thin white strip and pull straight back to remove the strip from the connector.

Step 5

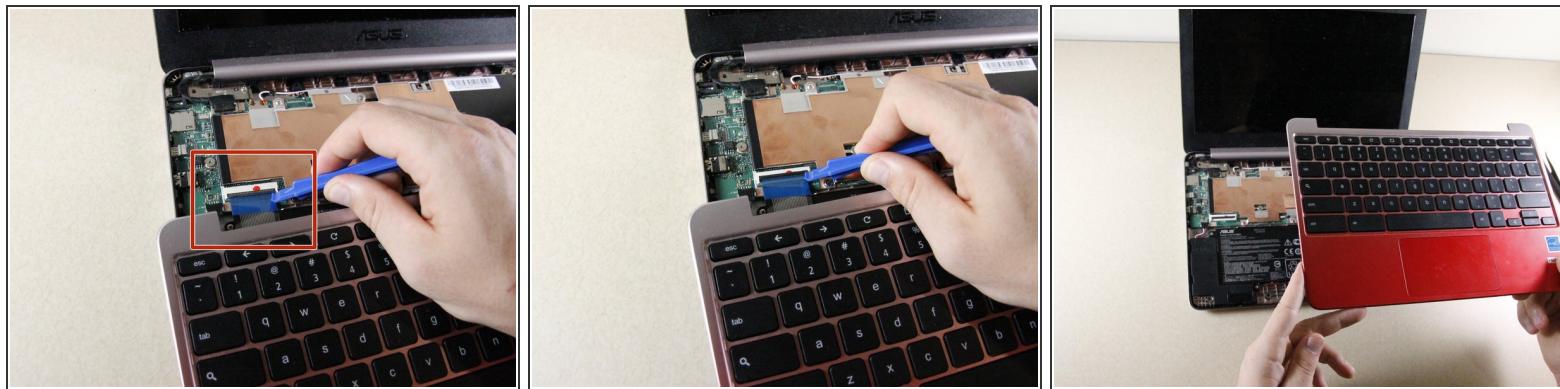

- Use a plastic opening tool to lift the black bar above the wide black strip in the connector.
- Grab the wide black strip and pull straight back to remove the strip from the connector.
- Remove the keyboard by lifting it straight up.

To reassemble your device, follow these instructions in reverse order.