



Asus Eee PC 1005HA Screen Replacement

Replace the screen on your Asus Eee PC 1005HA.

Written By: Mitchell Cesare



INTRODUCTION

Use this guide to replace the screen of the Replace the screen on your Asus Eee PC 1005HA laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)

PARTS:

- [10" PC Laptop LCD HSD100IFW1](#) (1)

Step 1 — Battery

- Lay the laptop upside down.
- Locate the two battery lock tabs.




Step 2



- Slide the tabs outward to unlock the battery.
- *(i)* The left tab will remain unlocked, while the right tab must be held.
- Holding the right tab open, slide the battery out of the laptop.

Step 3 — Screen

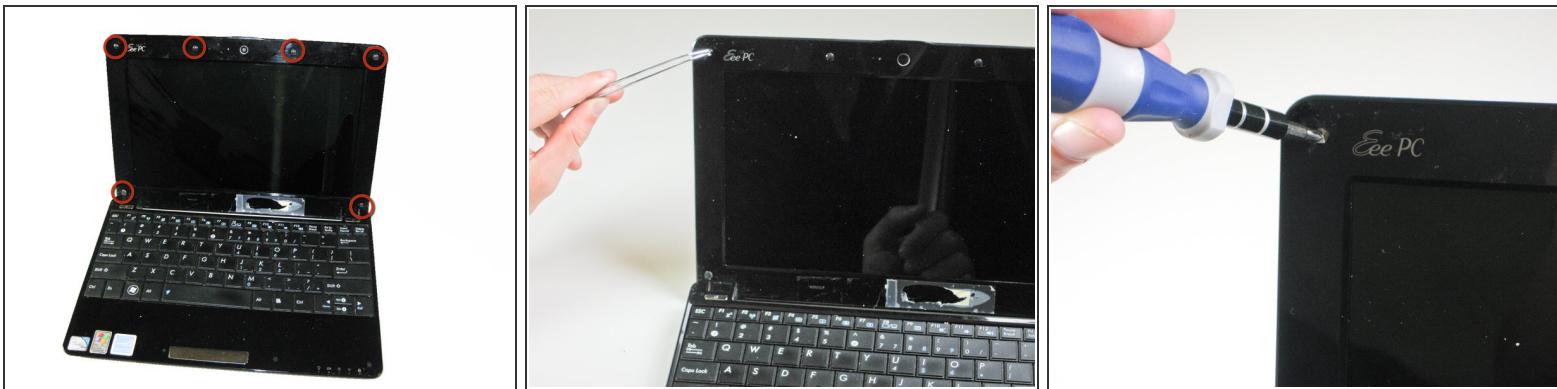


- Using tweezers, remove the six screw covers on the screen bezel.
- Remove the six 4.6 mm screws from the bezel.

Step 4



- Use a plastic opening tool to disengage the plastic clips that secure the screen bezel to the display.
- Carefully remove the bezel from the display.

Step 5

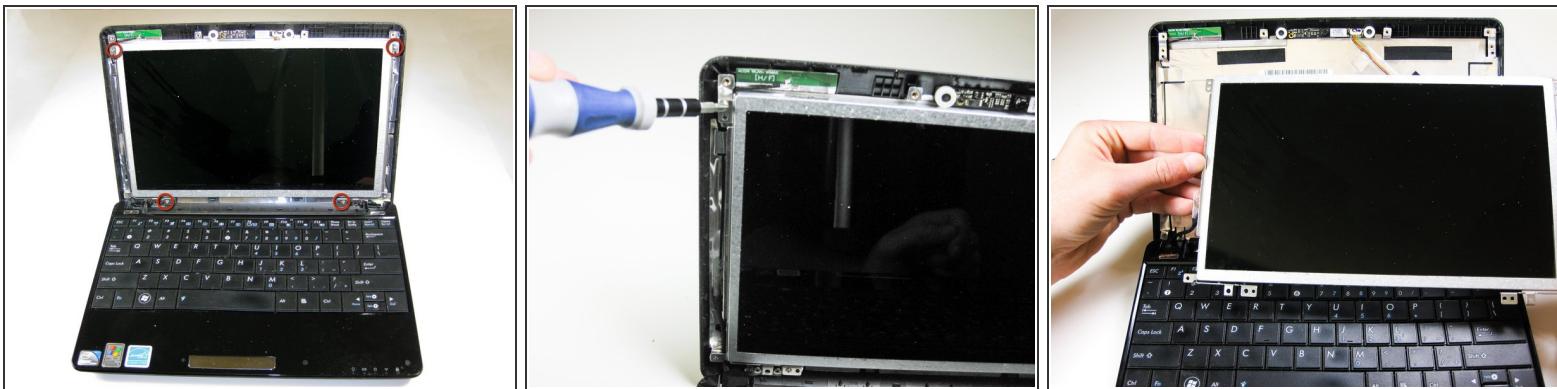


- Remove the four 3.6 mm screws securing the screen.

- Slowly lift the screen up from the rest of the laptop.


! The screen is still attached to the laptop by a set of cables. Be careful not to damage them while removing the screen.

Step 6

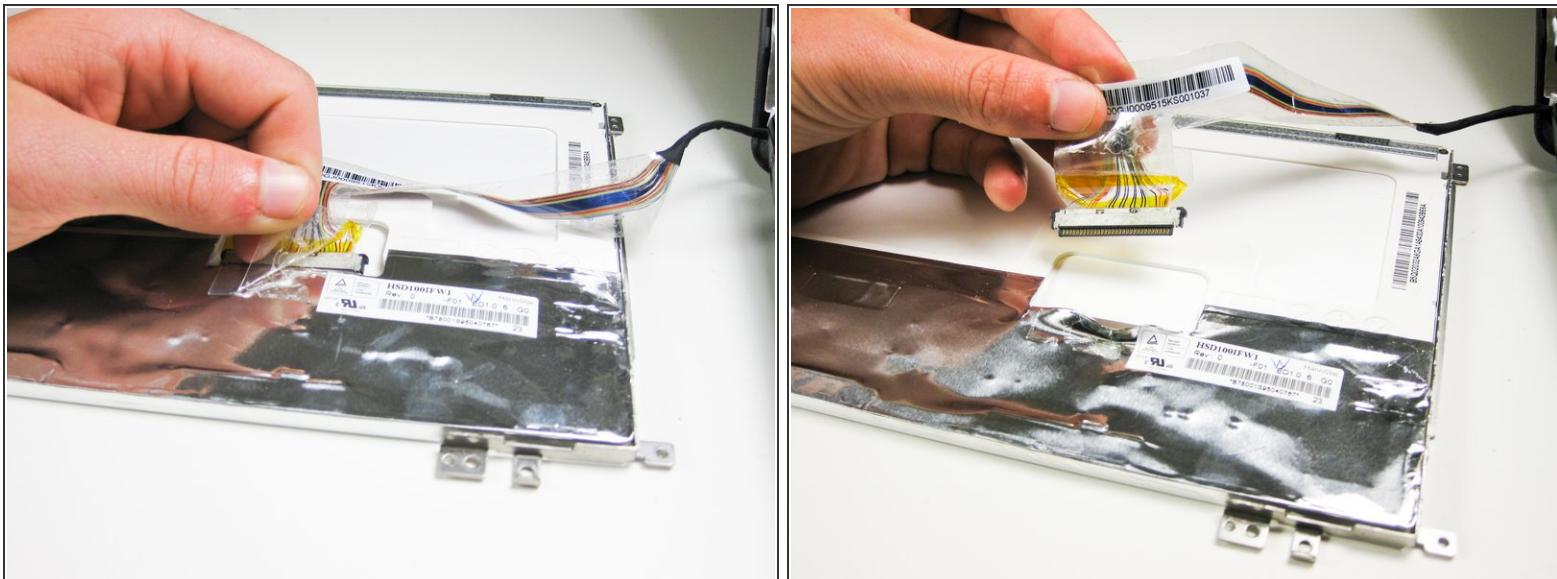

- Remove the plastic tape securing the display cables to the back of the screen.
- Slide the display cable connector out its socket on the back of the screen.

Step 7

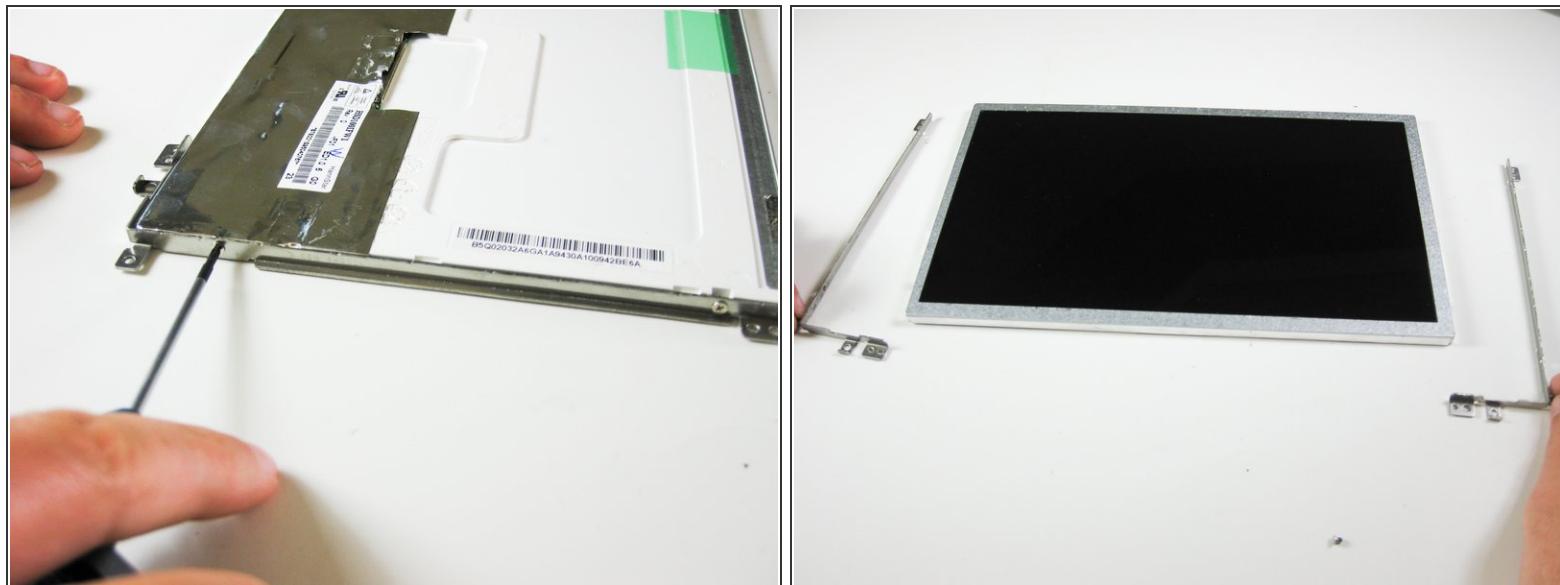

- Remove the four 3.1 mm housing screws on the sides of the display housing frame
- Remove the housing frame.

To reassemble your device, follow these instructions in reverse order.