



# Asus G75VW-BHI7N07 Trackpad Buttons Replacement

The trackpad can wear out over time or stop working completely. This guide will show you how to remove the trackpad buttons in this device.

Written By: Tai Dean



This document was generated on 2019-10-03 12:46:06 AM (MST).

## INTRODUCTION

The trackpad can wear out over time or stop working completely. This guide will show you how to remove the trackpad buttons in this device.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Pro Tech Toolkit](#) (1)
- [Spudger](#) (1)

## Step 1 — Trackpad Buttons



- Remove the 5 (9 mm screws) around the outside edges of the back cover with the PH1 Phillips-head screwdriver.
- Lift off the back cover using the opening tool.

## Step 2




- Remove the 10 (9 mm) screws marked 'A' using the PH1 Phillips-head screwdriver.
- Remove the battery by pressing the slide release button.
- Remove 2 more (9 mm) 'A' marked screws within the battery compartment using the PH1 Phillips-head screwdriver.

## Step 3




- Remove the cover for the disc drive with the opening tool.
- Remove the 6 (4 mm) 'B' marked screws with the PH1 Phillips-head screwdriver. (3 screws are in the battery compartment and 3 are under the disc drive cover)

## Step 4

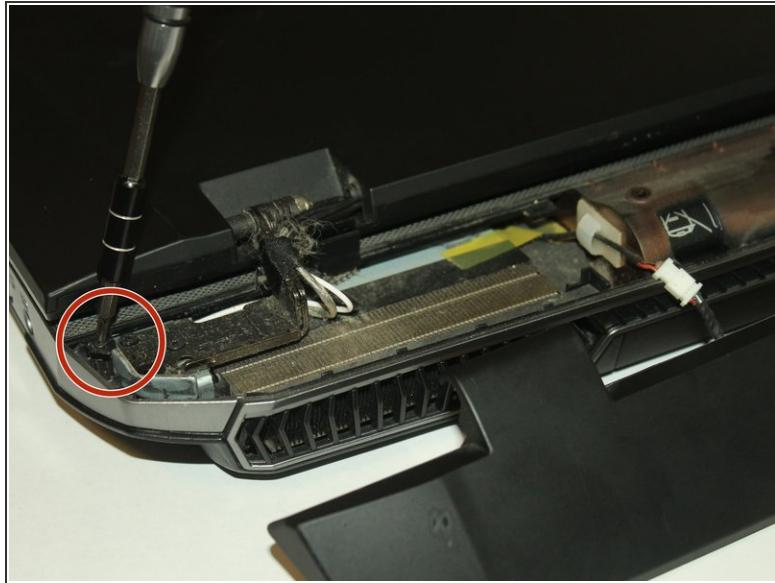



- Take off the hinge cover using the opening tool.
- Remove the 2 black outside edge (9 mm) screws with the J0 Phillips screwdriver.

## Step 5

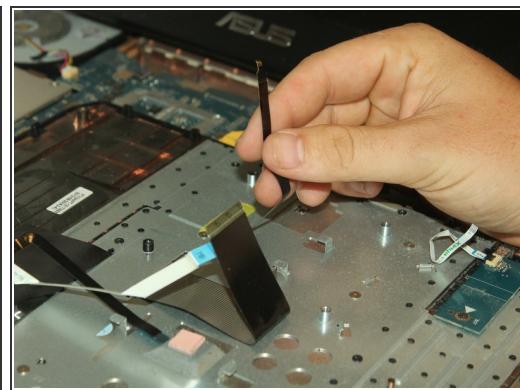

- Pry open the keypad platform with the opening tool.
- You will need to lift the keypad platform with your hands.
- Remove all electrical connections using your hands.

## Step 6

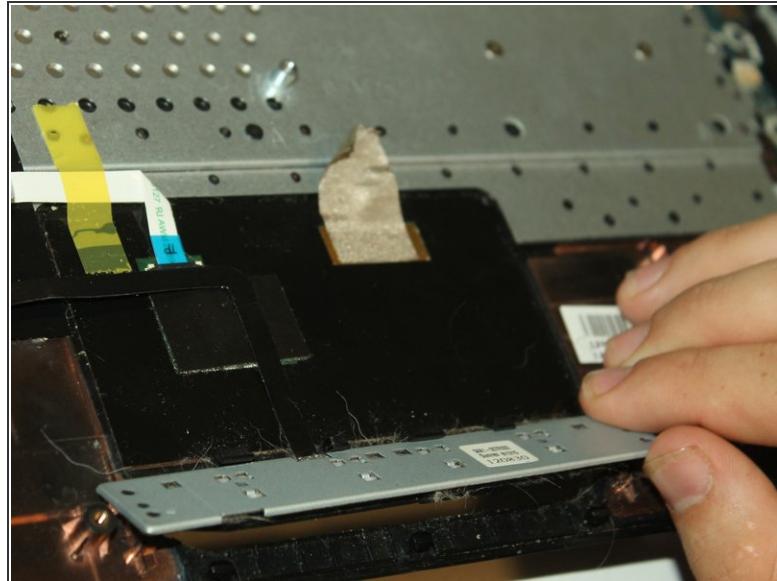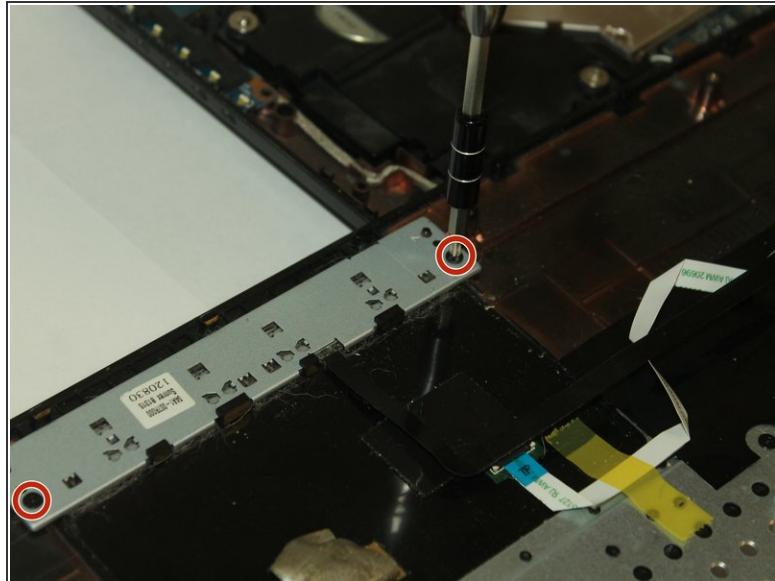

- Take the 2 (3 mm) screws out of the trackpad using the PH1 Phillips screwdriver.
- Remove the trackpad buttons using your hands.

To reassemble your device, follow these instructions in reverse order.