



Asus ROG Strix GL702VS Webcam Replacement

This will guide you to replacing your webcam module in your Asus ROG Strix GL702VS Gaming laptop.

Written By: Alexander M. Lanyi



This document was generated on 2020-04-05 10:41:41 PM (MST).


INTRODUCTION

This is a step by step process for the replacement or repair of the webcam on your Asus ROG Strix GL702VS laptop. If you are experiencing bad quality or a black screen while using the webcam, follow these steps to remove the webcam and replace it.

TOOLS:


- [JIS #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — LCD Screen (Display)

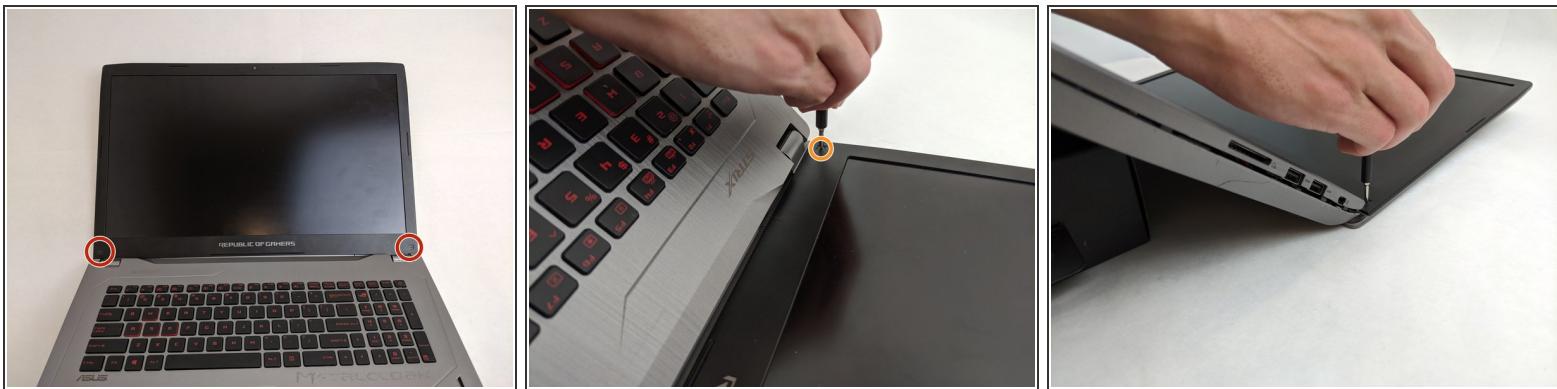

- Remove the two screw stickers at the bottom corners of the screen.
- Remove the two 4mm JIS #0 screws beneath the stickers.

Step 2

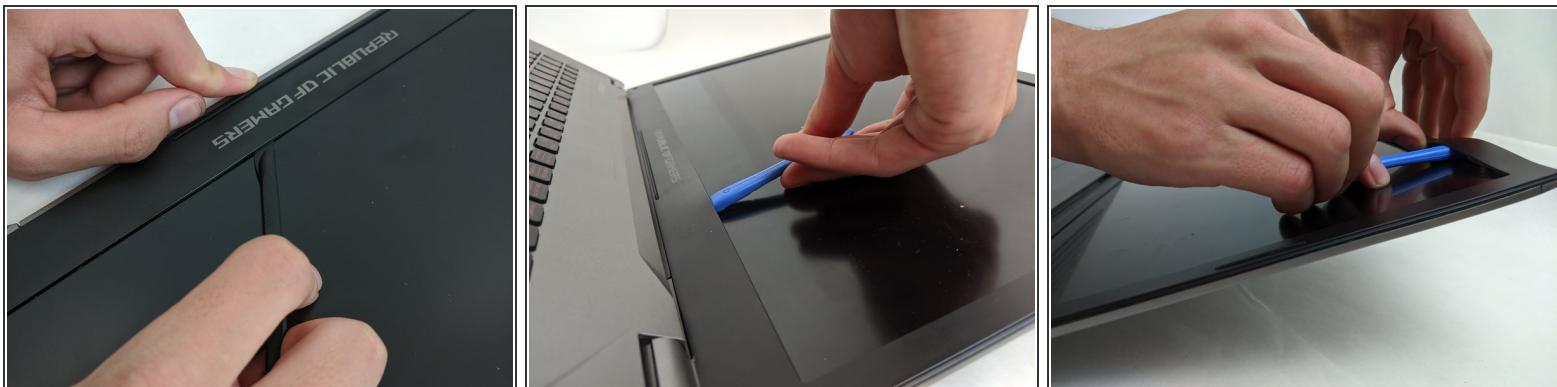

- Break the glue between the bezel and screen with a nylon spudger, working around the inside of the bezel.
- Using an opening tool, lift up the bezel once the glue has been removed.


(i) The plastic clips remain so it will have some resistance/snapping noises.

Step 3




- Lift the plastic bezel off of the front display panel.
- ☒ The plastic bezel will click when put back on the screen.

Step 4

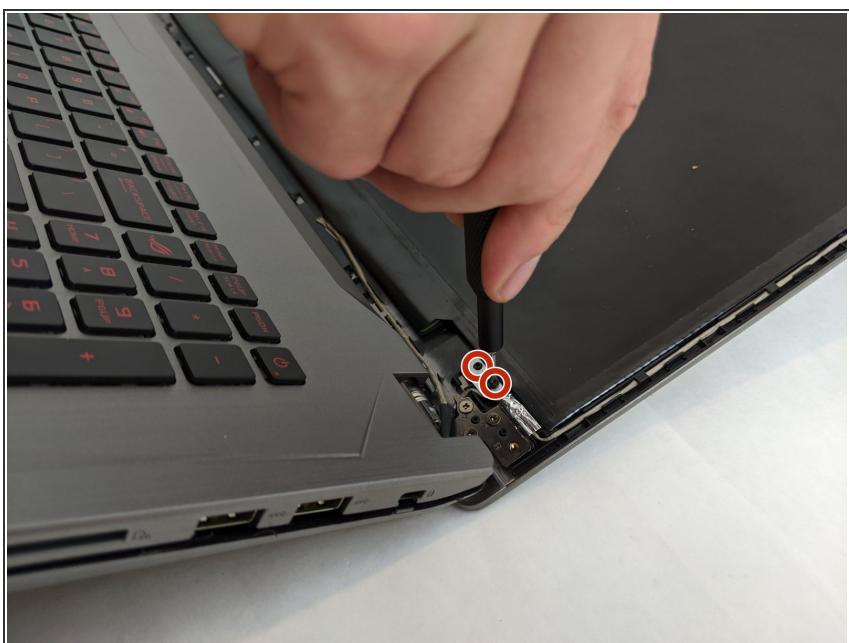

- Remove the four interior 4mm JIS #0 screws from each of the four metal LCD tabs.


Step 5

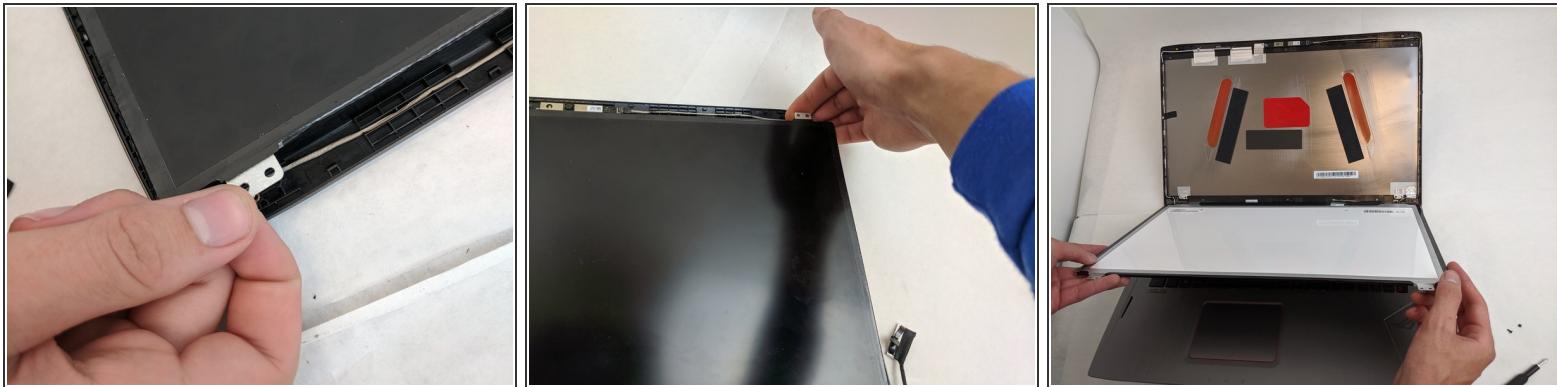

- Once the LCD display is freed you can lift it up out of the casing.


 Be careful as the cable remains attached.

Step 6

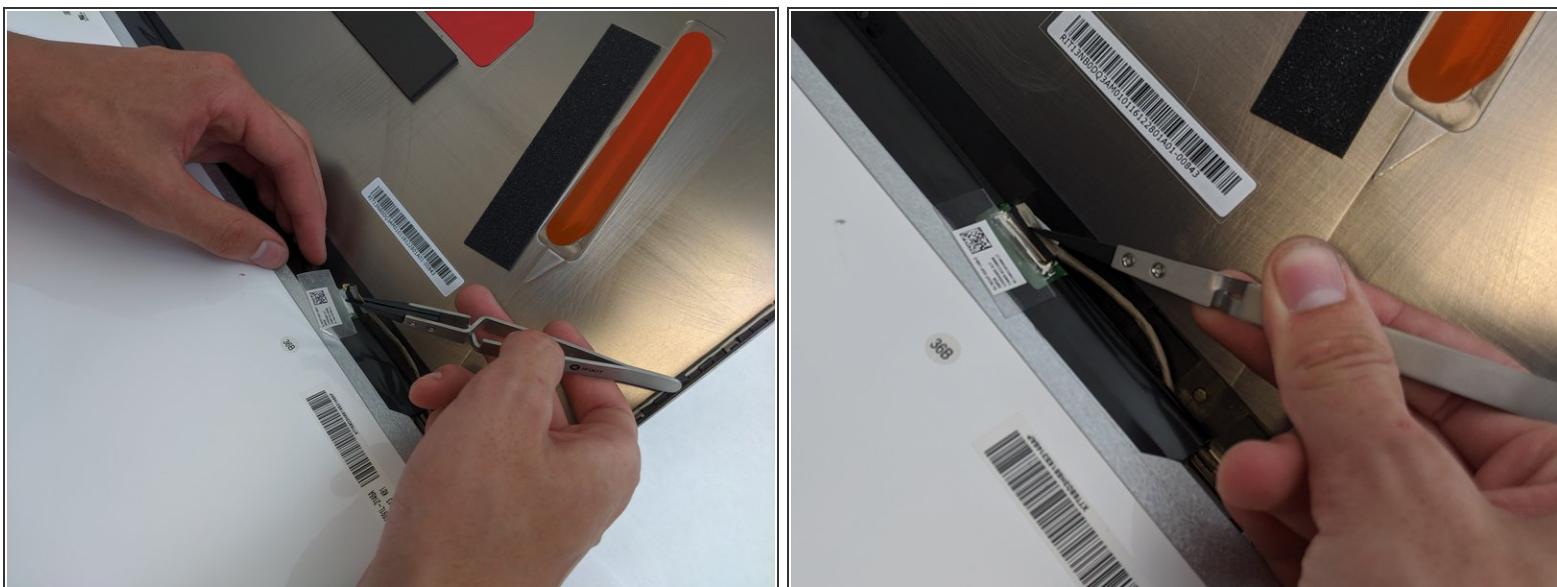



- On the backside of the LCD, disconnect the LCD cable using a pair of tweezers.
- Once fully disconnected, remove the LCD and replace it.

Step 7 — Webcam

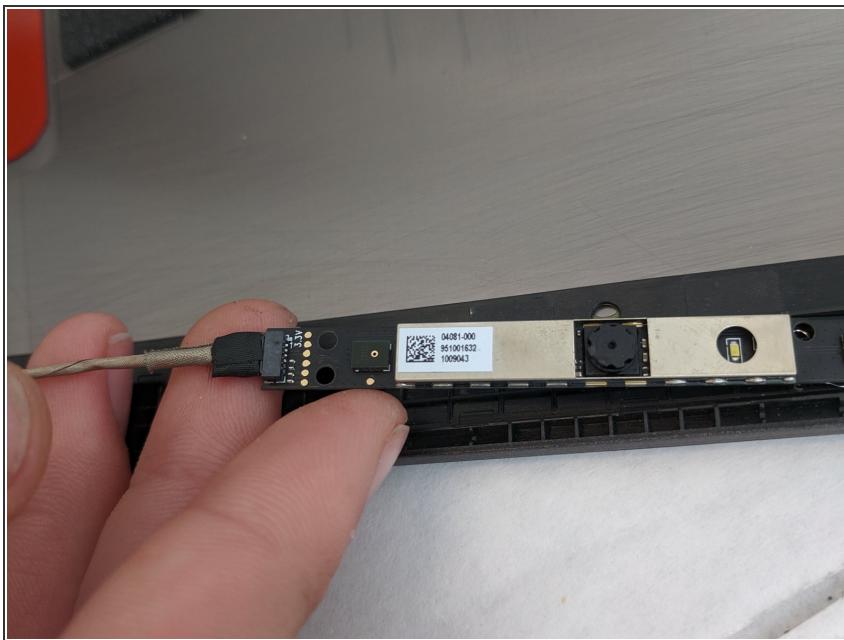

- Gently lift the webcam out of its resting position at the top of the LCD assembly.

Step 8

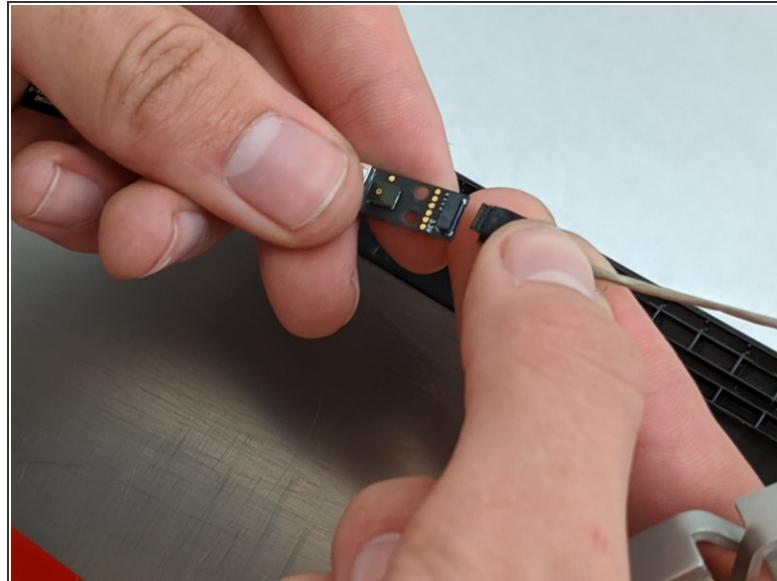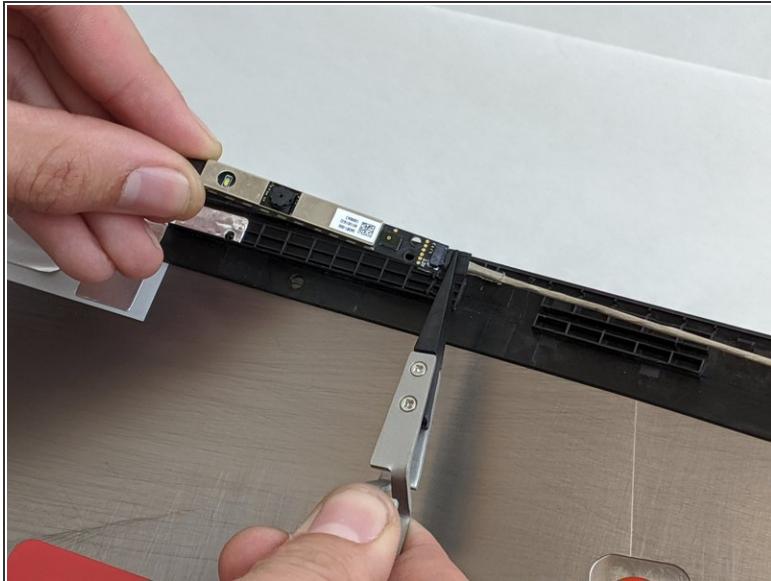

- Using the nylon tweezers or your hand, disconnect the webcam module.

To reassemble your device, follow these instructions in reverse order.