



Asus X200CA Display Replacement

This guide will show you how to replace the Asus X200CA display.

Written By: Jacqueline Collier



 **TOOLS:**


- Metal Spudger (1)

Step 1 — Display



- Wedge a metal spudger between the bezel and display cover.
- Slide the metal spudger back and forth along the top, left and right sides to pry apart the screen from the outer shell.

Step 2

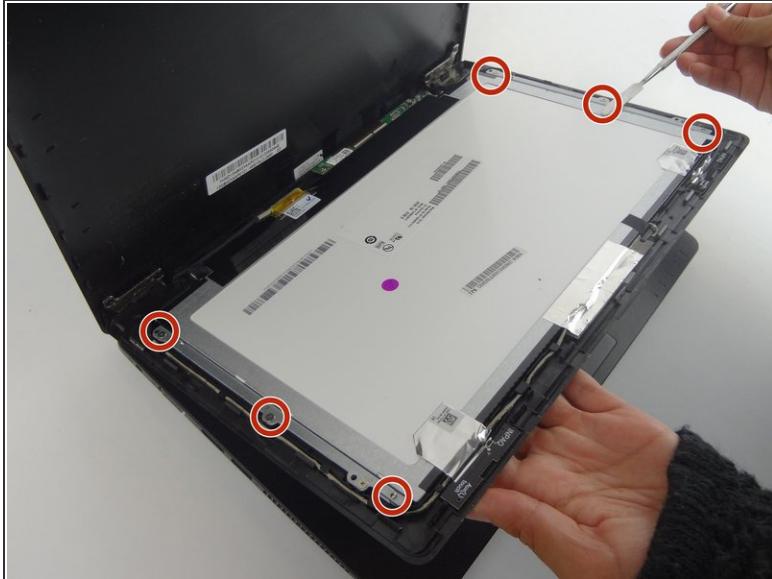

- Remove the 6 silver 2.7mm screws securing the screen bracket to screen bezel.

Step 3



- Slice the silver foil tape with a spudger by applying pressure between the frame and the back of the screen case.

Step 4



- Pull apart the black fabric tape with your fingers.

Step 5



- Use a plastic spudger to peel off the sticker label securing the LCD cable to the LCD display.
- Gently pull the sticker to disconnect the LCD cable. Do not use excessive force while removing the video cable attached to the back of the LCD.

Step 6



- Lift to remove the LCD screen.

Step 7



- Remove the 4 silver 2.7mm screws to separate the LCD screen from the 2 screen brackets.

To reassemble your device, follow these instructions in reverse order.