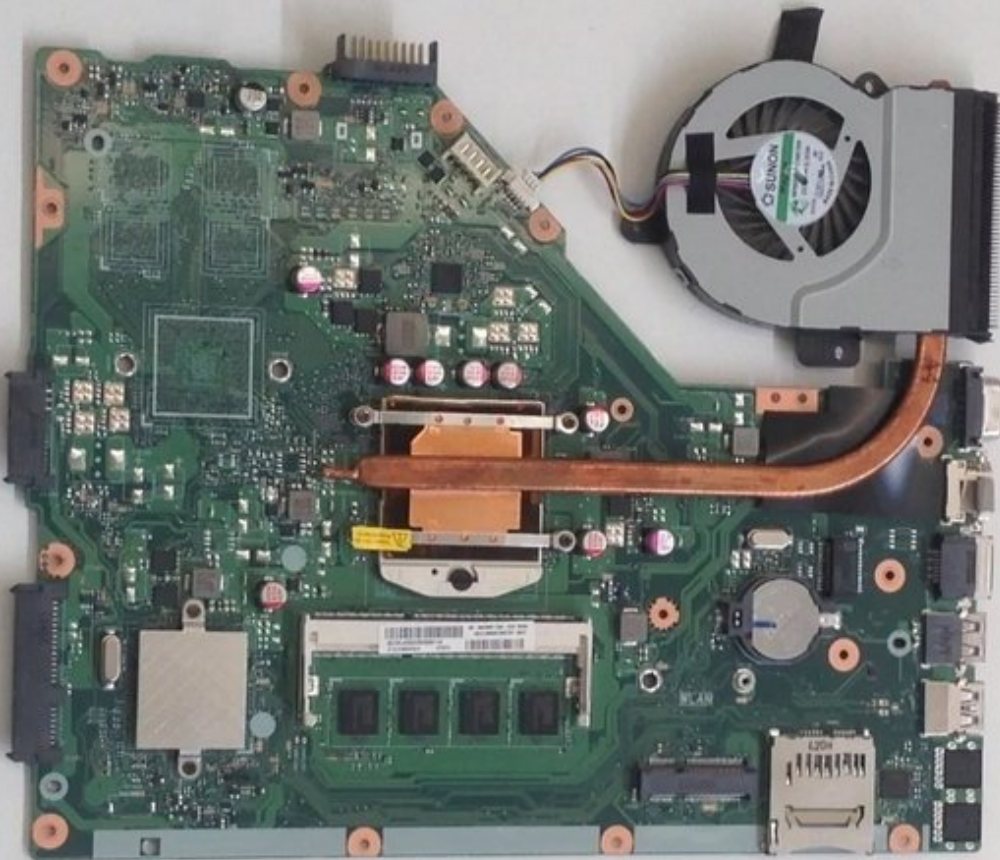# Asus X55C Motherboard Replacement

Asus X55C Motherboard Replacement

Written By: ZFix

INTRODUCTION

How to disassemble the laptop and replace the Mother board.
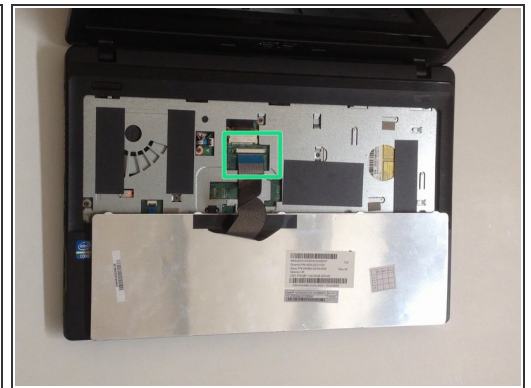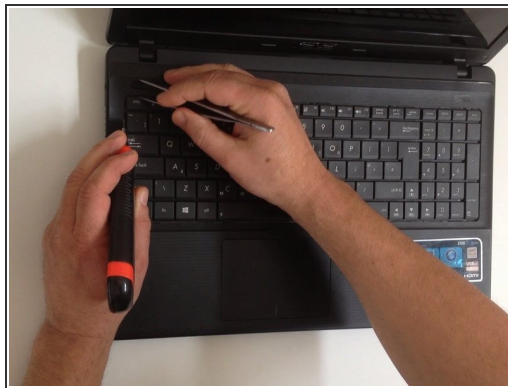
Please SUBSCRIBE to my channel ツ

[video: http://youtu.be/zRjcZQ59SSY]

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- Tweezers (1)

This document was generated on 2019-09-21 11:16:13 AM (MST).

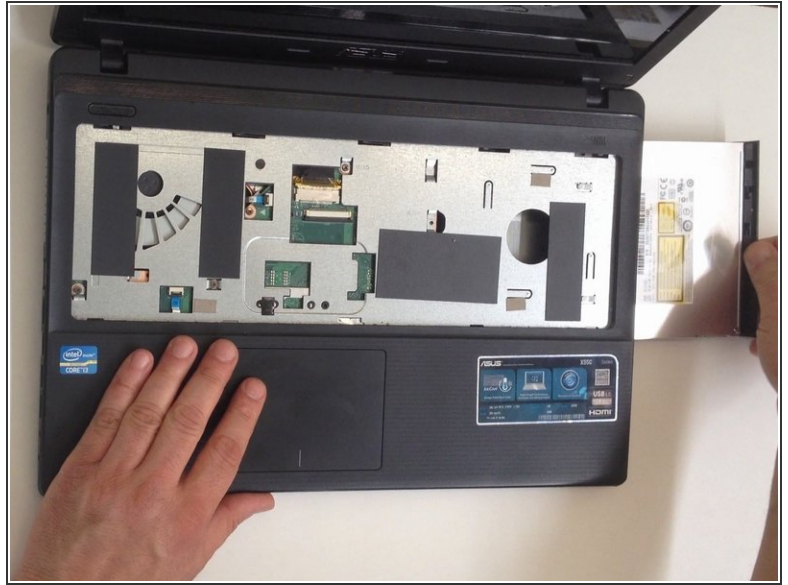www.iFixit.com

Step 1 — Keyboard

- Switch off the laptop and remove the battery.
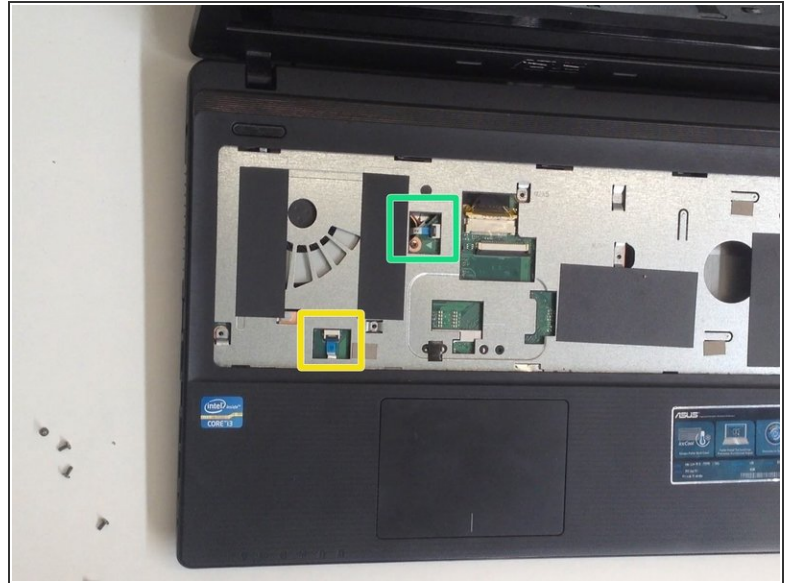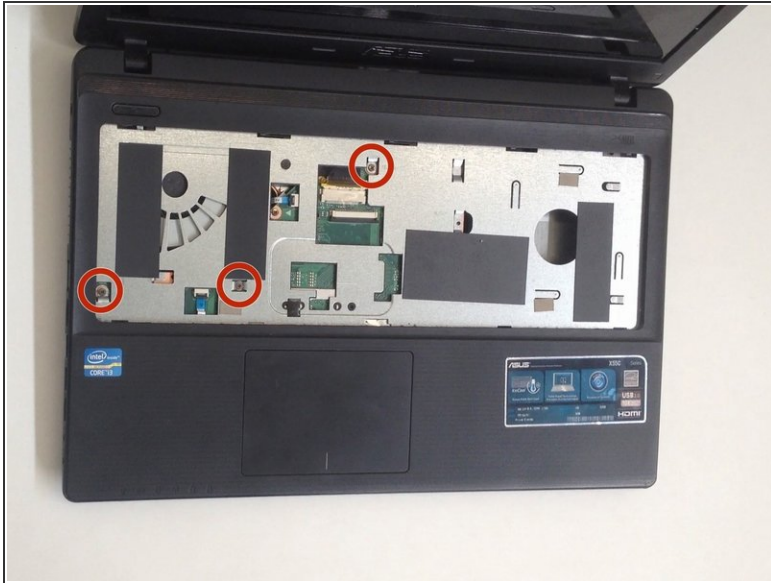
Step 2

- The Keyboard is held by 5x locking clips.

- Pick up a little the one side of the Keyboard and start opening the clips one by one.

- Disconnect the Keyboard flex cable from the mother board and remove the KB.

- **Please SUBSCRIBE to my channel ツ**

This document was generated on 2019-09-21 11:16:13 AM (MST).

Step 3 — Optical Drive

- Remove the screw.

- Pull out the SATA DVD Drive.

This document was generated on 2019-09-21 11:16:13 AM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

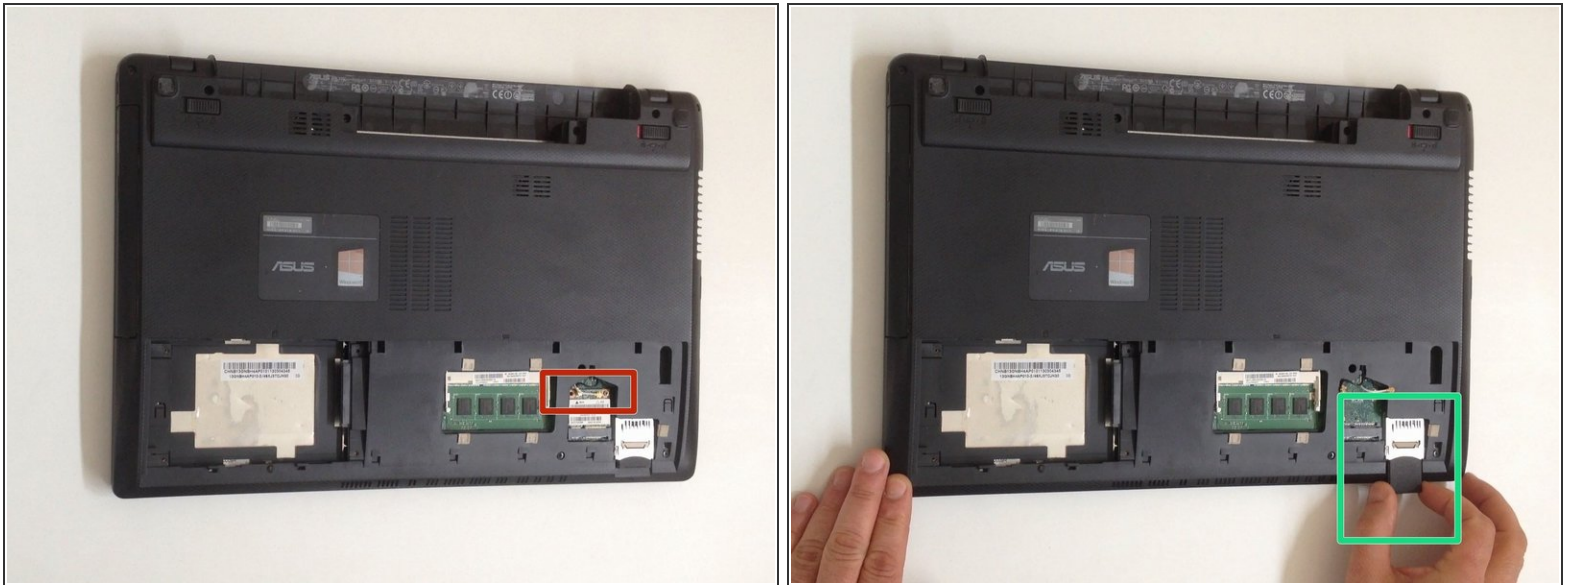Page 4 of 8

Step 4 — Motherboard

- Remove 3x Philips screws.

- Disconnect the two small flex cables:

    - Power On button flex cable

    - Touch pad flex cable

Step 5

- Unscrew the two Philips screws and remove the HDD / RAM Cover.

- Remove three screws securing the hard drive caddy (hard drive assembly).

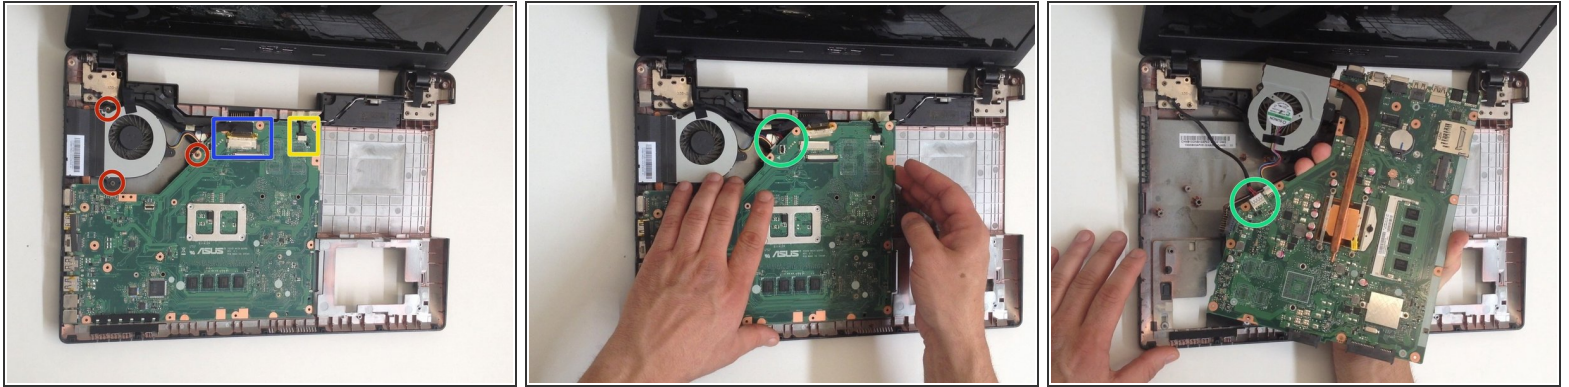- Slide the hard drive assembly to the left to disconnect it from the motherboard.

This document was generated on 2019-09-21 11:16:13 AM (MST).

Step 6

- Disconnect the two coaxial antenna cables from the Wi-Fi card.

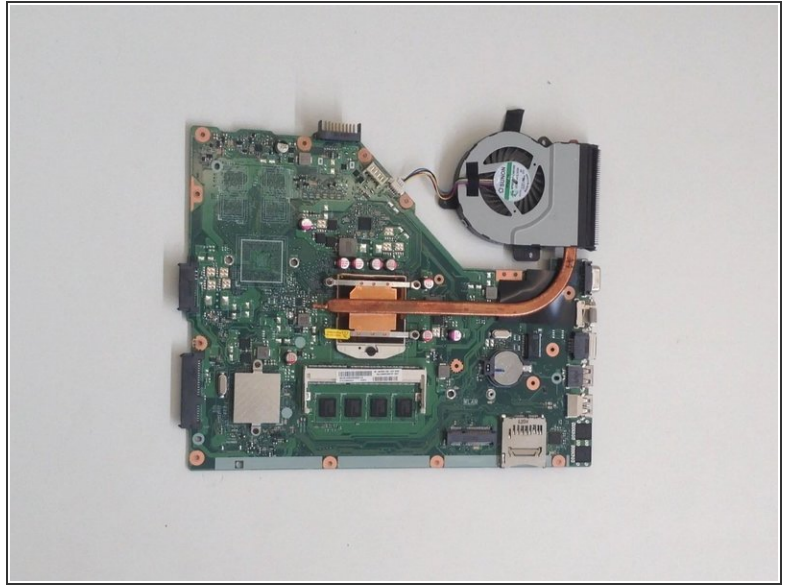- Remove any Memory or Dummy card.
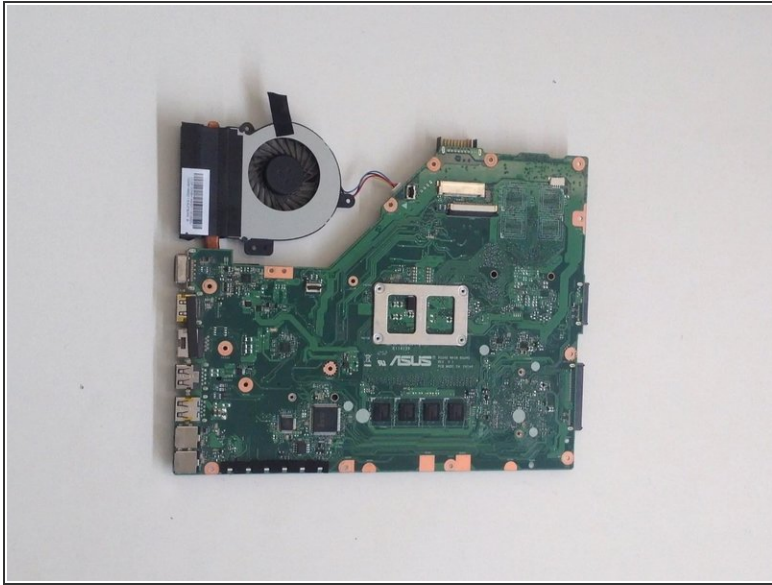
Step 7

- The bottom cover is held by 10x Phillips screws. Remove them.

- With a plastic tool separate the Upper cover and remove it.

| |

Step 8

- Disconnect:
  - The Microphone cable
  - The LCD Display flex cable
- Remove 3x Pillips screws.
- Lift the board first from the right edge.
- There is another one cable, from the DC connector, connected to the underside of main board. We should spun the the board to disconnect the DC connector cable.

This document was generated on 2019-09-21 11:16:13 AM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 7 of 8

Step 9

- ASUS X55C iCore with 4GB no board RAM motherboard, model: **60-N0OMB1100**

- **Please SUBSCRIBE to my channel ツ**

To reassemble your device, follow these instructions in reverse order.