



Asus Z54C-JS31 Display Replacement

This guide will show how to replace the display of an Asus Z54C-JS31 laptop.

Written By: Mark DeSimone



INTRODUCTION

The display is vital to using a laptop. If the display is damaged or not functioning properly this guide will show how to replace it.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- Turn the laptop upside down so that the underside is facing up and locate the two switches that are on each side of the battery.
- Slide the switch on the top right corner to the right.
- Slide and hold the switch on the top left corner to the left and carefully remove the battery.

Step 2 — Display

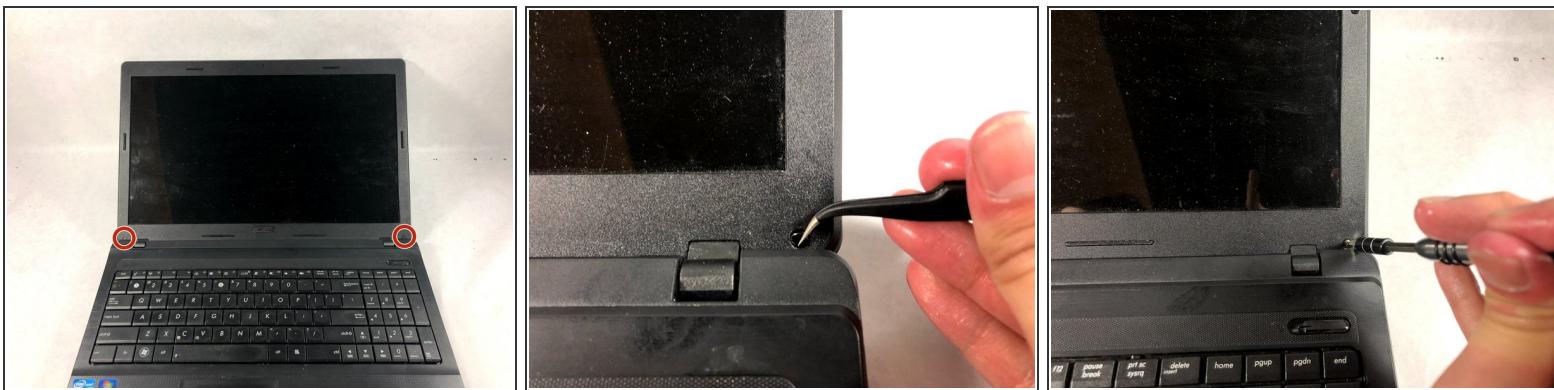


- Open up the laptop and locate the two circular stickers at the bottom corners of the display.
- Use a pair of tweezers to remove the two black stickers covering the screws.
- Using a Philips #000 screwdriver, remove the two 9mm screws.

Step 3

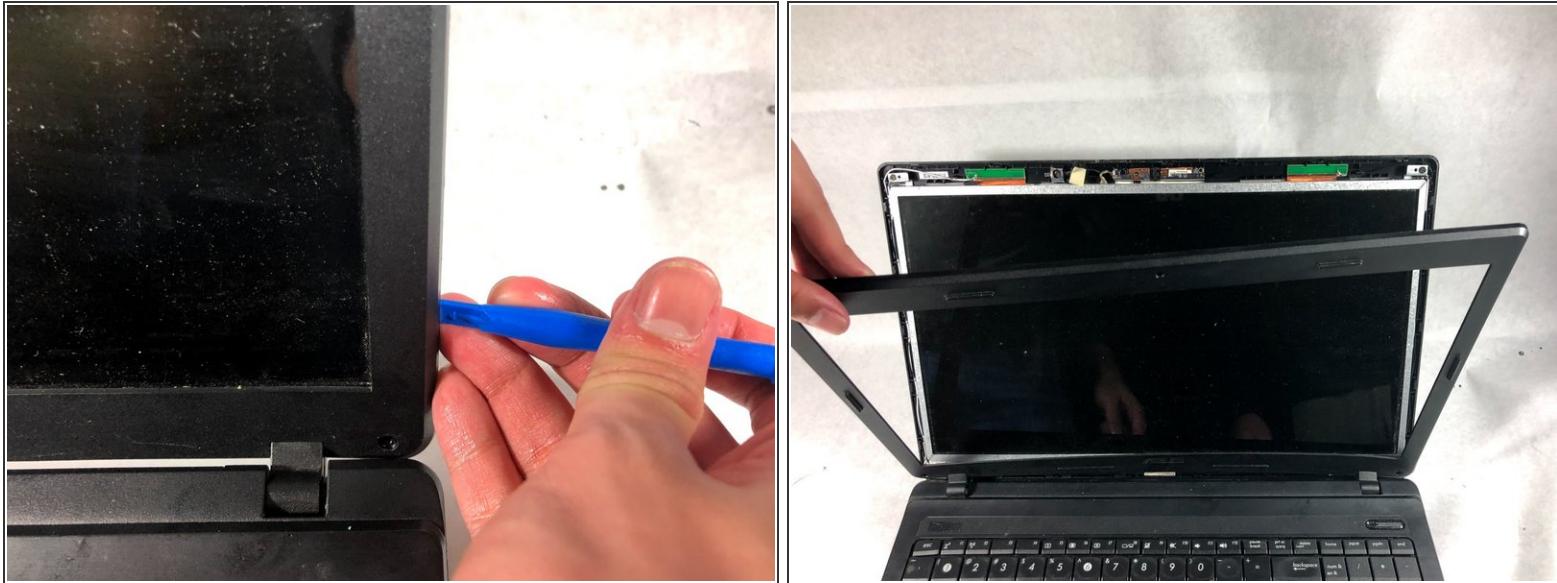


- Use the plastic opening tool to pop off the plastic border around the display.

Step 4

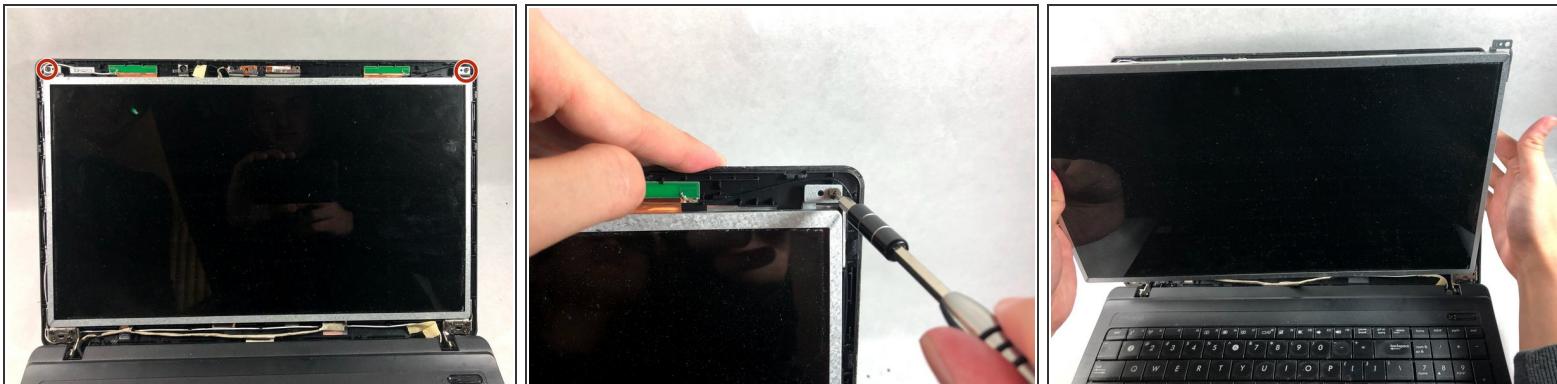

- Remove the two 9mm screws from the top corners of the display with a Phillips #000 screwdriver.
- Carefully lift the display out and place the screen face down on the keyboard.

Step 5

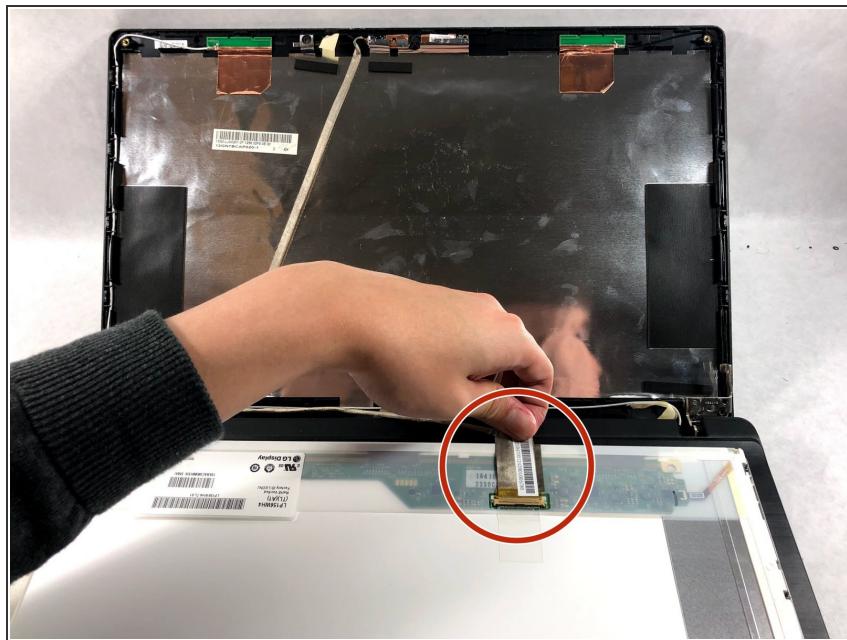

- Disconnect the display cable connector attached to the display.

To reassemble your device, follow these instructions in reverse order.