




# BLU Dash 3.5 Screen Assembly Replacement

Replace broken screen assembly on the Blu Dash 3.5.

Written By: Jeffrey Dlugosz

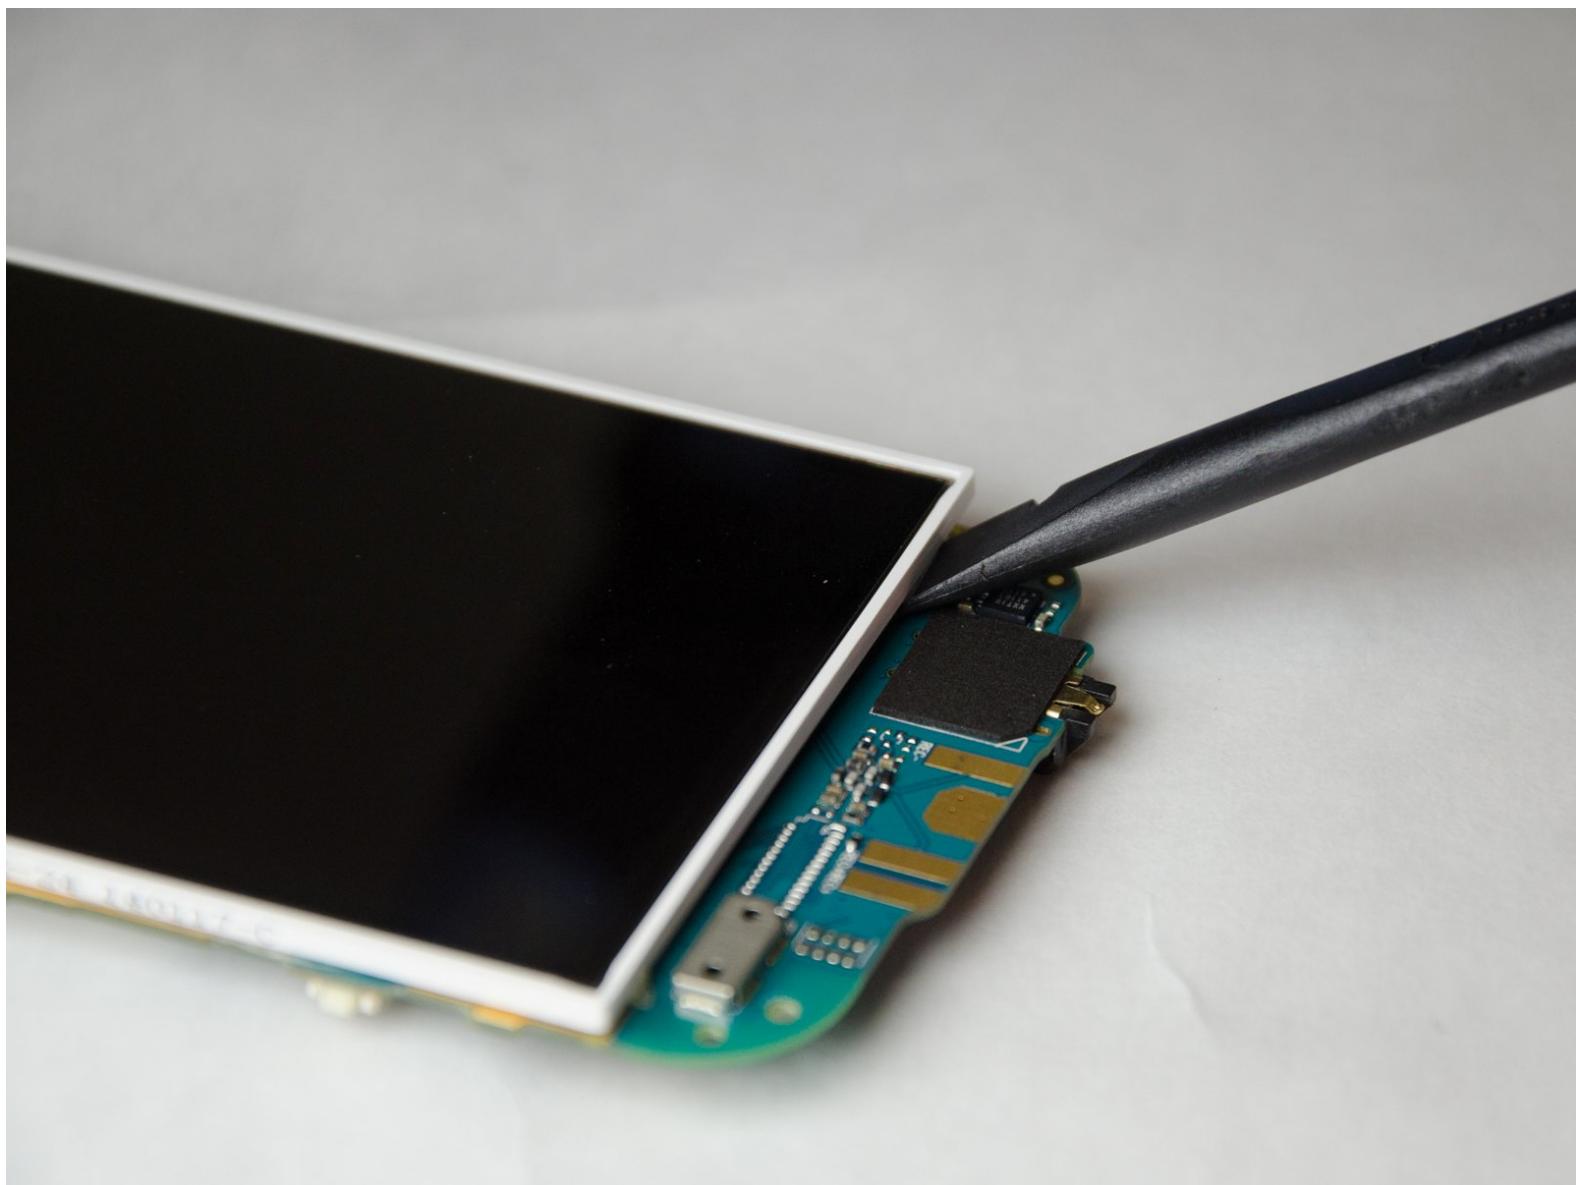

## INTRODUCTION

A hands on guide to replacing the touch screen on the Blu Dash 3.5. This guide will detail the steps necessary to remove and replace the touch screen.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [Blu Dash 3.5 Replacement Screen](#) (1)

## Step 1 — Battery



- Start by locating the slot on the lower right corner of the device.
- Insert the opening tool into the slot.
- Pry the back cover off. Once the corner is off, continue around the perimeter of the phone pulling the back off with your fingers.


*(i)* A fingernail can work to open the back in place of an opening tool.

## Step 2




- Locate the indentation at the bottom of the battery.
- Insert your thumb and pull the battery out.

## Step 3 — Volume and Lock Button

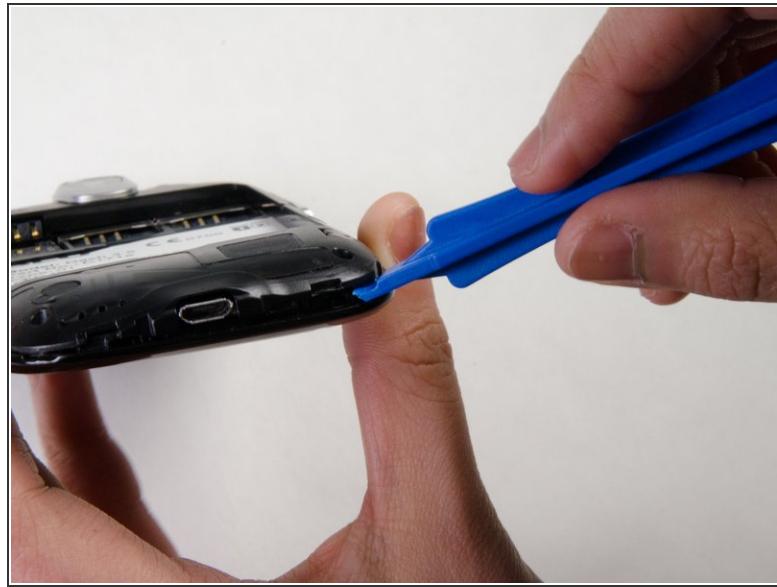


- Use the 000 Phillips screwdriver to remove the four 4.5 mm screws from the corners of the interior back panel.
- Use the opening tool to pry open the plastic back panel to expose the motherboard.

## Step 4

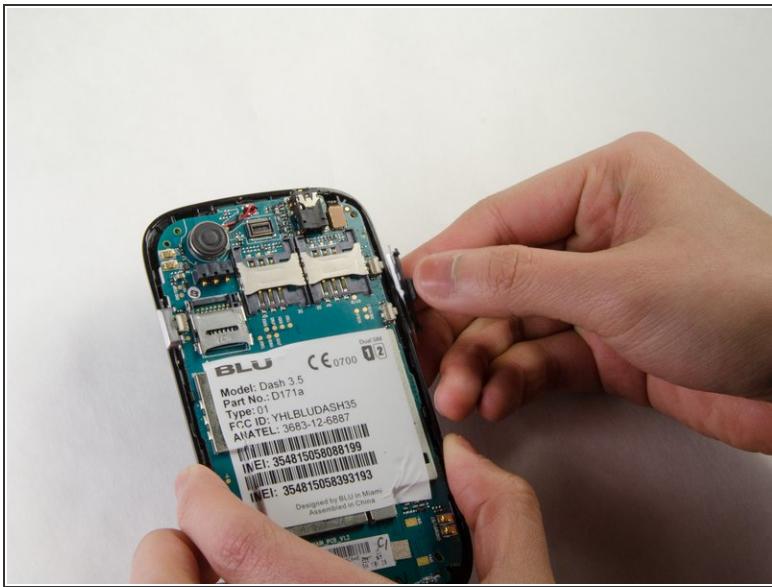



- Remove volume and lock buttons by lifting them gently from the casing.

## Step 5 — Screen Assembly

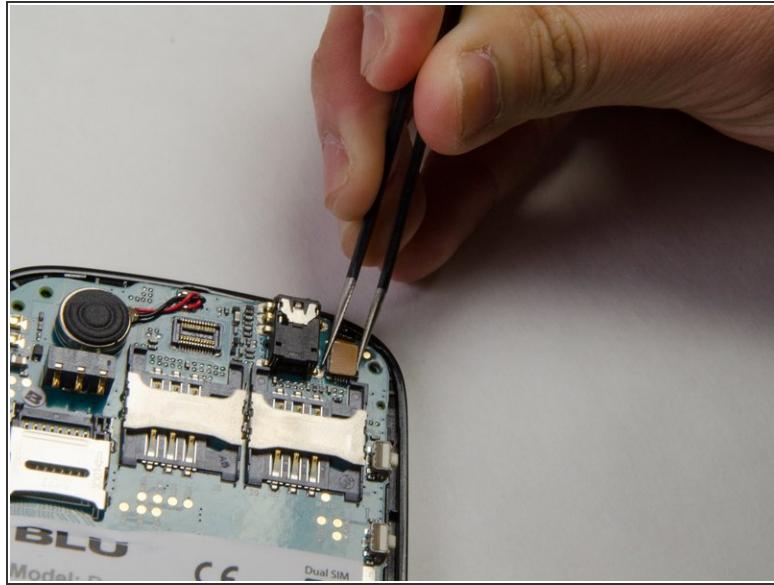

- Use tweezers to lift the tab where the cable is connected.
- Use the opening tool to pry the motherboard from the front face plate.

## Step 6

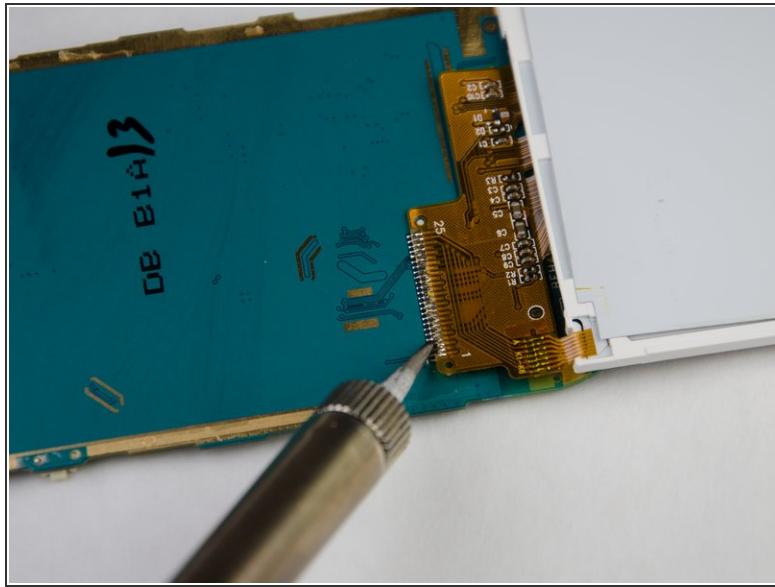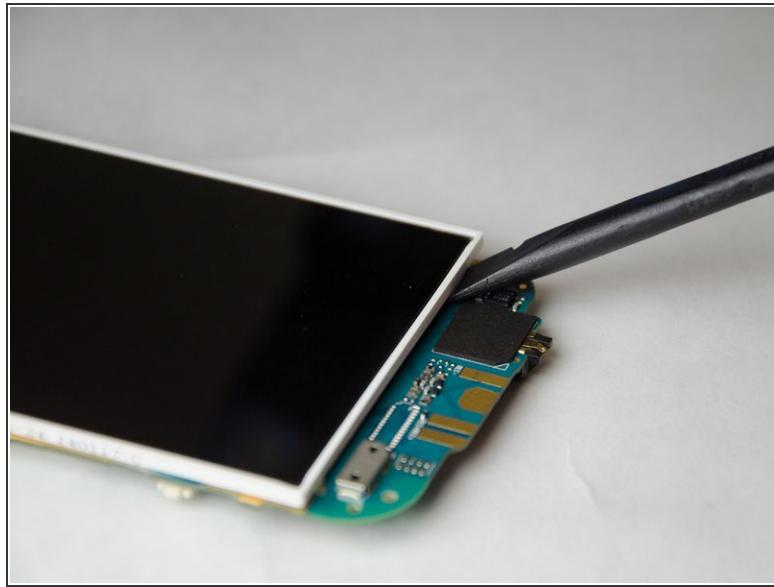

- Use opening tool to pry off the screen.
- Use a soldering tool to melt the contact between the motherboard and the screen
- Solder new screen contacts to the motherboard.

To reassemble your device, follow these instructions in reverse order.