



# BLU Dash JR D140 Digitizer Replacement

This guide will help you replace the damaged digitizer in your BLU Dash JR D140. This guide is also a prerequisite for the microphone guide.

Written By: Nathanael



## INTRODUCTION

Screens on these phones can crack easily, using this guide you can have a clean brand new slick look again! It is also a nice way to get under the screen and remove dust particles.

### **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

### **PARTS:**

- [blu dash jr d140 screen](#) (1)

## Step 1 — Battery



- ⚠ Turn off the phone first. Press the power button continuously for 2-3 seconds to shut down the phone.
- Using a plastic opening tool, pry open the back cover from the slit on the bottom right corner of the phone.

## Step 2




- Using a plastic opening tool or finger, pull out the battery.

## Step 3 — Digitizer



- Remove the four 4.0mm Phillips #1 screws.

## Step 4

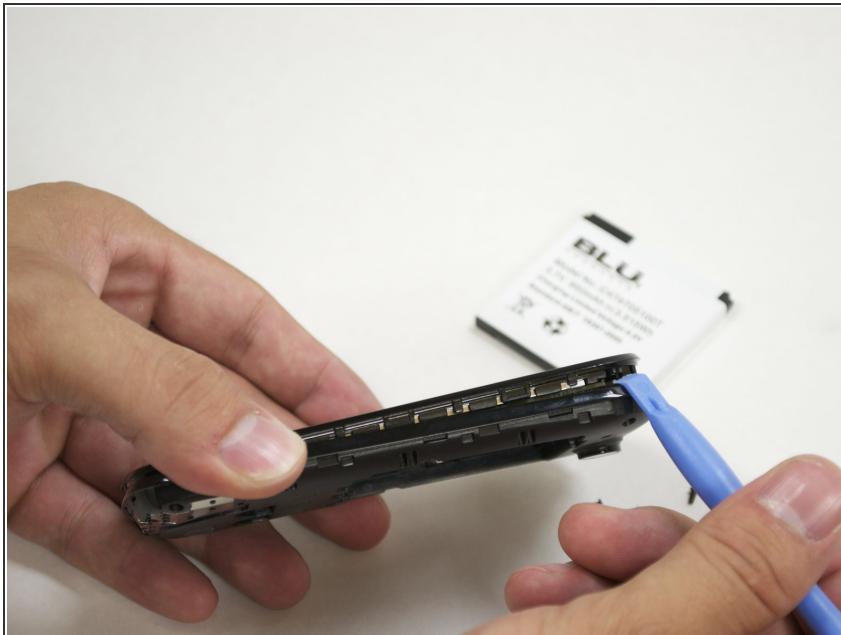

- Starting from a corner, separate the panel from the frame using the plastic opening tool.

*(i)* The volume button will pop out.

## Step 5



- Unscrew the 3.6mm Phillips #0 screw from the motherboard.

## Step 6




- Using a spudger, lift the black ZIF connector at the top left corner of the phone.

## Step 7




- Pull the ribbon cable out of the ZIF connector.

## Step 8

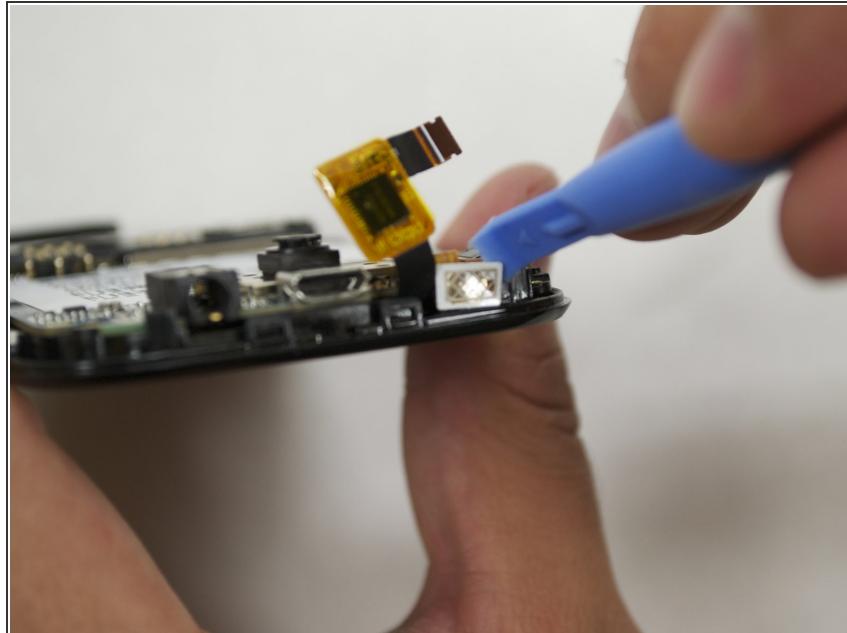


- When the ribbon cable is removed from the ZIF connector, peel off the power, sticky button using a plastic opening tool.

## Step 9

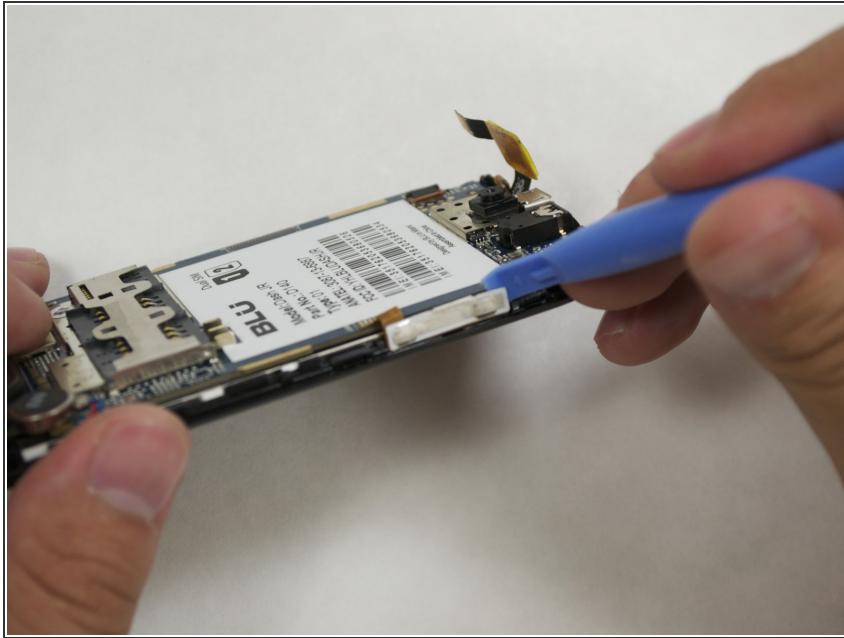

- Peel off the volume sticky button.

## Step 10

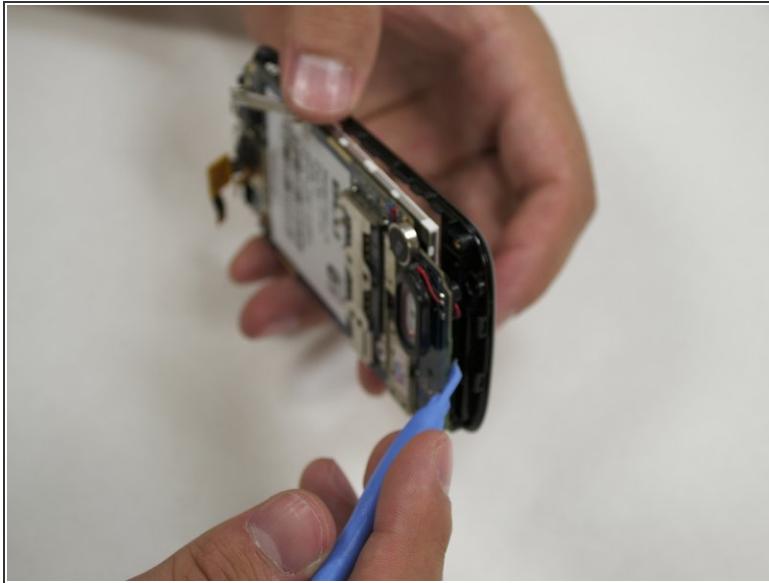

- Separate the screen cover from the motherboard using the plastic opening tool. And don't forget that your phone can mess up if u separate the motherboard from the screen cover

⚠ Make sure that the LCD screen stays attached to the motherboard while doing this.

To reassemble your device, follow these instructions in reverse order.