



Blackberry Curve 8320 Speaker Replacement

This repair guide shows the removal and replacement of the phone's main speaker.

Written By: Christopher Aiello



INTRODUCTION

This guide will show you how to:

- Remove the battery
- Remove the front panel
- Replace the speaker

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Battery



(i) Hold the phone with the back facing you.

- Press the silver tab down and remove the cover.

Step 2



- Pull up on the top edge of the battery to remove it.

Step 3 — Front Panel




- Use a plastic opening tool to gently pry the bottom cover loose.

 Do not use excessive force at risk of damaging the antenna, which is under this casing.

- Pull the cover from the front of the phone after the back is loose.

Step 4

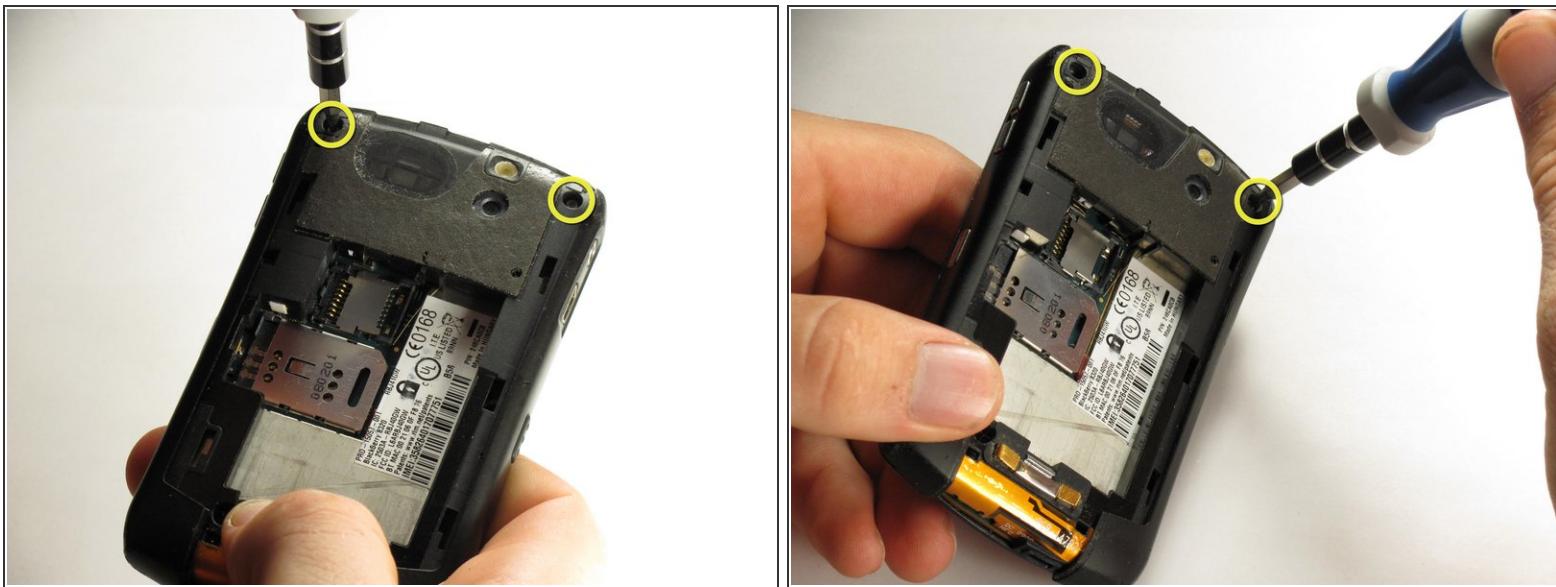

- Remove the two top screws with a T5 Torx screwdriver.

 The screws are 8mm long.


Step 5



- Gently pry off the top of the side casings.

⚠ The side casings cannot be fully removed yet because they are screwed on at the bottom.

Step 6

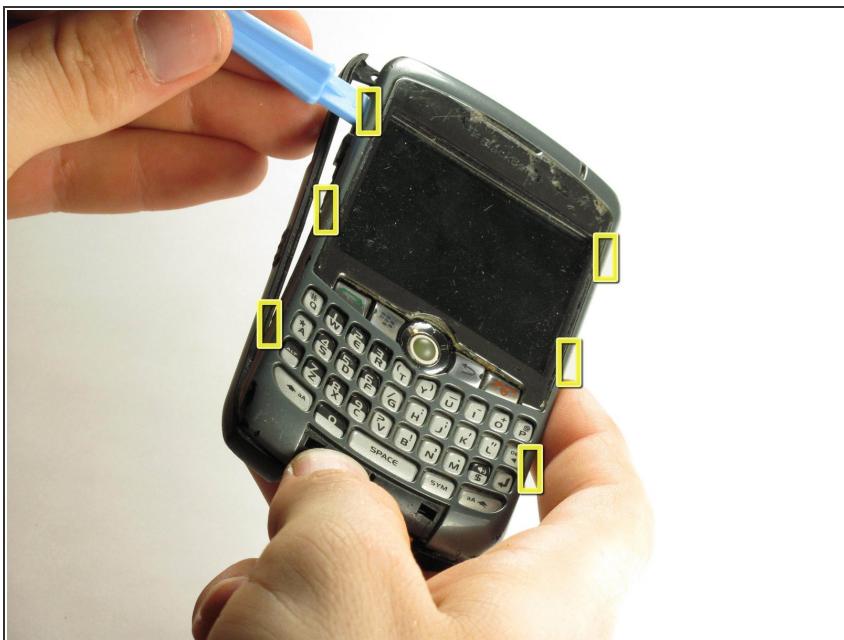

- Use a plastic opening tool to detach the securing clips holding the the front panel in place.

i There are six securing clips total.

Step 7



- Remove the front panel.

(i) You may need to apply some force because the front panel is attached to the rest of the device with adhesive.


Step 8 — Speaker



- Use a T6 Torx screwdriver to remove the four screws located on the corners of the keyboard frame.


(i) The screws are 6mm long.

Step 9

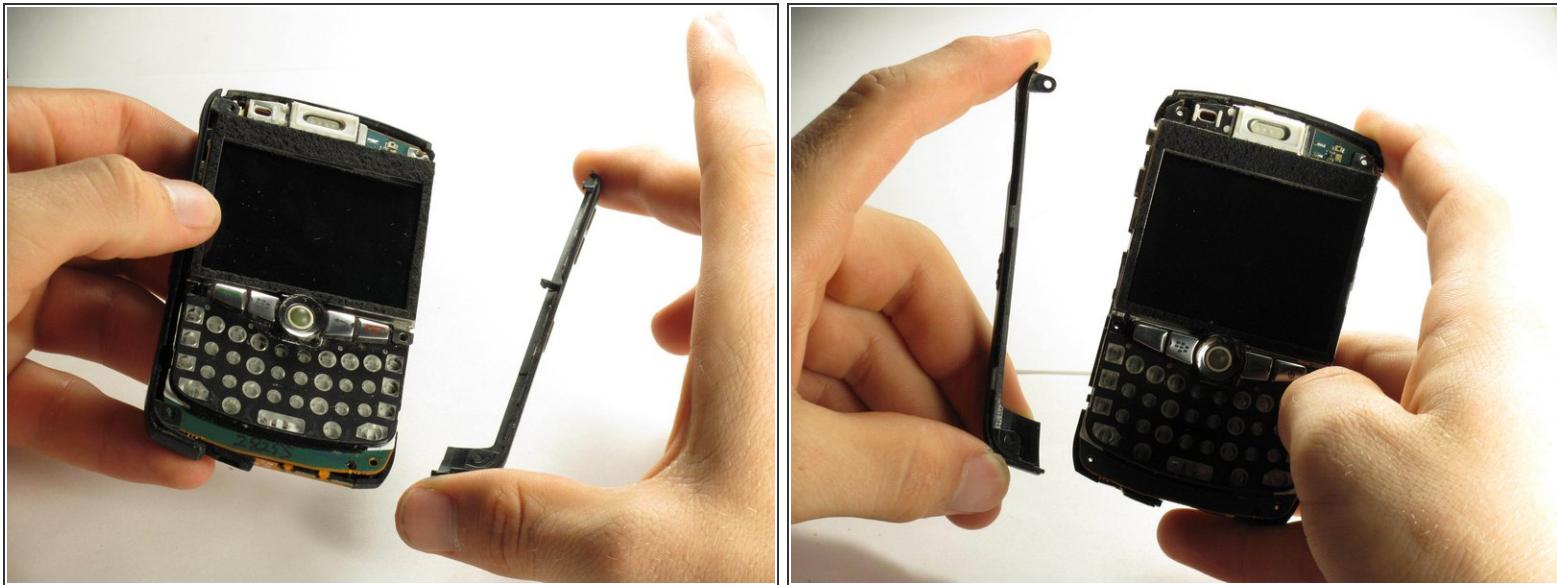

- After the bottom two screws have been removed the side casings can be removed.

Step 10

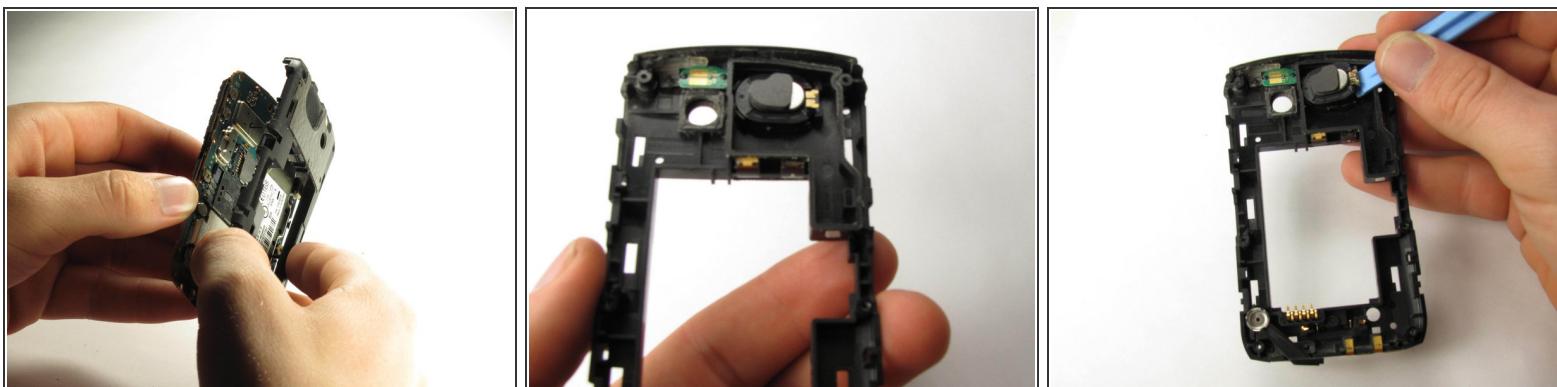

- Remove the back case.

(i) The speaker is located on the back case.

To reassemble your device, follow these instructions in reverse order.