



# Blackberry RIM 7250 Keyboard Replacement

This guide will show how to remove keyboard in the Blackberry RIM 7250.

Written By: Noah Eckert



## INTRODUCTION

This guide will be useful in replacing the keyboard for the Blackberry RIM 7250. For this guide, you will need a plastic opening tool and a Torx #6 screwdriver head.

### TOOLS:

- [T6 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Push the release button down and away from the device.
- Slide the cover off toward the bottom of the device, revealing the battery compartment.

## Step 2



- Place your finger in the groove next to the battery.
- Lift your finger up to eject the battery from the battery compartment.

## Step 3




- Remove the battery from the compartment.

## Step 4 — Back Housing



- Remove the four 10.7 mm Torx T6 screws.

## Step 5

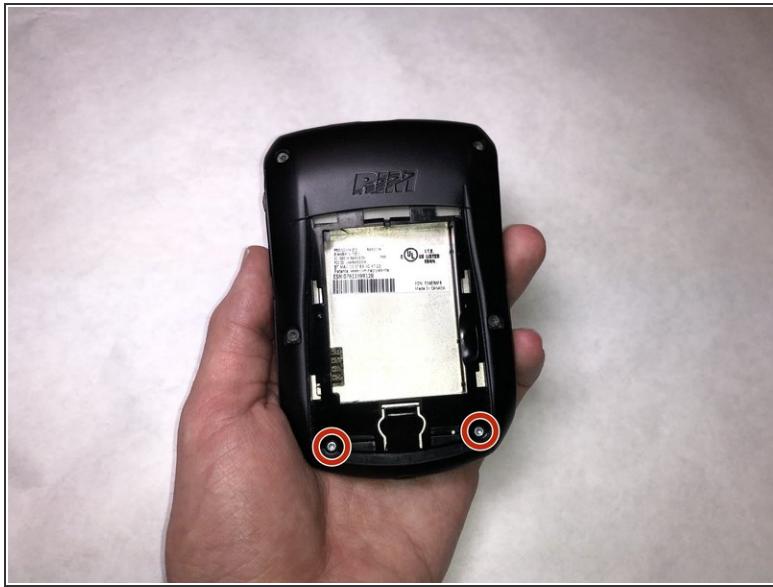

- Remove the two 5 mm Torx T6 screws.

## Step 6



- Hold the phone with one hand, with the bottom facing toward you.
- For both clips, insert the plastic opening tool and push away from you.

*(i)* You will hear a clicking sound for each clip that is released.

## Step 7



- Grab the back housing from the bottom and lift the housing away from you.

## Step 8 — Front Housing



- Place your thumb on the bottom rectangle and your index finger on the top rectangle.
- Squeeze your fingers together to release the internals from the front housing.

## Step 9



- Pull the two pieces apart to separate the front housing from the internals.

## Step 10 — Keyboard



- Push the keyboard from the front view to separate it from the front housing.

## Step 11



- Hold the front housing with one hand and grab the keyboard with the other.
- Pull each piece away from each other to remove the keyboard.

To reassemble your device, follow these instructions in reverse order.