



Classen Sod Cutter SC18AHDCA 2019 Guard Panel Replacement

How to remove and replace the right guard panel for the Classen Sod Cutter SC18AHDCA.

Written By: Arthur Shi



INTRODUCTION

Follow this guide to remove the right guard panel for the Classen Sod Cutter SC18AHDCA in order to replace it or access the belt drive.

TOOLS:

- Wheel Chocks (1)
- 1/2" Socket (1)
- Socket Wrench (1)

PARTS:

- Classen S-Large Guard 4171985 (1)

Step 1 — Safety precautions



 Before you begin, make sure that the machine is turned off.


-  For safety purposes, disconnect the spark plug.
 - Grab the plastic housing at the end of the spark plug wire.
 - Pull firmly to disconnect the wire from the spark plug.

Step 2




- Place wheel chocks against the roller and rear wheel to prevent the machine from moving.

Step 3 — Position the blade

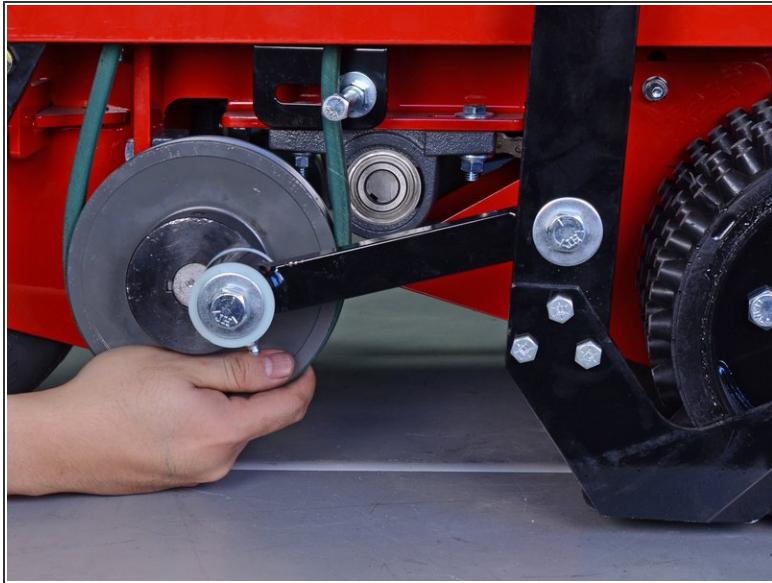

- Use your hand to slowly rotate the blade pulley so that the blade is pulled back as far as possible.

Step 4 — Unscrew the right guard panel

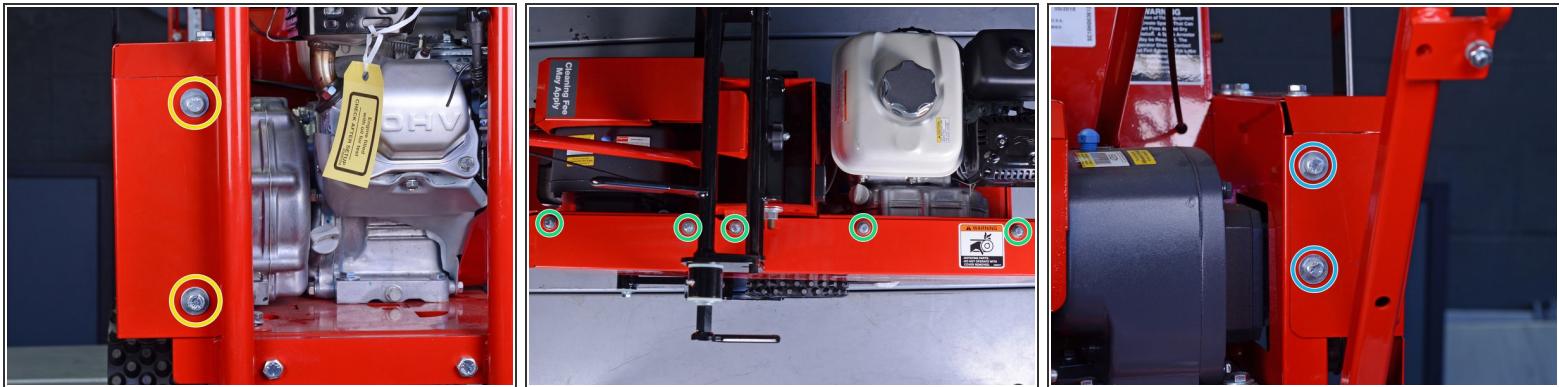

- Use a 1/2" socket wrench to remove the nine 1 inch-long bolts securing the right guard panel:
 - Two bolts on the front of the panel
 - Five bolts on the top of the panel
 - Two bolts on the back of the panel

Step 5 — Remove the guard panel



- Slide the guard panel forward until the panel clears the black blade arm.
- Swing the panel outward to clear the screw post.
- Remove the panel.

To reassemble your device, follow these instructions in reverse order.