




ColecoVision Controller Port Replacement

This guide will teach you how to remove and replace the controller port on the ColecoVision.

Written By: Bobby

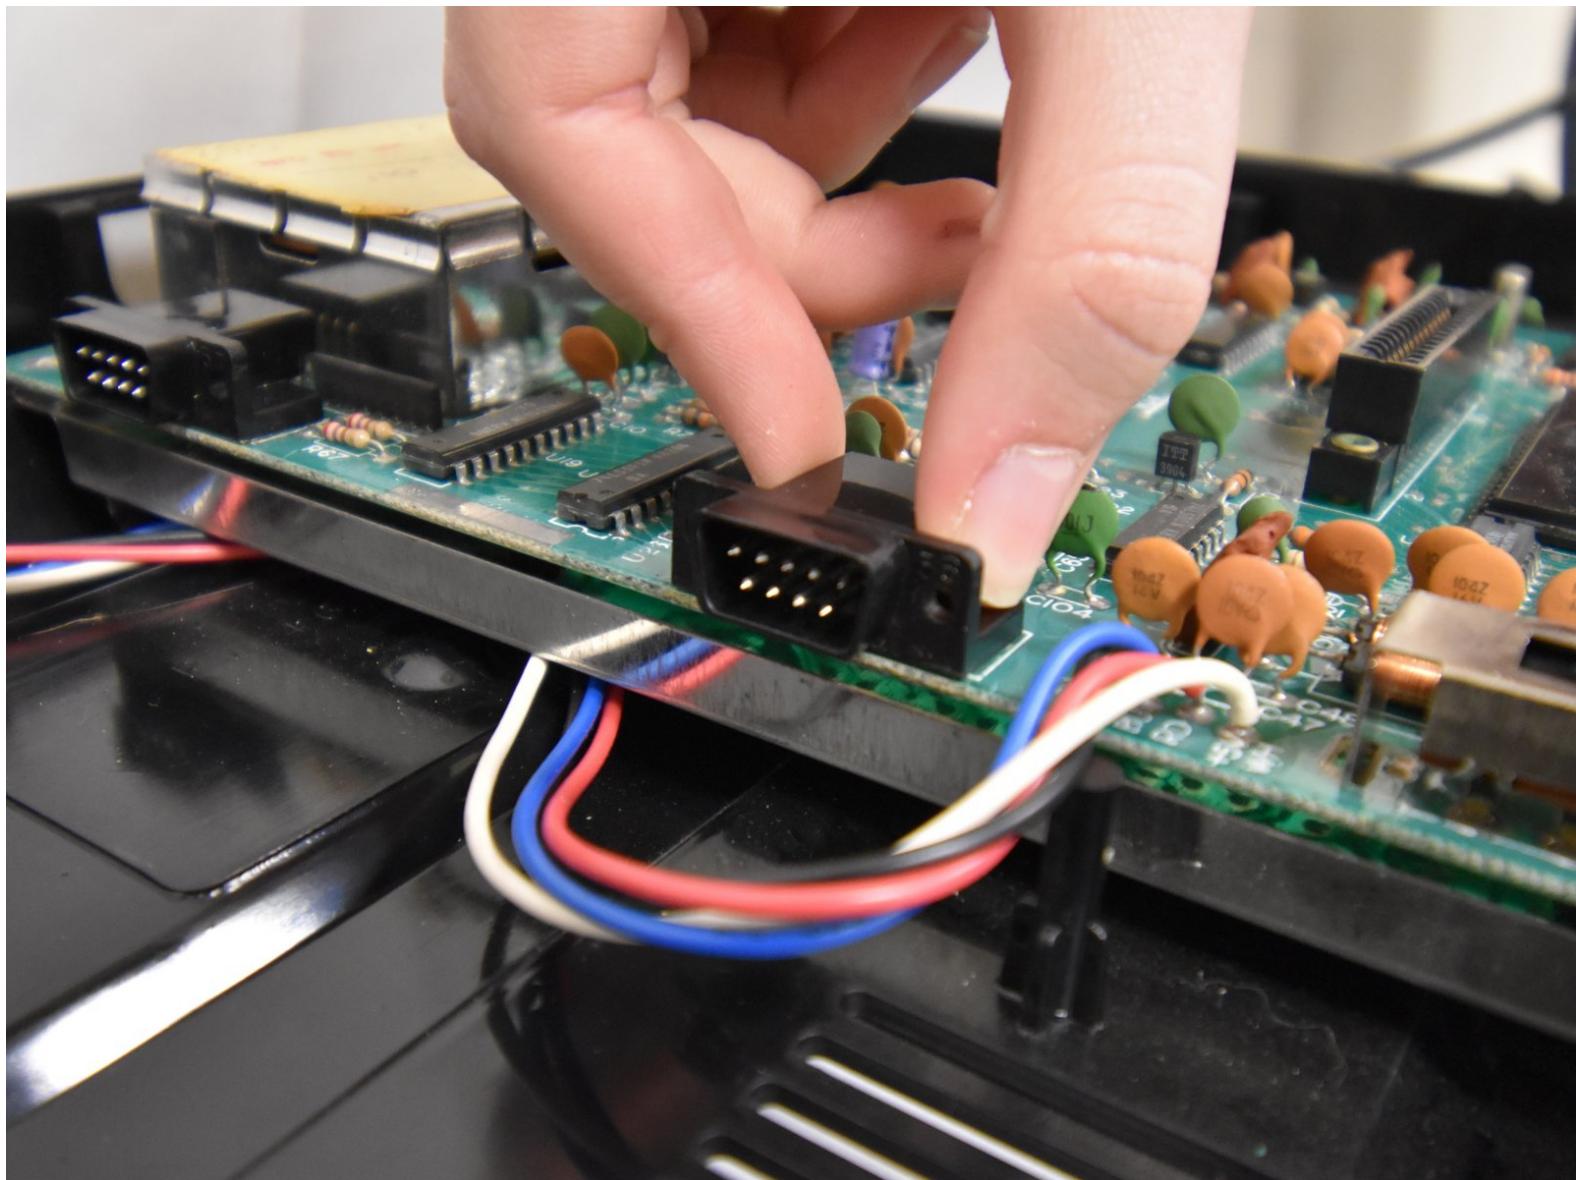


INTRODUCTION

The purpose of this guide is to communicate steps on how to replace or repair the controller ports on a ColecoVision.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Soldering Iron \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Controller Port

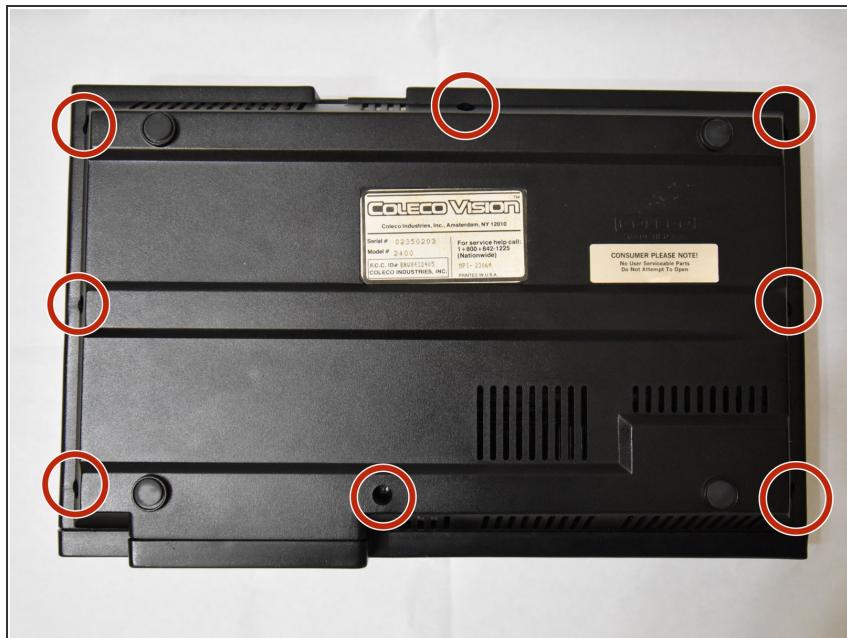


- Flip the ColecoVision over with the pegs facing the ceiling.
- Remove the eight 15mm screws holding the bottom of the ColecoVision in place using the Phillips #1 screwdriver.

Step 2




- Carefully remove the bottom of the ColecoVision out of the top.
- I would recommend running a metal spudger along the rim of the case to remove the bottom.

Step 3

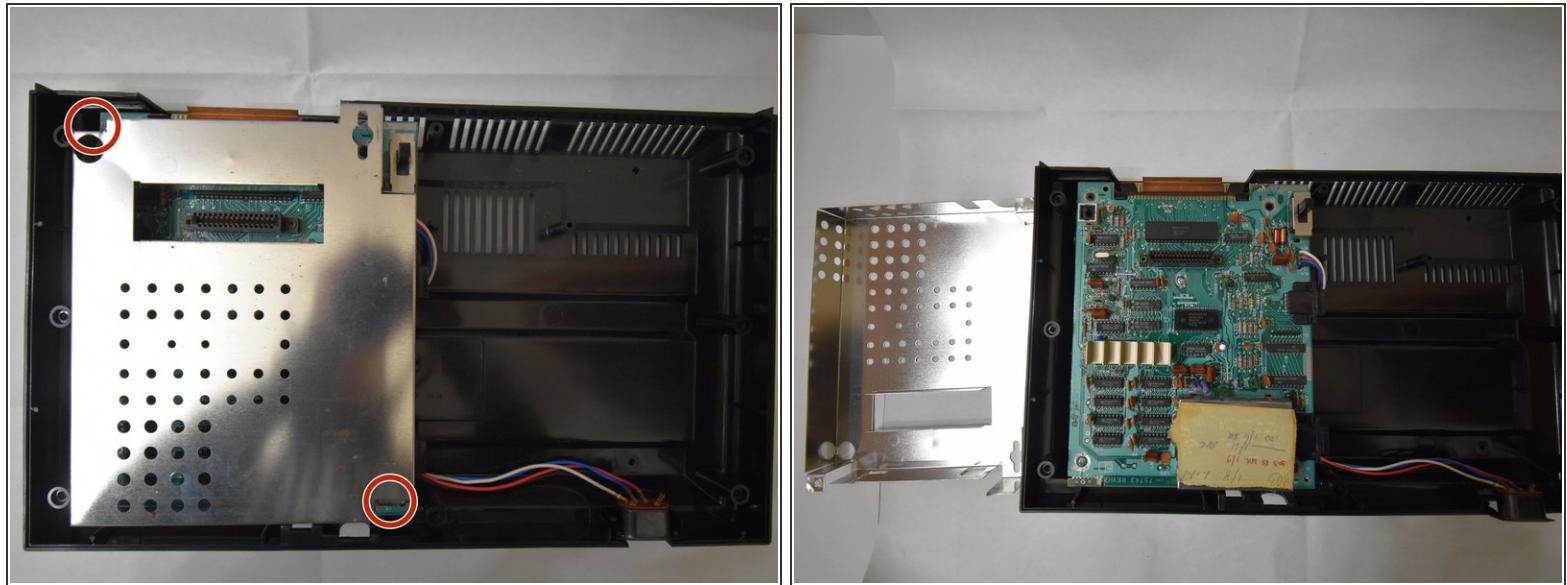


- Remove the two 15mm screws holding the casing in place using the Phillips #1 screwdriver.
- Remove the casing and put it to the side.

Step 4

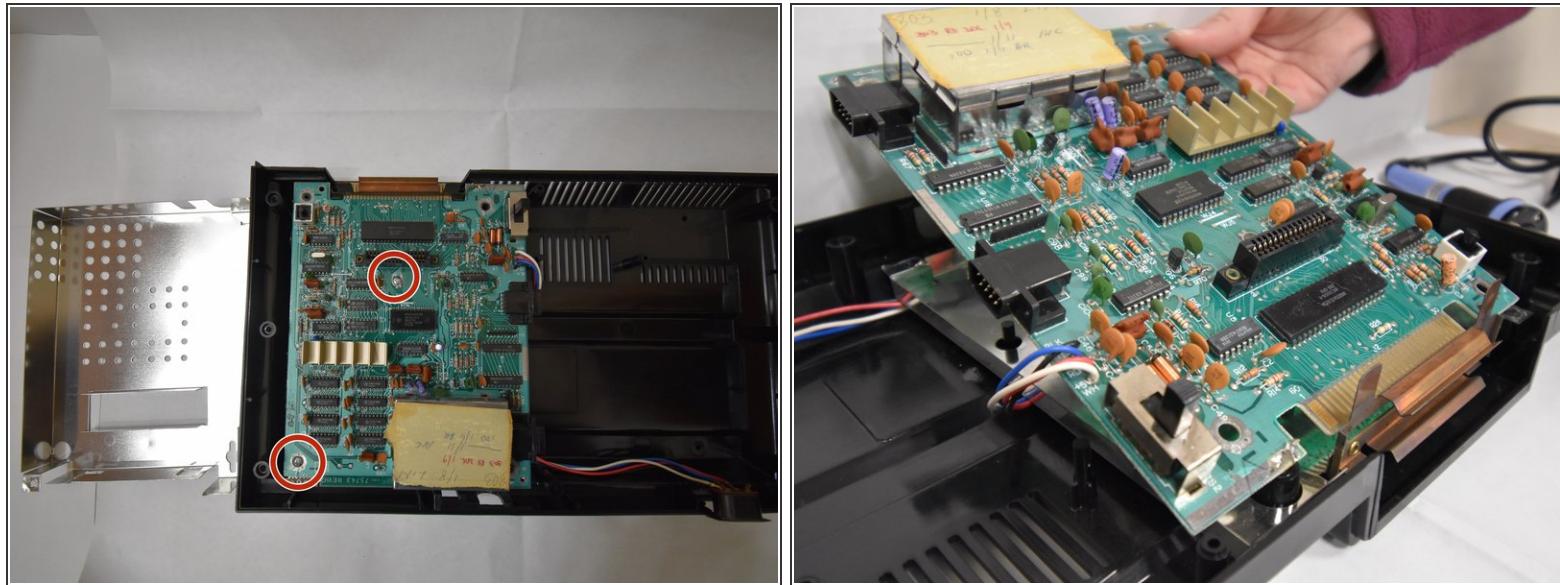

- Remove the two 15mm screws on the motherboard with a Phillips #1 screwdriver.
- Pull the entire motherboard towards the back of the system and carefully lift the entire motherboard.

Step 5

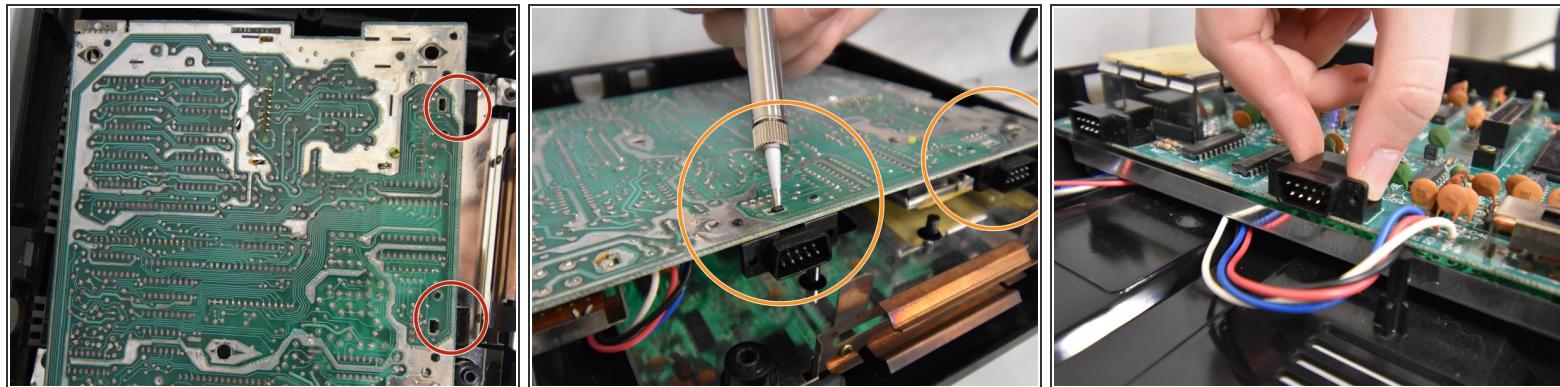

- Flip the motherboard over and locate the two controller ports.
- Using a soldering iron, desolder the controller ports.
(i) [Refer to this soldering technique guide for reference](#).
- After waiting for controller ports to cool down, flip motherboard back over and carefully lift controller ports to remove.

This document was generated on 2019-09-18 09:27:58 PM (MST).

To reassemble your device, follow these instructions in reverse order.