



# Corsair Void Pro RGB Battery Replacement

This guide shows how to replace the battery in your Corsair Void Pro RGB.

Written By: Gianna Nobili



## INTRODUCTION

Eventually, the battery for the Corsair headphones will need to be replaced. Luckily, replacing the battery is a relatively simple process that involves removing the panel covering an earmuff and unplugging the old battery.

Instructions for removing the battery all refer to the right hand earmuff.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)

### PARTS:

- [Corsair Replacement Battery](#) (1)

## Step 1 — Earcup



- Carefully remove earmuff from headphones by getting a grip under the earmuff cushion and peeling up over the lip that keeps it in place.

## Step 2



- Using the Phillips #0 screwdriver, unscrew the seven 6.4 mm screws holding the black speaker cover in place.
- If you are disassembling the lefthand earmuff, there will be eight 6.4 mm screws to remove.

## Step 3




- Remove and set aside the black panel, taking care to keep the wires attached.
- The panel should lift up without much force. If the panel does not budge, carefully use the iFixit plastic opening tool to dislodge the piece.

## Step 4 — Battery



- Using the Phillips #0 screwdriver, remove the three 6.4 mm screws on the black plastic panel with the grid of holes.

## Step 5

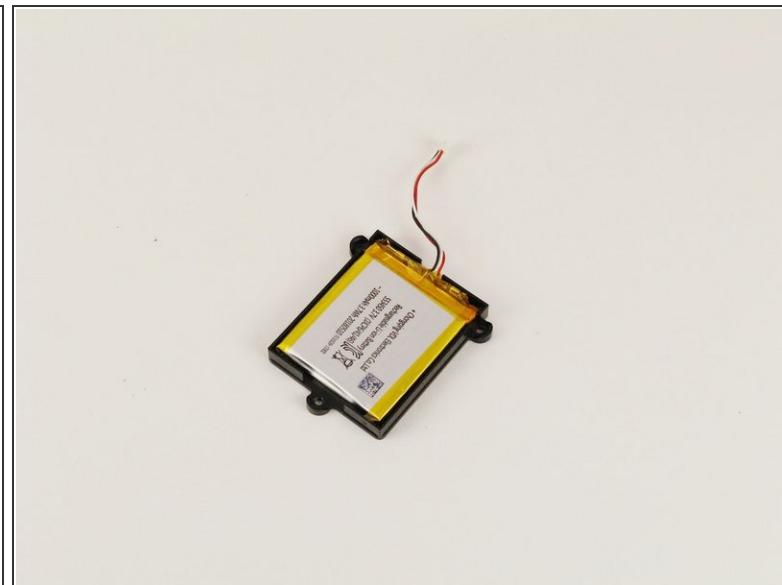

- Carefully unplug the wire that connects the battery pack to the headphones.
- *(i)* This should not take too much force.

## Step 6



- Remove the clear plastic covering and set aside.

To reassemble your device, follow these instructions in reverse order.