




# Dell Chromebook 13-7310 Motherboard Replacement

A replacement guide for the motherboard on the Dell Chromebook 13-7310.

Written By: Brett Raymond

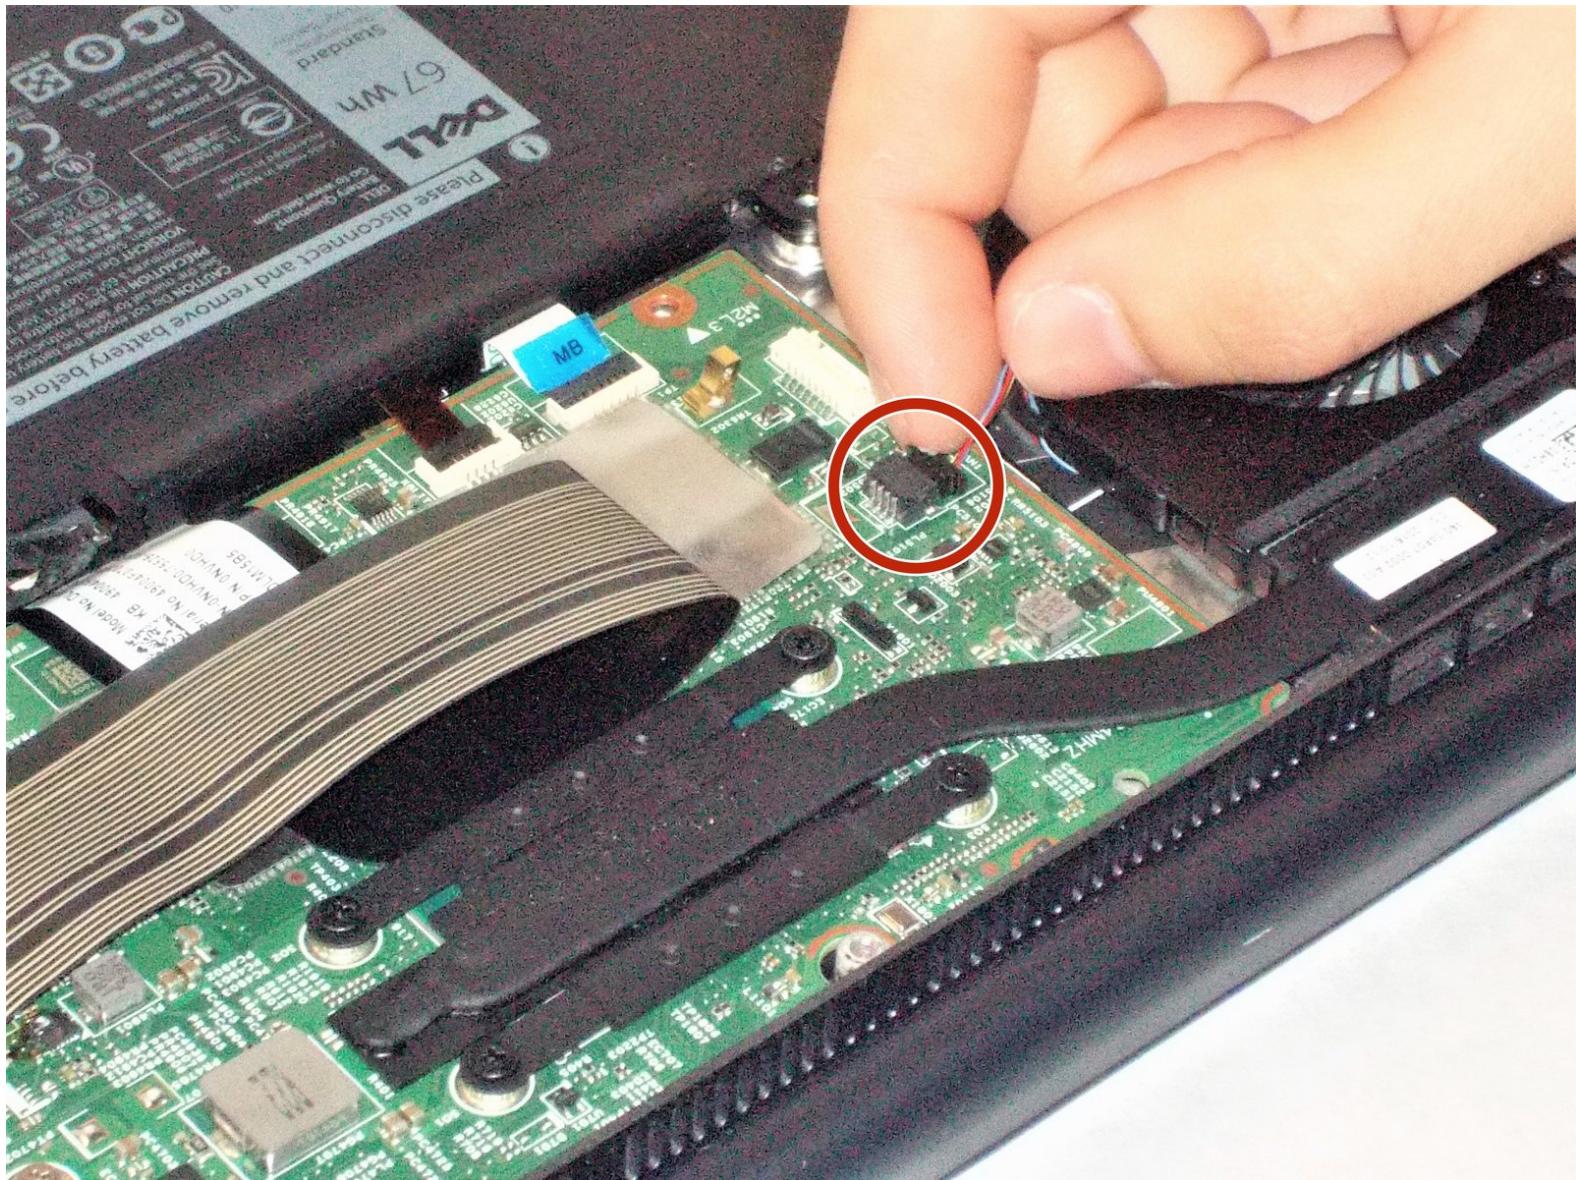


## INTRODUCTION

A damaged motherboard is a serious issue and can be a hassle to fix, but it doesn't have to be! By following the quick and easy motherboard replacement guide you can have your Chromebook working again in no time!

### TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Back Cover

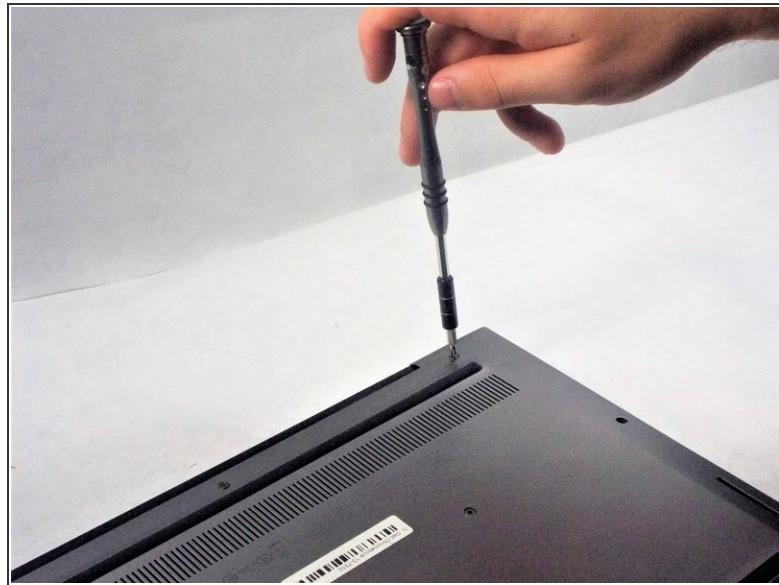

- Remove the eleven 3mm Phillips #1 screws.


## Step 2

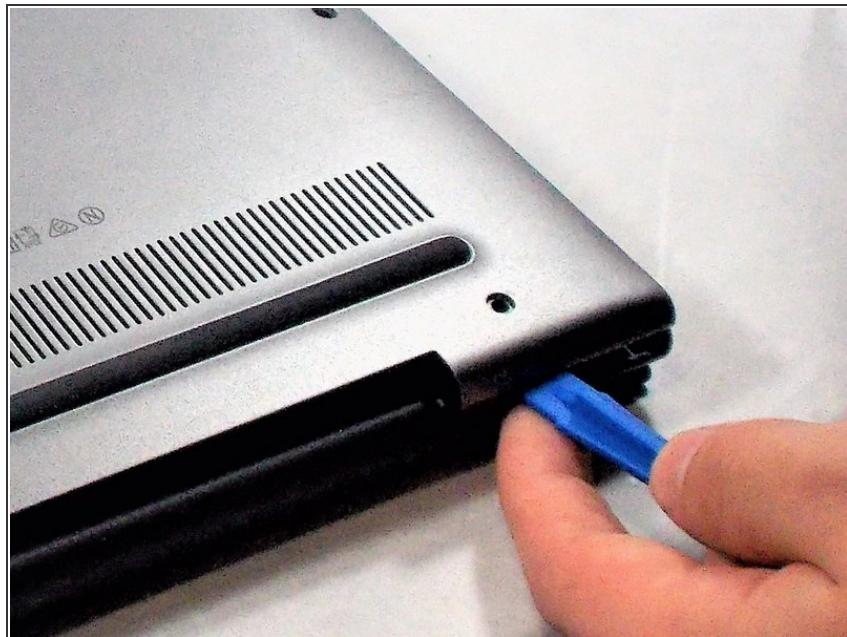

- Use a plastic opening tool to gently remove the back panel.


*(i)* It can be easier to pry open near a corner.

## Step 3 — Battery

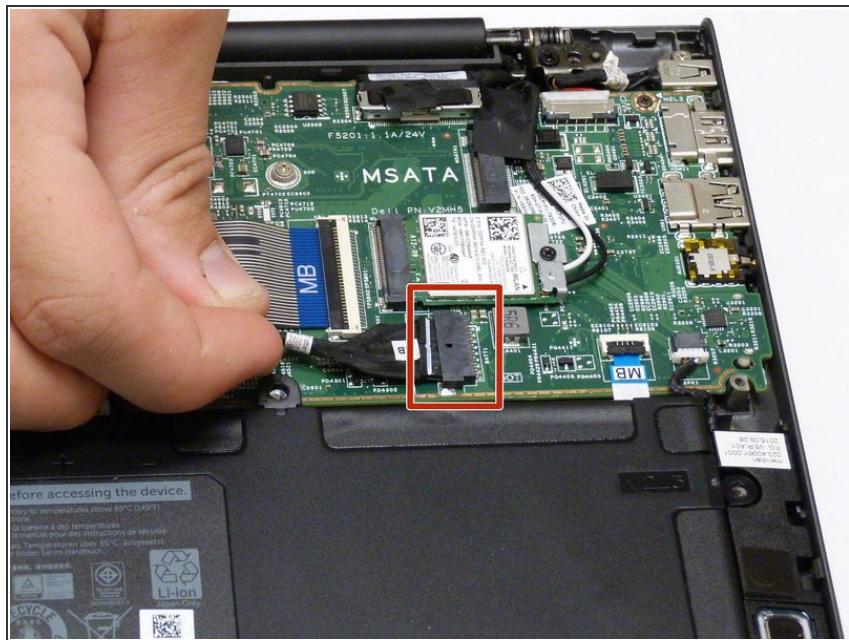

- Use your fingers to remove the connecting cable to the battery unit. Firmly grab the cord closest to the motherboard connection and pull straight back.

## Step 4

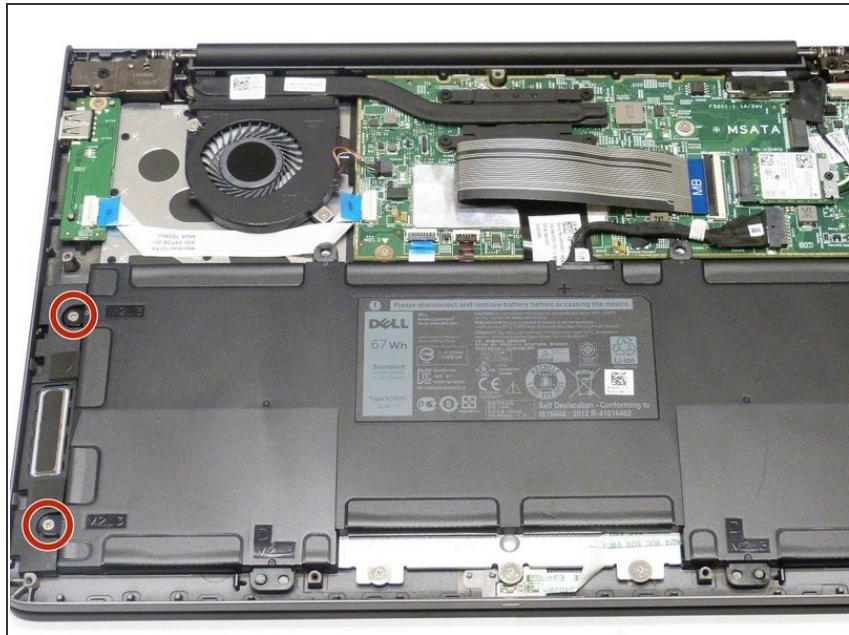

- Remove the four 2mm screws on the sides of the battery.

## Step 5




- To remove the battery, lift up on one side to get your fingers underneath and lift away.

## Step 6 — Network Card




- Use #1 Phillips screwdriver to remove the 1mm screw in the network card.

## Step 7

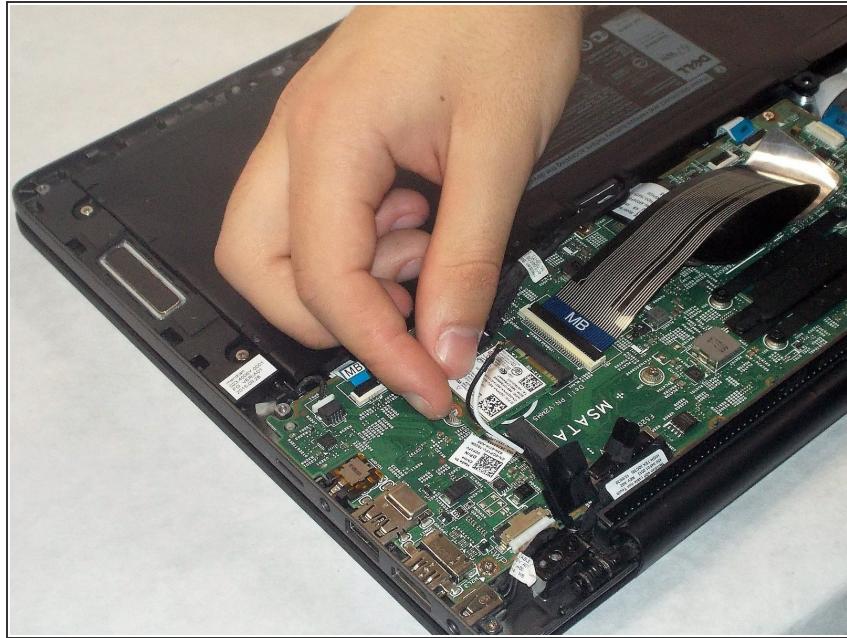

- Disconnect the network card from motherboard socket.


## Step 8

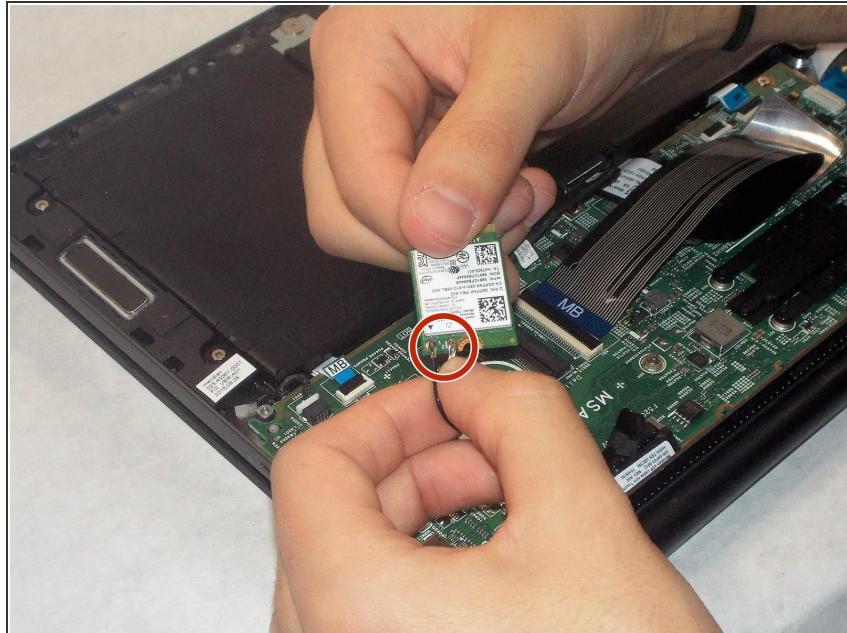

- Disconnect 2 cable connectors from network card.



**i** If the cables are stuck, continue to gently wiggle them until they disconnect.

## Step 9 — Motherboard

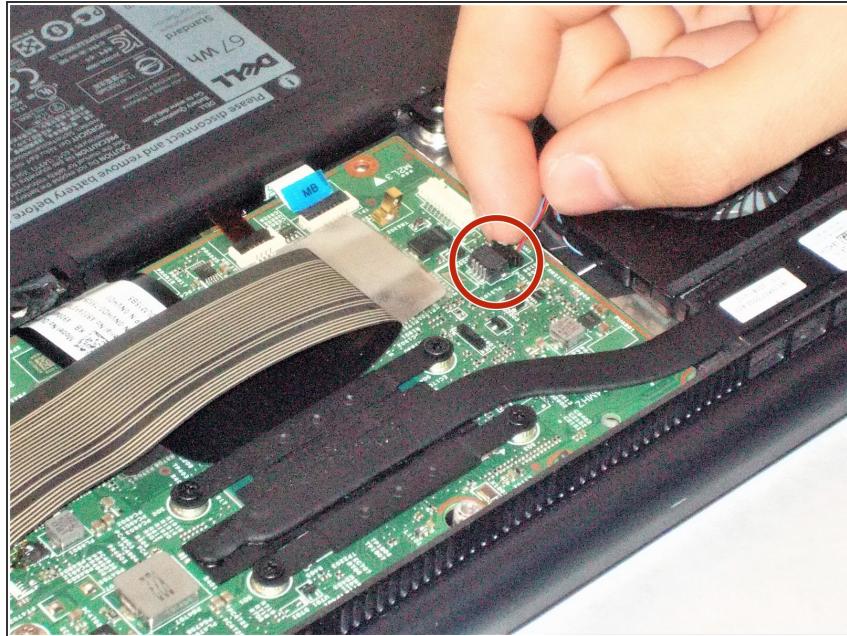


- Gently pull to unplug fan connector.

## Step 10

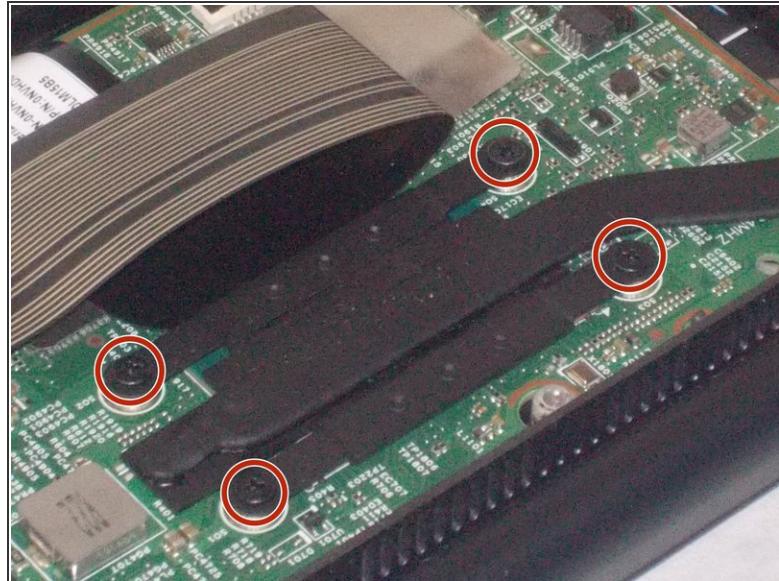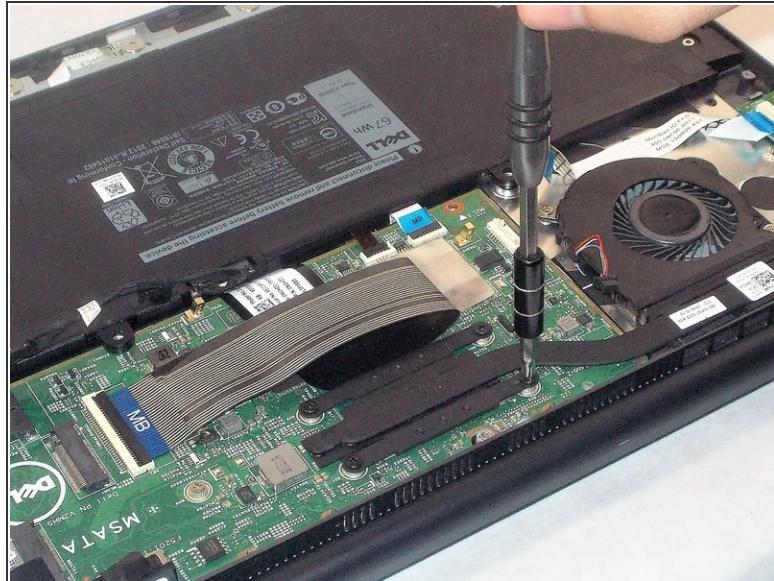


- Remove 4 screws securing heat sink.

## Step 11

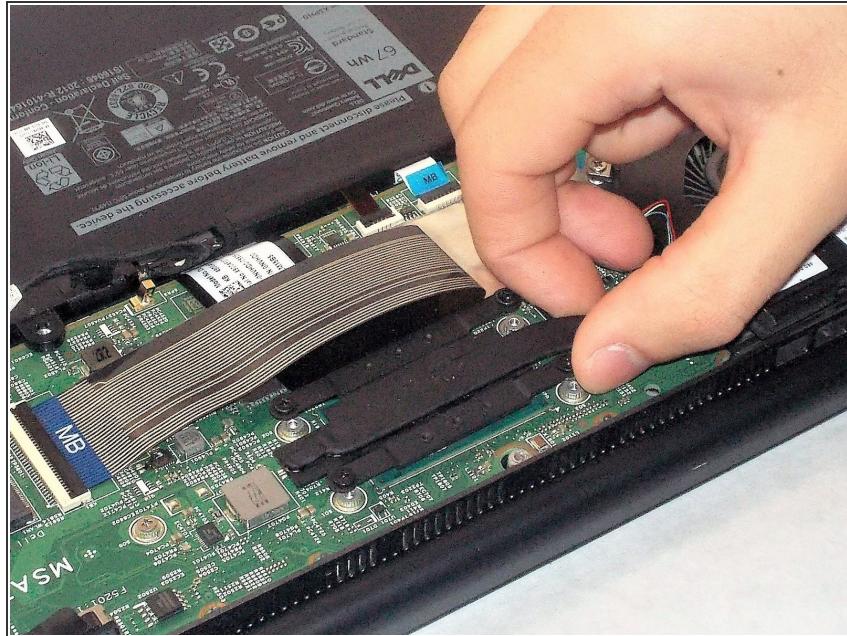

- Lift away heat sink.

## Step 12

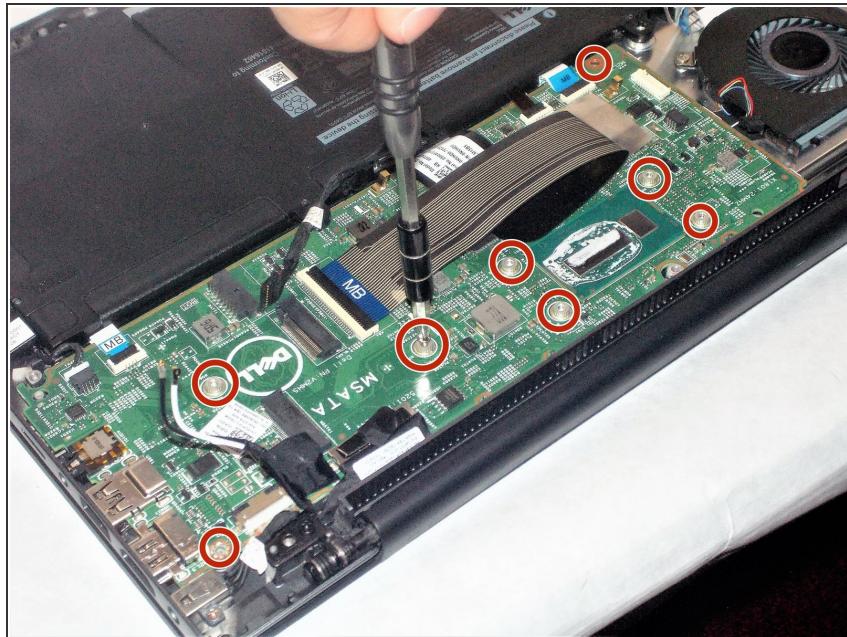


- Remove the eight 2mm screws securing the motherboard in place.

## Step 13




- Release cable for the LED charging indicator by pulling up on connector.

## Step 14

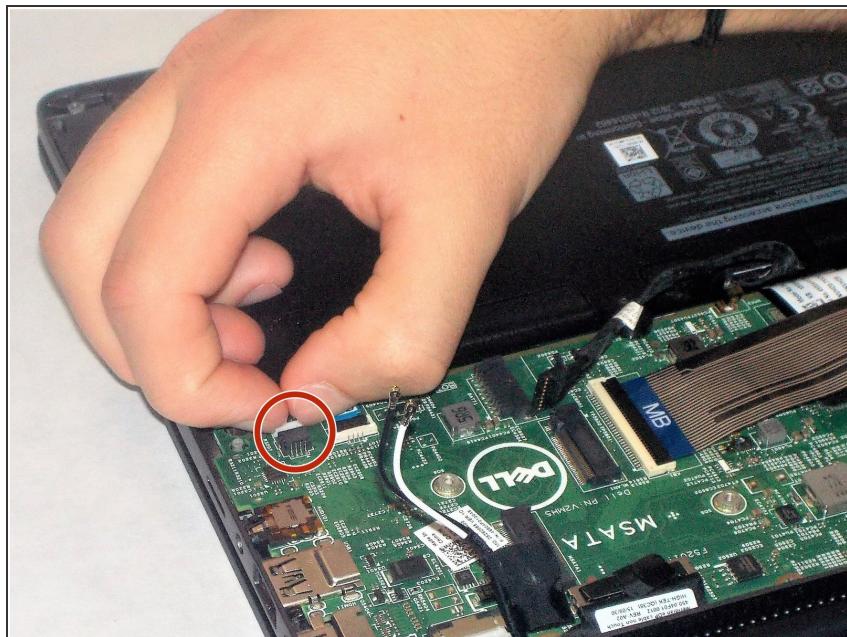



- Gently remove the cable.

## Step 15

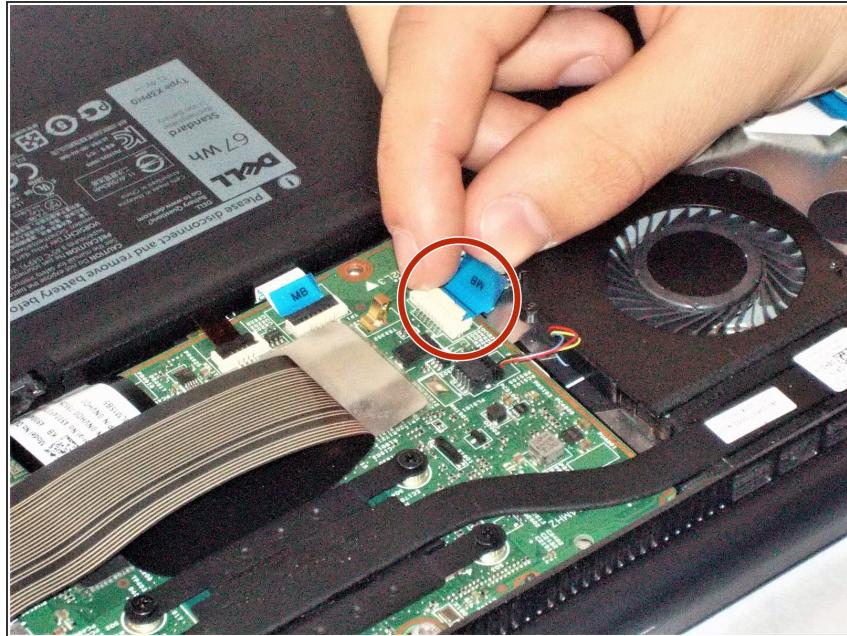


- Pull up on connector tab to release IO board cable.

## Step 16

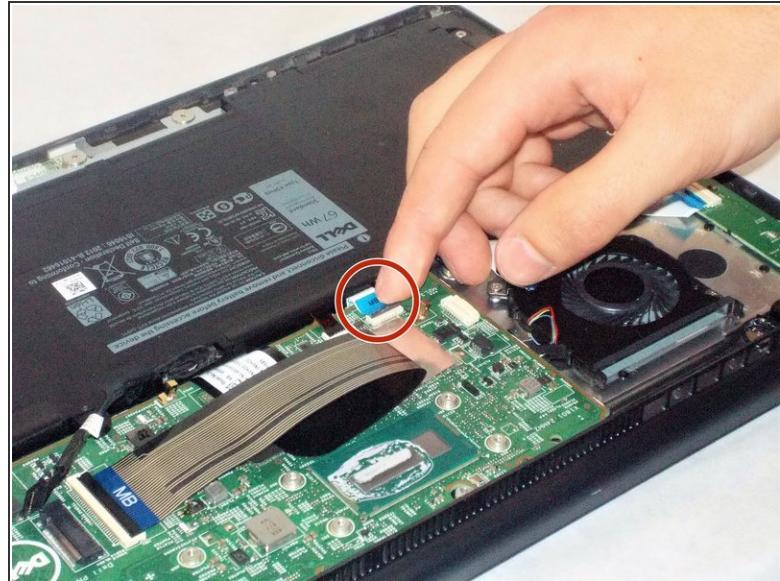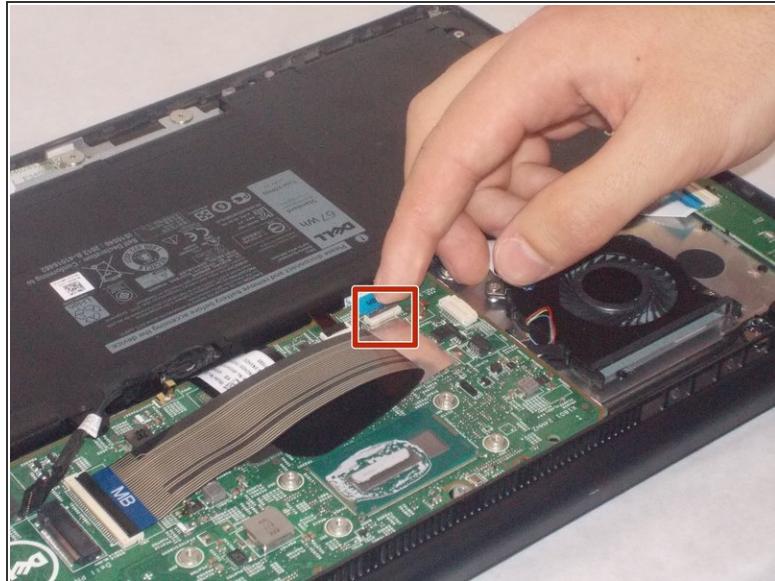



- Pull up on connector tab to release touchpad cable.

## Step 17

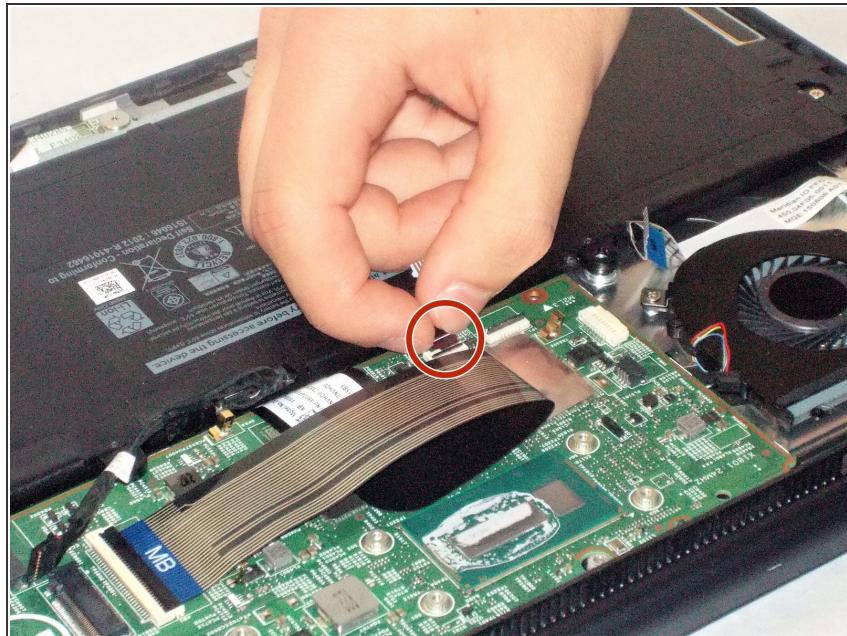

- Release the keyboard backlight cable.


## Step 18

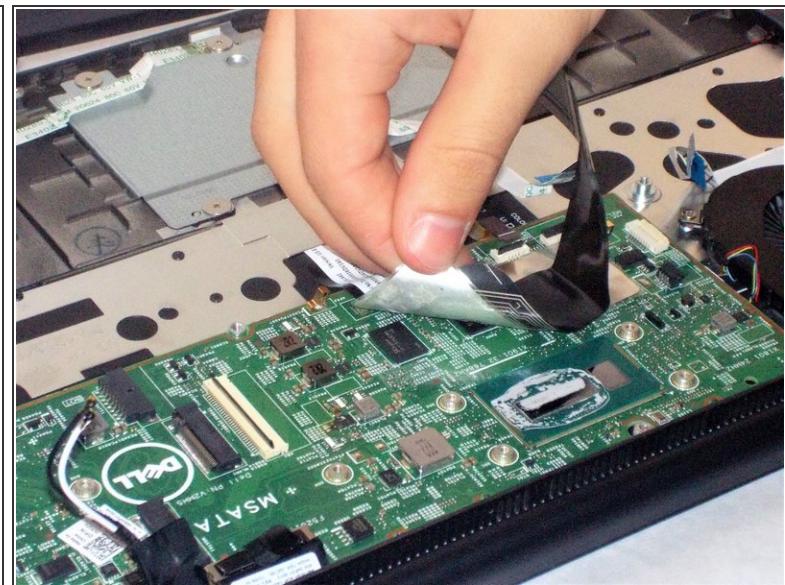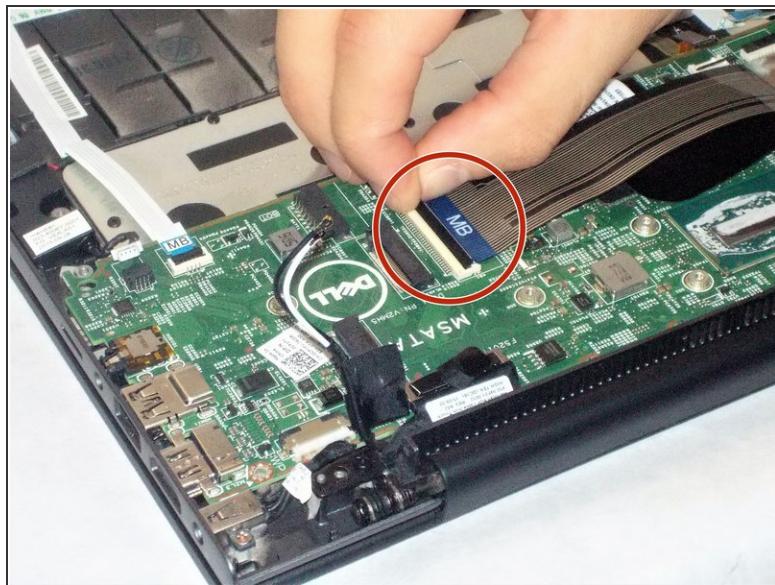

- Release the keyboard cable.


**⚠** If taped to the motherboard, gently peel it off.

## Step 19

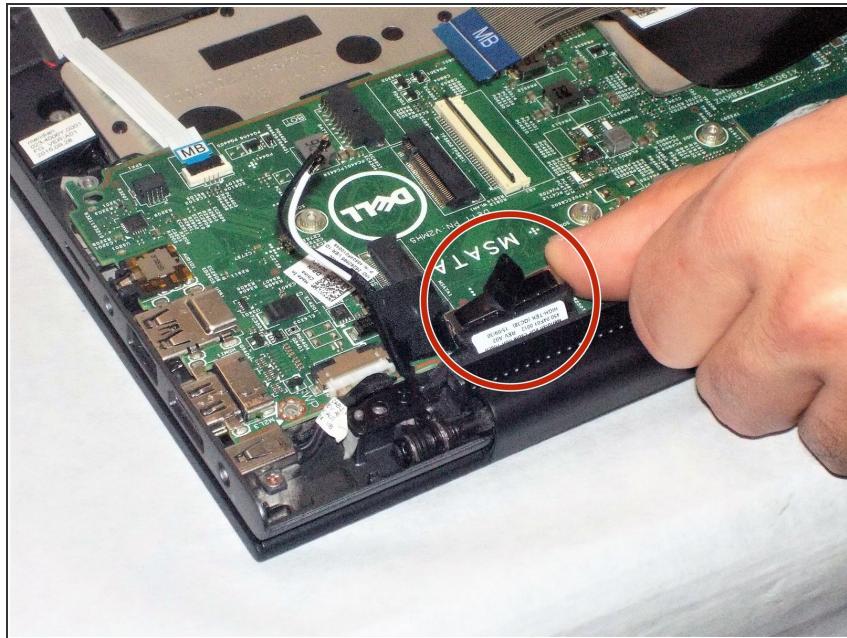

- Release eDP cable.

## Step 20

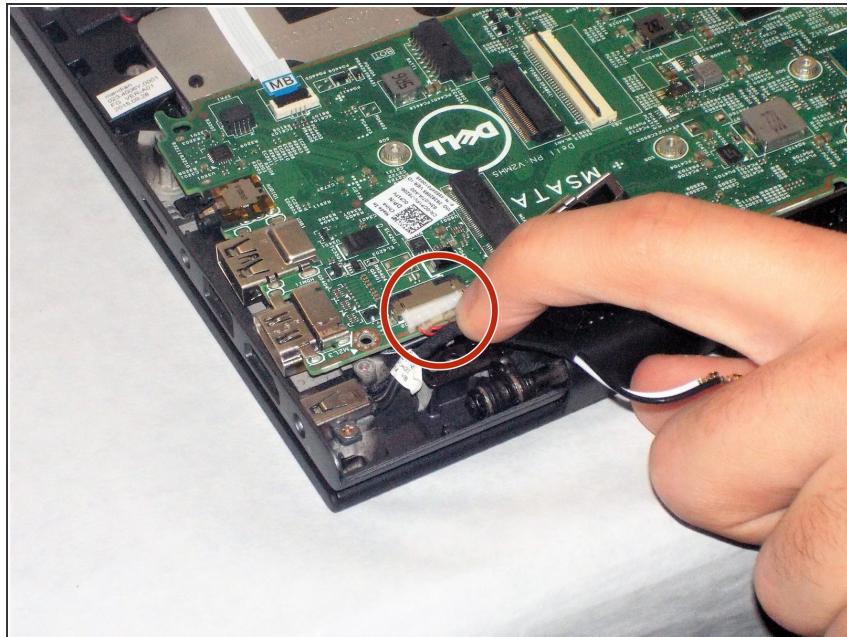

- Release dc-in cable.

## Step 21



- Gently lift up the motherboard to remove it.

To reassemble your device, follow these instructions in reverse order.