




Dell E193FPc Interface Buttons Replacement

Use this guide to replace the interface buttons on your Dell E193FPc monitor.

Written By: **Charley Grove**

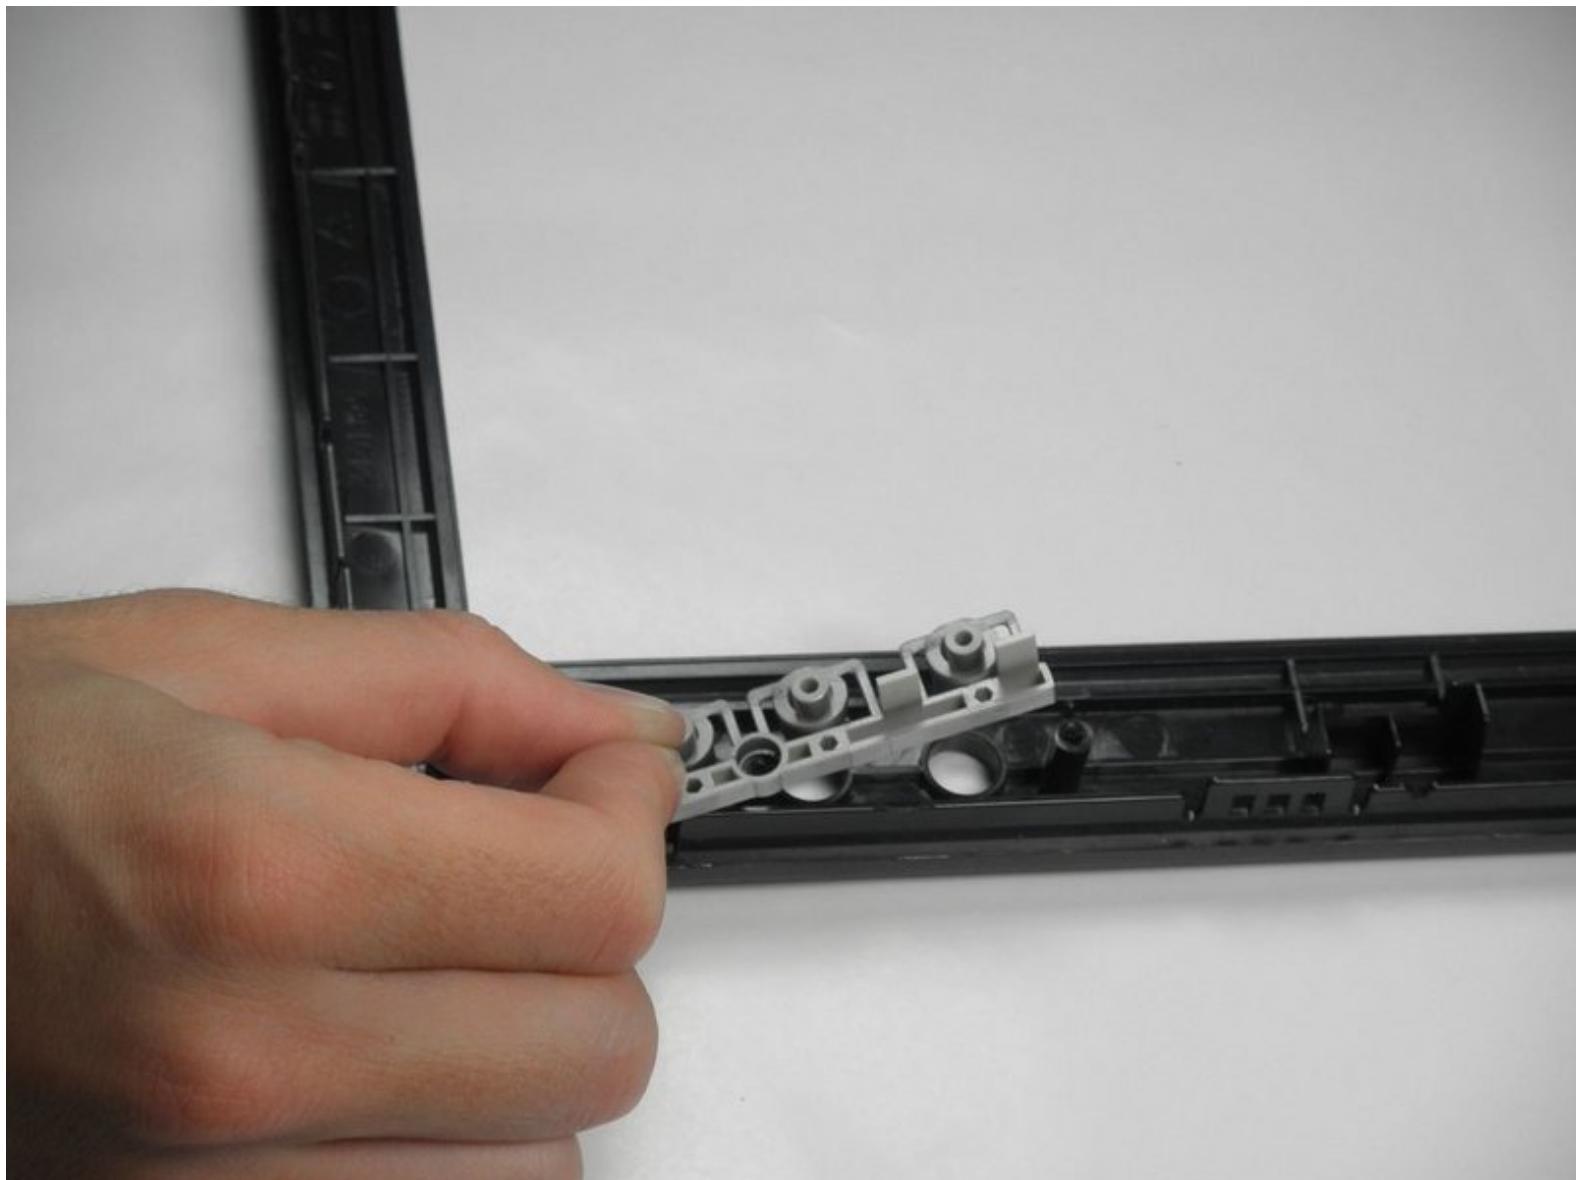

INTRODUCTION

Replace the interface buttons if they have fallen out or are worn out from usage.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Stand



- Lay the monitor screen-down so the back screws are exposed.
- Remove the four 11.9 mm Phillips #2 screws securing the stand to the back of the monitor.

Step 2



- Gently lift and pull away the stand at a slight angle away from the monitor.

Step 3 — Display Bezel



- Locate the two holes on the bottom of the monitor.
- Insert a plastic opening tool or spudger into the holes and gently pry the plastic apart along the groove.

(i) This task is much easier if two people pry simultaneously at each hole.


- Continue prying along the entire edge of the monitor.

Step 4




- When finished prying, the plastic will partially fall away from the rest of the monitor.
- ⚠ Do not try to fully remove the front frame yet. The frame is still attached to the buttons.
- While holding the frames together, carefully flip the monitor over so it faces screen down.
- Gently lift and remove remove the rear case from the monitor.

Step 5

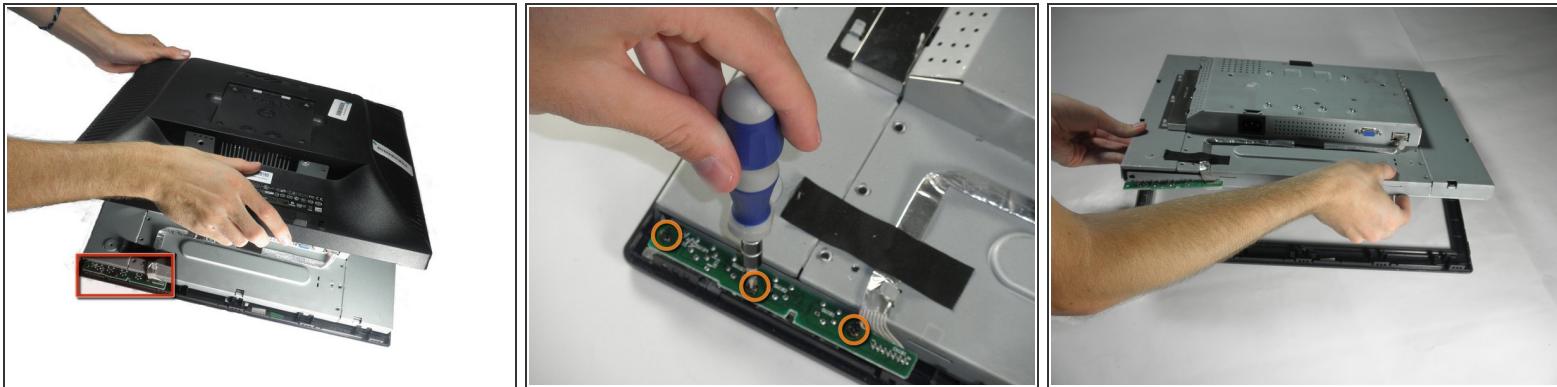

- Locate the green interface button board.
- Remove the three 9.71 mm Phillips #2 screws holding the interface button board to the display bezel.
- Lift the monitor interior away from the front cover.

Step 6 — Interface Buttons

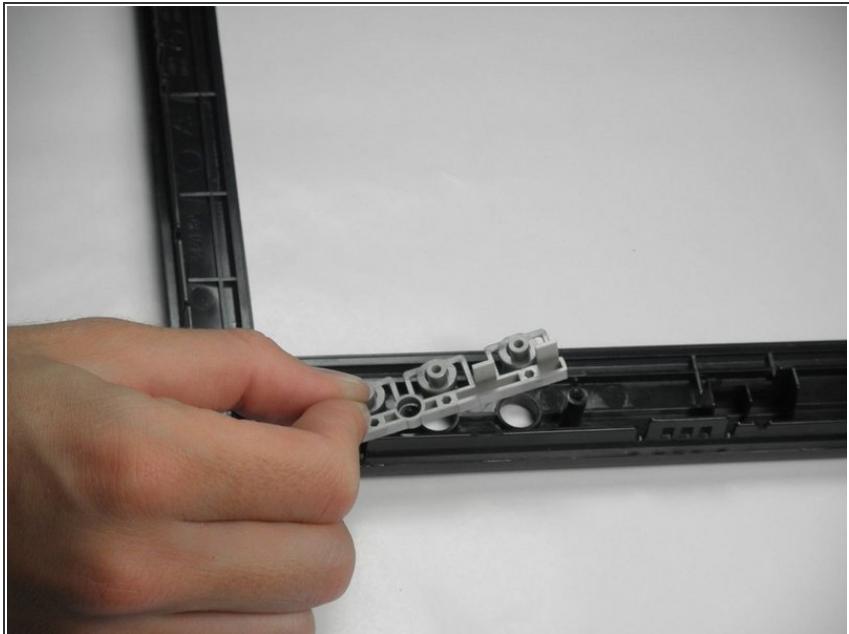

- Behind the front panel of the plastic cover lies the button strip.
- Remove the buttons by gently pulling up on the strip.

(i) You may have to pry the plastic strip up with a prying tool or spudger to remove it.

To reassemble your device, follow these instructions in reverse order.