



Dell Inspiron 11 i3147 Hard Drive Replacement

This guide will show you how to replace the hard drive for a Dell Inspiron 11 i3147.

Written By: Muhammad Erchid



 **TOOLS:**


- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Hard Drive



- Close the computer and turn it over, with the bottom of the computer facing up.

Step 2

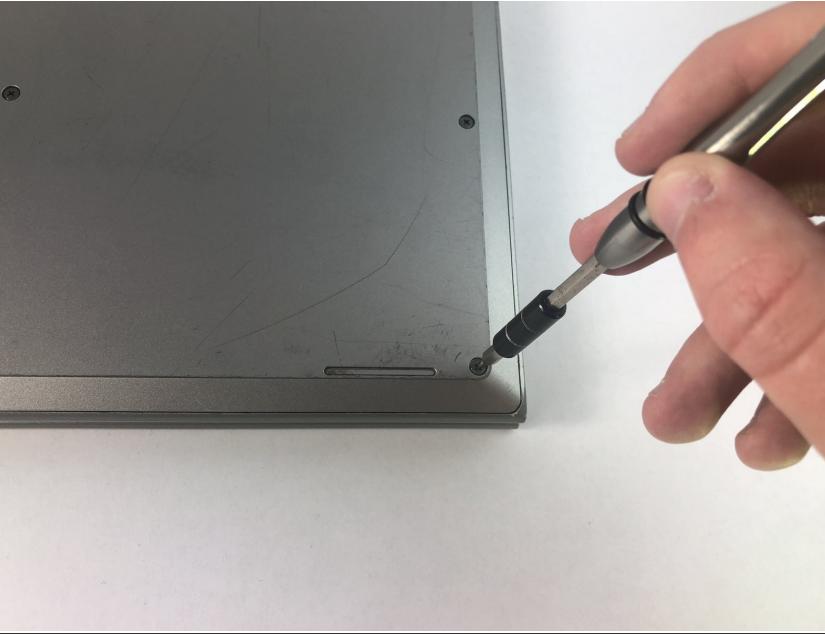

- Remove the nine 7.6mm PH0 screws on the cover.

Step 3




- Use a plastic opening tool to remove the cover from the computer.

Step 4



- Remove the three 4.7mm PH0 screws that secure the battery to the computer.

Step 5

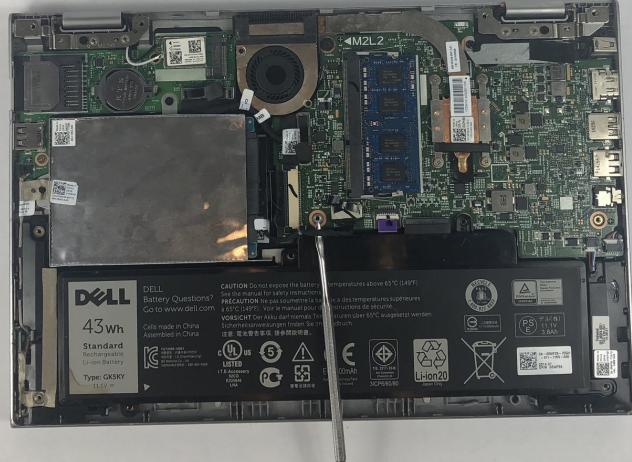

- Remove the hard drive cable from the battery.

Step 6




- Lift the battery from the computer.

Step 7



- Peel off the adhesive strap from the hard drive.

Step 8

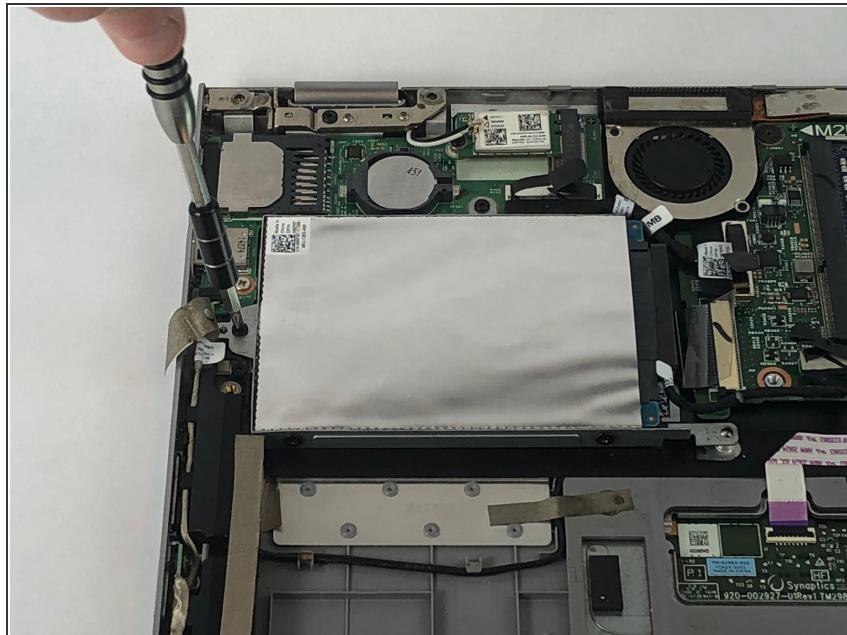


- Use a PH0 screwdriver to remove the 2 3.9 mm PH0 screws on the hard drive.

Step 9




- Lift the hard drive to free it from the laptop.

Step 10

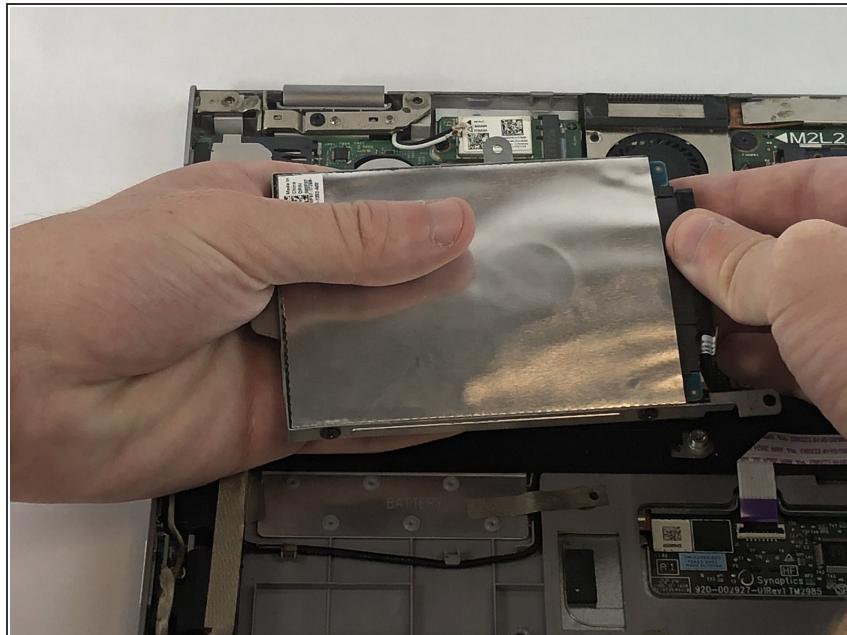

- Remove interposer from the hard drive.

Step 11

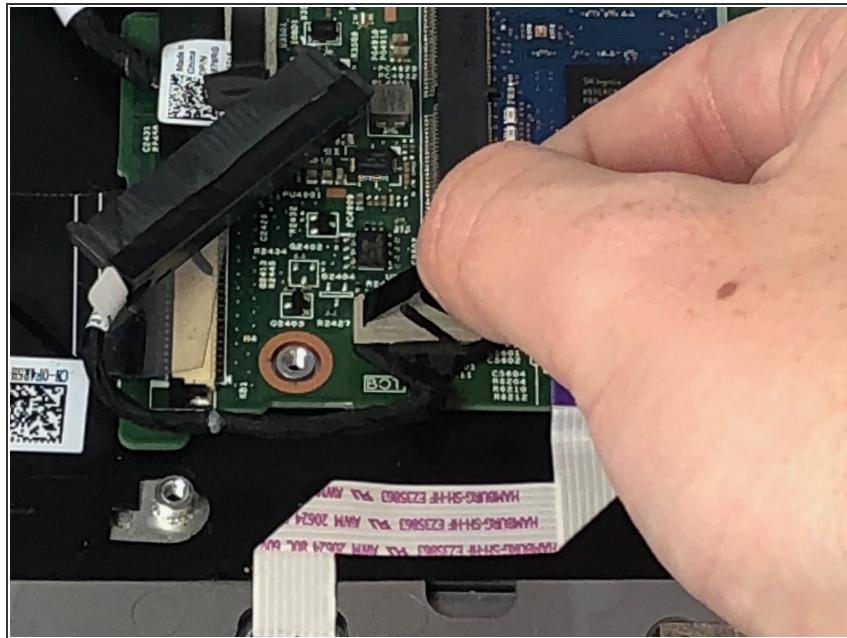

- Use pull tab to remove hard drive cable from motherboard.

To reassemble your device, follow these instructions in reverse order.