



Dell Latitude D630 Keyboard Replacement

Replace the keyboard of your Dell Latitude D630 laptop.

Written By: Jon Amireh



INTRODUCTION

This guide will show you how to replace your D630's keyboard.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Battery



- Shutdown the computer, detach it from any power source, and make sure the laptop is closed with its latch securely shut.
- Turn the laptop over so its bottom is facing you.

(i) The laptop pictured comes with a palm rest attached to the battery case. This part may not be present on your laptop. Regardless, the steps are exactly the same.

Step 2




- Using two index fingers, slide the battery latches outward.
- While still holding the latches out, use your thumbs to slide the battery out towards you.
- Once the battery is dislodged, you can let go of the latches and remove the battery.

Step 3 — Keyboard




- With the battery removed, turn the laptop face up and open the lid a complete 180 degrees.
- Using a plastic opening tool, pry off the corner of the keyboard bezel by undoing the tab.
- Once you've removed the corner of the bezel, you can use your hands to slowly, but with moderate force, pull the rest of the bezel slightly up and towards you to release the remaining tabs.

Step 4

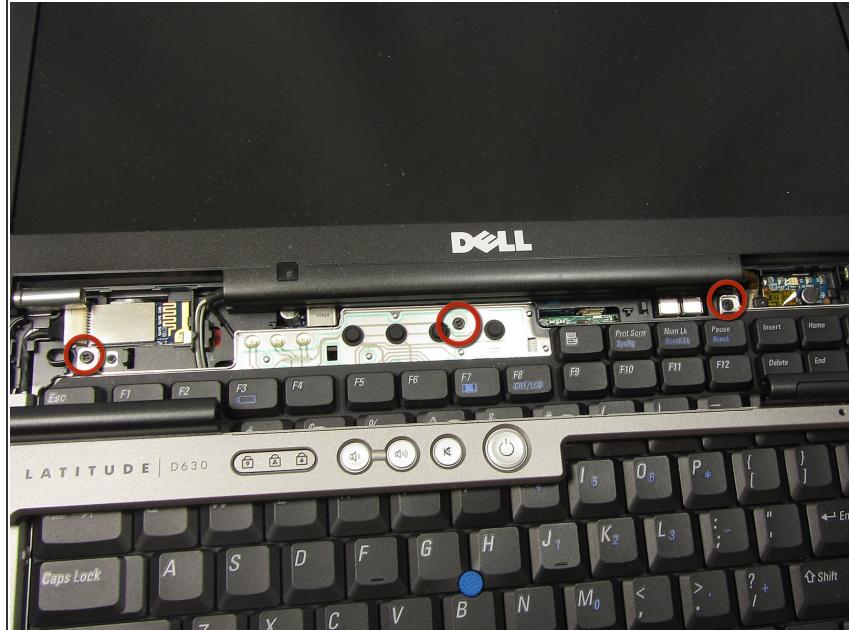

- Remove the three 3mm Phillips #0 screws securing the keyboard.



Step 5

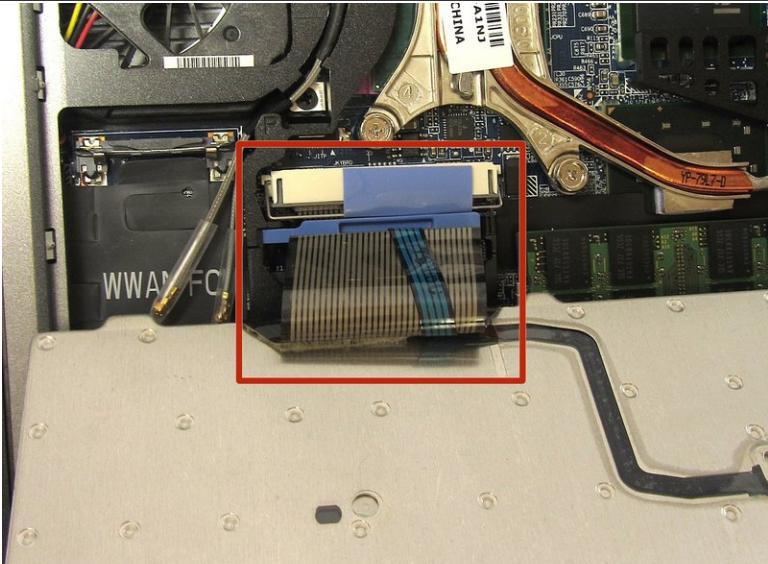

- Slowly bring the keyboard up and fold it back onto the touchpad.

⚠ Be careful not to pull too hard or too far when folding over the keyboard. The keyboard is still connected to the motherboard by a short ribbon cable.

Step 6

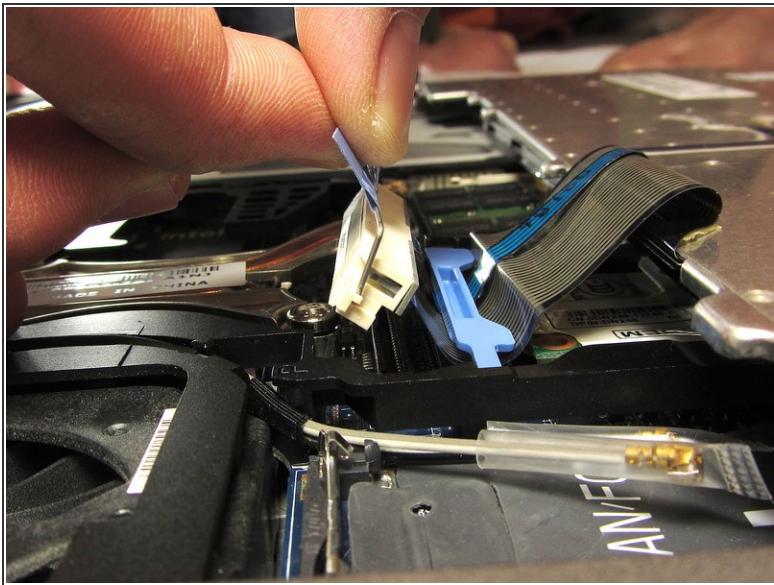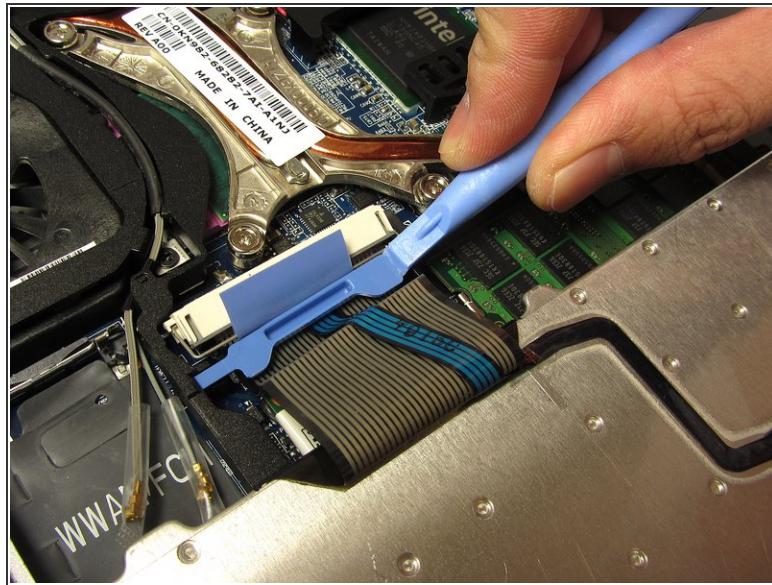

- Use a plastic opening tool to unhook the blue latch that secures the keyboard cable.
- Using the blue tab, pull the keyboard cable connector from its socket on the motherboard.

To reassemble your device, follow these instructions in reverse order.