




# Dell Streak 7 GSM Module Replacement

Replace the GSM module in your Dell Streak 7.

Written By: Ali Benjelloun

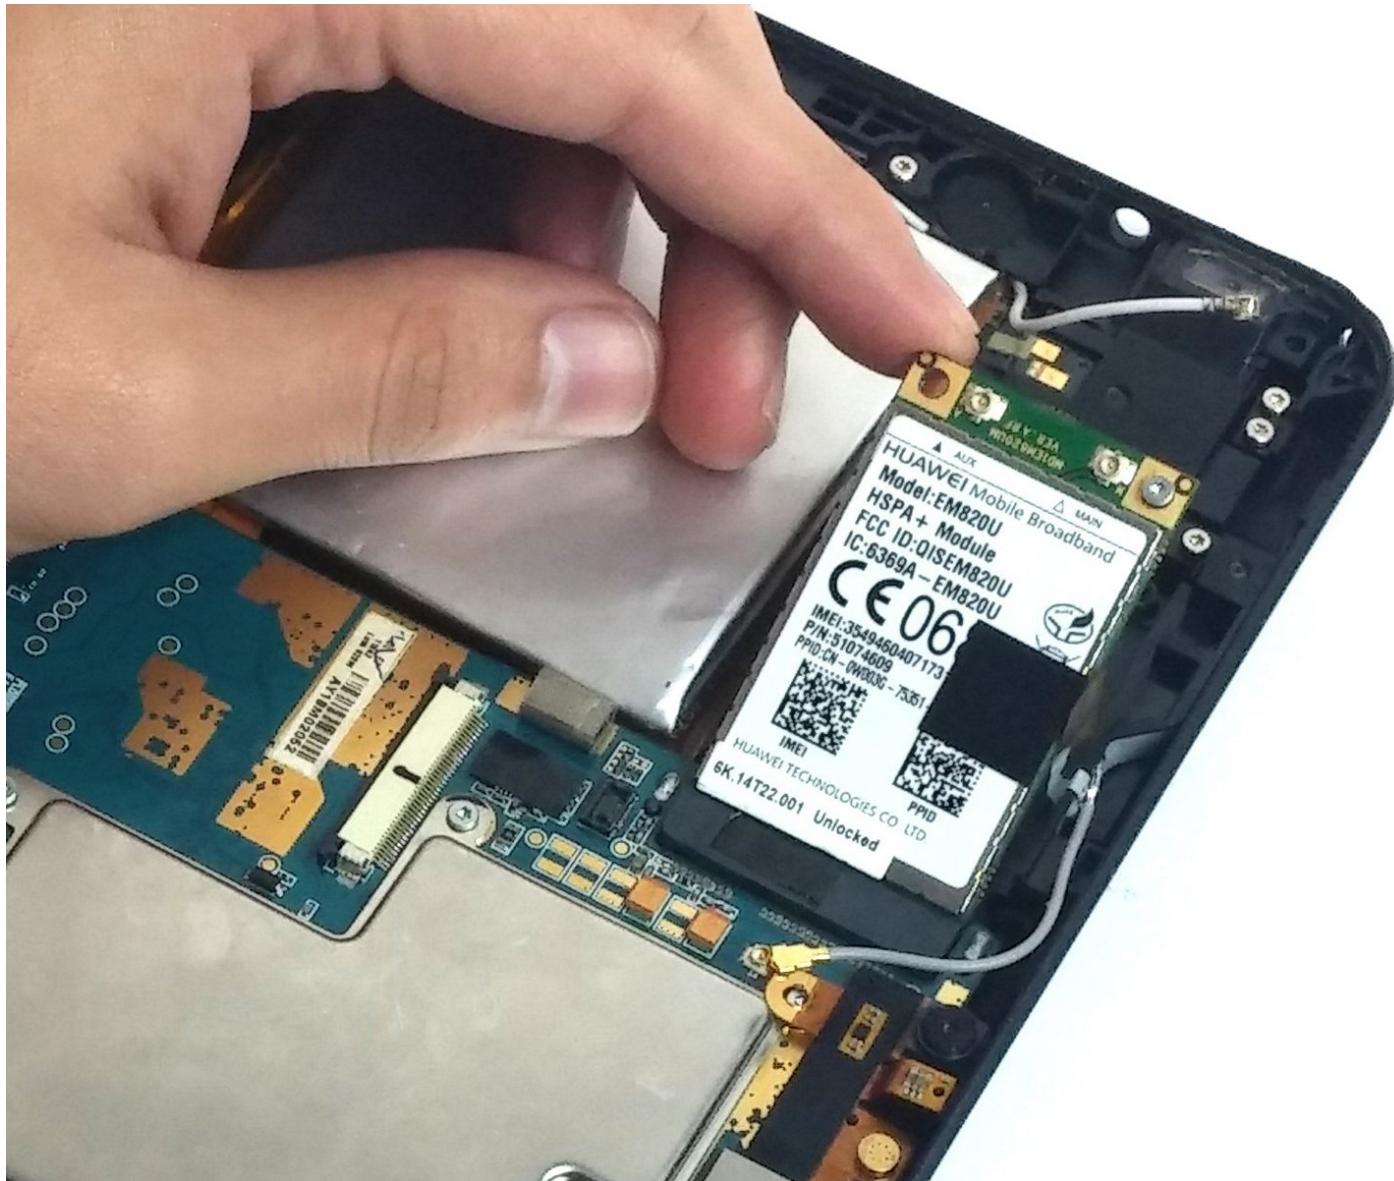

## INTRODUCTION

Use this guide to replace the GSM module on your Dell Streak 7. This guide will show you how to remove the old GSM module.

### **TOOLS:**

- [iOpener](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)

## Step 1 — Front Panel Assembly



- Insert the spudger under the capacitive button panel, and slide the spudger all the way around.


**i** You will want to heat up the screen edges with the [iOpener](#) to help facilitate removal.

## Step 2



- Remove the button cover by lifting the cover away from the tablet.

## Step 3

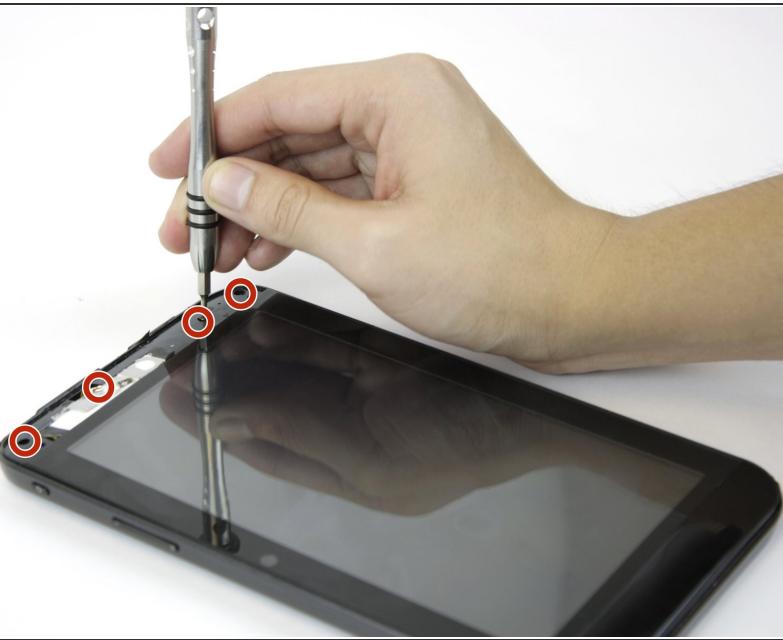

- Using the Torx screwdriver, remove the 4mm screws.

## Step 4



- With the Torx screwdriver, remove the two 5mm screws.

## Step 5




- Using the spudger, insert it under the black side panel. Slide the spudger all the way around until the cover piece comes off.
- With the Torx screwdriver, remove the two 4mm screws.

## Step 6



- Use the spudger to go along the edges of the device and pop out the latches securing the display to the case.

## Step 7

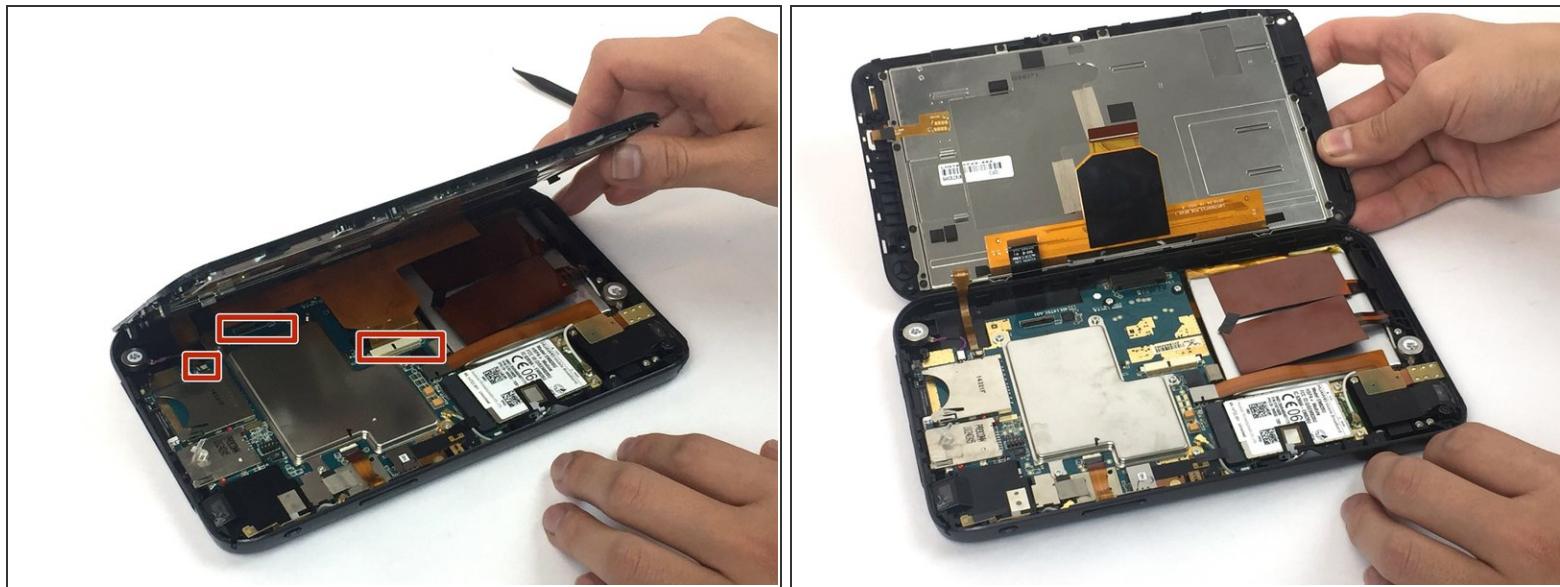


***i*** Ribbon cables are very sensitive and prone to breaking

- Disconnect the ribbon cables by unlocking the connector and pulling the cable out slowly.


**!** Make sure all the cables are unplugged before opening the device completely. Failure to do so might lead to broken or torn cables.

## Step 8 — GSM Module

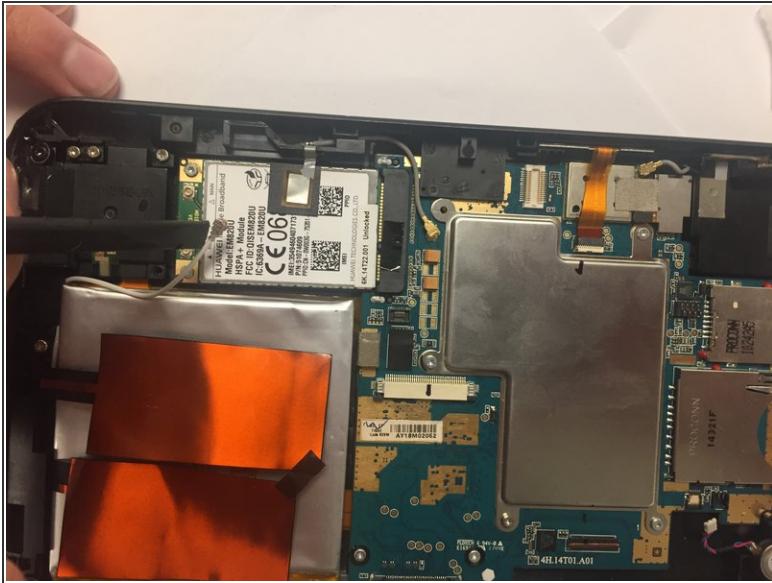



- With the spudger, disconnect the antenna cable located on the module.

## Step 9

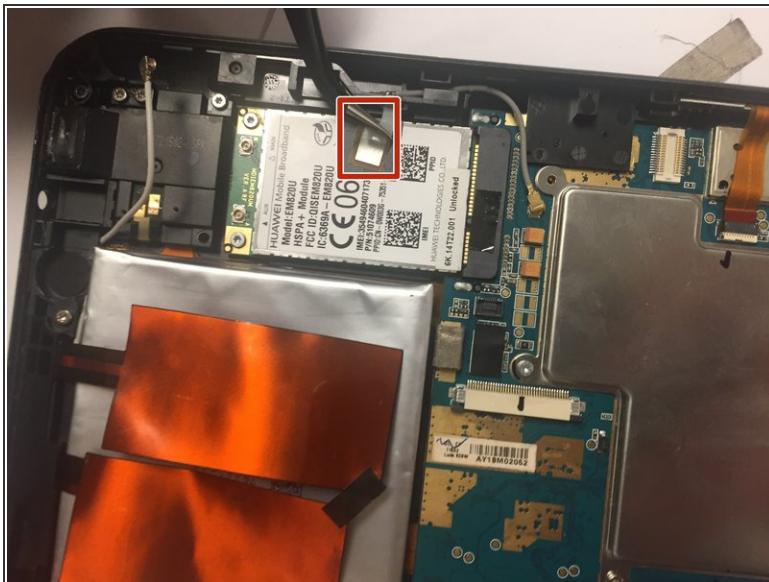


- Using tweezers, remove the tape connected to the GSM module.

## Step 10

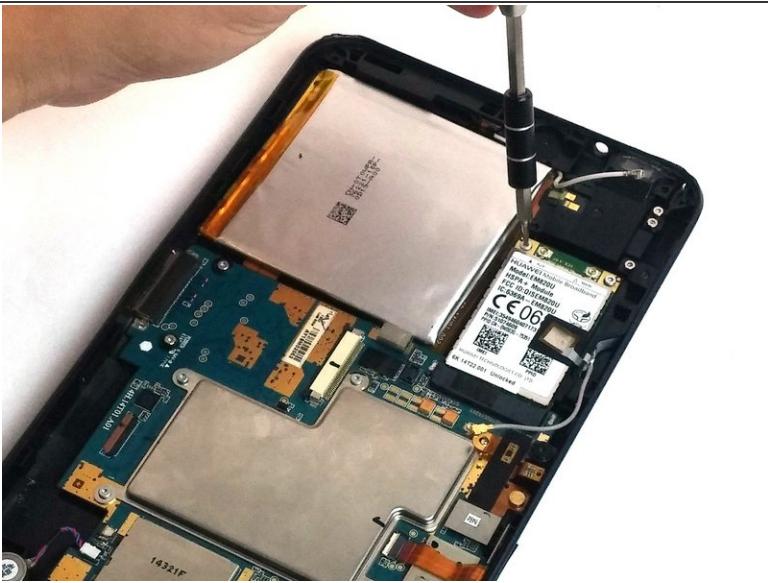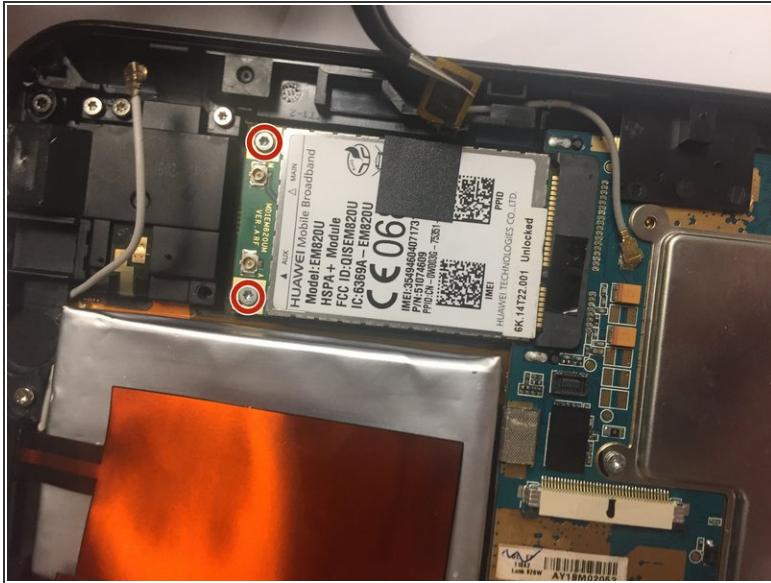

- Remove the two 3mm screws securing the GSM module. Use the Torx screwdriver.

## Step 11

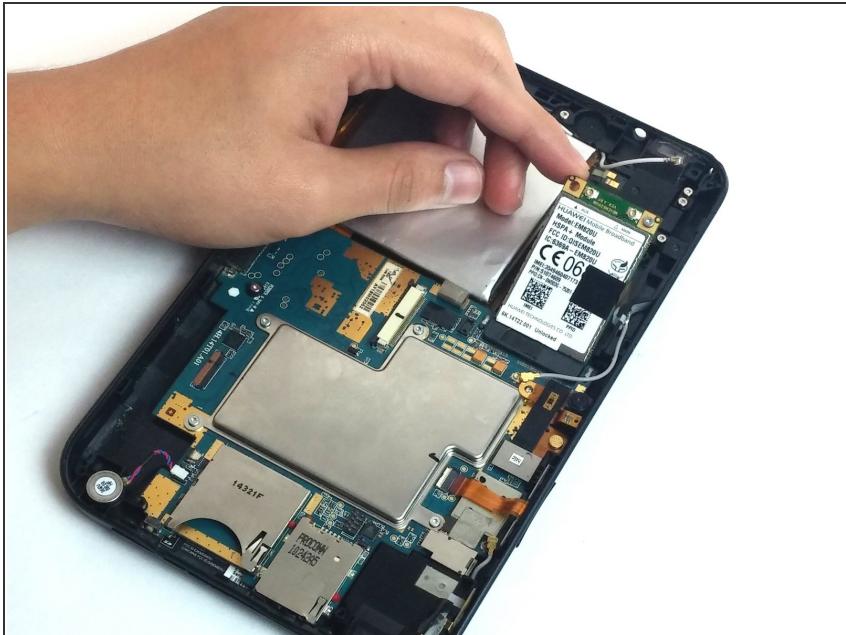

- Disconnect the GSM module by lifting the module up, out of the case.

To reassemble your device, follow these instructions in reverse order.