



# Fugoo Tough XL Battery Replacement

This guide would show you how to remove the shell and replace the motherboard.

Written By: Abdul




## INTRODUCTION

This guide will show you how to remove and replace the battery pack.

### TOOLS:


- Tweezers (1)
- [iFixit Opening Tools](#) (1)
- [T10 Torx Screwdriver](#) (1)
- [1 x Hex3mm Screwdriver](#) (1)

## Step 1 — Case

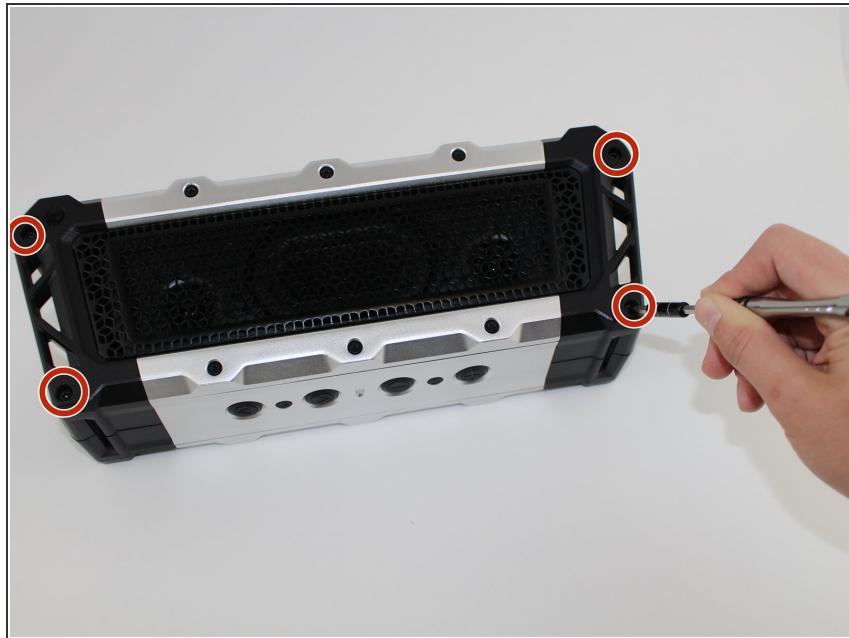

- Use a #3 Hex screwdriver to unscrew all four 3mm screws."

## Step 2

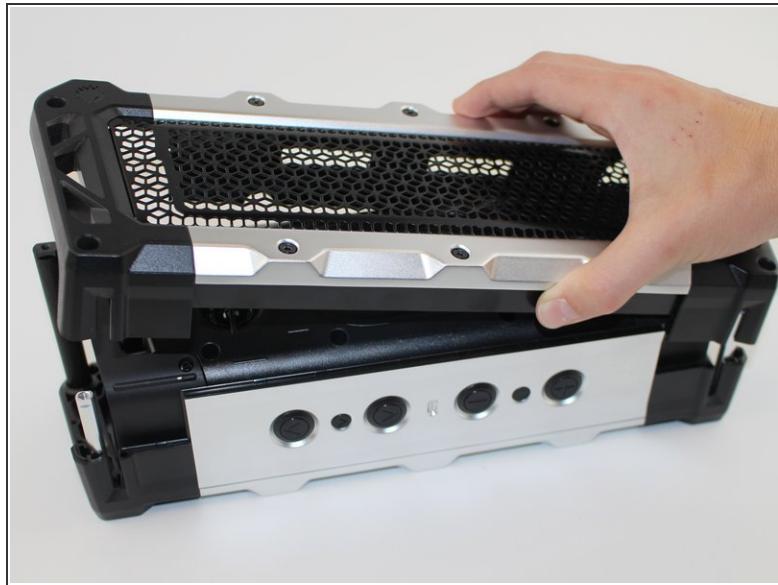

- Gently remove the outer shell.

*(i)* It should be relatively easy to pull apart. Don't be afraid to apply a necessary force.

## Step 3




- Pull out the device from the external case.
- Unscrew all 12mm T Head screws using a T10 screwdriver.
- Unscrew all 6mm T Head screws using a T10 screwdriver.

## Step 4



- Gently remove the side plates by using your hands to pull off.
- Use plastic opening tool to pry off the back plate.
- *(i)* Work on the side with the Fugoo trademark.


## Step 5

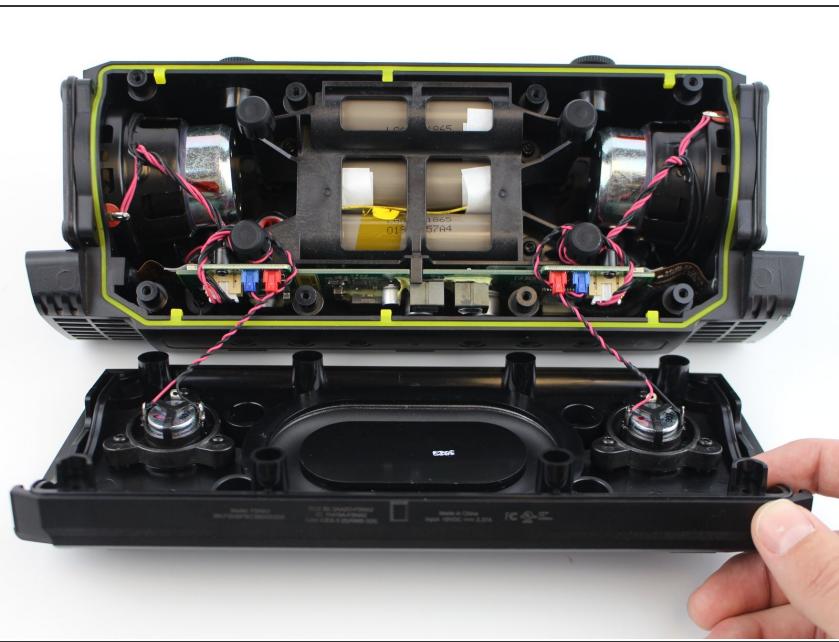

- Pull apart the front casing from the back casing, slowly. Try to avoid any tension on any of the connected cables.



 Separate at a slow constant force to avoid damage to the speaker cables.

## Step 6 — Motherboard

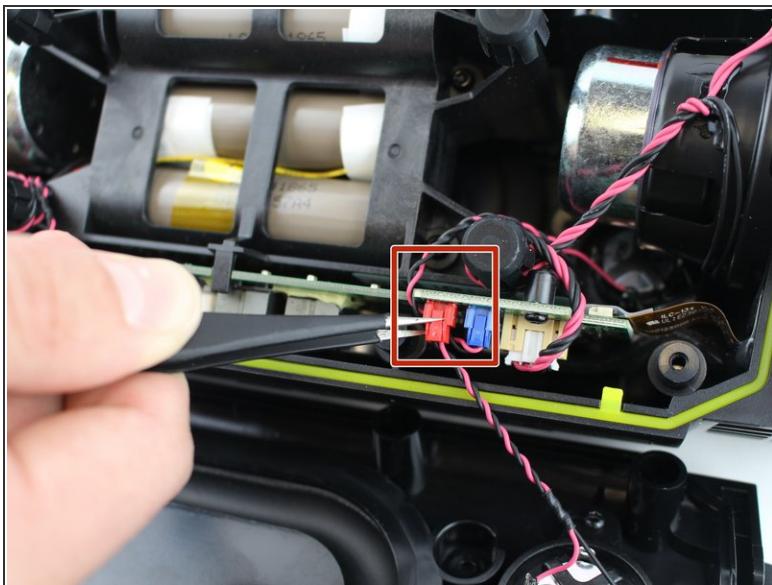

- Carefully untangle the wires that are connected from the speaker to the motherboard.


## Step 7

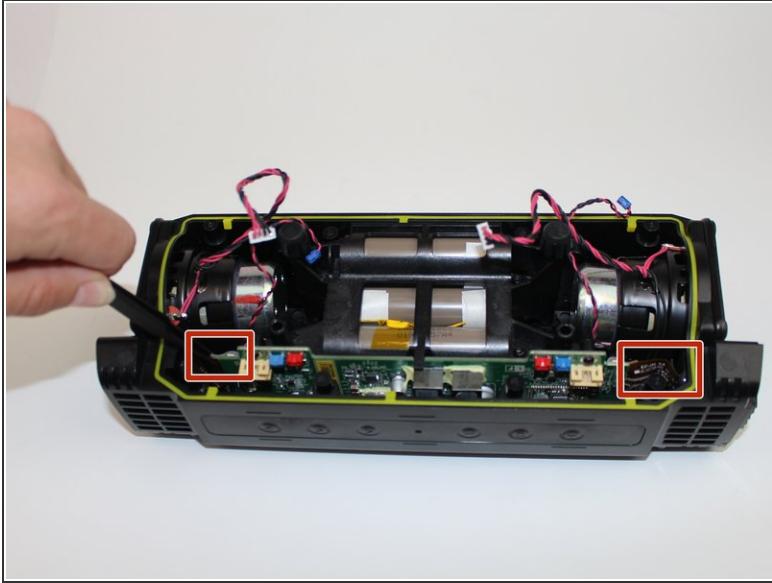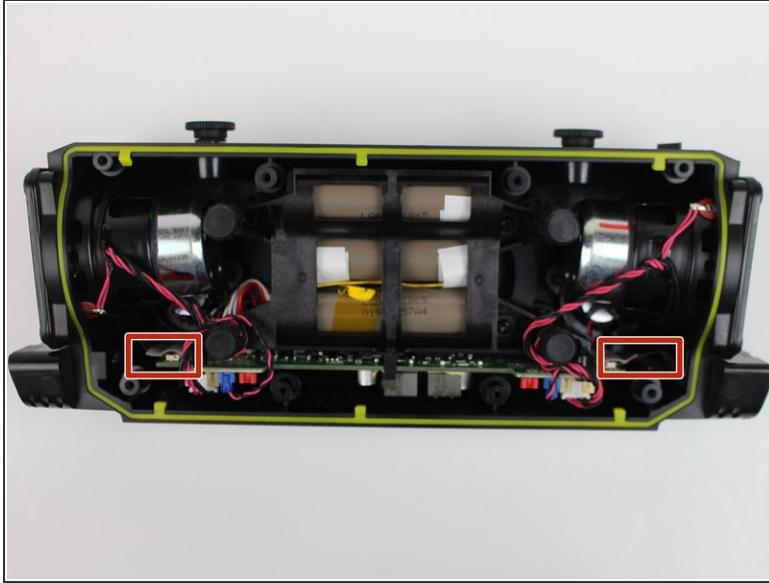

- Use tweezers to remove two ribbon wires on left and right side of motherboard.

**⚠** Do not pull the cables by the cord, as this could cause damage to the cables and/or motherboard. Always disconnect the cables from the base by the motherboard using an iFixit opening tool

## Step 8

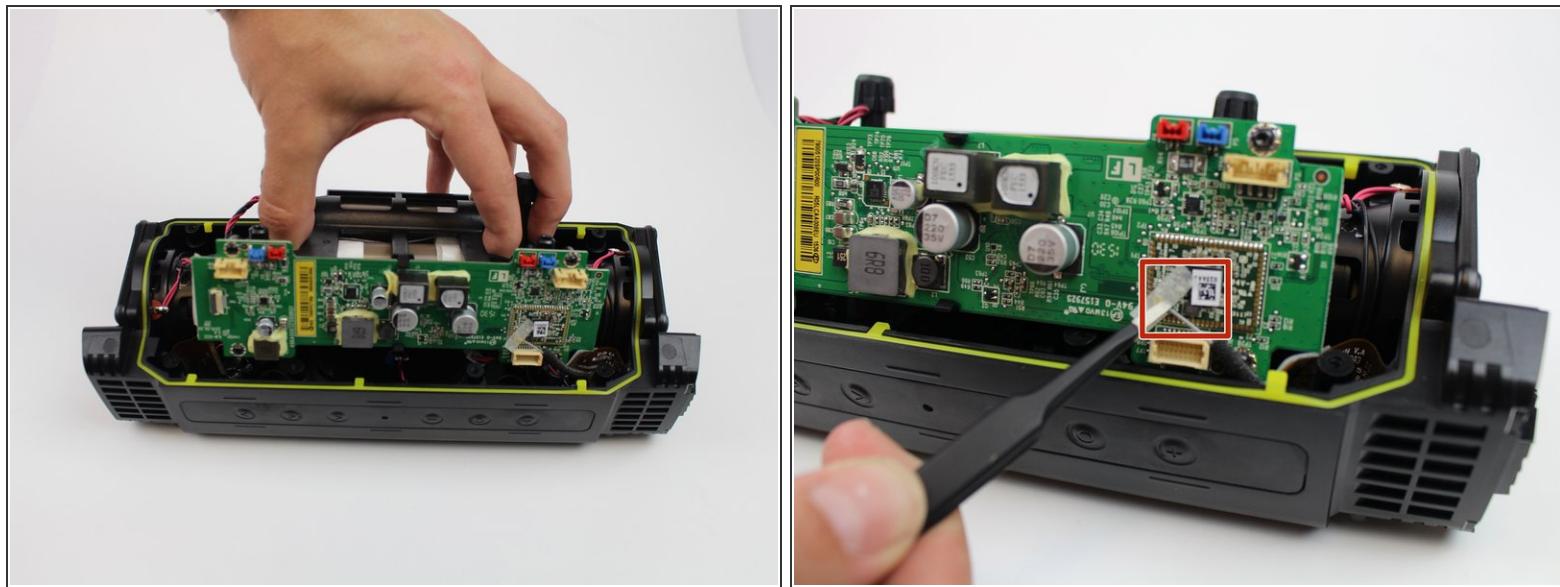

⚠ Pull out the motherboard halfway.

- Unplug the ribbon gently using a tweezer.


ⓘ There is a hidden ribbon on the motherboard, which becomes visible when the motherboard is been pulled out.

## Step 9



- Remove the motherboard and battery from the device.
- Use a #3 Hex screwdriver to unscrew all four 3mm screws."

## Step 10 — Battery

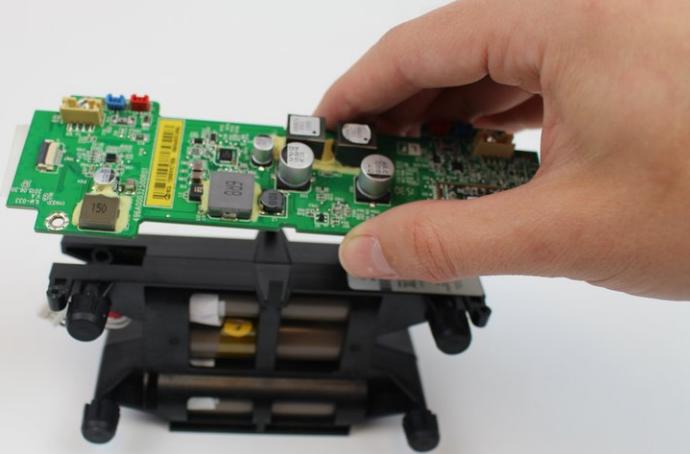

- While holding the motherboard with one hand, remove the battery.
- Once that is completed, replace the battery with a new, functional one.

To reassemble your device, follow these instructions in reverse order.