



Garmin Approach S2 Screen Replacement

This guide will assist the user in replacing the screen in their Garmin Approach S2.

Written By: Evan Miller




INTRODUCTION

In this guide there are delicate parts that will very easily break under tension. Keep this in mind as you move forwards.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Back Cover

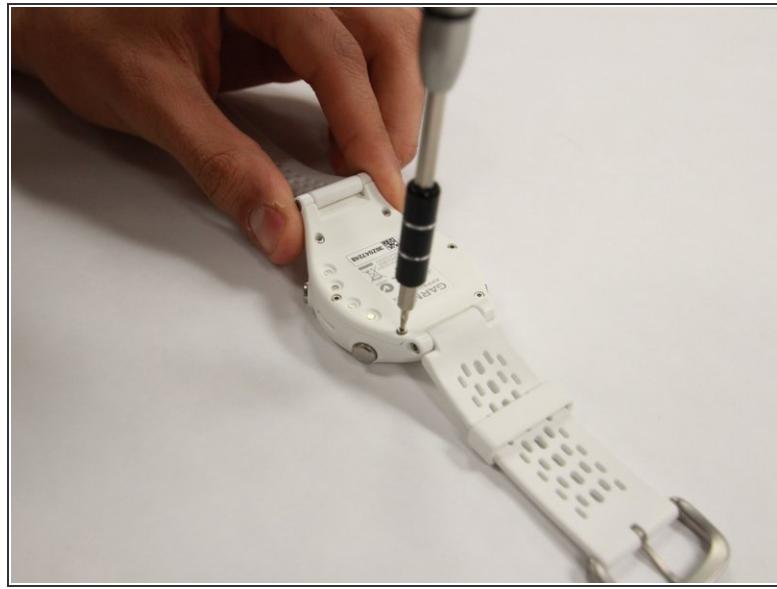

- Remove the six T5 Torx 6.32mm screws securing the back cover to the watch.


Step 2

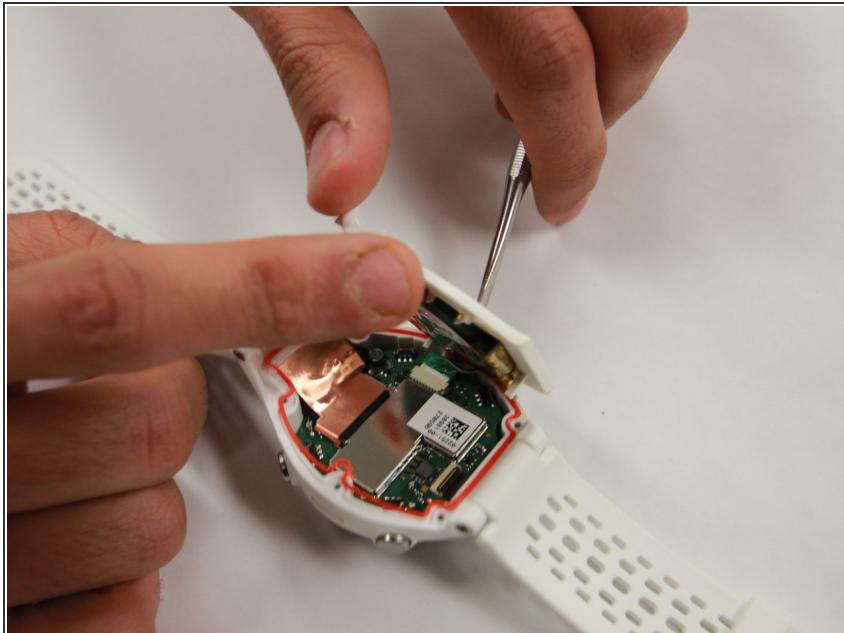

- Remove the back cover carefully.

i Even after the screws have been removed, the back cover can still be quite difficult to take off. Moderate to extensive prying may be required. Be gentle, but *firm*.

Step 3 — Water Proof Gasket

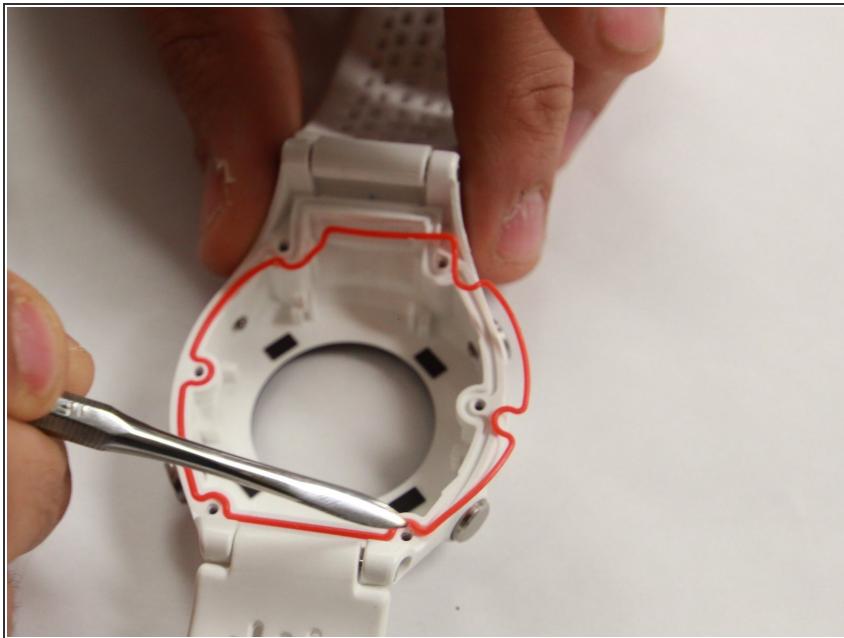


- Remove the orange gasket.

Step 4 — Screen



- Remove the screen and motherboard assembly from the case.

Step 5

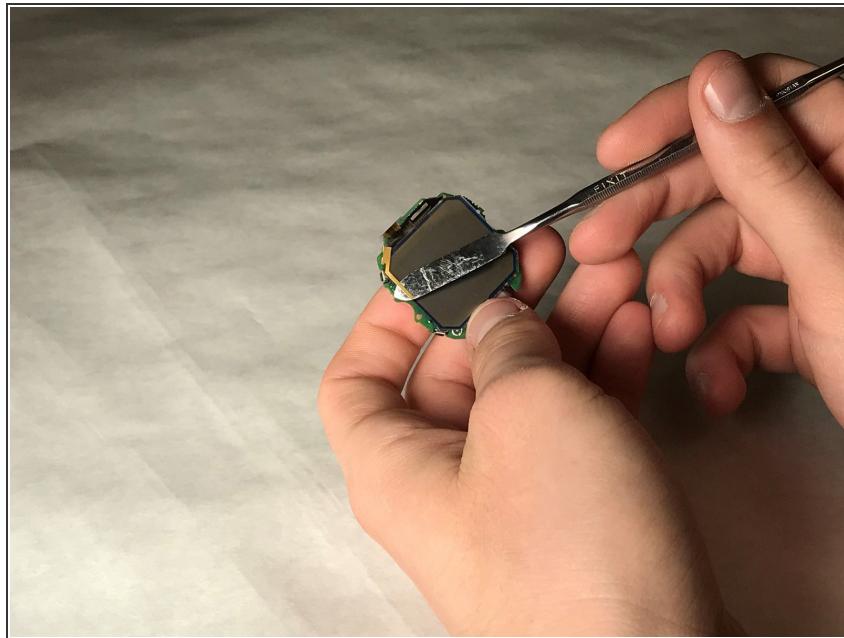


- Use a metal spudger to remove the golden retaining clip from the screen. There will be some adhesive to break.

Step 6




- Remove the screen from the golden metal clip.

Step 7

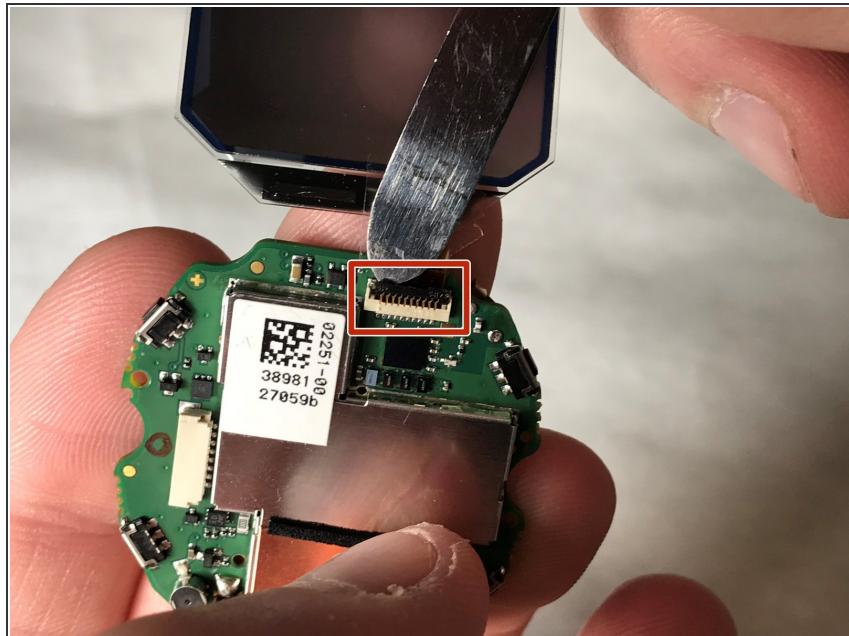

- Unhinge the black retaining hinge by prying it open with the metal spudger; Your fingernails will work as well.


Step 8

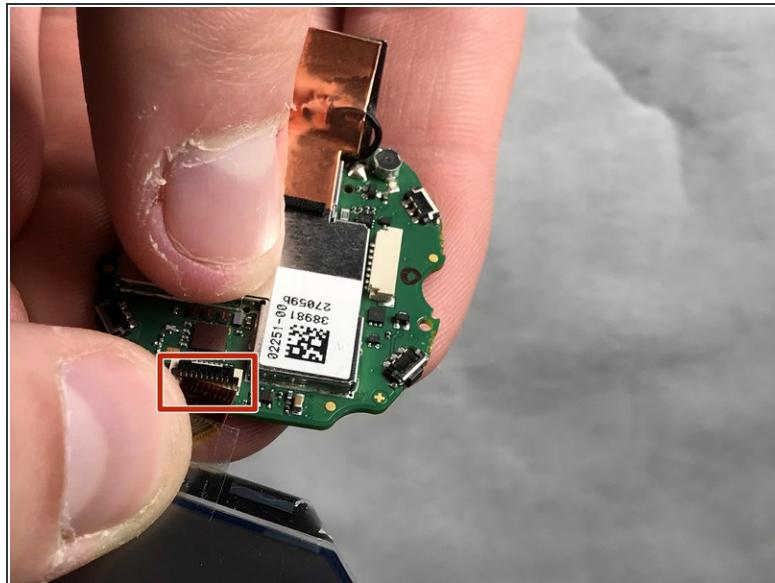

- Remove the connector from the motherboard by pulling it free at the base.

⚠ Make sure to pull from the base of the connector wire, as it is very easy to rip the wire from the screen.

Step 9

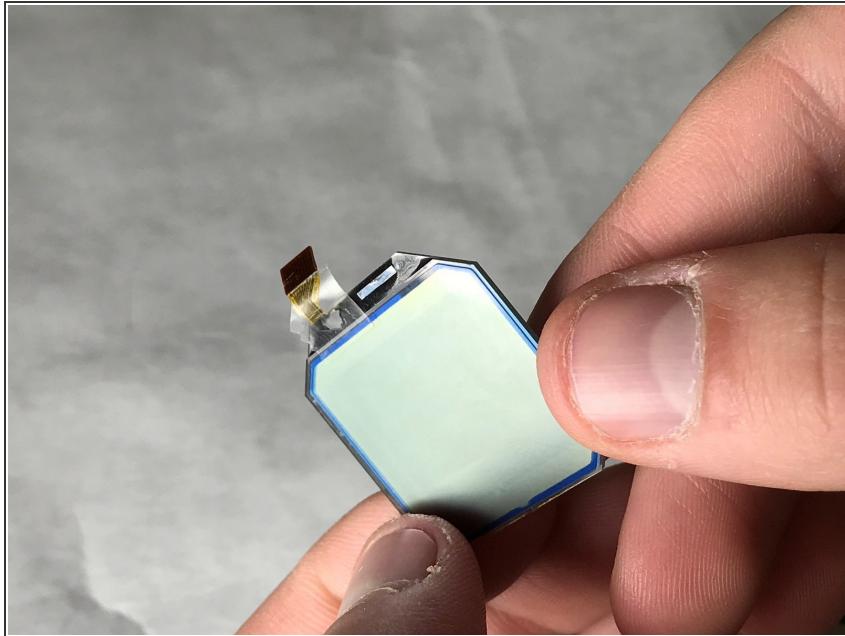

- Remove the screen from the motherboard.
- *i* Notice our tape retaining the connector to the screen. This is so easy to rip!

To reassemble your device, follow these instructions in reverse order.