



# GeeksPhone Keon Back Plate Replacement

How to remove the back plate of the Geeksphone Keon

Written By: Yanni Worthington




## INTRODUCTION

If the back plate of your Keon is damaged or broken, use this guide to replace the back plate.

### TOOLS:

- **Screwdriver (1)**  
T4
- **Screwdriver (1)**  
T3
- **iFixit Opening Tools (1)**

## Step 1 — Battery

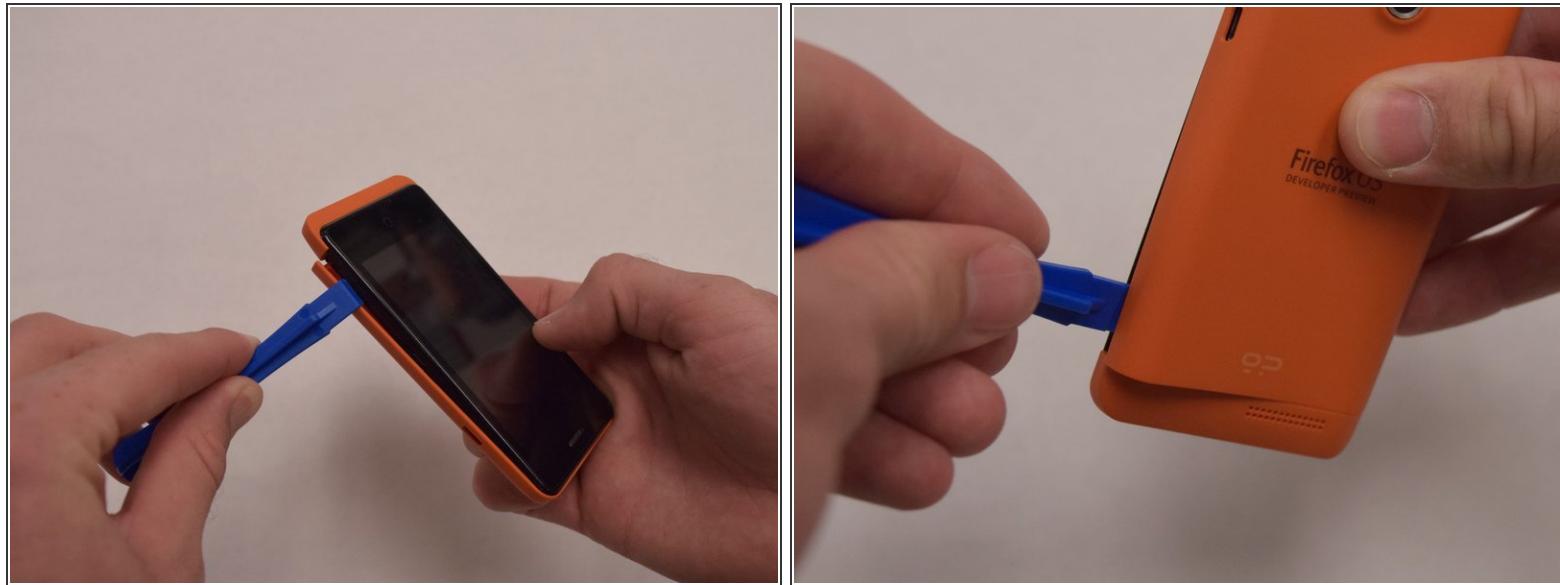


- Insert the plastic opening tool into the seam between the front of the device and the rear cover.
- Slide the plastic opening tool from the bottom of the phone to the top.
- Use the plastic opening tool to free all the clips attached to the phone.

## Step 2




- Lift the cover away from the phone.

## Step 3

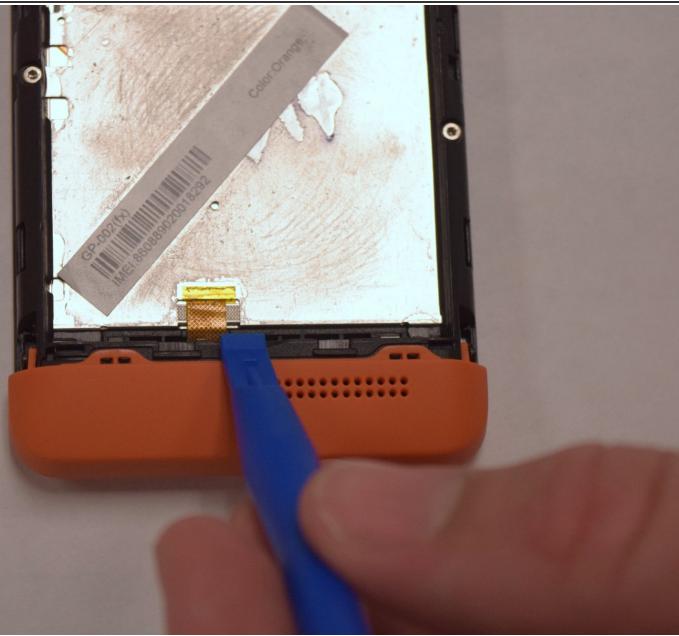


- Insert the plastic opening tool into the groove between the bottom of the phone and the battery.
- Lift the battery with the plastic opening tool and finish removing battery by hand.

## Step 4 — Back Plate

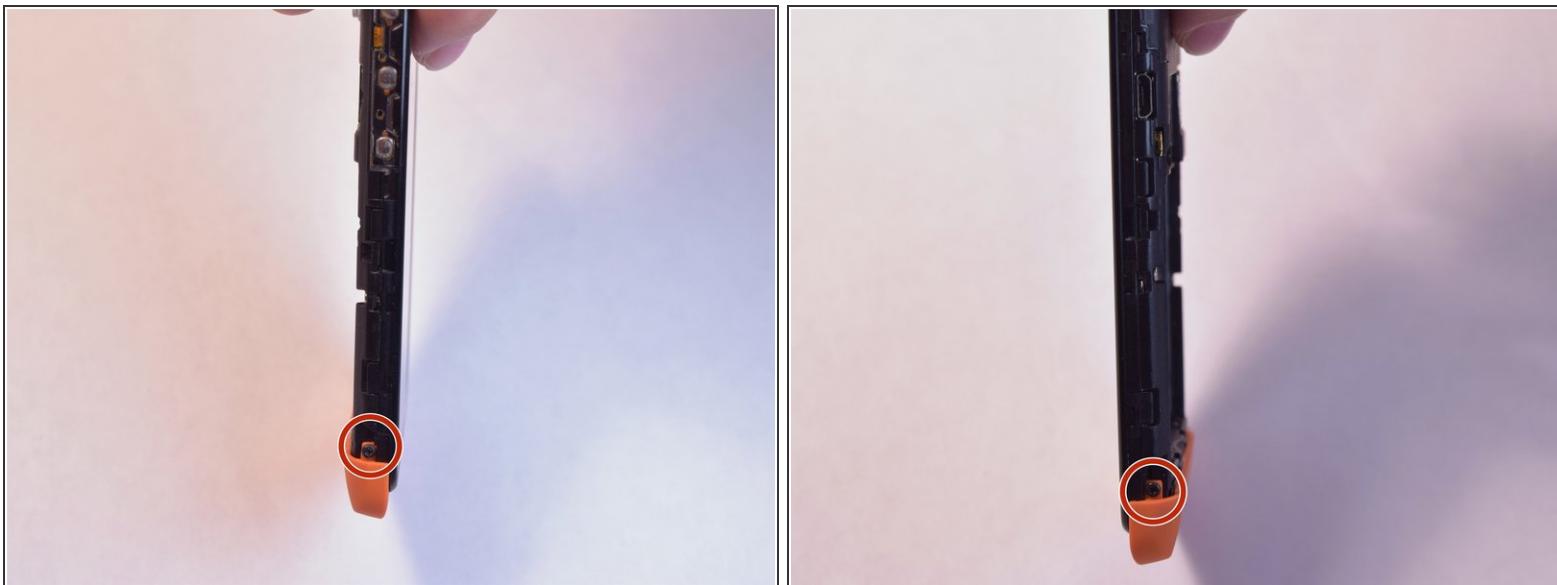

- Remove the two 5mm T4 screws on the sides of the small orange plate.

## Step 5

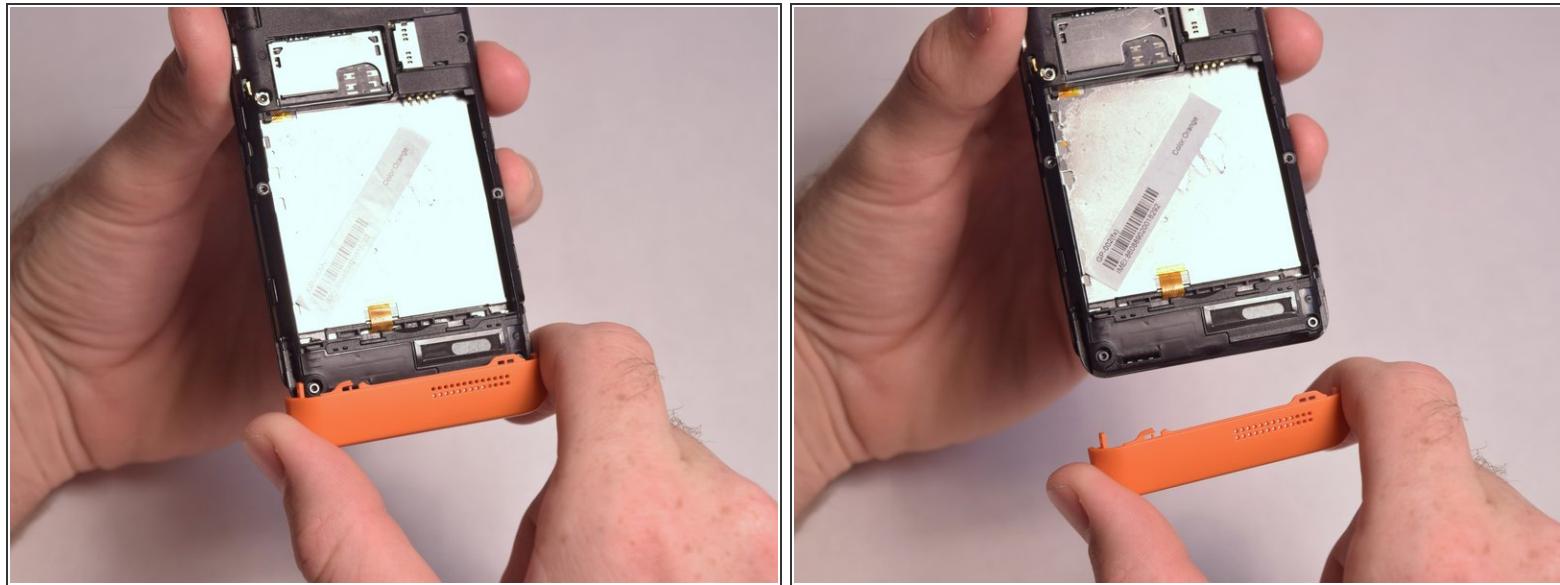


- Gently remove the small orange plate by pulling it down.

## Step 6




- Remove the following screws securing the back plate to the device:
  - Two silver 2mm T3 screws
  - Five black 3mm T3 screws

## Step 7

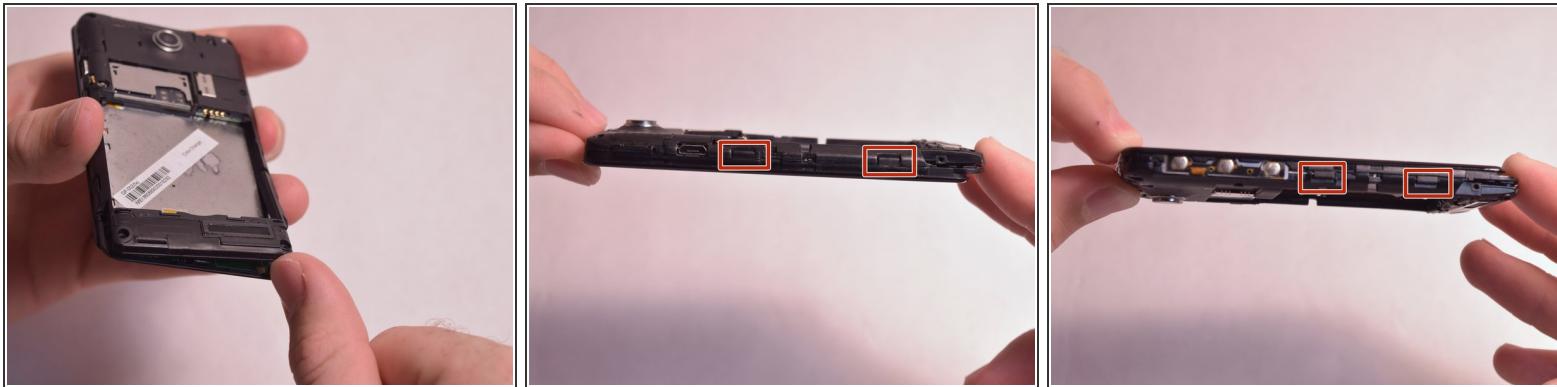

- Slightly lift up the bottom corner of the backplate.
- Release the four clips on both sides by pulling them away from the device.

## Step 8

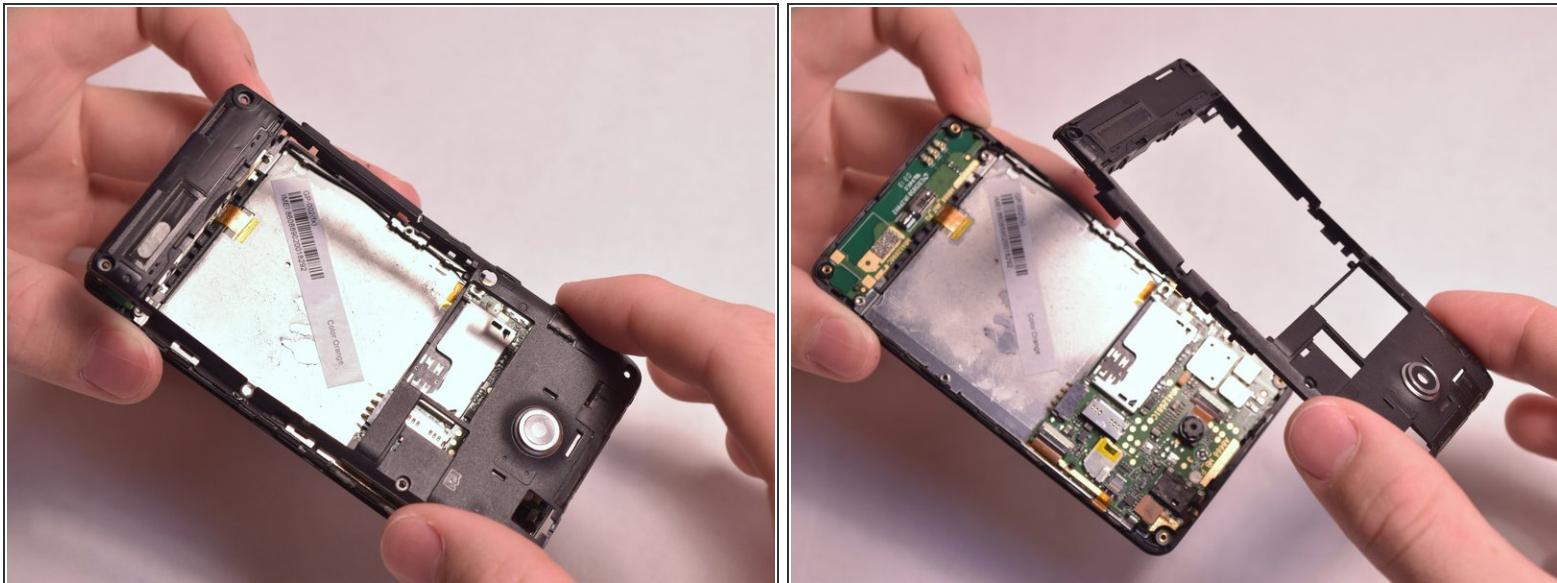

- Lift the backplate away from the device.

To reassemble your device, follow these instructions in reverse order.