



# HP Elite X2 1013 G3 Battery Replacement

Use this guide to replace the battery in your HP Elite X2 1013 G3 laptop.

Written By: Asmita Sharma



## INTRODUCTION

If the battery on your laptop no longer holds charge or otherwise needs replacement, use this guide to remove and replace it.

If your battery appears to be swollen, please see iFixit's related [Wiki](#).

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Suction Handle](#) (1)

## Step 1 — Battery



**⚠** Turn off your device before completing any subsequent steps.

- Flip the device over so the base is facing the ceiling.

## Step 2



- Lift up the stand as far as it will go, leaving the device face down as pictured.
- Use a T5 Torx Screwdriver to remove the 4 indicated [2 mm] screws.


## Step 3



- Flip the device over so the screen is facing the ceiling.
- Place the suction handle in the center of the screen and slowly lift off the screen until it is at a 30 degree angle, starting by gently prying up the bottom.


**⚠ DO NOT** pull the screen beyond a 30 degree angles. Additional internal components must be disconnected first.

## Step 4

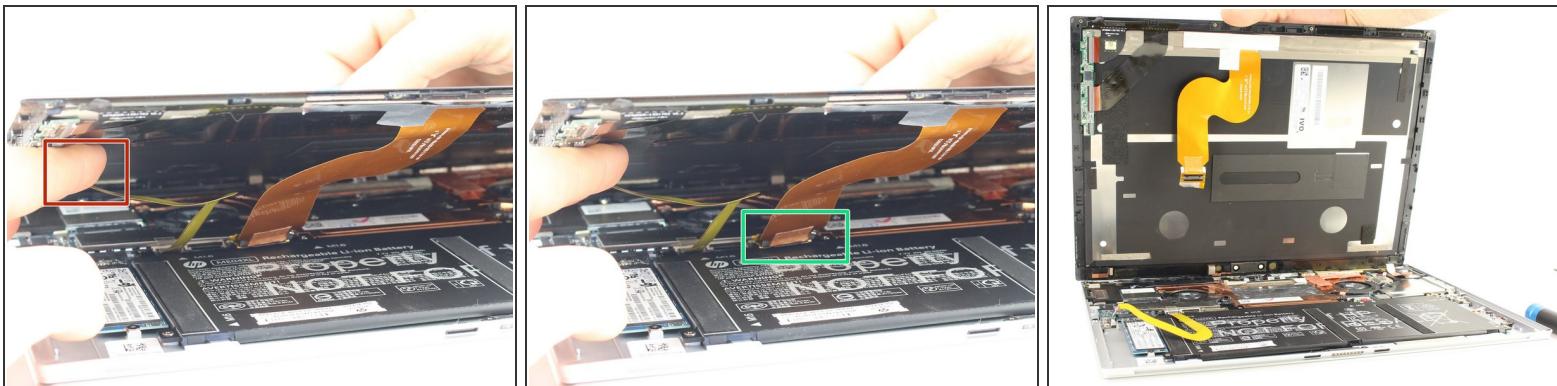


- With the screen lifted at a 30 degree angle, gently disconnect the yellow ribbon cable at the end connected to the screen.
- Gently disconnect the orange ribbon cable at the end connected to the bottom plate.
- Lift the screen off and set it aside.

## Step 5

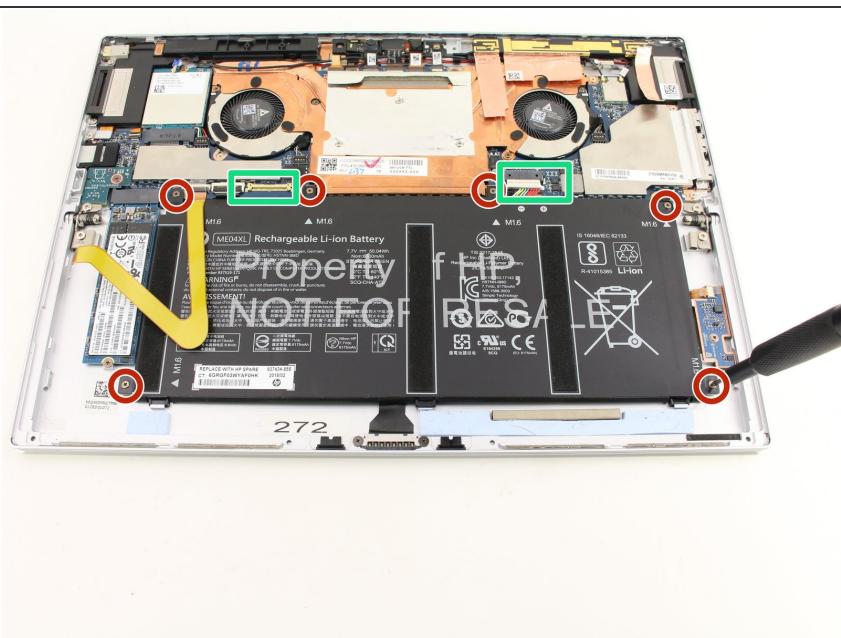

- Use the Phillips #00 Screwdriver to remove the six 2 mm screws.
- Gently disconnect the two connectors.

## Step 6

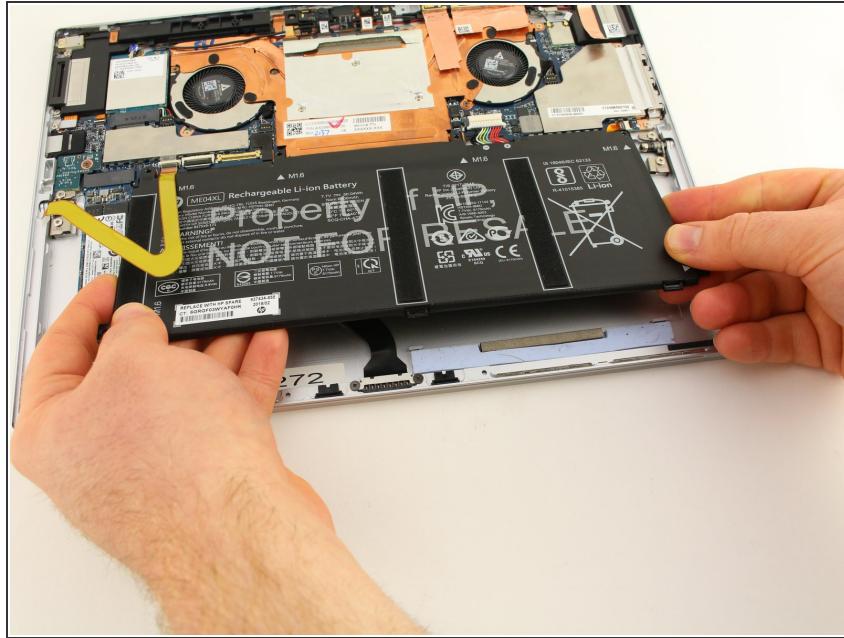

- Lift the battery out of the housing.

To reassemble your device, follow these instructions in reverse order.