




# HP Envy x360 m6-aq005dx Motherboard Replacement

Use this guide to remove or replace the motherboard of your HP Envy x360 m6-aq005dx.

Written By: Bradley Braganza

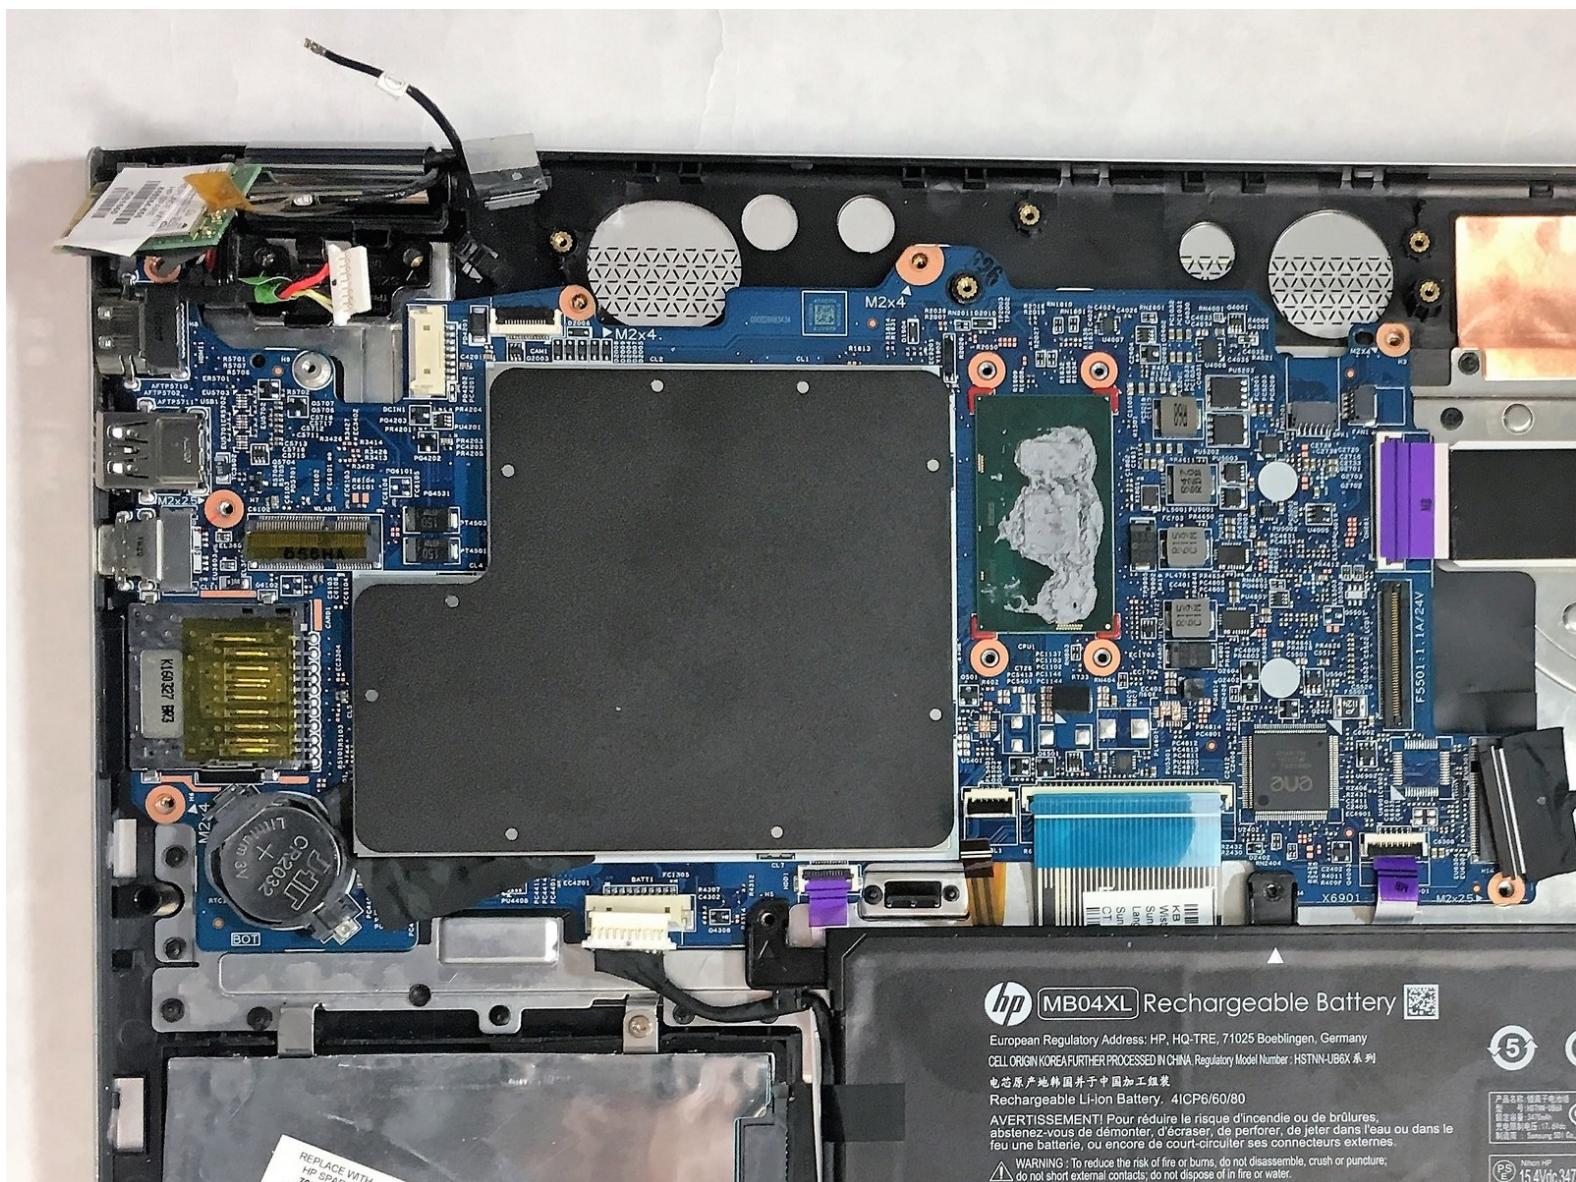

## INTRODUCTION

The motherboard is the main circuit board found in a laptop. It manages the communication between crucial electronic components that allow your computer to function. This guide will describe how to remove and replace the motherboard for HP Envy x360m6-aq005dx

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [JIS #1](#) (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel




- Use the plastic opening tool to remove the gray rubber pads on the bottom of the laptop. For our device we only needed to remove the two at the top.

## Step 2

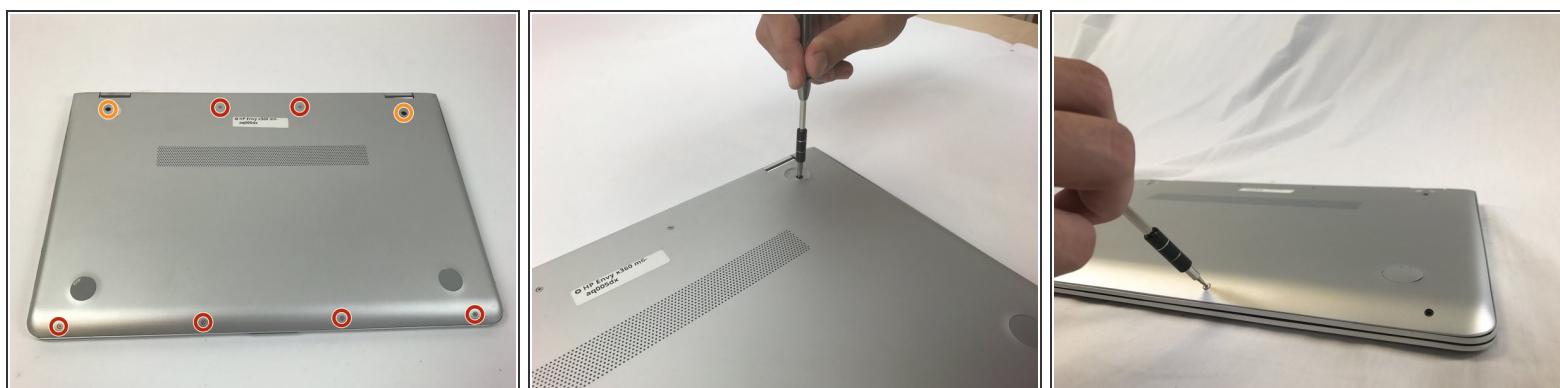

- Use a Torx T5 screwdriver to remove the six 5.1 mm screws.
- Use a JIS #1 screwdriver to remove the two 7.2mm screws.

## Step 3

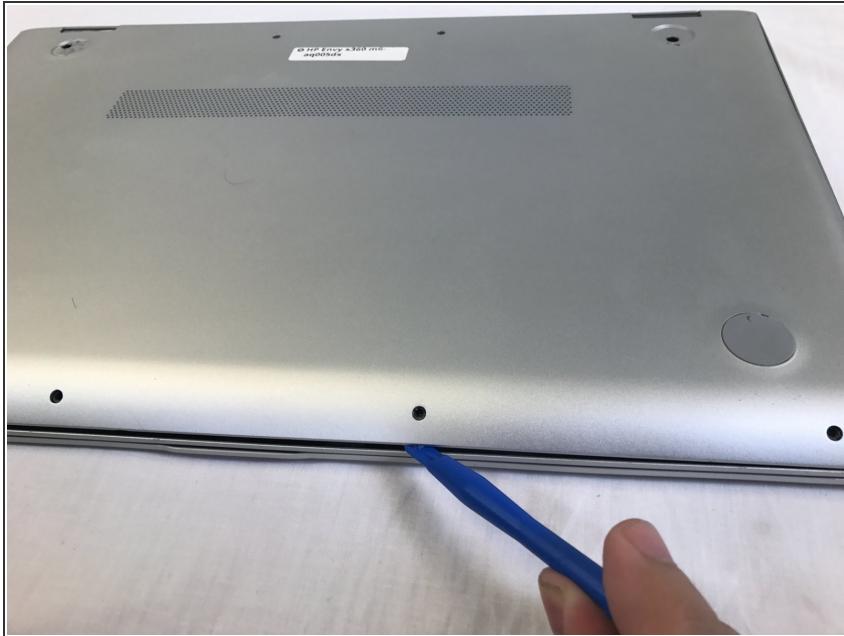

- Use a plastic opening tool to pry open the case. Go slowly around the edge. You will hear popping noises, such as due to popping open the small joints that keep the cover attached.

## Step 4 — Battery



- Use a JIS #1 screwdriver to remove the six 4.7 mm screws.


## Step 5



 Battery might cause a small electric shock.



- Use tweezers to disconnect the battery from the motherboard.

## Step 6 — Fan

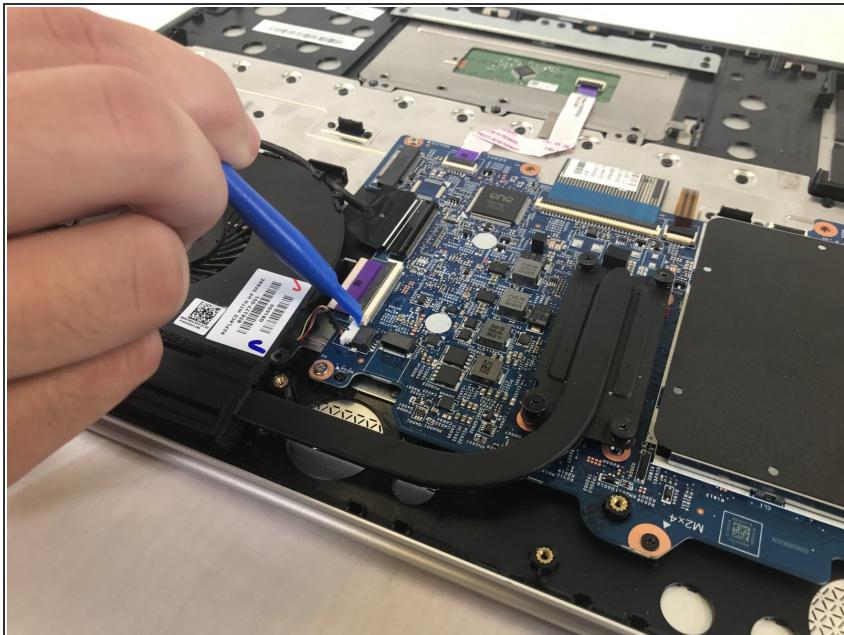



- Use the plastic opening tool to disconnect the power cable from the fan.

## Step 7

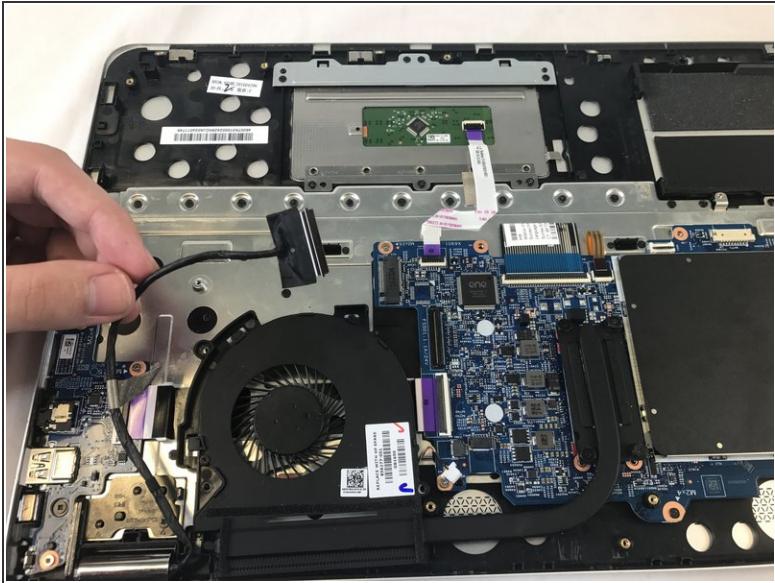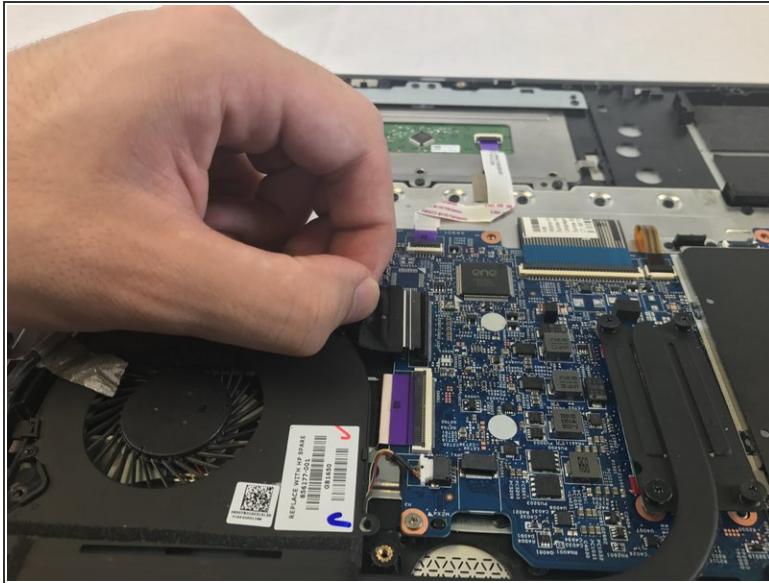



- Use your fingers to lightly pull the cable and disconnect it from the motherboard.

## Step 8

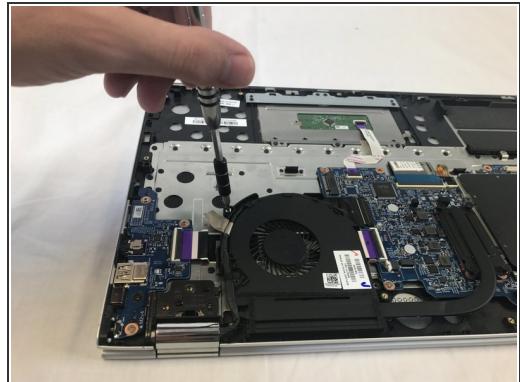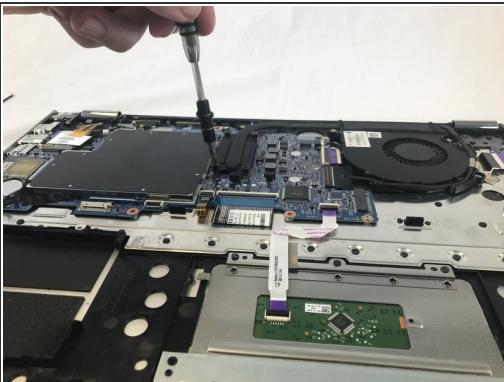

- Use a Phillips #0 screwdriver to loosen the four 6.5 mm screws.
- *(i)* Do not fully remove the screws, just enough to be unattached from the motherboard.
- Use a JIS #1 screwdriver to remove the two 7.7 mm screws.

## Step 9 — Motherboard

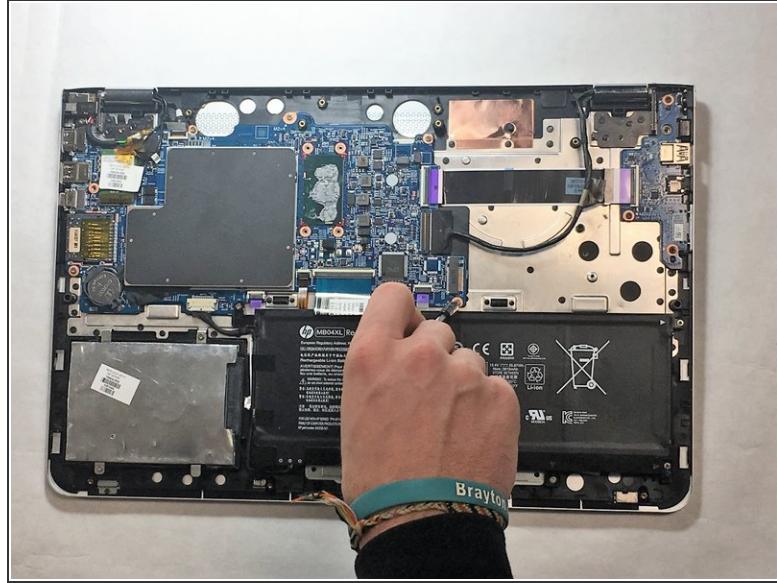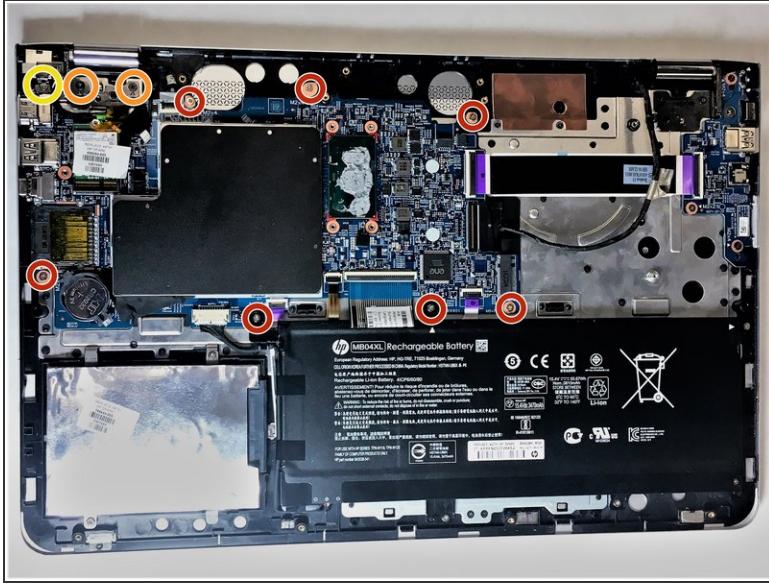

- Use a JIS #1 screwdriver to remove the 4.7mm screws from the indicated positions.
- Use the JIS #1 screwdriver to remove the 7.7mm screws from the indicated positions.
- Use the JIS #1 screwdriver to remove the 4.4mm screws from the indicated positions.

## Step 10




- Using your hand, lift the screen hinge located in the top left corner. This will allow for easier removal of the motherboard.

## Step 11



- Flip the indicated colored latches with iFixit Opening Tools, then use tweezers to release the cables attached to the motherboard by gently pulling backward.
- Use the pointed tweezers to release the plug-in connectors by gently gripping the plug and pulling backwards.

## Step 12

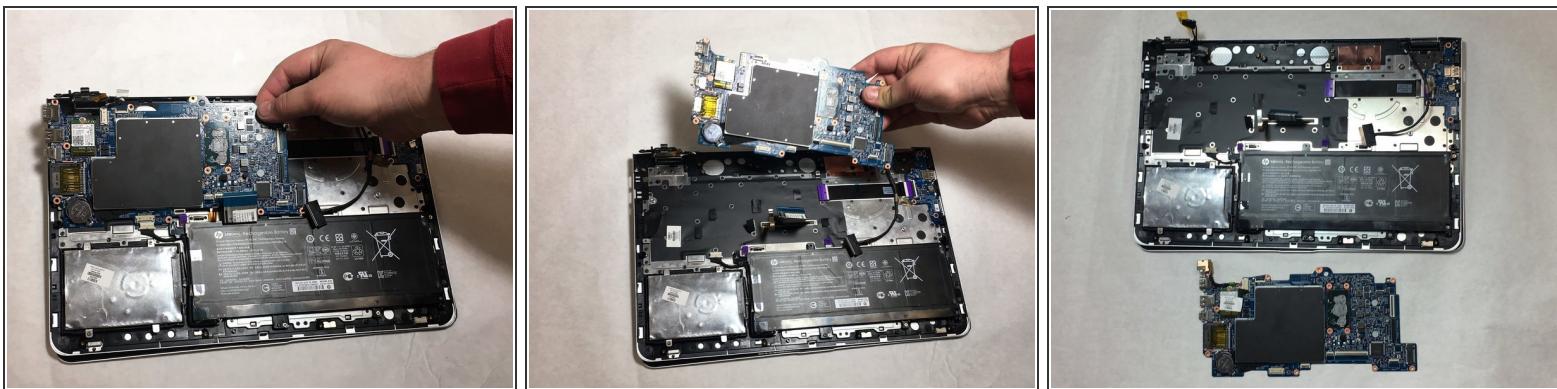

- Using your hand, lift and pull the motherboard from inside your computer.

To reassemble your device, follow these instructions in reverse order.