



HP Pavilion 15-p066us Screen Replacement

How to replace an HP Pavilion 15-p066us screen.

Written By: Tommy




INTRODUCTION

Remove the old screen on your laptop and replace it with a new one with this easy step by step guide.

TOOLS:

- [Tweezers](#) (1)
 - [JIS #0 Screwdriver](#) (1)
 - [JIS #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

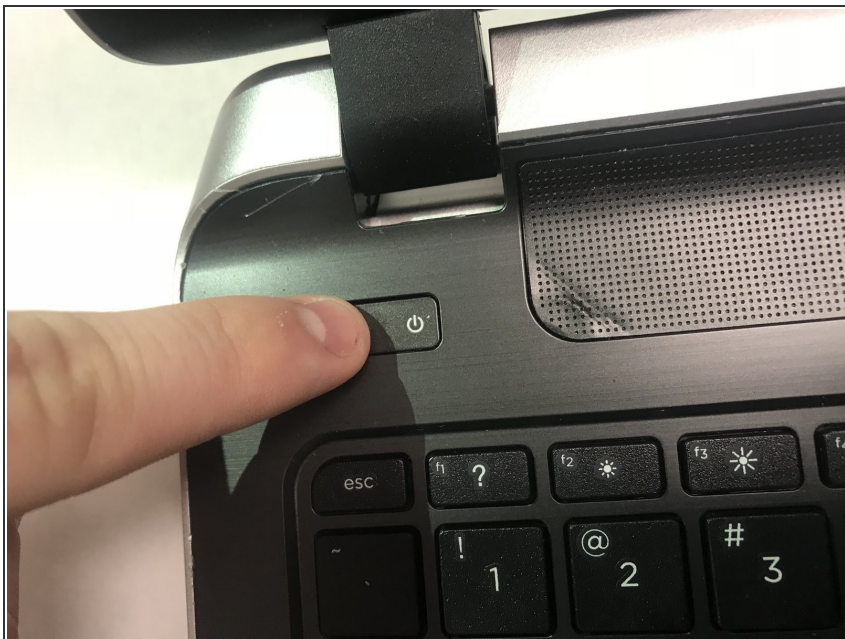


- Make sure your personal HP Pavilion is powered off and the charger is disconnected from the laptop.

Step 2




- Flip over your HP Pavilion to the backside, so you see the battery release and battery unlock slide mechanisms.

Step 3

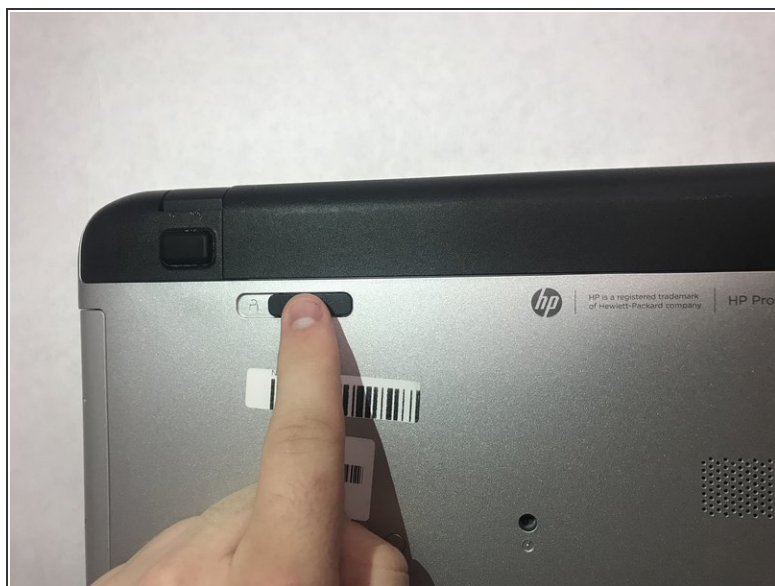


- On the left side on the back of the laptop, you will put your thumb on the unlock slide mechanism and slide it to the right.

Step 4

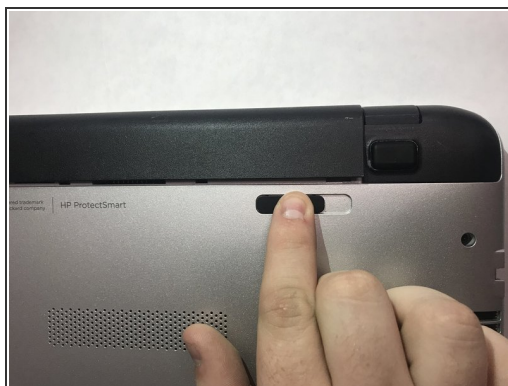



- On the right side of the laptop you will see the slide release mechanism and slide it to the left, then the battery will pop out.

Step 5

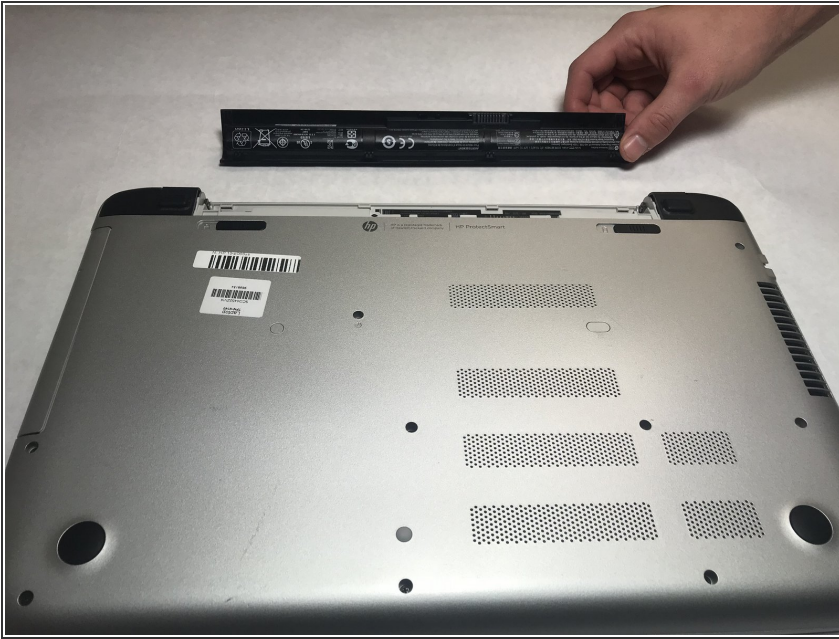


- Remove the battery.

Step 6 — Keyboard

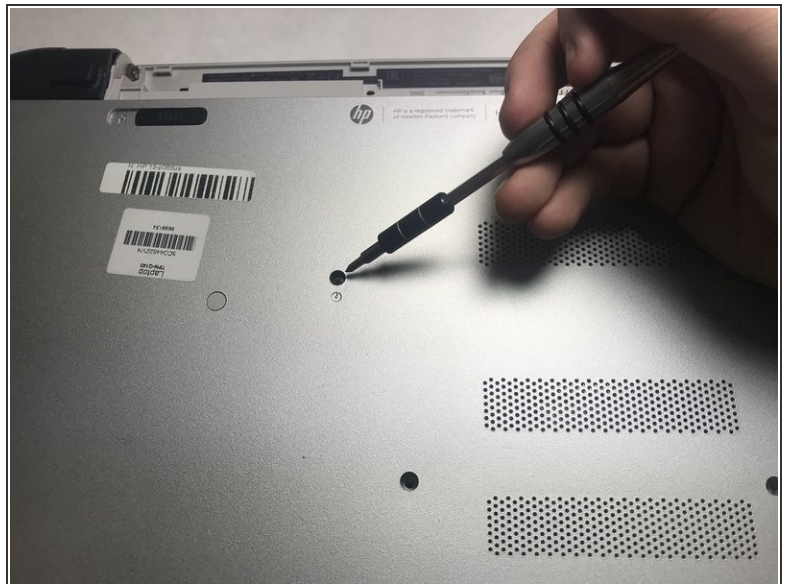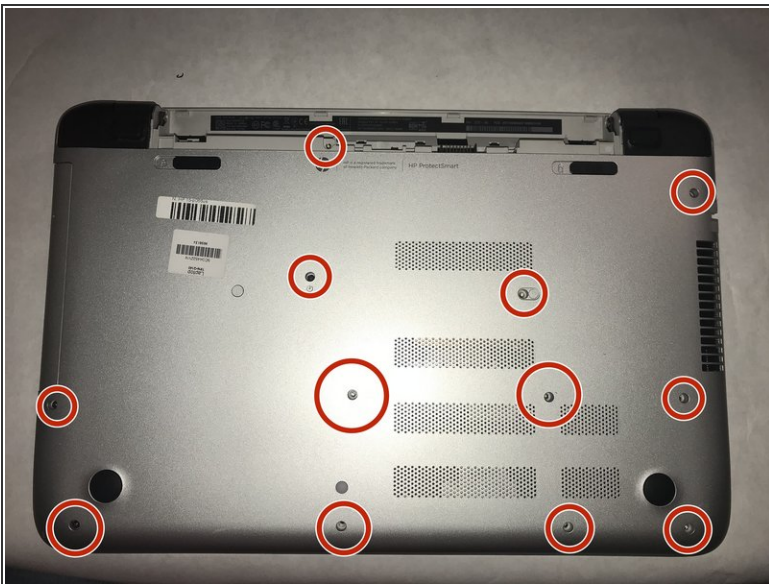


- Remove the twelve 6.4mm #JIS 0 screws from the back of the laptop.

Step 7

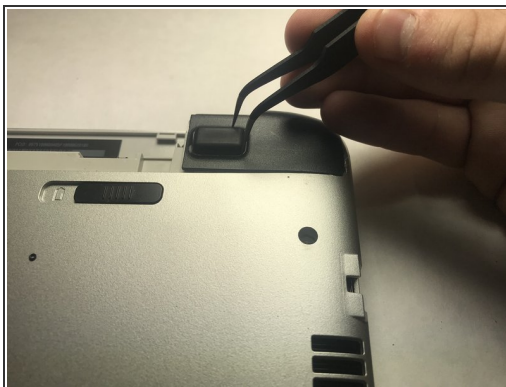


- Remove the bottom bumper pads and use tweezers to lift and remove the pad.
- Remove the 7.9mm JIS #0 screw.

Step 8

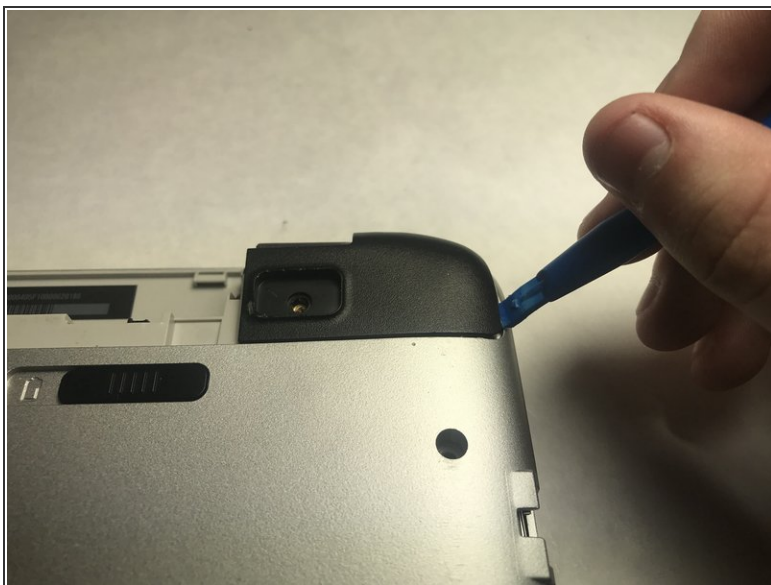


- Use the plastic opening tool to remove the black casing on both sides of the laptop.
- Remove the four 6.4mm JIS #0 screws.

Step 9

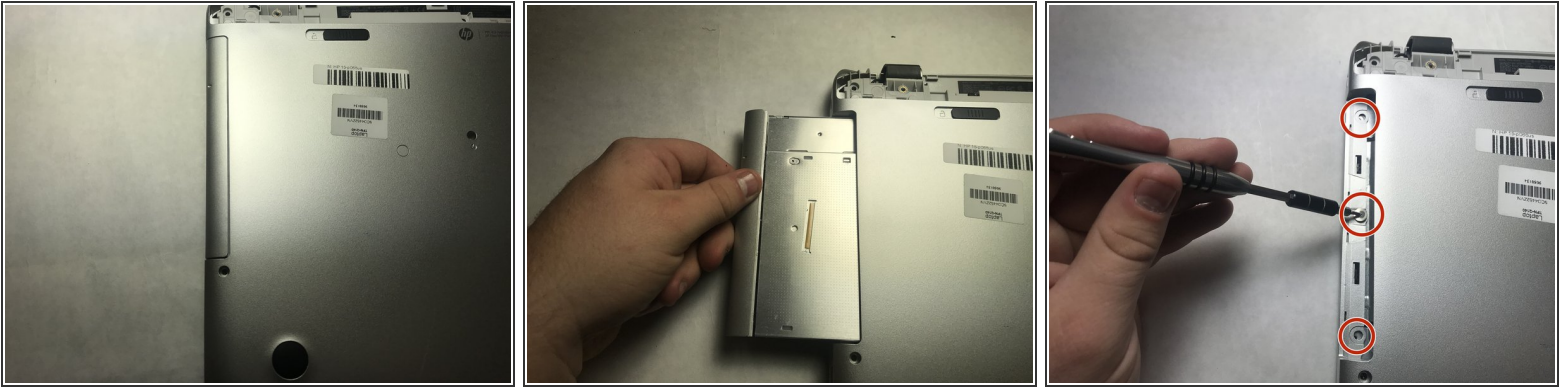


- Remove the CD player on the left side of the laptop.
- Gently pull the CD player out to access the screws that need to be removed.
- Remove the three 1.6mm JIS #000 screws under the CD player.

Step 10

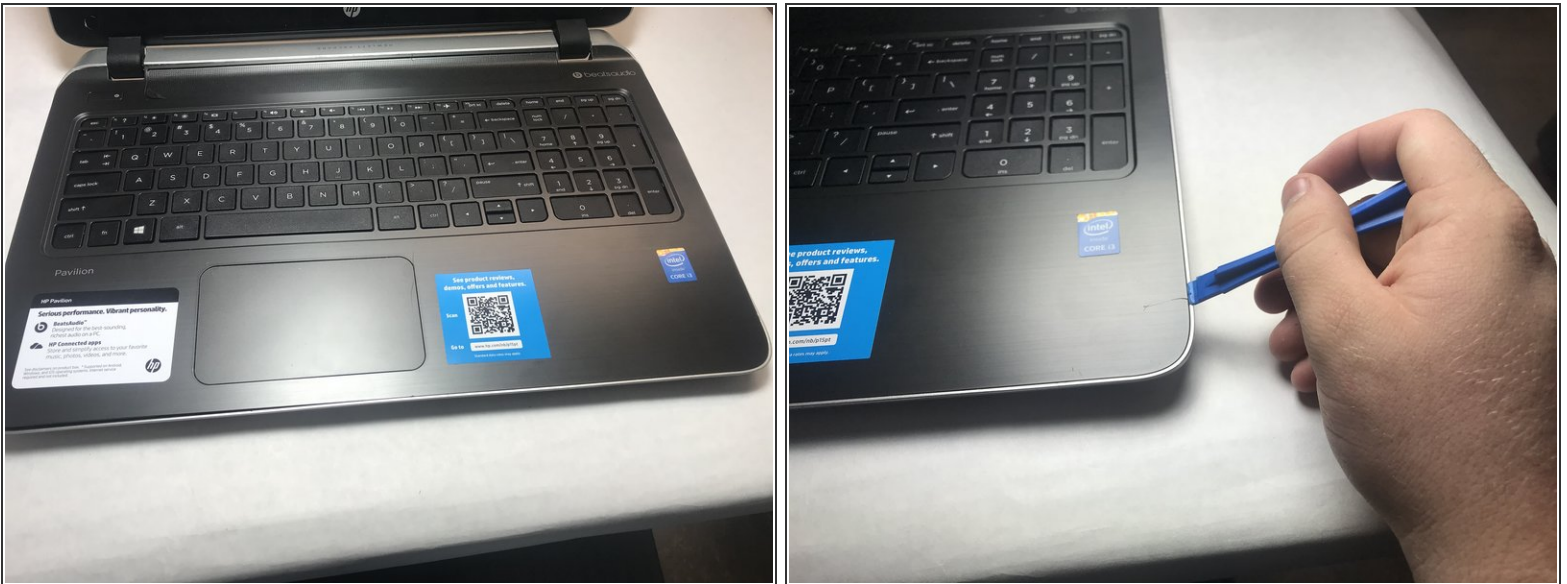



- Open the laptop so you can see the laptop keyboard.
- Use the plastic opening tools to remove the plastic casing as shown.

Step 11

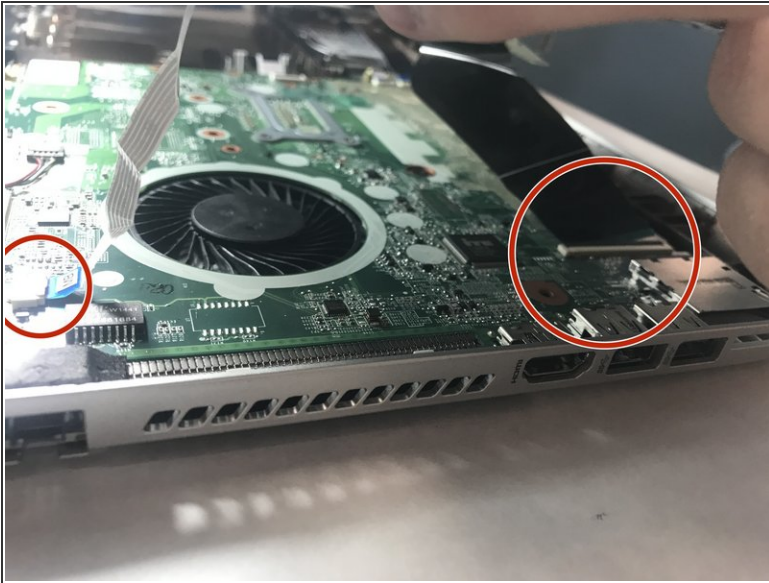

- Using the plastic tool gently raise up the plastic connectors that connect the ZIF connectors.
- The keyboard should come out as shown.

Step 12

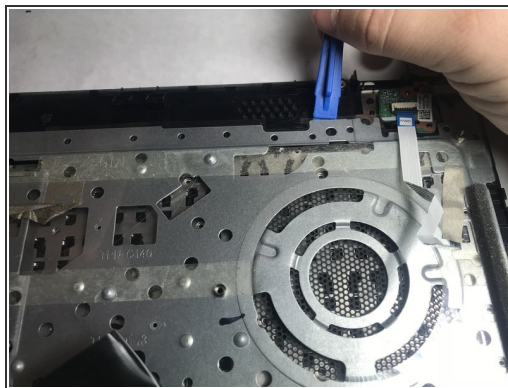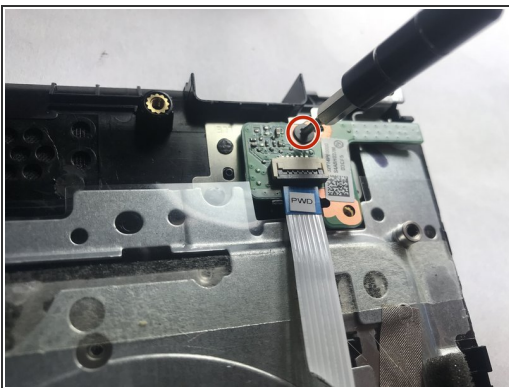


- Remove the single 1.6mm screw that is connected to the motherboard.
- Disconnect the ZIF connector with a plastic opening tool.
- Use the plastic opening tool to then pop the rivets out of the keyboard.

Step 13 — Screen



- Laptop should be open as shown in the photo.
- Remove the 1.6mm JIS #000 screws on the bottom on each side of the screen.

Step 14

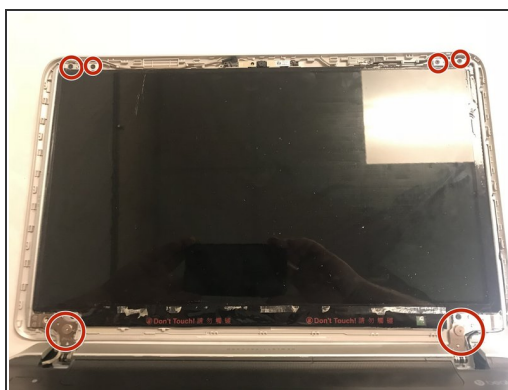

- Using the plastic opening tool. Pry up the plastic coating and remove the plastic black border.
- Remove the eight 1.6mm JIS #000 screws.

Step 15



- Once screws are removed, the screen will come out. Lay it on keyboard area, then there will be a cable attached to the screen that must be removed.
- Remove the cable by lifting up the clear tape and gently pulling away from you to remove the cable connector.
- The screen should now be completely removable.

To reassemble your device, follow these instructions in reverse order.