




HP Pavilion G60-120US Keyboard Replacement

How to replace the keyboard in an HP Pavilion G60-120US laptop.

Written By: Kristen Gismondi

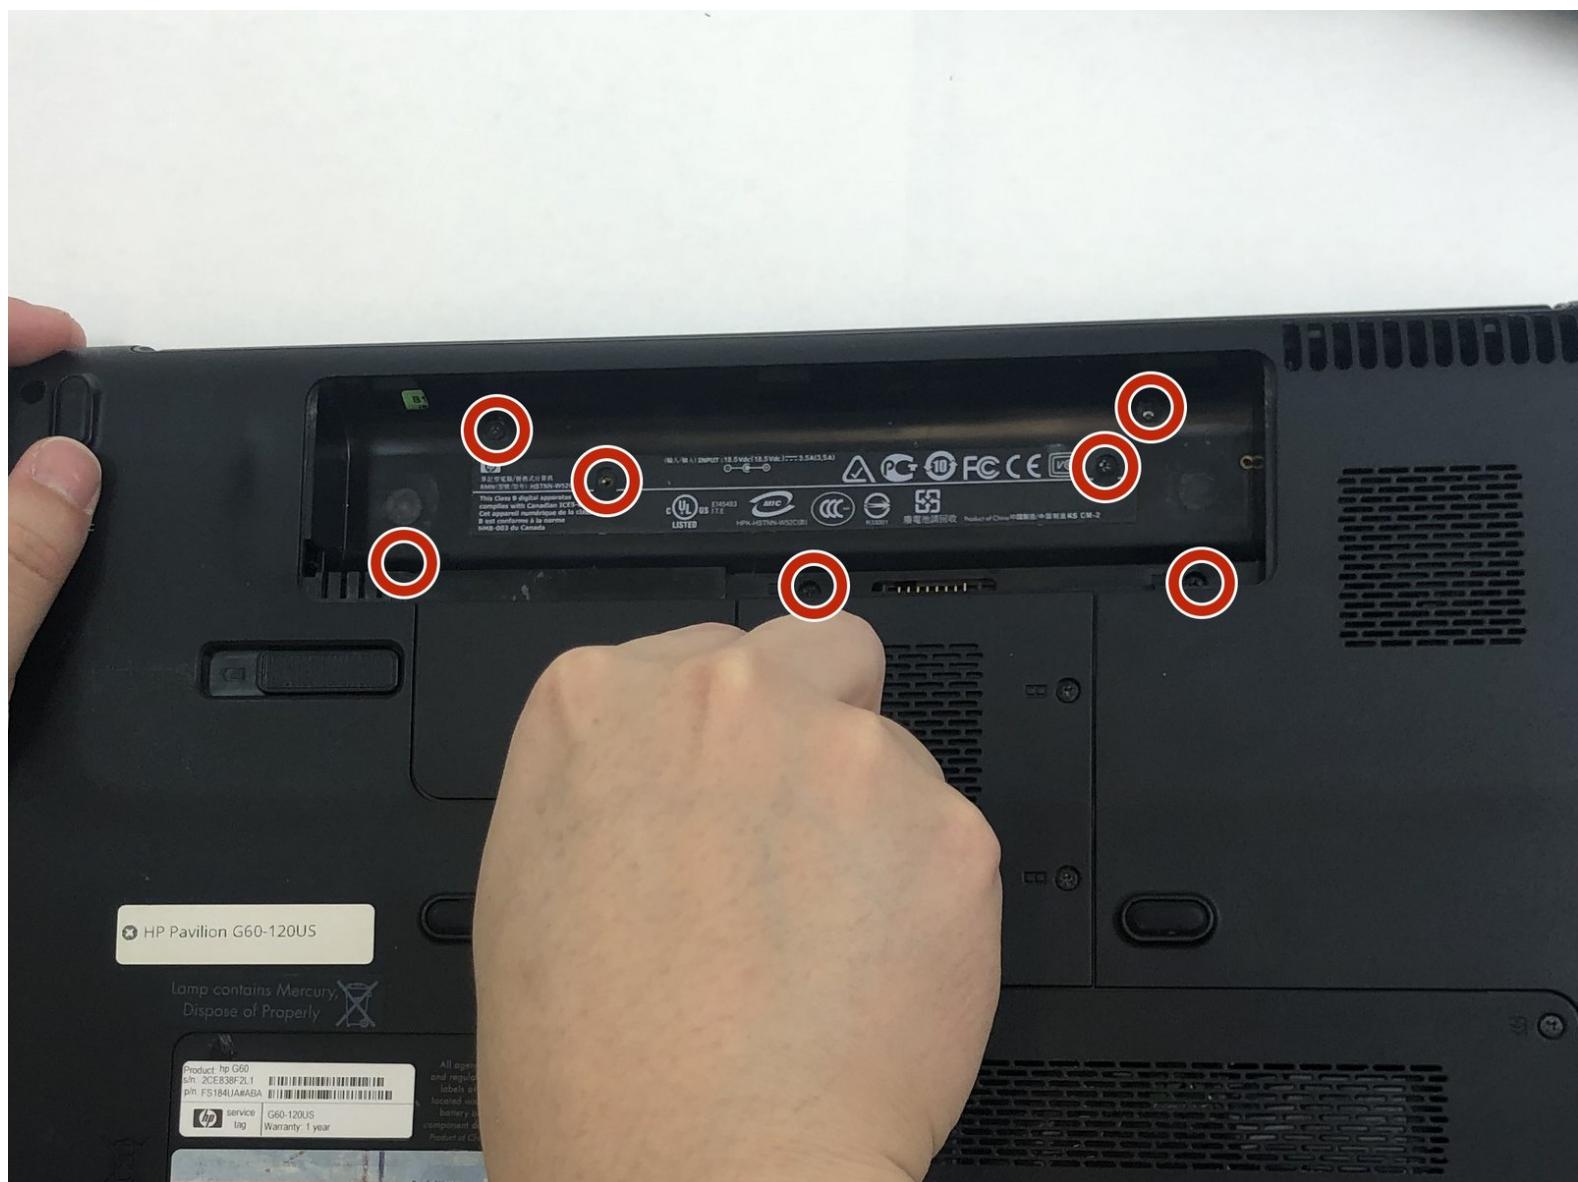

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



⚠ Make sure the laptop is turned off.

- Turn the laptop over to reveal the battery.

Step 2




- Slide and hold the battery release switch to the left to release the battery from the device.

Step 3



- While holding the battery release switch, grab the battery and pull it upward gently.

Step 4 — Keyboard

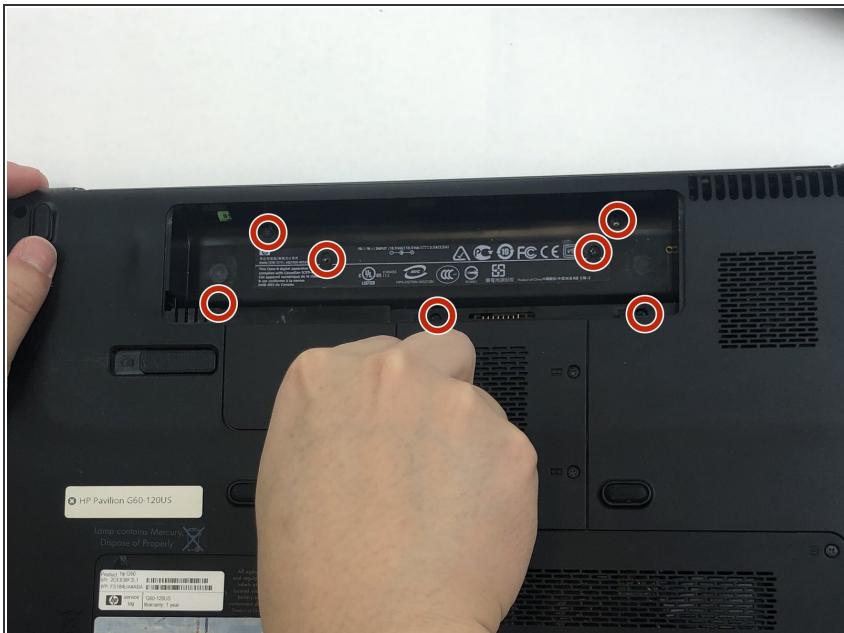


- Using the Phillips #0 screwdriver, remove the seven 4.0mm screws on the battery compartment of the laptop.

Step 5




- Using the Phillips #0 screwdriver, remove two 4.0mm screws from the hard disk cover.
- Remove the hard disk cover.

Step 6

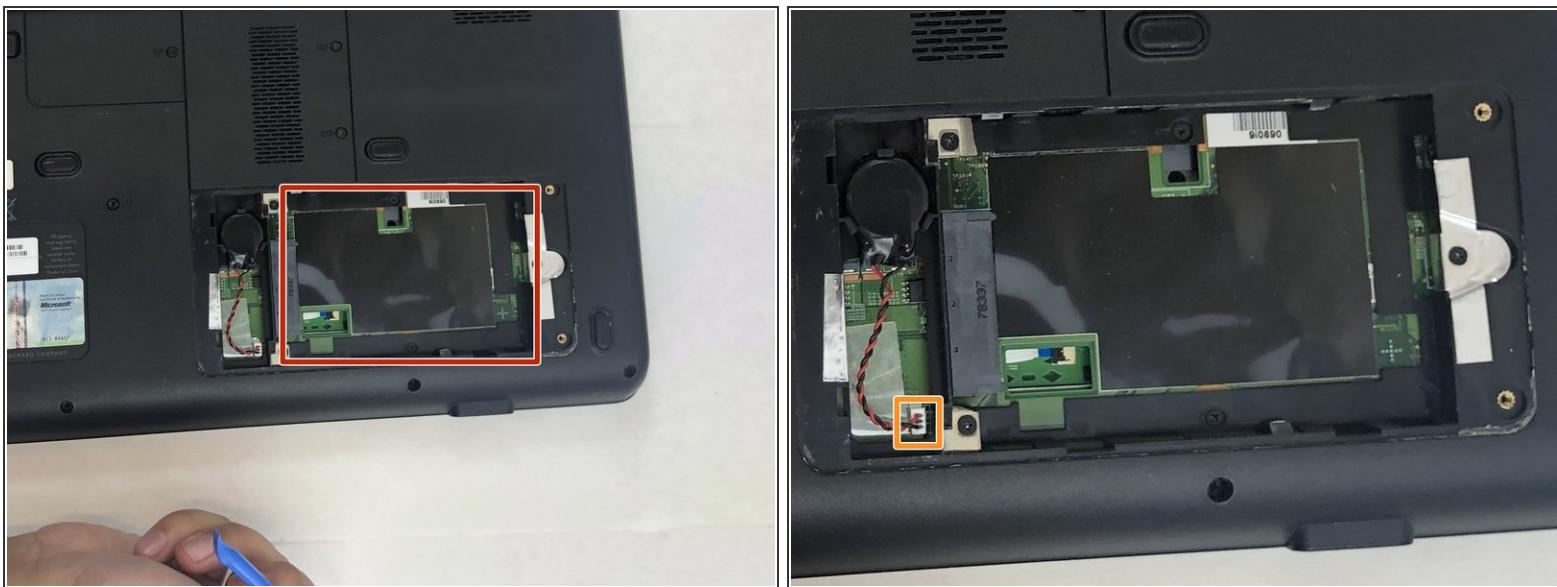

- Remove the hard drive by pulling gently and disconnecting the hard drive from the laptop.
- Gently pull on the black and red wiring on the bottom left to separate the wire from the component.

Step 7

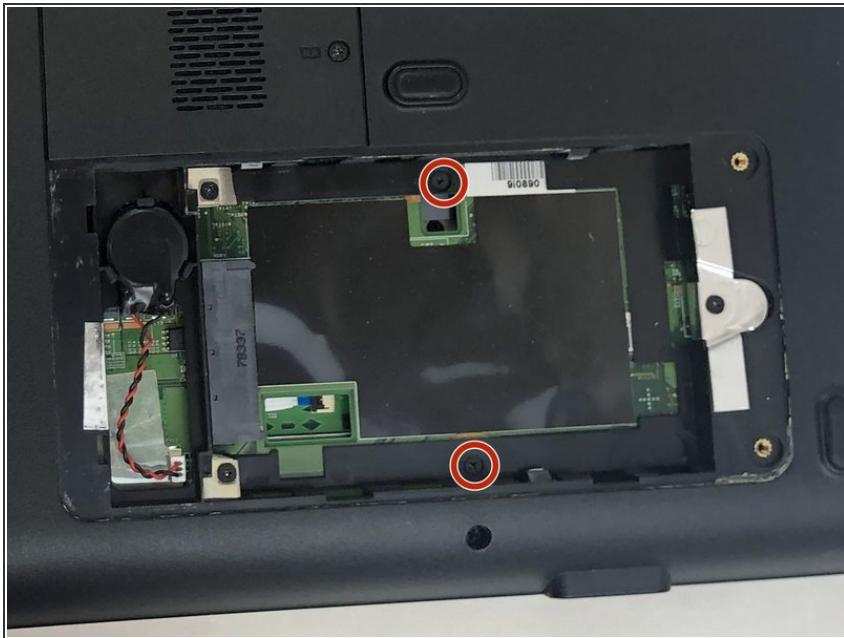


- Remove the two 4.0 mm Phillips #0 screws from the hard disk compartment.

Step 8



- Using the Phillips #0 screwdriver, remove the two 4.0 mm screws from the memory card cover.
- Remove the memory disk cover.

Step 9

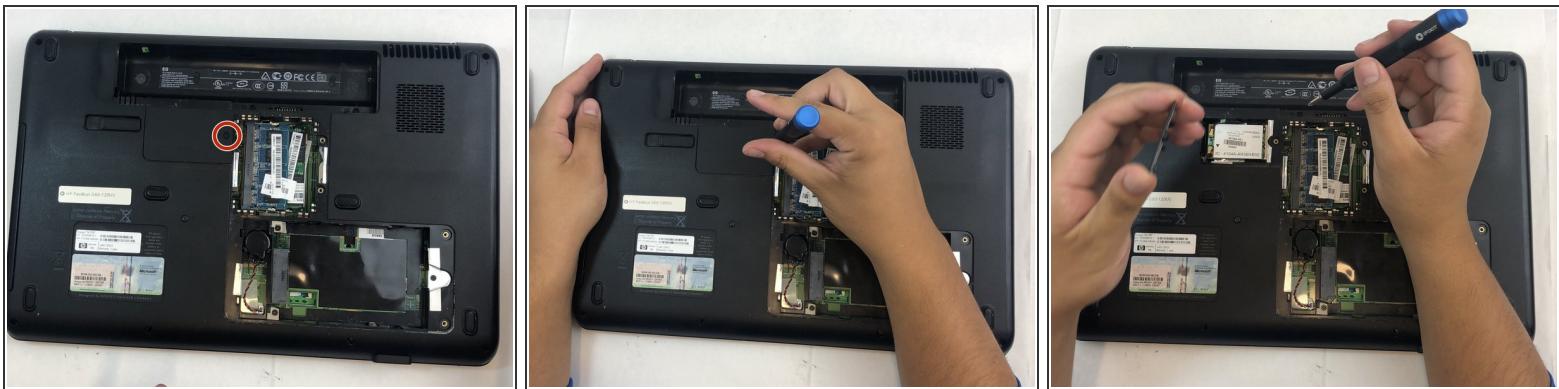

- Using the Phillips #0 screwdriver, remove the 4.0 mm screw from the Wi-Fi chip cover.
- Remove the Wi-Fi chip cover.

Step 10



- Using the Phillips #0 screwdriver, remove the two 3.0 mm screws securing the Wi-Fi chip in place.
- Grab the Wi-Fi chip and pull up gently to the left to disconnect it from the laptop.

Step 11



- Disconnect the two wires connecting the chip's base.
- Remove the Wi-Fi chip.

Step 12



- Using the Phillips #0 screwdriver, remove the seven 4.0 mm screws on the bottom of the laptop.

Step 13



- Turn the laptop back to its upright state.
- Insert an opening tool into the upper right corner of the keyboard and gently lift it to separate it from the laptop.

! Be sure not to apply excessive pressure to prevent the bending and breaking of the keyboard.

! Do not pull the keyboard all the way out because there is a wiring connection under the keyboard.

Step 14



- Grab the wiring and gently pull it out to disconnect it from the laptop.
- ! Don't use excessive force.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-01-27 09:36:20 PM (MST).

