




HP Spectre x360 13t-4000 Speakers Replacement

This guide will instruct you on replacing the speakers in your HP Spectre x360 13t-4000.

Written By: Michael Bisbano

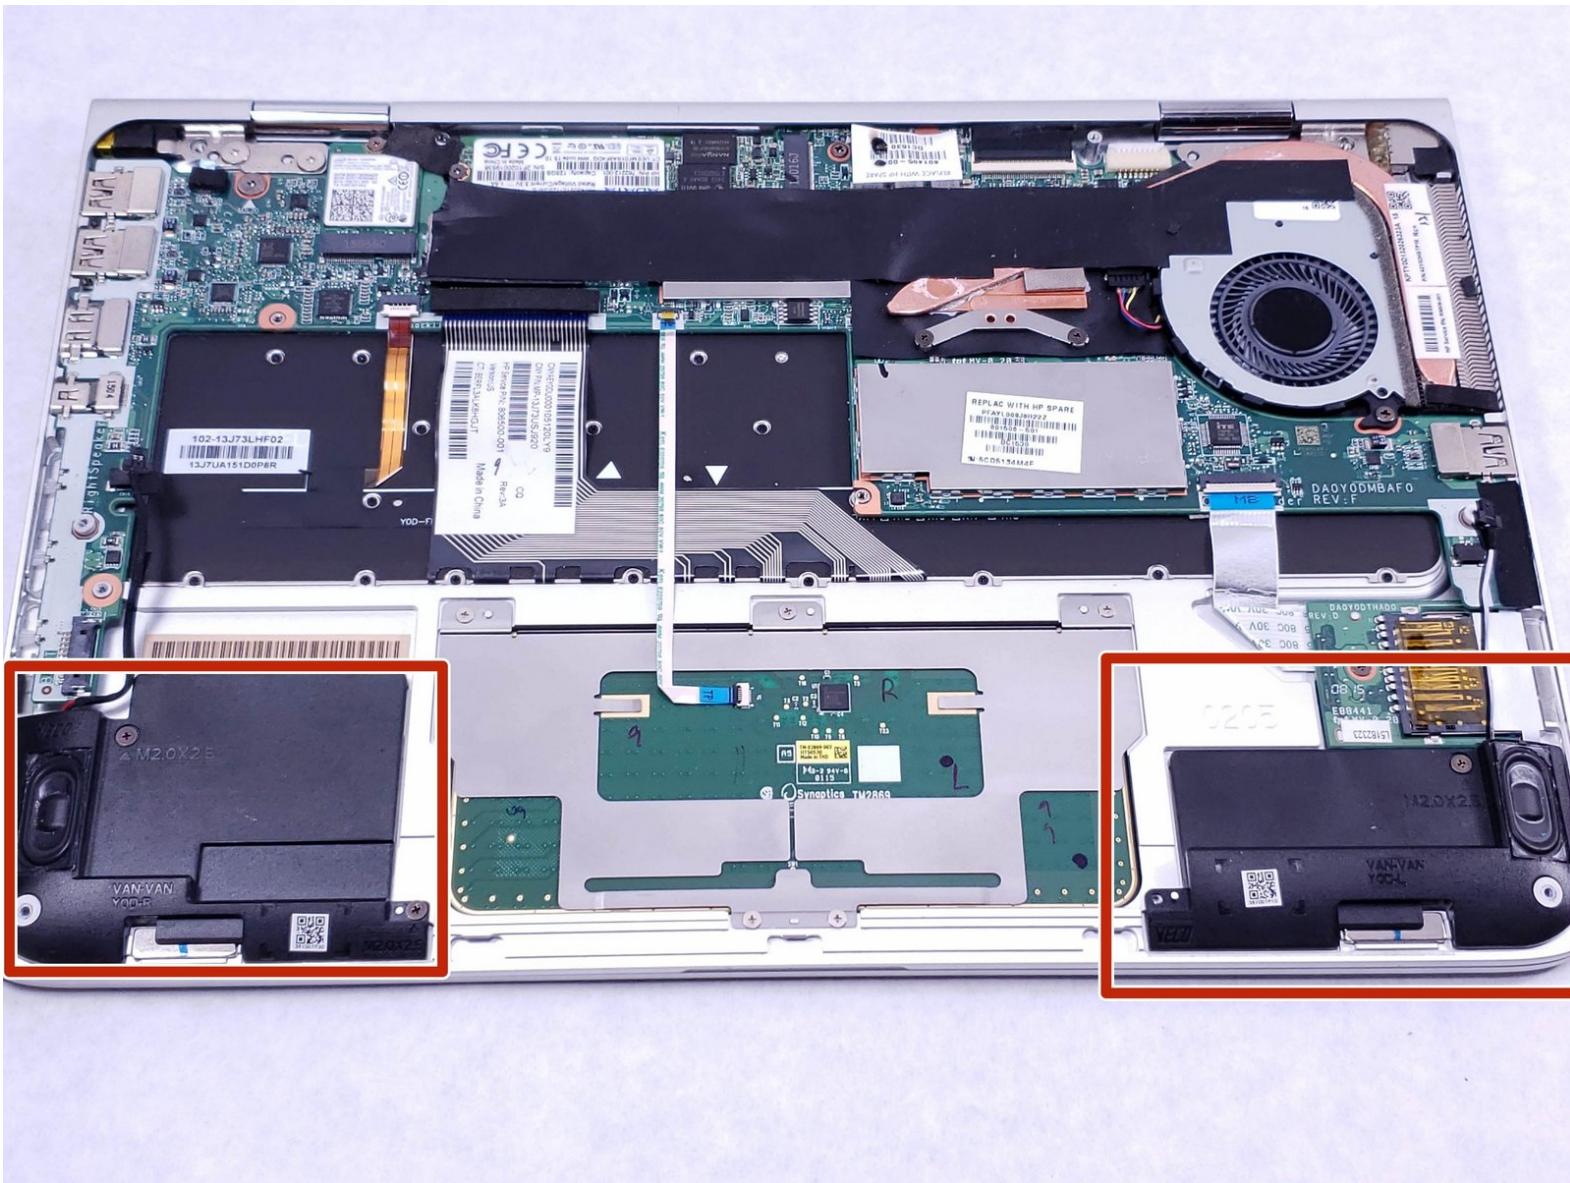

INTRODUCTION

This guide will instruct you on how to remove and replace the speakers. Replacement of the speakers may be necessary if the speakers are not outputting any sound or outputting a distorted sound.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Backplate



- Turn off and unplug the laptop.
- Flip over the laptop so that the bottom backplate is exposed.

Step 2



- With a hex T5 screwdriver remove the six 3mm screws holding the backplate.
- Using the same screwdriver, remove the two 7mm screws.
- With all the screws removed, use a plastic opening tool to lift off the backplate.


Step 3 — Battery



- With the backplate removed, remove the four 3 mm screws securing the battery with a Phillips #1 screwdriver.
- With the screws removed, disconnect the 3 wires connected to the battery.


i Tweezers may be needed to remove the wires.

Step 4 — Speakers

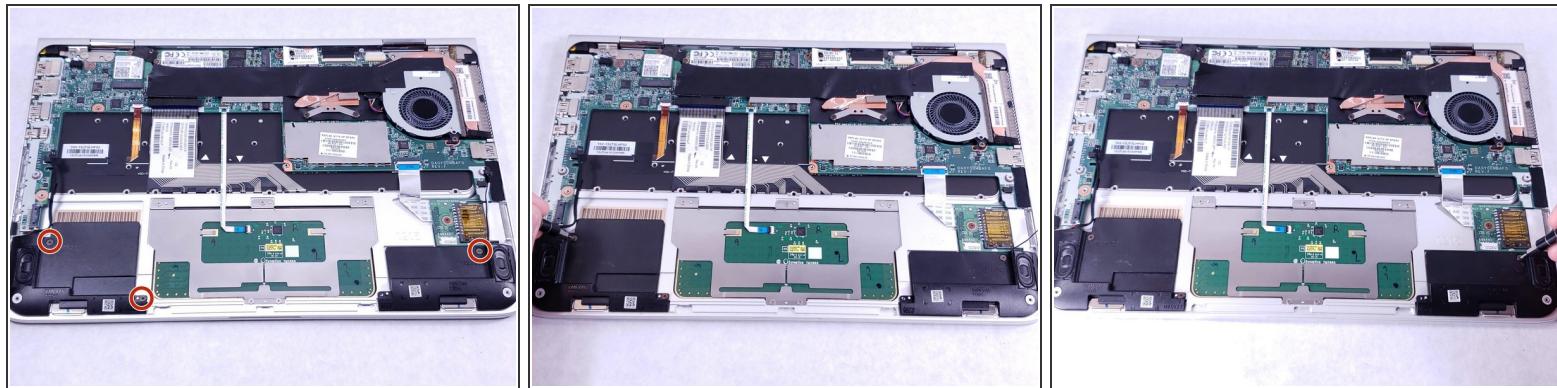

- With the backplate and battery removed from the device, remove the three 2mm screws using the Phillips #0 screwdriver.

Step 5

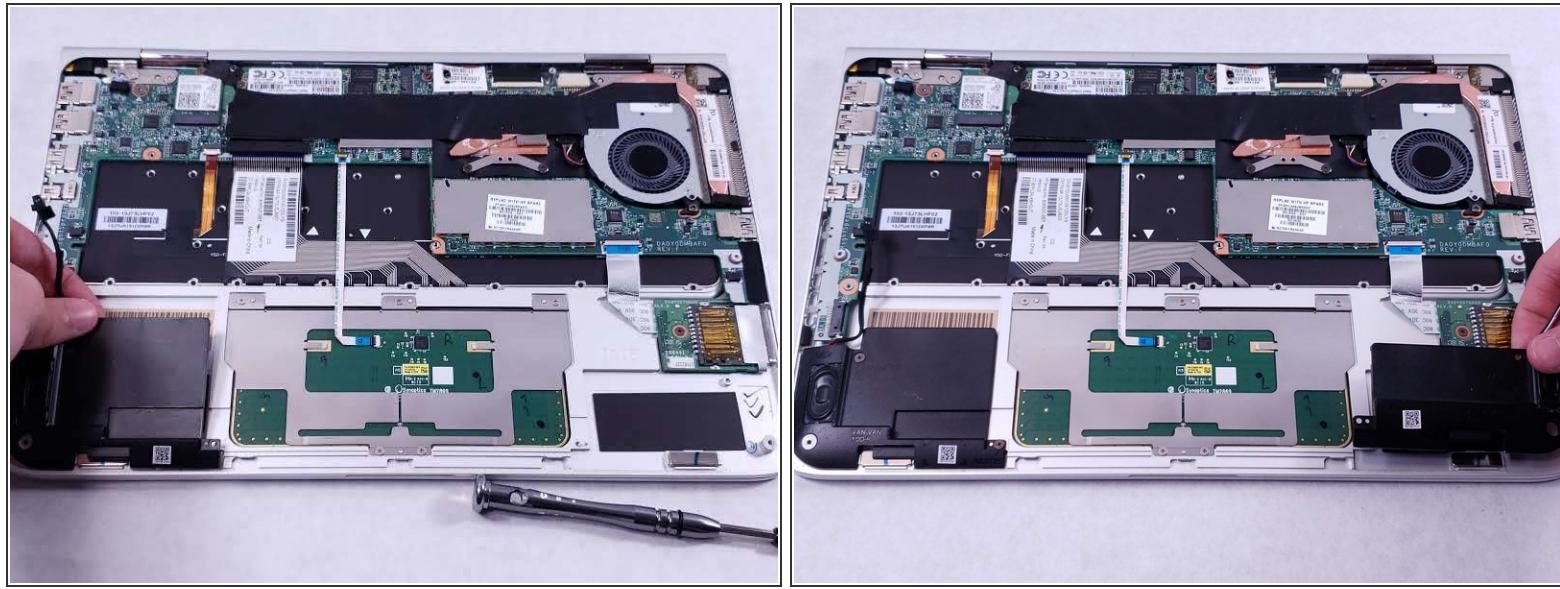

- With all three screws removed, remove the speaker assembly from the device.

To reassemble your device, follow these instructions in reverse order.