




HP Stream 13-c110nr Battery Assembly Replacement

This guide will present disassembly instructions to the reader for the battery assembly in the HP Stream 13-c110nr.

Written By: Stacey Deel

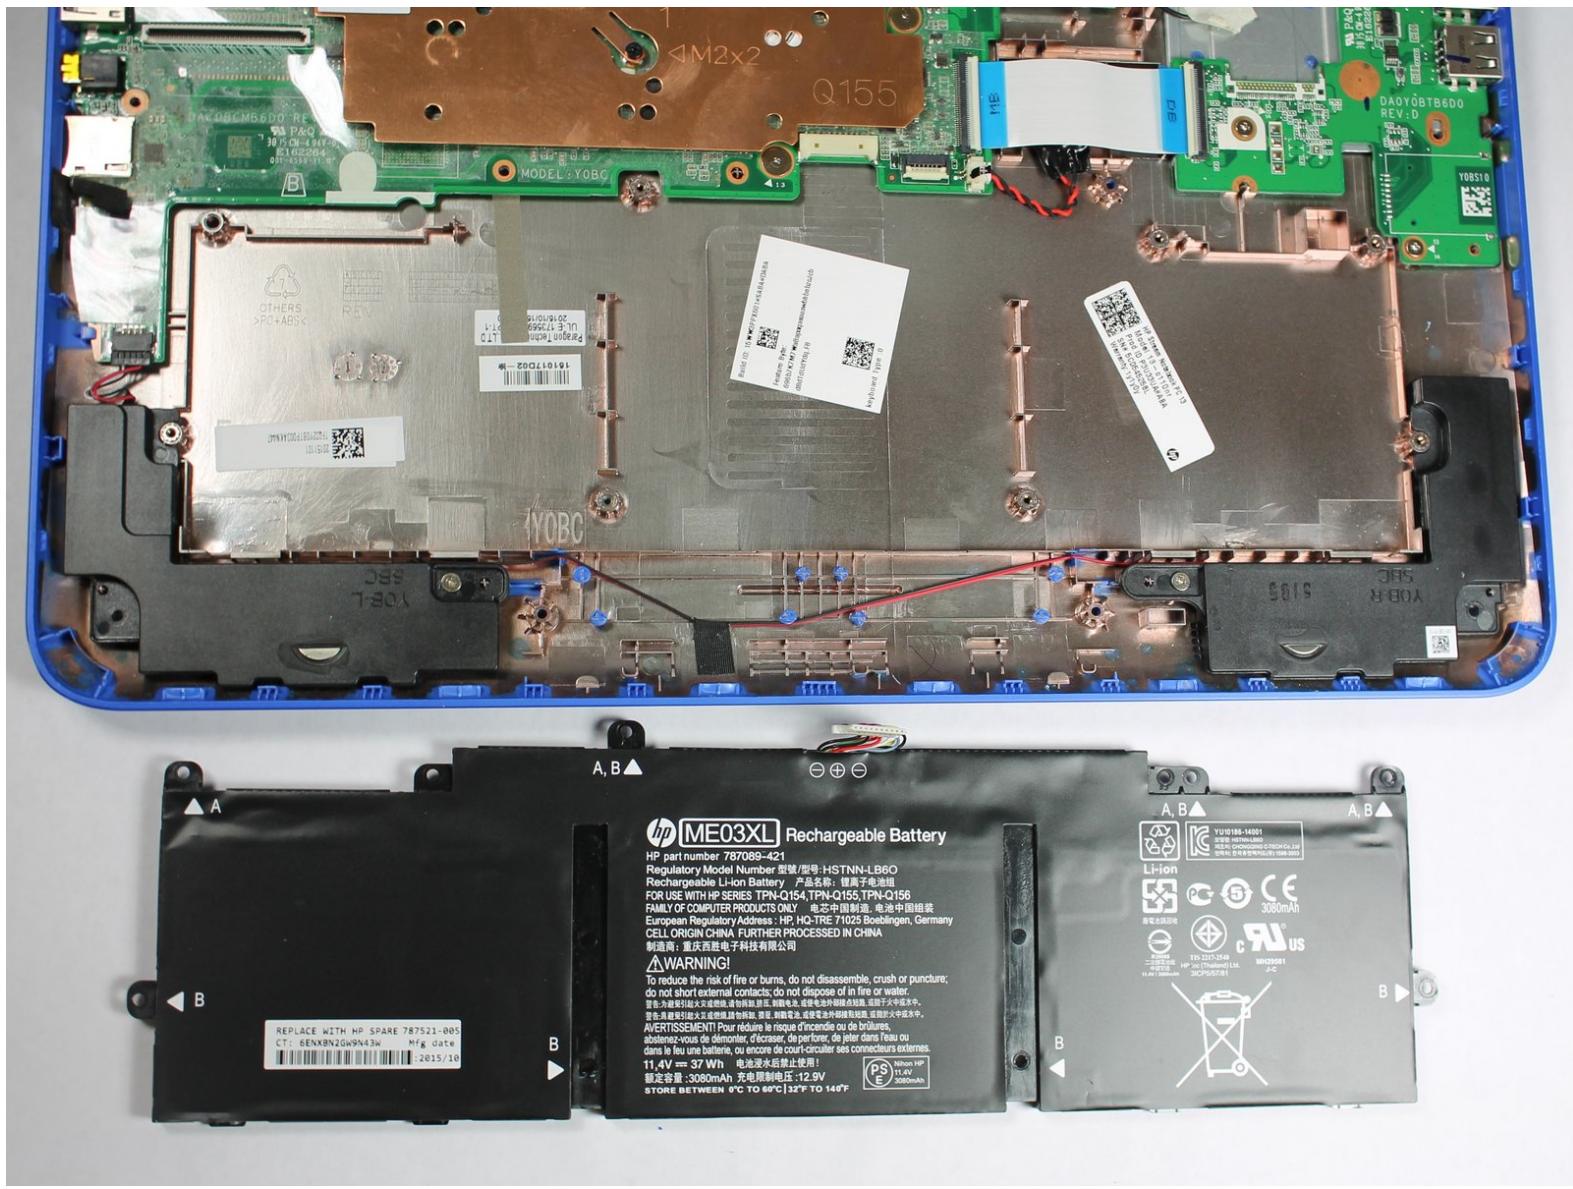

This document was generated on 2020-01-30 08:56:40 PM (MST).

INTRODUCTION

The Battery Assembly repair guide will assist the user in the removal and installation procedures within the HP Stream 13-c110nr.

TOOLS:

- Phillips #0 Screwdriver (1)
- Spudger (1)
- Pick Tool (1)
- Magnetic Project Mat (1)

PARTS:

- [HP ME03XL Replacement Laptop Battery \(1\)](#)

Step 1 — Top Cover/Keyboard



- Close the device.
- Remove AC adapter plug from electrical outlet.
- Remove AC adapter from device.
- Turn the device off.
- Unplug all external devices from device.


i If you are unsure whether the computer is off or in hibernation mode, start the computer and then shutdown the operating system.

Step 2



- Turn the device upside down with the back facing towards you.

Step 3

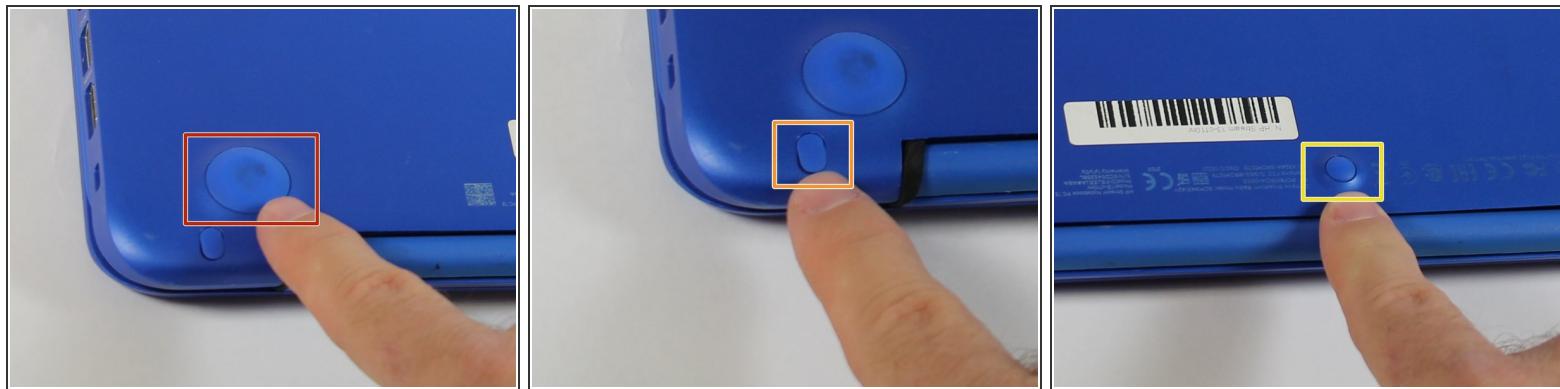

- Use a pick to remove the two (2) large computer feet along the back edge of the device.
- Use a pick to remove the two (2) small computer feet.
- Use a pick to remove the one (1) screw cover.
- Place rubber computer feet in safe place for reassembly.

Step 4



- Remove the thirteen (13) Phillips P0 PM2.5x6.0 mm screws.
- Place the thirteen (13) screws on magnetic mat for reassembly.

Step 5



- Turn the device over with the front facing towards you.
- Open the device as shown.


Step 6



- Insert the Spudger between the Top Cover and Bottom Cover to lift the front edge until it separates from the Bottom Cover.



(i) Do not completely remove the Keyboard/Top cover from the Bottom cover yet.

Step 7

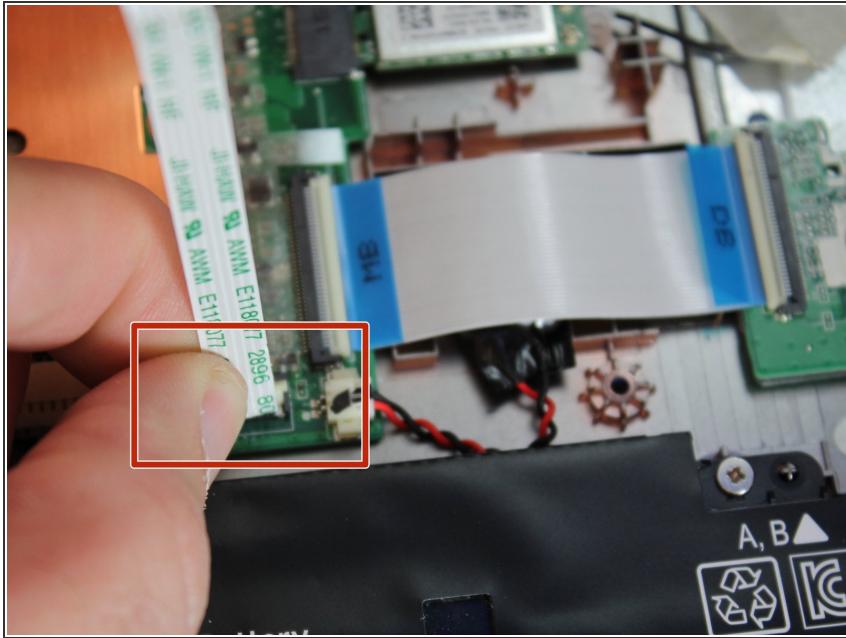



- Disconnect the Touchpad cable.

Step 8

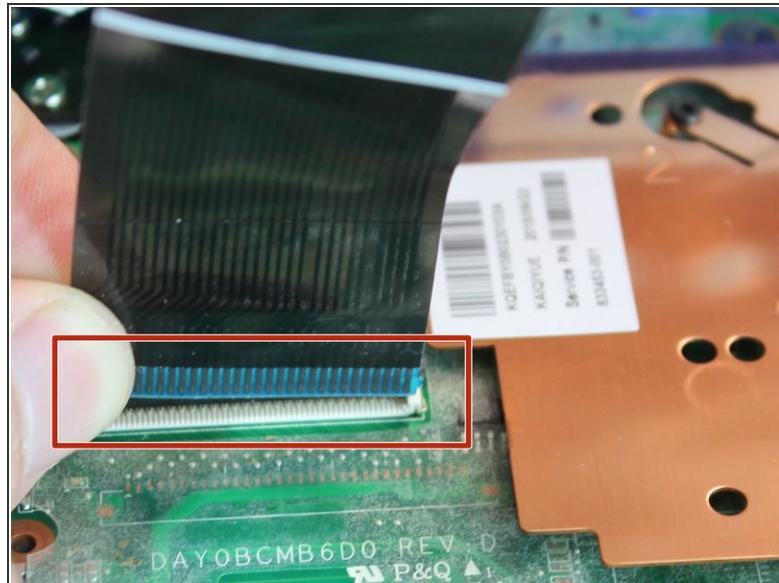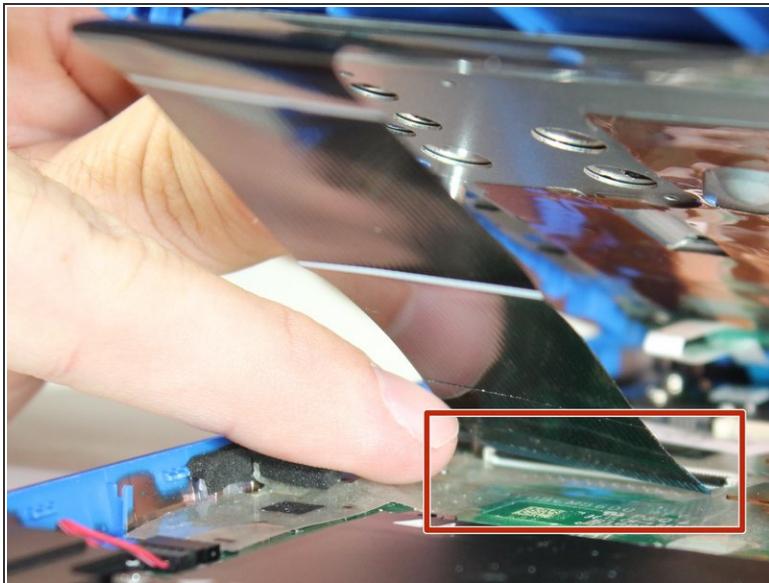


- Disconnect the Keyboard Cable.

Step 9

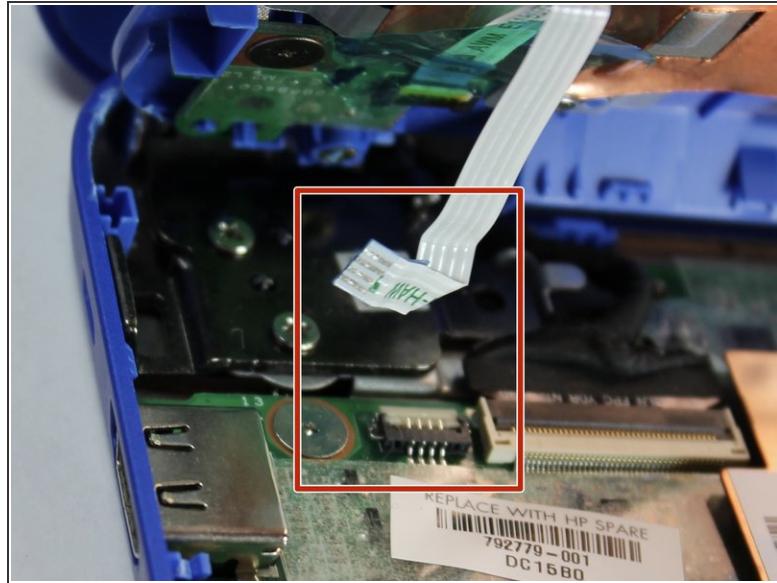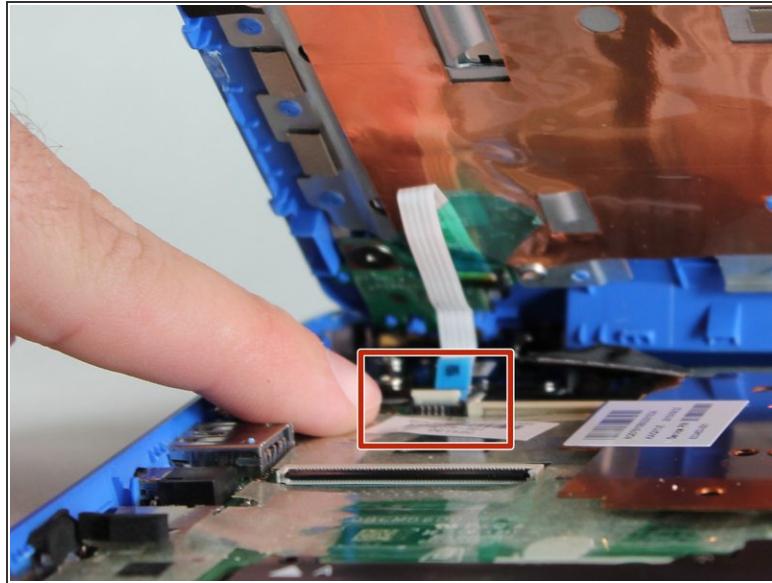


- Disconnect the Power connector cable.

Step 10

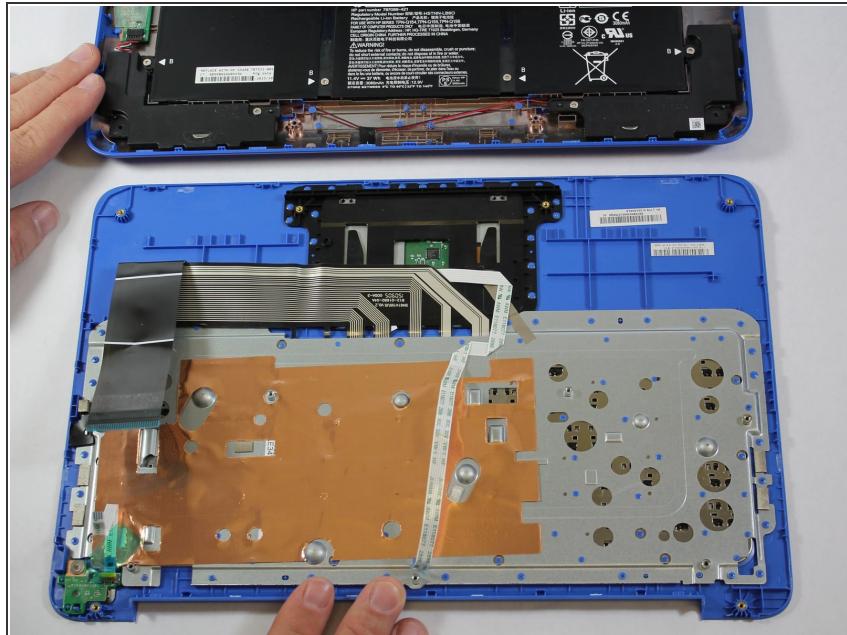



- Remove the Keyboard/Top Cover from the device.

Step 11 — Battery Assembly

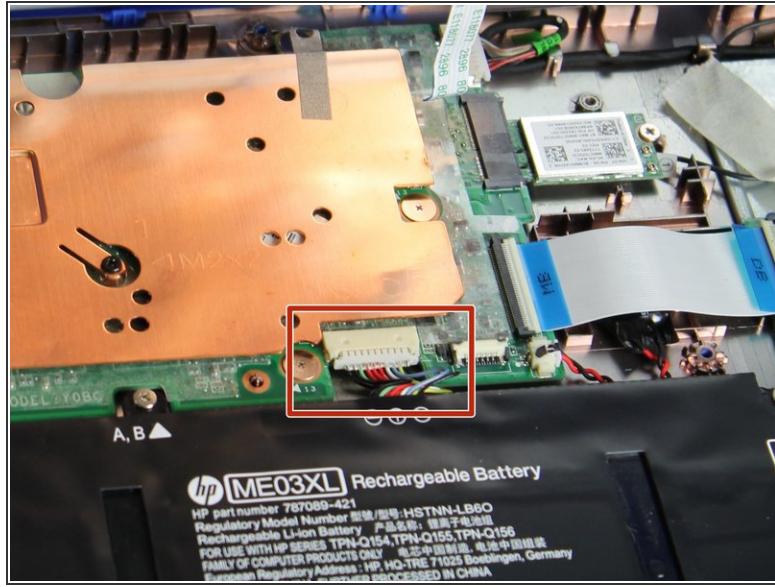


- Use a pick to detach the Battery assembly cable.

Step 12

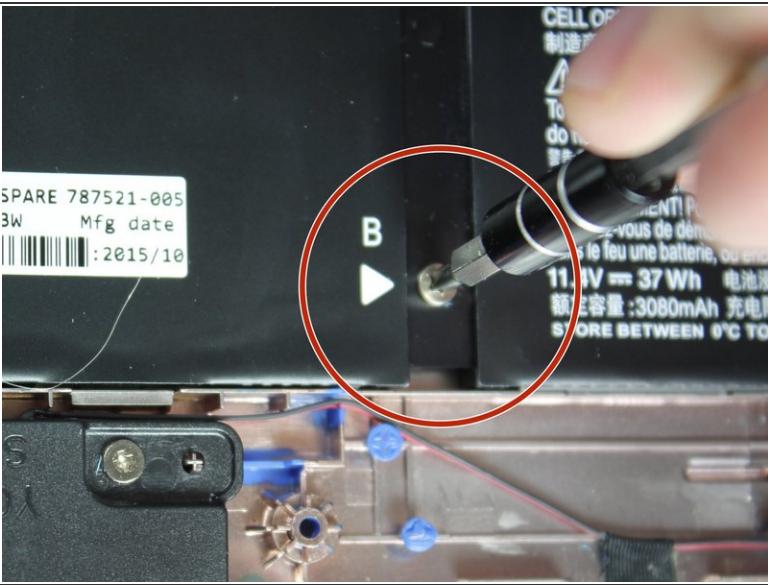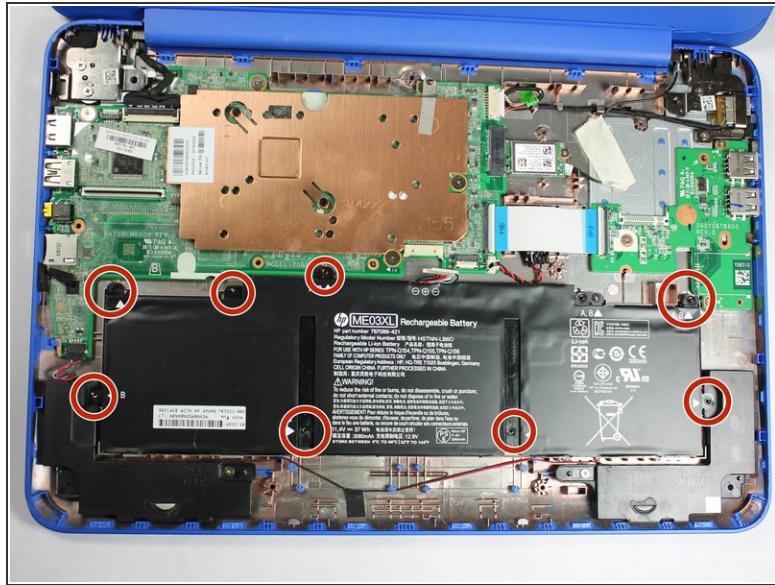

- Remove eight (8) Phillips P0 PM2.0x3.0 mm screws from Battery assembly.
- Place eight (8) screws on magnetic mat for reassembly.

Step 13

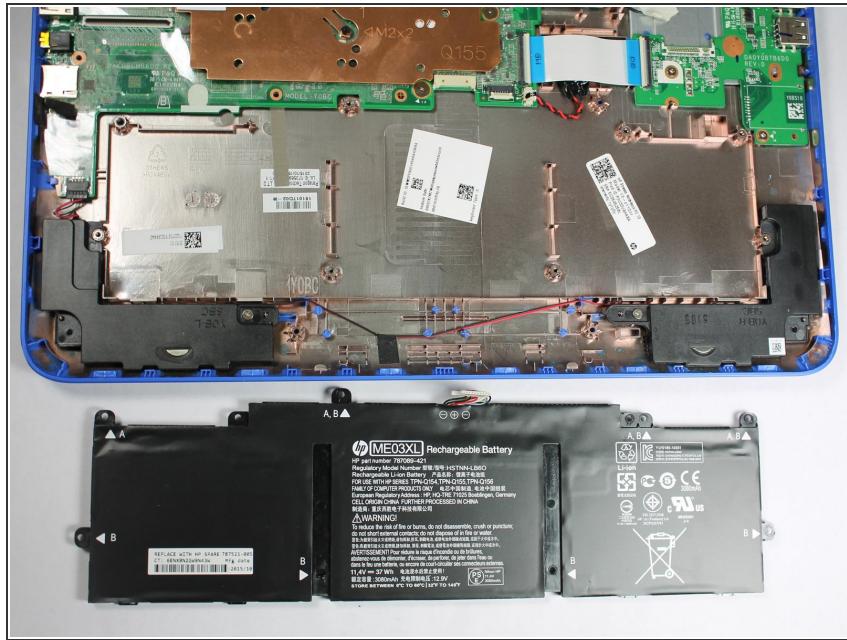

- Remove Battery Assembly from device.

To reassemble your device, follow these instructions in reverse order.