




HTC HD2 Camera Replacement

This guide will help you get to the camera of the HTC HD2 to perform possible repairs or replacements.

Written By: Sam Luedloff

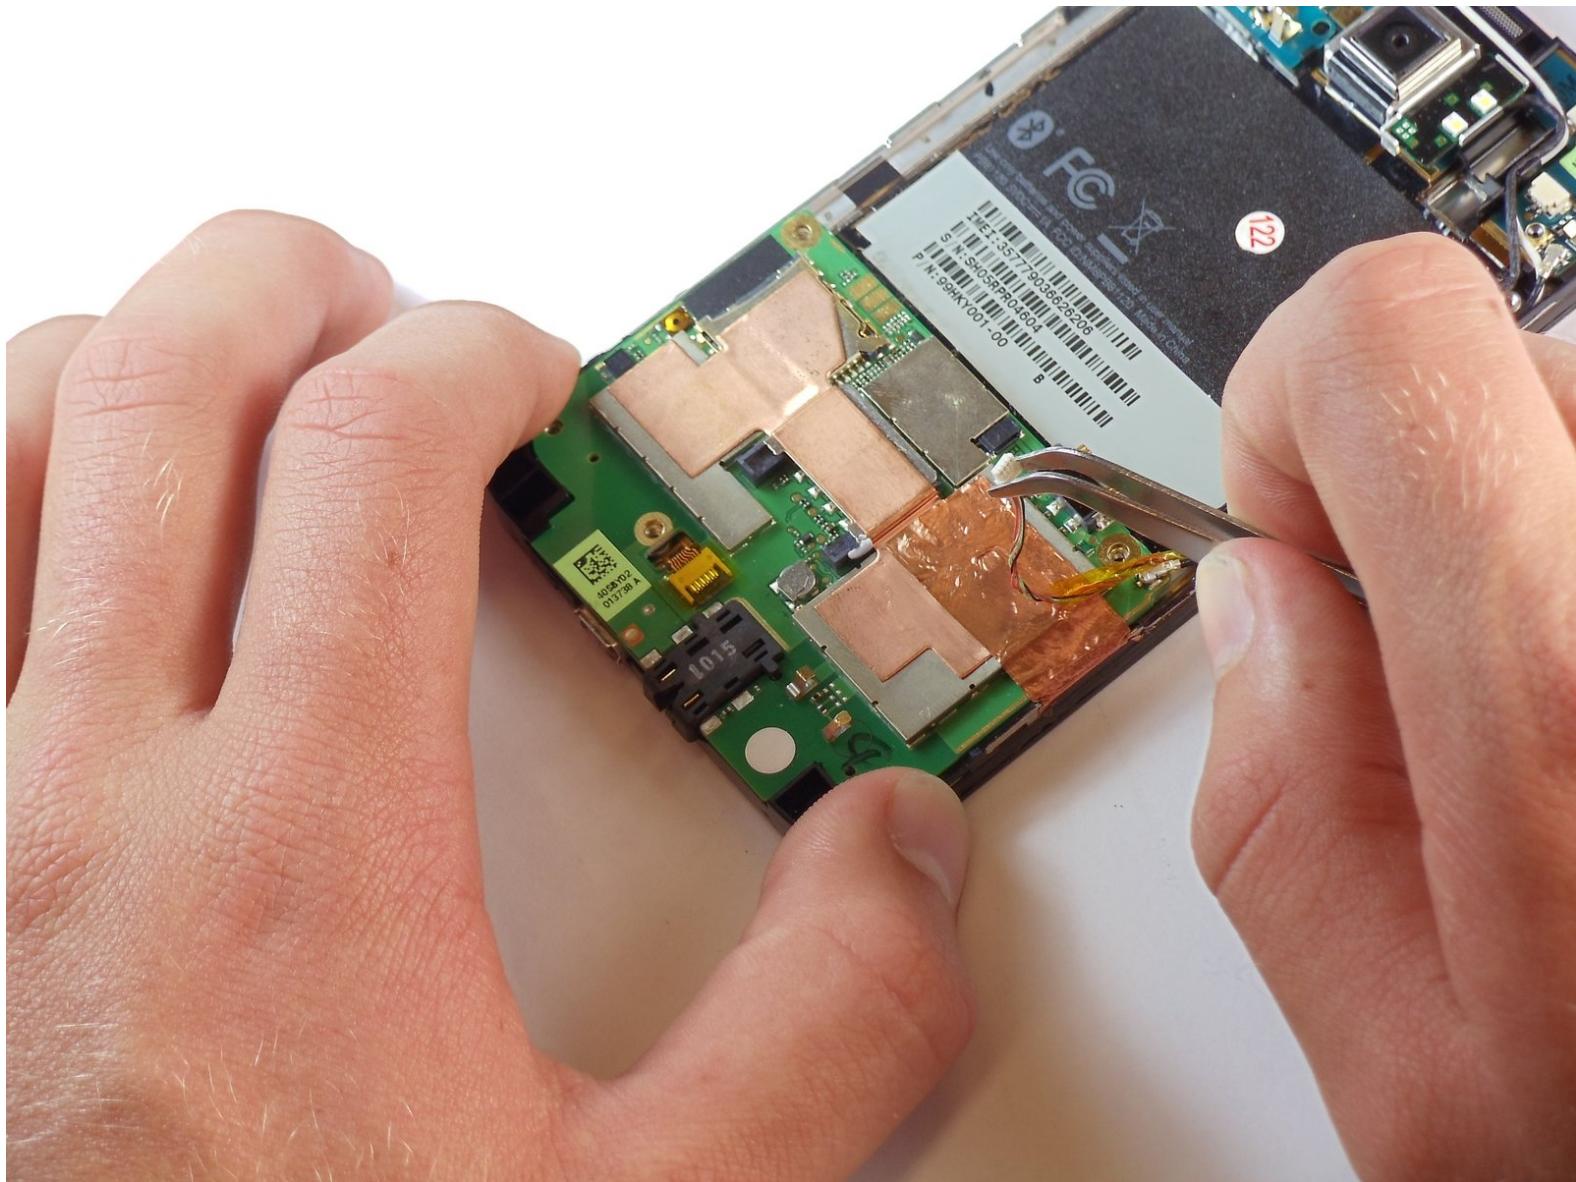

INTRODUCTION

This guide is one of the longer processes, second only to the Logic Board, or the screen. Have a reasonably long time set aside to complete this guide.

TOOLS:

- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

Step 2




- Lay the phone down on its screen.
- Lift up on the lip and pull the battery from the phone.

Step 3 — Midframe

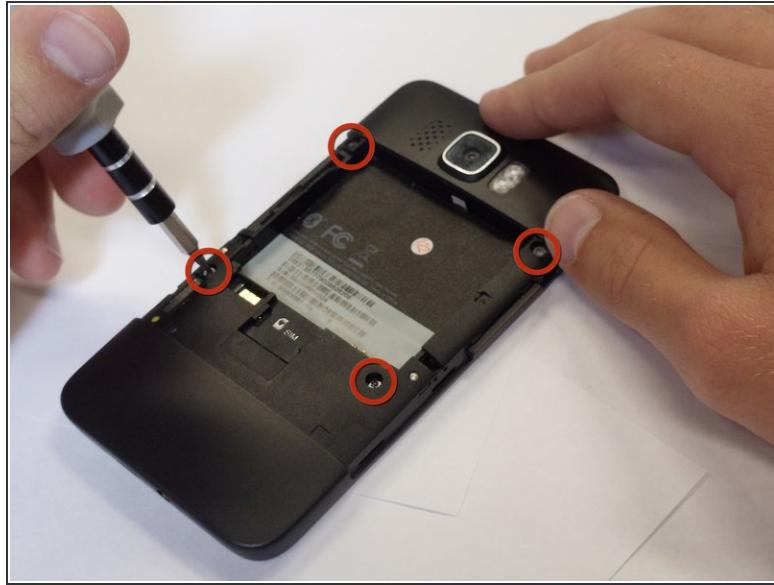

- Remove the four black 3.5mm T5 screws from the back of the phone.


Step 4

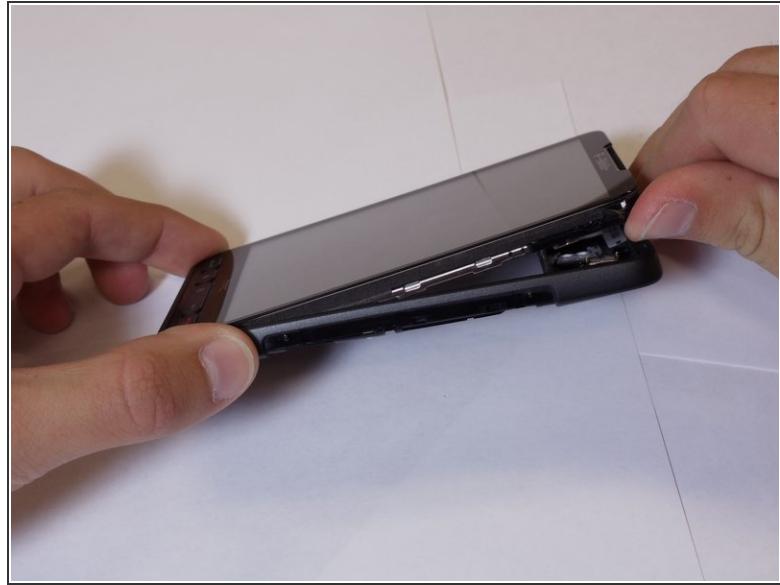

- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
 - *(i)* This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.


(i) The volume control tab may fall off during removal. It can be easily reattached.

Step 5 — Camera

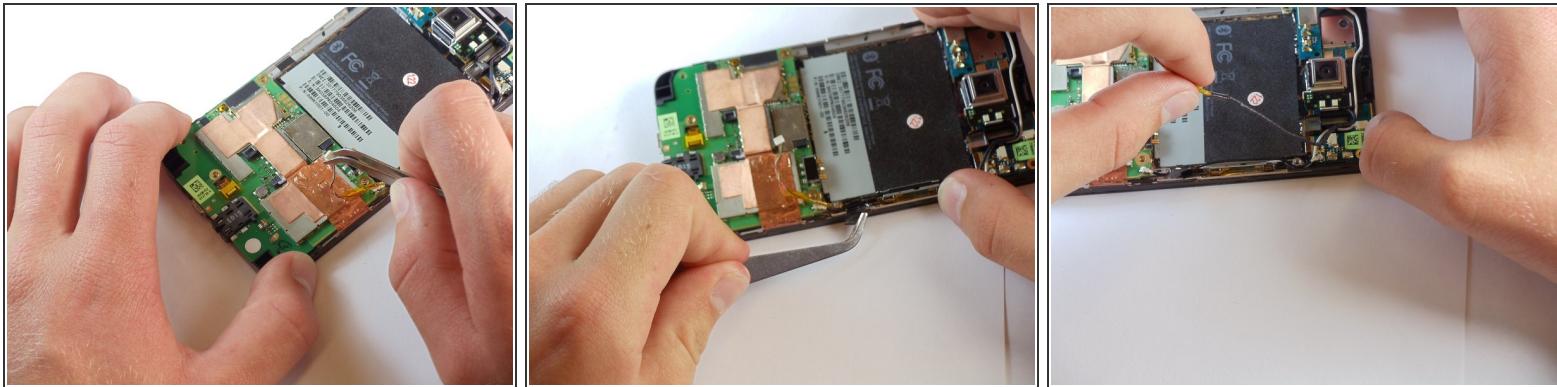

- Disconnect the flash cable from its socket in the bottom of the motherboard.
- Carefully pull the cable from its groove in the frame, working your way back to the camera.


Step 6

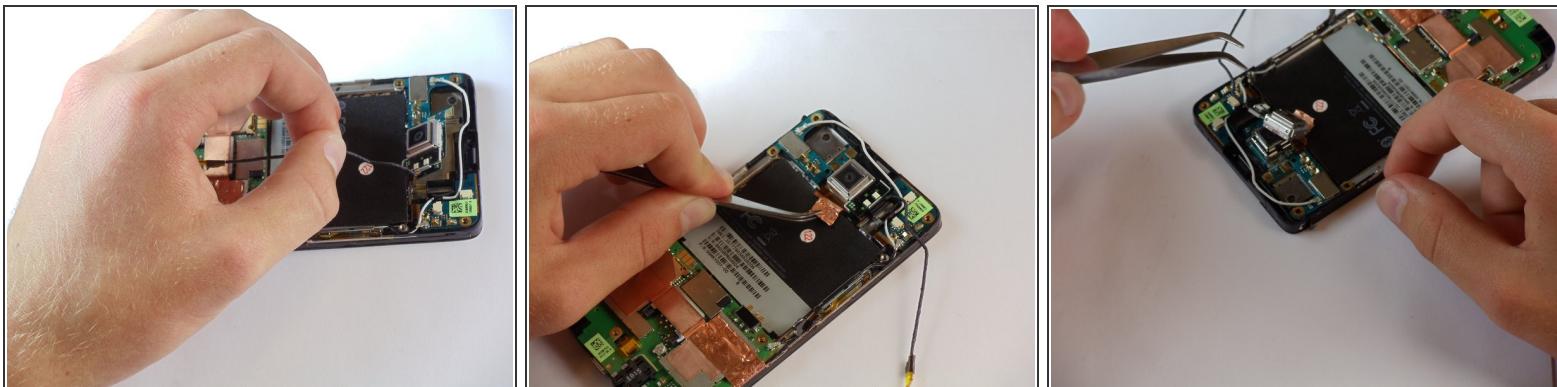

- Pull the camera flash and cover off of the board.
- You may need to peel back the sticker that sits behind the battery.

⚠ Work carefully. Excessive force can damage the camera or motherboard.

Step 7

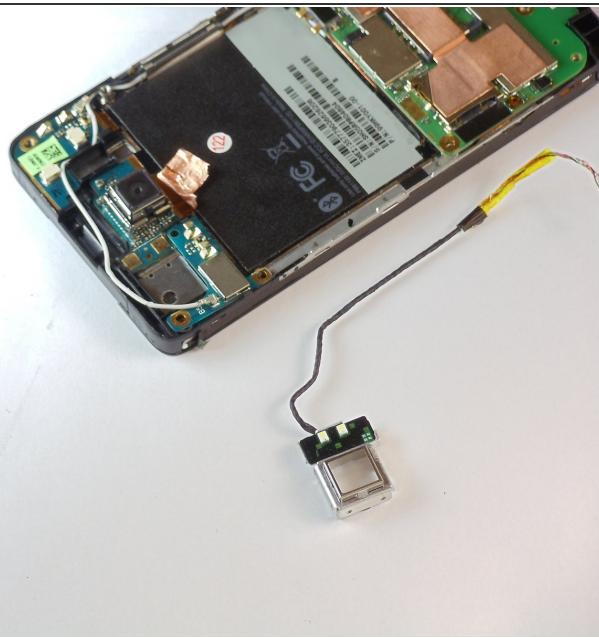

- Around the camera is a thin shielding. Remove it with tweezers.
- Using tweezers, remove the primary camera.

To reassemble your device, follow these instructions in reverse order.