




HTC HD2 Earpiece Speaker Replacement

Replace the earpiece speaker in your HTC HD2.

Written By: Nathan Puchalski

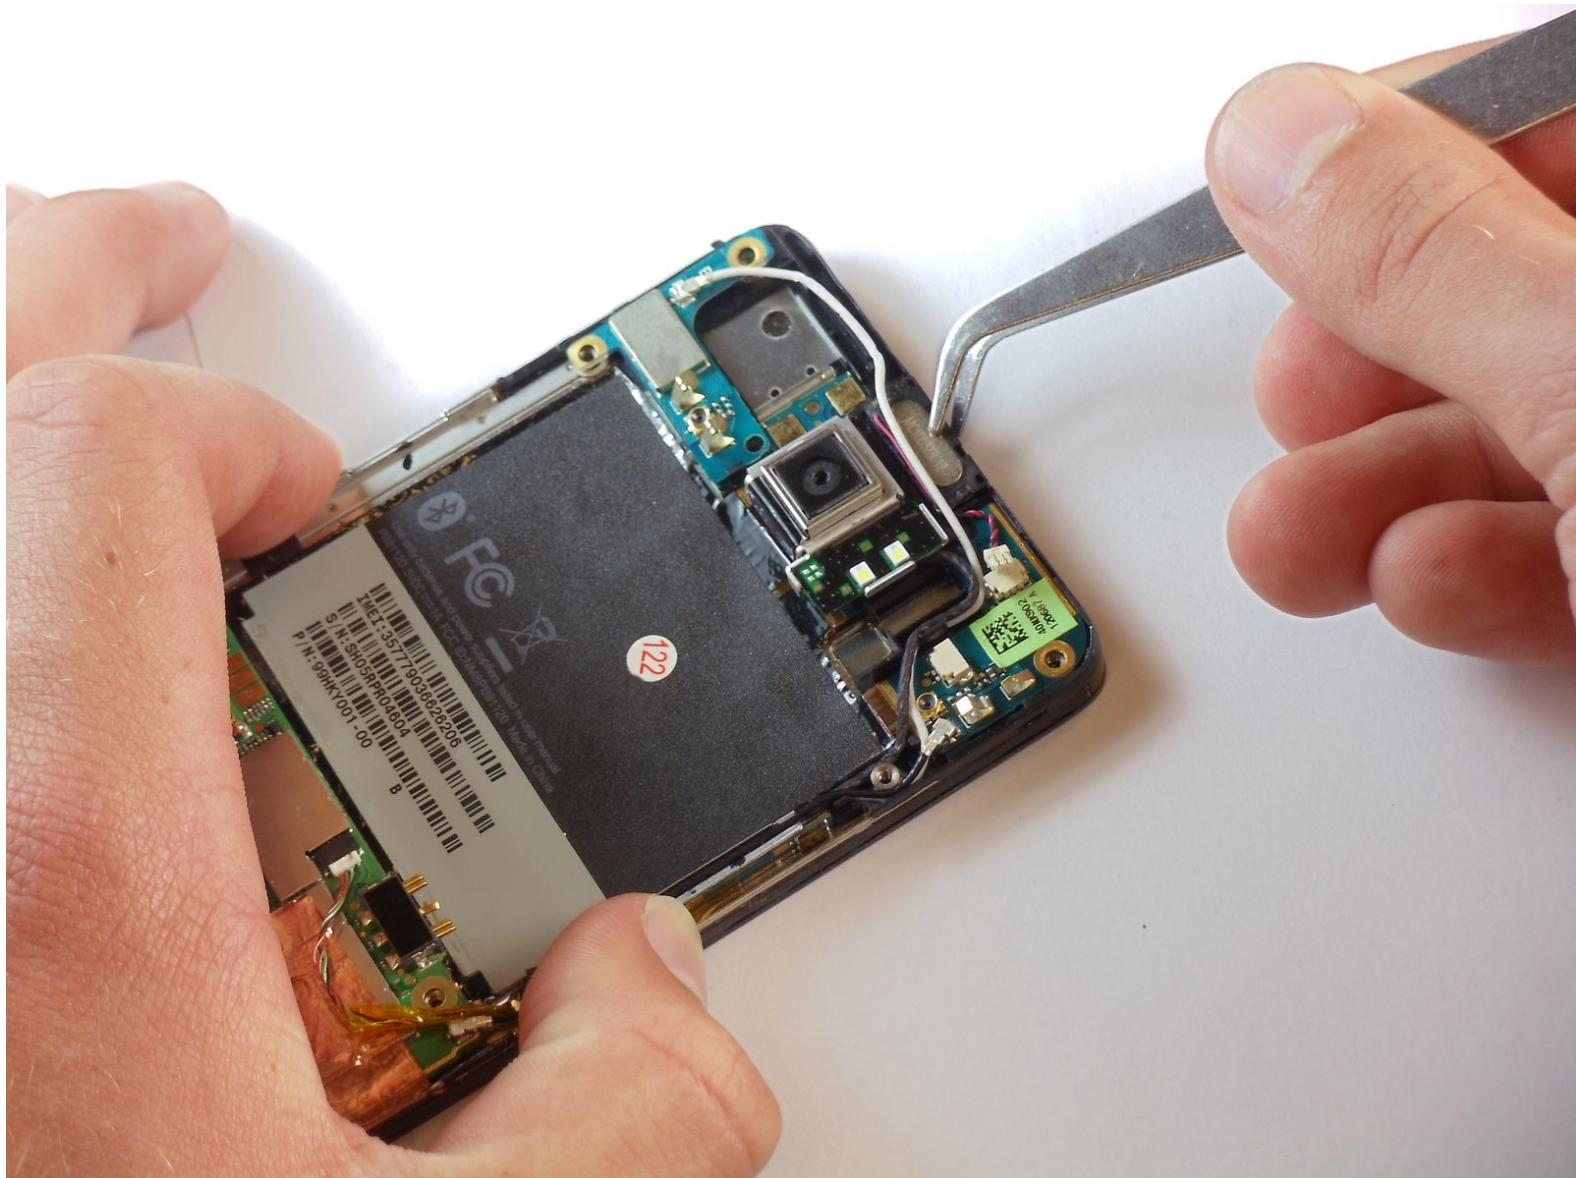

INTRODUCTION

Use this guide to replace the earpiece speaker in the HTC HD2. This is a fairly easy repair, once the rear cover is removed.

TOOLS:

- **Spudger** (1)
- **T5 Torx Screwdriver** (1)
- **Tweezers** (1)

Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

Step 2




- Lay the phone down on its screen.
- Lift up on the lip and pull the battery from the phone.

Step 3 — Midframe

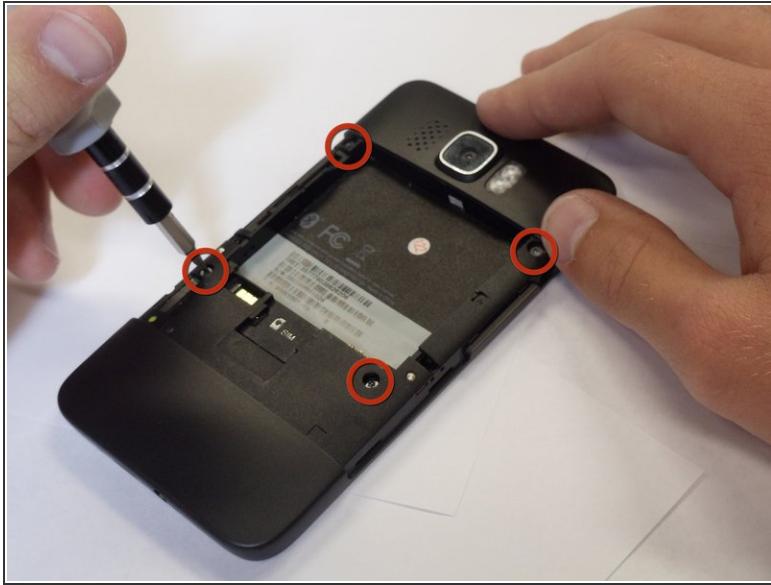


- Remove the four black 3.5mm T5 screws from the back of the phone.

Step 4

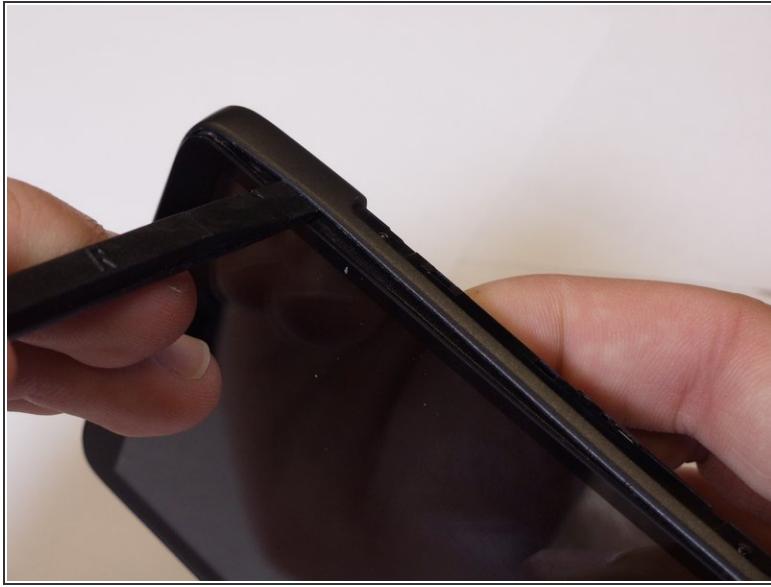

- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
 - ⓘ This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.
 - ⓘ The volume control tab may fall off during removal. It can be easily reattached.

Step 5 — Earpiece Speaker

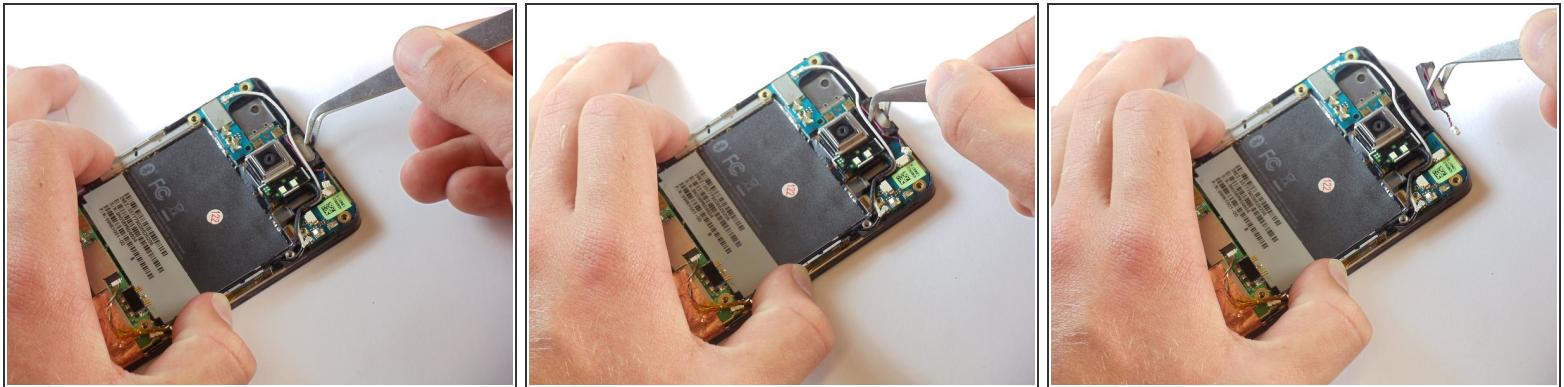

- Disconnect the small speaker cable from its socket on the motherboard.
- Remove the earpiece speaker from the phone.

To reassemble your device, follow these instructions in reverse order.