



HTC One X Plus Screen Replacement

this guide will show you how to replace the screen on your HTC one X plus.

Written By: Jason Melo



INTRODUCTION

If your screen is broken or cracked then you may need to replace your screen.

TOOLS:

- [Tweezers](#) (1)
 - [Suction Handle](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen




- Power off your device.
 - Insert a pin, paper clip, or very small piece of metal into the hole next to the micro sim card holder to remove it.
- ❗ The Sim Card Slot is located on the top edge of the device.

Step 2



- Using plastic opening tools, pry open the bottom of the device first.
- You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached use the suction cup tool to remove the screen completely from the black encasing.


Step 3

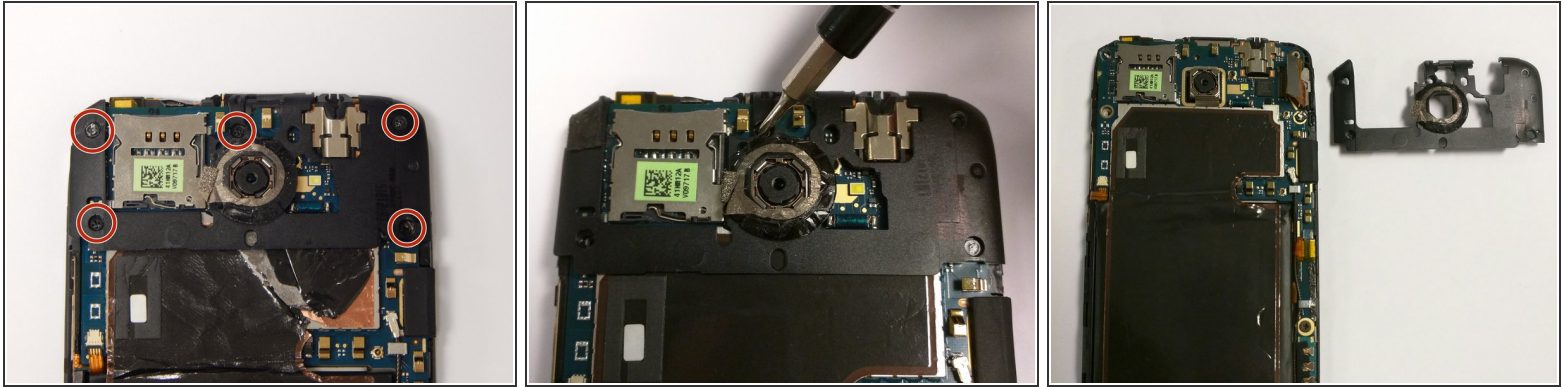

- Remove the five 2.4mm screws using a Philips head screw driver and then remove the plastic cover.


⚠ Once you have disassembled your device the warranty will no longer be valid.

Step 4

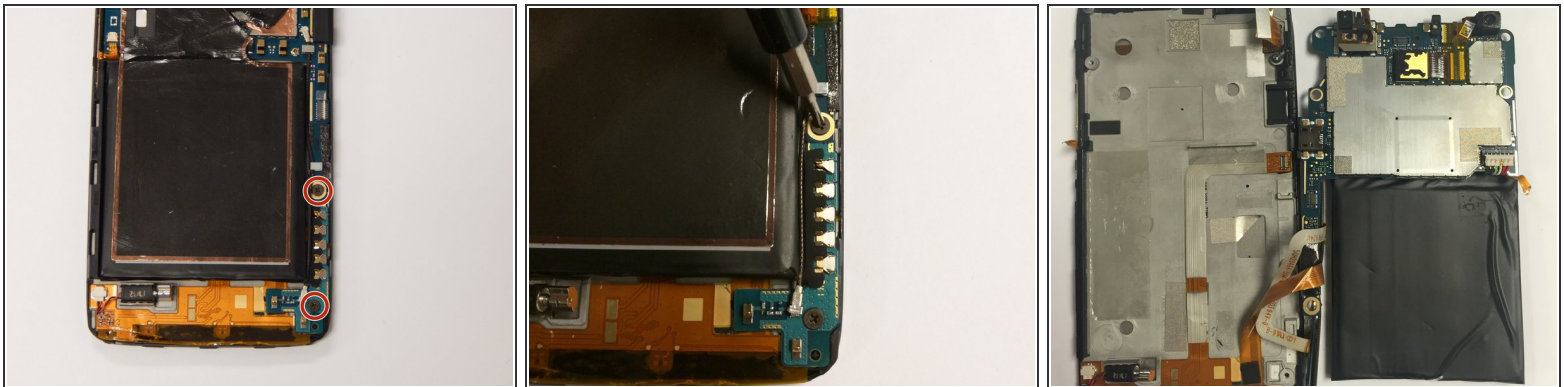



- Use the J000 Philips screw driver head to remove the screws.
 - Two 3.4mm Philips head screws
- Remove the PCB board and antenna.

Step 5

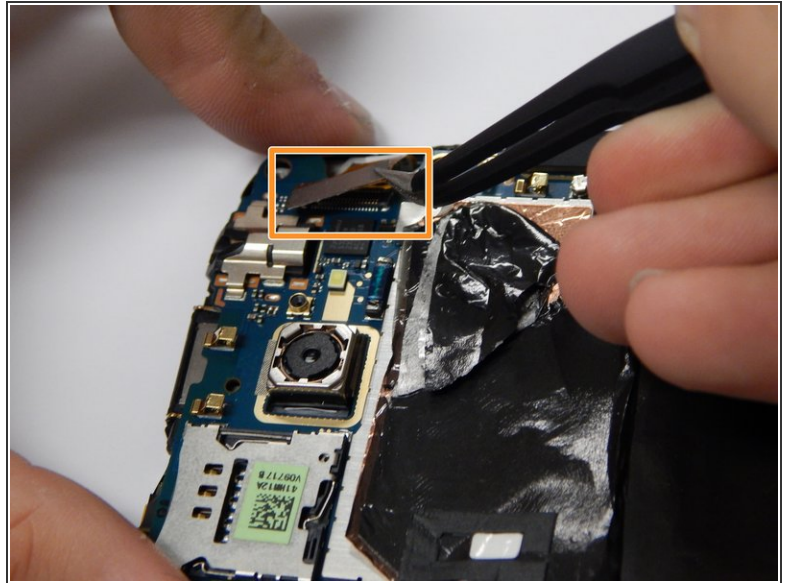

- Use tweezers to disconnect the power button flex cable.
- Disconnect the touch screen flex cable

Step 6

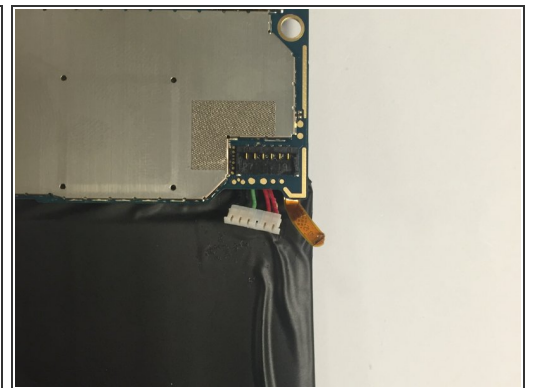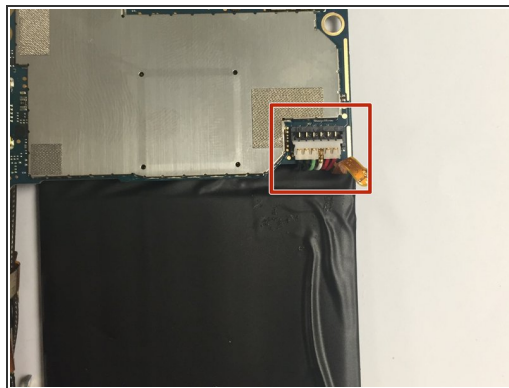

- Disconnect the battery from the logic board.
 - Six pin connector
- Remove the battery by pulling upwards.

Step 7



- You must now disconnect the screen which are glued together.
- Using a plastic spudger gently disconnect the screen from the digitizer.
- ⓘ You may have to use hot air to loosen the screen.

To reassemble your device, follow these instructions in reverse order.